

# SURFACE VEHICLE RECOMMENDED PRACTICE

**SAE** J2534

ISSUED  
FEB2002

Issued 2002-02

## Recommended Practice for Pass-Thru Vehicle Programming

**Foreword**—The use of reprogrammable memory technology in vehicle electronic control units (ECU's) has increased in recent years, and is expected to continue in the future. Use of this technology has increased the flexibility of being able to use a single ECU hardware part to be used in many different vehicle configurations, with the only difference being the software and calibrations programmed into the unit. Reprogramming of those ECU's in the service environment also allows for ease of field modification of system operation and calibrations. Variations in reprogramming capability and the multiple tools necessary to reprogram vehicles are a burden on aftermarket repair facilities that service different makes of vehicles.

This document describes a standardized system for programming that includes a standard personal computer (PC), standard interface to a software device driver, and an interface that connects between the PC and a programmable ECU in a vehicle. The purpose of this system is to facilitate programming of ECU's for all vehicle manufacturers using a single set of programming hardware. Programming software from multiple vehicle manufacturers will be able to execute on this set of hardware to program their unique ECU's.

The U.S. Environmental Protection Agency (EPA) and the California Air Resources Board (ARB) have been working with vehicle manufacturers to provide the aftermarket with increased capability to service emission-related ECU's for all vehicles with a minimal investment in hardware needed to communicate with the vehicles. Both agencies have proposed regulations that will require standardized programming tools to be used for all vehicle manufacturers. The Society of Automotive Engineers (SAE) developed this recommended practice to satisfy the intent of the U.S. EPA and the California ARB.

SAE Technical Standards Board Rules provide that: "This report is published by SAE to advance the state of technical and engineering sciences. The use of this report is entirely voluntary, and its applicability and suitability for any particular use, including any patent infringement arising therefrom, is the sole responsibility of the user."

SAE reviews each technical report at least every five years at which time it may be reaffirmed, revised, or cancelled. SAE invites your written comments and suggestions.

TO PLACE A DOCUMENT ORDER: +1 (724) 776-4970 FAX: +1 (724) 776-0790  
SAE WEB ADDRESS <http://www.sae.org>

## TABLE OF CONTENTS

|        |                                                       |    |
|--------|-------------------------------------------------------|----|
| 1.     | Scope .....                                           | 4  |
| 2.     | References .....                                      | 4  |
| 2.1    | Applicable Publications .....                         | 4  |
| 2.1.1  | SAE Publications .....                                | 4  |
| 2.1.2  | ISO Documents .....                                   | 4  |
| 3.     | Definitions .....                                     | 4  |
| 4.     | Acronyms .....                                        | 5  |
| 5.     | Pass-Thru Concept.....                                | 5  |
| 6.     | Pass-Thru System requirements .....                   | 6  |
| 6.1    | PC requirements.....                                  | 6  |
| 6.2    | Software Requirements and Assumptions .....           | 6  |
| 6.3    | Connection to PC.....                                 | 6  |
| 6.4    | Connection to Vehicle .....                           | 6  |
| 6.5    | Communication Protocols.....                          | 6  |
| 6.5.1  | ISO 9141.....                                         | 7  |
| 6.5.2  | ISO 14230-4 (KWP2000) .....                           | 7  |
| 6.5.3  | SAE J1850 41.6 kbps PWM (pulse width modulation)..... | 7  |
| 6.5.4  | SAE J1850 10.4 kbps VPW (variable pulse width) .....  | 7  |
| 6.5.5  | CAN .....                                             | 7  |
| 6.5.6  | ISO 15765-4 (CAN) .....                               | 7  |
| 6.5.7  | SAE J2610 DaimlerChrysler SCI .....                   | 7  |
| 6.6    | Programmable power supply .....                       | 8  |
| 6.7    | Data Buffering .....                                  | 8  |
| 7.     | Win32 Application Programming Interface .....         | 8  |
| 7.1    | API Functions – Overview .....                        | 8  |
| 7.2    | API Functions - Detailed Information .....            | 8  |
| 7.2.1  | PassThruConnect .....                                 | 8  |
| 7.2.2  | PassThruDisconnect .....                              | 10 |
| 7.2.3  | PassThruReadMsgs .....                                | 11 |
| 7.2.4  | PassThruWriteMsgs .....                               | 12 |
| 7.2.5  | PassThruStartPeriodicMsg .....                        | 13 |
| 7.2.6  | PassThruStopPeriodicMsg .....                         | 14 |
| 7.2.7  | PassThruStartMsgFilter .....                          | 14 |
| 7.2.8  | PassThruStopMsgFilter .....                           | 16 |
| 7.2.9  | PassThruSetProgrammingVoltage .....                   | 17 |
| 7.2.10 | PassThruReadVersion .....                             | 18 |
| 7.2.11 | PassThruGetLastError .....                            | 19 |
| 7.2.12 | PassThruIoctl .....                                   | 19 |
| 7.3    | IOCTL Section .....                                   | 21 |
| 7.3.1  | GET_CONFIG .....                                      | 21 |
| 7.3.2  | SET_CONFIG .....                                      | 22 |
| 7.3.3  | READ_VBATT .....                                      | 25 |
| 7.3.4  | READ_PROG_VOLTAGE .....                               | 26 |
| 7.3.5  | FIVE_BAUD_INIT .....                                  | 26 |
| 7.3.6  | FAST_INIT .....                                       | 26 |
| 7.3.7  | CLEAR_TX_BUFFER.....                                  | 27 |

|            |                                                      |    |
|------------|------------------------------------------------------|----|
| 7.3.8      | CLEAR_RX_BUFFER .....                                | 27 |
| 7.3.9      | CLEAR_PERIODIC_MSGS.....                             | 27 |
| 7.3.10     | CLEAR_MSG_FILTERS .....                              | 27 |
| 7.3.11     | CLEAR_FUNCT_MSG_LOOKUP_TABLE .....                   | 28 |
| 7.3.12     | ADD_TO_FUNCT_MSG_LOOKUP_TABLE.....                   | 28 |
| 7.3.13     | DELETE_FROM_FUNCT_MSG_LOOKUP_TABLE.....              | 29 |
| 8.         | Message Structure .....                              | 29 |
| 8.1        | C / C++ Definition .....                             | 29 |
| 8.2        | Elements.....                                        | 29 |
| 8.3        | Message Data Formats .....                           | 30 |
| 8.3.1      | CAN Data Format .....                                | 30 |
| 8.3.2      | ISO 15765-4 Data Format .....                        | 30 |
| 8.3.3      | SAE J1850PWM Data Format .....                       | 31 |
| 8.3.4      | SAE J1850VPW Data Format.....                        | 31 |
| 8.3.5      | ISO 9141 Data Format .....                           | 32 |
| 8.3.6      | ISO 14230-4 Data Format .....                        | 32 |
| 8.3.7      | SCI Data Format .....                                | 32 |
| 8.4        | Message Flag and Status Definitions .....            | 33 |
| 8.4.1      | RxStatus .....                                       | 33 |
| 8.4.2      | TxFlags .....                                        | 33 |
| 9.         | DLL Installation and Registration .....              | 34 |
| 9.1        | Naming of Files .....                                | 34 |
| 9.2        | Win32 Registration .....                             | 34 |
| 9.2.1      | User Application Interaction with the Registry ..... | 36 |
| 9.2.2      | Attaching to the DLL from an application .....       | 37 |
| 10.        | Return Value Error Codes .....                       | 37 |
| Appendix A | General ISO 15765-2 Flow Control Example .....       | 39 |
| A.1        | Normal Addressing Used .....                         | 39 |
| A.2        | General Request Message Flow Example .....           | 39 |
| A.3        | General Response Message Flow Example.....           | 40 |
| Appendix B | Message Filter Usage Example .....                   | 42 |
| B.1        | Filter Usage .....                                   | 42 |
| B.2        | Transmission of a Multi-Frame Request Message .....  | 42 |
| B.3        | Reception of a Multi-Frame Response Message.....     | 42 |
| B.4        | Filter Configuration .....                           | 42 |
| B.4.1      | Request Message Transmission .....                   | 44 |
| B.4.2      | Response Message Reception.....                      | 45 |
| B.5        | ISO 15765-2 Extended Addressing Notes.....           | 46 |

- 1. Scope**—This SAE Recommended Practice provides the framework to allow reprogramming software applications from all vehicle manufacturers the flexibility to work with multiple vehicle data link interface tools from multiple tool suppliers. This system enables each vehicle manufacturer to control the programming sequence for electronic control units (ECU's) in their vehicles, but allows a single set of programming hardware and vehicle interface to be used to program modules for all vehicle manufacturers.

This document does not limit the hardware possibilities for the connection between the PC used for the software application and the tool (e.g., RS-232, RS-485, USB, Ethernet...). Tool suppliers are free to choose the hardware interface appropriate for their tool. The goal of this document is to ensure that reprogramming software from any vehicle manufacturer is compatible with hardware supplied by any tool manufacturer.

The U.S. Environmental Protection Agency (EPA) and the California Air Resources Board (ARB) have proposed requirements for reprogramming vehicles for all manufacturers by the aftermarket repair industry. This document is intended to meet those proposed requirements for 2004 model year vehicles. Additional requirements for the 2005 model year may require revision of this document, most notably the inclusion of SAE J1939 for some heavy-duty vehicles. This document will be reviewed for possible revision after those regulations are finalized and requirements are better understood. Possible revisions include SAE J1939 specific software and an alternate vehicle connector, but the basic hardware of an SAE J2534 interface device is expected to remain unchanged.

## **2. References**

- 2.1 Applicable Publications**—The following publications form a part of this specification to the extent specified herein. Unless otherwise indicated, the latest version of SAE publications shall apply.

- 2.1.1 SAE PUBLICATIONS**—Available from SAE, 400 Commonwealth Drive, Warrendale, PA 15096-0001.

SAE J1850—Class B Data Communications Network Interface  
 SAE J1939—Truck and Bus Control and Communications Network (multiple parts apply)  
 SAE J1962—Diagnostic Connector  
 SAE J2610—DaimlerChrysler Information Report for Serial Data Communication Interface (SCI)

- 2.1.2 ISO DOCUMENTS**—Available from ANSI, 25 west 43rd Street, New York, NY 10036-8002.

ISO 7637-1:1990—Road vehicles—Electrical disturbance by conduction and coupling—Part 1: Passenger cars and light commercial vehicles with nominal 12 V supply voltage  
 ISO 9141:1989—Road vehicles—Diagnostic systems—Requirements for interchange of digital information  
 ISO 9141-2:1994—Road vehicles—Diagnostic systems—CARB requirements for interchange of digital information  
 ISO 11898:1993—Road vehicles—Interchange of digital information—Controller area network (CAN) for high speed communication  
 ISO 14230-4:2000—Road vehicles—Diagnostic systems—Keyword protocol 2000—Part 4: Requirements for emission-related systems  
 ISO/DIS 15765-2—Road vehicles—Diagnostics on controller area networks (CAN)—Network layer services  
 ISO/DIS 15765-4—Road vehicles—Diagnostics on controller area networks (CAN)—Requirements for emission-related systems

## **3. Definitions**

- 3.1 Registry**—A mechanism within Win32 operating systems to handle hardware and software configuration information.

#### 4. Acronyms

|       |                                                         |
|-------|---------------------------------------------------------|
| API   | Application Programming Interface                       |
| ASCII | American Standard for Character Information Interchange |
| CAN   | Controller Area Network                                 |
| CRC   | Cyclic Redundancy Check                                 |
| DLL   | Dynamic Link Library                                    |
| ECU   | Electronic Control Unit                                 |
| IFR   | In-Frame Response                                       |
| IOCTL | Input / Output Control                                  |
| KWP   | Keyword Protocol                                        |
| OEM   | Original Equipment Manufacturer                         |
| PC    | Personal Computer                                       |
| PWM   | Pulse Width Modulation                                  |
| SCI   | Serial Communications Interface                         |
| SCP   | Standard Corporate Protocol                             |
| USB   | Universal Serial Bus                                    |
| VPW   | Variable Pulse Width                                    |

5. **Pass-Thru Concept**—Programming application software supplied by the vehicle manufacturer will run on a commonly available generic PC. This application must have complete knowledge of the programming requirements for the control module to be programmed and will control the programming event. This includes the user interface, selection criteria for downloadable software and calibration files, the actual software and calibration data to be downloaded, the security mechanism to control access to the programming capability, and the actual programming steps and sequence required to program each individual control module in the vehicle.

This document defines the following two interfaces for the SAE J2534 pass-thru device:

- a. Application program interface (API) between the programming application running on a PC and a software device driver for the pass-thru device
- b. Hardware interface between the pass-thru device and the vehicle

All programming applications shall utilize the common SAE J2534 API as the interface to the pass-thru device driver. The API contains a set of routines that may be used by the programming application to control the pass-thru device, and to control the communications between the pass-thru device and the vehicle. The pass-thru device will not interpret the message content, allowing any message strategy and message structure to be used that is understood by both the programming application and the ECU being programmed. Also, because the message will not be interpreted, the contents of the message cannot be used to control the operation of the interface. For example, if a message is sent to the ECU to go to high speed, a specific instruction must also be sent to the interface to go to high speed.

The manufacturer of an SAE J2534 pass-thru device must supply both the device driver software and the pass-thru device hardware that communicates directly with the vehicle. The interface between the PC and the pass-thru device can be any technology chosen by the tool manufacturer, including RS-232, RS-485, USB, Ethernet, or any other current or future technology, including wireless technologies.

The OEM programming application does not need to know the hardware connected to the PC, which gives the tool manufacturers the flexibility to use any commonly available interface to the PC. The pass-thru device does not need any knowledge of the vehicle or control module being programmed. This will allow all programming applications to work with all pass-thru devices to enable programming of all control modules for all vehicle manufacturers.

Figure 1 shows the relationship between the various components required for pass-thru programming and responsibilities for each component:

| Vehicle                                                                  | Cable                                                                                                            | Pass-thru interface                                                                                              | Cable                                                                      | Programming PC                                                                                                                                    |       |                                                                                                                                                             |
|--------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------|-------|-------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                                                                          |                                                                                                                  |                                                                                                                  |                                                                            | Interface driver                                                                                                                                  | API   | Application                                                                                                                                                 |
| Vehicle manufacturer determines programming sequence and security access | Tool supplier defines interface with pass-thru device<br><br>SAE J1962 on vehicle end<br><br>5 meter max. length | Capabilities defined in J2534<br><br>Hardware supplied by tool supplier<br><br>Could be implemented in scan tool | Tool supplier defines cable requirements, if any, between PC and interface | Tool supplier device driver based on hardware supported<br><br>Examples are:<br>RS-232,<br>USB,<br>PCMCIA,<br>Ethernet,<br>IEEE1394,<br>Bluetooth | J2534 | Vehicle manufacturer programming application controls user interface, vehicle software and calibration selection, programming sequence, and security access |
| Vehicle manufacturer                                                     | Tool supplier                                                                                                    |                                                                                                                  |                                                                            |                                                                                                                                                   | J2534 | Vehicle manufacturer                                                                                                                                        |

FIGURE 1—SAE J2534 OVERVIEW

## 6. Pass-Thru System Requirements

- 6.1 PC Requirements**—Generic PC running a Win32 Operating System (e.g., Windows 95/Windows 98/Windows NT/Windows Millennium Edition, Windows 2000, Windows XP, ...). The PC should be capable of connection to the Internet.
- 6.2 Software Requirements and Assumptions**—Reprogramming applications can assume that the PC will be connected to the Internet, although not all applications will require this. The OEM application is limited to a single thread for communication with the tool manufacturer DLL/API. Multiple protocols may be connected and communicated on sequentially (Serialized) from the single application thread. This will prevent the unnecessary complexity of determining what message responses belong to which application thread.
- 6.3 Connection to PC**—The interface between the PC and the pass-thru device shall be determined by the manufacturer of the pass-thru device. This can be RS-232, USB, Ethernet, IEEE1394, Bluetooth or any other connection that allows the pass-thru device to meet all other requirements of this document, including timing requirements. The tool manufacturer is also required to include the device driver that supports this connection so that the actual interface used is transparent to both the PC programming application and the vehicle.
- 6.4 Connection to Vehicle**—The interface between the pass-thru device and the vehicle shall be an SAE J1962 connector for serial data communications. The maximum cable length between the pass-thru device and the vehicle is five (5) meters. Vehicle manufacturers will need to supply information about necessary connections to any connector other than the SAE J1962 connector.
- 6.5 Communication Protocols**—A fully compliant pass-thru interface shall support all communication protocols as specified in this section. Additionally, the pass-thru device must support simultaneous communication of an ISO 9141 OR ISO 14230-4 protocol AND an SAE J1850 protocol AND a CAN or SCI based protocol during a single programming event. Note that only one type of SAE J1850 is required per programming event, as the two types of SAE J1850 are mutually exclusive on any given vehicle. As well, CAN and SCI are mutually exclusive on some vehicles as the same pins are used.

The following communication protocols shall be supported:

- 6.5.1 ISO 9141—The following specifications clarify and, if in conflict with ISO 9141, override any related specifications in ISO 9141:
  - a. The maximum sink current to be supported by the interface is 100 mA.
  - b. The range for all tests performed relative to ISO 7637-1 is  $-1.0$  to  $+40.0$  V.
  - c. The minimum bus idle period before the interface shall transmit an address, shall be 300 ms.
  - d. Support following baud rate with  $\pm 0.5\%$  tolerance: 10400.
  - e. Support following baud rates with  $\pm 2\%$  tolerance: 9600, 9615, 10000, 10870, 11905, 12500, 13158, 13889, 14706, and 15625.
  - f. Support odd and even parity in addition to the default of no parity, with seven or eight data bits. Always one start bit and one stop bit.
- 6.5.2 ISO 14230-4 (KWP2000)—The ISO 14230-4 protocol is the same as the ISO 9141 protocol with the following additions:
  - a. The interface will handle the tester present message and 0x78 response code automatically (i.e., without intervention from the PC).
- 6.5.3 SAE J1850 41.6 KBPS PWM (PULSE WIDTH MODULATION)—The following additional features of SAE J1850 must be supported by the pass-thru device for 41.6 kbps PWM:
  - a. Capable of high speed mode of 83.3 kbps.
  - b. Recommend Ford approved SAE J1850PWM(SCP) physical layer
- 6.5.4 SAE J1850 10.4 KBPS VPW (VARIABLE PULSE WIDTH)—The following additional features of SAE J1850 must be supported by the pass-thru device for 10.4 kbps VPW:
  - a. High speed mode of 41.6 kbps
  - b. 4K block transfer
- 6.5.5 CAN—The following features of ISO 11898 must be supported by the pass-thru device:
  - a. 250 and 500 kbps
  - b. 11 and 29 bit identifiers
  - c. Support for  $80\% \pm 2\%$  and  $68.5\% \pm 2\%$  bit sample point
  - d. Pass-thru message interface (i.e., raw CAN frames with no flow control in the pass-thru device)
- 6.5.6 ISO 15765-4 (CAN)—The following features of ISO 15765-4 must be supported by the pass-thru device:
  - a. 250 and 500 kbps
  - b. 11 and 29 bit identifiers
  - c. Support for  $80\% \pm 2\%$  bit sample point
  - d. To maintain acceptable programming times, the transport layer flow control function, as defined in ISO 15765-2, must be incorporated in the pass-thru device (see Appendix A). If the application does not use the ISO 15765-2 transport layer flow control functionality, the CAN protocol will allow for any custom transport layer.
- 6.5.7 SAE J2610 DAIMLERCHRYSLER SCI—Reference the SAE J2610 Information Report for a description of the SCI protocol.

**6.6 Programmable Power Supply**—The interface shall be capable of supplying between 5 and 20 volts to one of the following pins (6, 9, 11, 12, 13 or 14) on the SAE J1962 diagnostic connector, or to an auxiliary pin which would need to be connected to the vehicle via a cable that is unique to the vehicle. As well, short to ground capability on pin 15 is required. The following requirements shall be met by the power supply:

- a. Minimum 5 V
- b. Maximum 20 V
- c. Accuracy  $\pm 0.1$  V
- d. Maximum source current 200 mA
- e. Maximum sink current 300mA (only for SHORT\_TO\_GROUND option).
- f. Maximum 1 ms settling time (required for SCI protocol, reference SAE J2610 Information Report)
- g. Pin assignment software selectable

**6.7 Data Buffering**—The interface shall be capable of buffering a 4K byte transmit message as well as a 4K byte receive message.

## 7. Win32 Application Programming Interface

**7.1 API Functions – Overview**—To conform to this document a vendor supplied API implementation (DLL) must support the functions included in Figure 2.

| Function                             | Description                                                                                                                                            |
|--------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>PassThruConnect</b>               | Establish a connection with a protocol channel.                                                                                                        |
| <b>PassThruDisconnect</b>            | Terminate a connection with a protocol channel.                                                                                                        |
| <b>PassThruReadMsgs</b>              | Read message(s) from a protocol channel.                                                                                                               |
| <b>PassThruWriteMsgs</b>             | Write message(s) to a protocol channel.                                                                                                                |
| <b>PassThruStartPeriodicMsg</b>      | Start sending a message at a specified time interval on a protocol channel.                                                                            |
| <b>PassThruStopPeriodicMsg</b>       | Stop a periodic message.                                                                                                                               |
| <b>PassThruStartMsgFilter</b>        | Start filtering incoming messages on a protocol channel.                                                                                               |
| <b>PassThruStopMsgFilter</b>         | Stops filtering incoming messages on a protocol channel.                                                                                               |
| <b>PassThruSetProgrammingVoltage</b> | Set a programming voltage on a specific pin.                                                                                                           |
| <b>PassThruReadVersion</b>           | Reads the version information for the DLL and API.                                                                                                     |
| <b>PassThruGetLastError</b>          | Gets the text description of the last error.                                                                                                           |
| <b>PassThruIoctl</b>                 | General I/O control functions for reading and writing protocol configuration parameters (e.g. initialization, baud rates, programming voltages, etc.). |

FIGURE 2—SAE J2534 API FUNCTIONS

## 7.2 API Functions - Detailed Information

**7.2.1 PASSTHRUCONNECT**—This function is used to establish a logical connection with a protocol channel. After this function is called, the value pointed to by pChannelID is used as the logical identifier for the connection. The DLL can use this function to initialize data structures and device drivers. If the function operates successfully, a value of STATUS\_NOERROR is returned and a valid channel ID will be placed in <pChannelID>. All future interactions with the protocol channel will be done using the pChannelID. Note that all filters for the given protocol will be cleared with this function.

## 7.2.1.1 C / C++ Prototype

```
extern "C" long WINAPI PassThruConnect
(
    unsigned long ProtocolID,
    unsigned long Flags,
    unsigned long *pChannelID
)
```

## 7.2.1.2 Parameters

ProtocolID      Protocol ID.  
 Flags          Connection flags, normally set to zero.  
 pChannelID    Pointer to location for the channel ID that is assigned by the DLL.

## 7.2.1.3 Flag Values—See Figure 3.

| Flags Bit(s) | Description                  | Value                                                                          |
|--------------|------------------------------|--------------------------------------------------------------------------------|
| 31-9         | Unused                       | Tool manufacturer specific                                                     |
| 8            | CAN ID type                  | 0 = 11-bit, 1 = 29-bit                                                         |
| 7            | ISO15765-2 Addressing Method | 0 = no extended address, 1 = extended address is first byte after the ID bytes |
| 6-0          | Unused                       | Reserved for SAE - shall be set to 0                                           |

FIGURE 3—FLAG VALUES

## 7.2.1.4 ProtocolID Values—See Figure 4.

| Definition   | Description                                                                 | Value(s)             |
|--------------|-----------------------------------------------------------------------------|----------------------|
| J1850VPW     | GM / DaimlerChrysler CLASS2                                                 | 0x01                 |
| J1850PWM     | Ford SCP                                                                    | 0x02                 |
| ISO9141      | ISO9141 and ISO9141-2                                                       | 0x03                 |
| ISO14230     | ISO14230-4 (Keyword Protocol 2000)                                          | 0x04                 |
| CAN          | Raw CAN (flow control not handled automatically by interface)               | 0x05                 |
| ISO15765     | ISO15765-2 flow control enabled (see Appendix A for high level description) | 0x06                 |
| SCI_A_ENGINE | SAE J2610 (DaimlerChrysler SCI) configuration A for engine                  | 0x07                 |
| SCI_A_TRANS  | SAE J2610 (DaimlerChrysler SCI) configuration A for transmission            | 0x08                 |
| SCI_B_ENGINE | SAE J2610 (DaimlerChrysler SCI) configuration B for engine                  | 0x09                 |
| SCI_B_TRANS  | SAE J2610 (DaimlerChrysler SCI) configuration B for transmission            | 0x0A                 |
| Unused       | Reserved for SAE use                                                        | 0x0B – 0xFFFF        |
| Unused       | Tool manufacturer specific                                                  | 0x10000 – 0xFFFFFFFF |

FIGURE 4—PROTOCOL ID VALUES

7.2.1.5 *Return Values*—See Figure 5.

| Definition               | Description                                                                                                                                                                               |
|--------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| STATUS_NOERROR           | Function call successful.                                                                                                                                                                 |
| ERR_DEVICE_NOT_CONNECTED | Device not connected to PC.                                                                                                                                                               |
| ERR_INVALID_PROTOCOL_ID  | Invalid ProtocolID value or there is a resource conflict (i.e. trying to connect to multiple protocols that are mutually exclusive such as J1850PWM and J1850VPW or CAN and SCI_A, etc.). |
| ERR_NULLPARAMETER        | NULL pointer supplied where a valid pointer is required                                                                                                                                   |
| ERR_INVALID_FLAGS        | Invalid flag values.                                                                                                                                                                      |
| ERR_FAILED               | Undefined error, use PassThruGetLastError for text description                                                                                                                            |
| ERR_CHANNEL_IN_USE       | Channel number is currently connected.                                                                                                                                                    |

FIGURE 5—RETURN VALUES

7.2.2 **PASSTHRU\_DISCONNECT**—This function is used to terminate a logical connection with a protocol channel. The DLL can use this function to de-allocate data structures and deactivate any device drivers. If the function operates successfully, a value of STATUS\_NOERROR is returned. After this call the Channel ID will no longer be valid.

7.2.2.1 *C / C++ Prototype*

```
extern "C" long WINAPI PassThruDisconnect
(
    unsigned long ChannelID
)
```

7.2.2.2 *Parameters*

ChannelID    The channel ID assigned by the PassThruConnect function.

7.2.2.3 *Return Values*—See Figure 6.

| Definition               | Description                                                    |
|--------------------------|----------------------------------------------------------------|
| STATUS_NOERROR           | Function call successful.                                      |
| ERR_DEVICE_NOT_CONNECTED | Device not connected to PC.                                    |
| ERR_FAILED               | Undefined error, use PassThruGetLastError for text description |
| ERR_INVALID_CHANNEL_ID   | Invalid ChannelID value.                                       |

FIGURE 6—RETURN VALUES

7.2.3 **PASSTHRUREADMSGs**—This function reads messages from the receive buffer in the order they were received. If the function operates successfully, a value of STATUS\_NOERROR is returned. Note that the ISO 15765-2 FirstFrame and TxDone indications will be returned as messages when calling this function. Also note that all messages and indications shall be read in the order that they occurred on the bus.

#### 7.2.3.1 C / C++ Prototype

```
extern "C" long WINAPI PassThruReadMsgs
(
    unsigned long ChannelID,
    PASSTHRU_MSG *pMsg,
    unsigned long *pNumMsgs,
    unsigned long Timeout
)
```

#### 7.2.3.2 Parameters

|           |                                                                                                                                                                                                                                                                                                                                                                             |
|-----------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ChannelID | The channel ID assigned by the PassThruConnect function.                                                                                                                                                                                                                                                                                                                    |
| pMsg      | Pointer to message structure(s).                                                                                                                                                                                                                                                                                                                                            |
| pNumMsgs  | Pointer to location where number of messages to read is specified. On return from the function this location will contain the actual number of messages read.                                                                                                                                                                                                               |
| Timeout   | Read timeout (in milliseconds). If a value of 0 is specified the function returns immediately. Otherwise, the API will not return until the Timeout has expired, an error has occurred, or the desired number of messages have been read. If the number of messages requested have been read, the function shall not return ERR_TIMEOUT, even if the timeout value is zero. |

#### 7.2.3.3 Return Values—See Figure 7.

| Definition               | Description                                                                                                                                                                                                               |
|--------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| STATUS_NOERROR           | Function call successful.                                                                                                                                                                                                 |
| ERR_DEVICE_NOT_CONNECTED | Device not connected to PC.                                                                                                                                                                                               |
| ERR_INVALID_CHANNEL_ID   | Invalid ChannelID value.                                                                                                                                                                                                  |
| ERR_NULLPARAMETER        | NULL pointer supplied where a valid pointer is required.                                                                                                                                                                  |
| ERR_TIMEOUT              | Timeout. Device could not read the specified number of messages. The actual number of messages read is placed in <NumMsgs>. If a timeout occurs and there are no available messages, ERR_BUFFER_EMPTY should be returned. |
| ERR_BUFFER_EMPTY         | No messages available to read.                                                                                                                                                                                            |
| ERR_FAILED               | Undefined error, use PassThruGetLastError for text description                                                                                                                                                            |
| ERR_BUFFER_OVERFLOW      | Indicates a buffer overflow occurred and messages were lost. The actual number of messages read is placed in <NumMsgs>.                                                                                                   |

FIGURE 7—RETURN VALUES

7.2.4 **PASSTHRUWRITEMSGs**—This function is used to send messages. The messages are placed in the buffer and sent in the order they were received. If the function operates successfully, a value of STATUS\_NOERROR is returned. To perform blocking writes (i.e., the function does not return until message is successfully sent on the vehicle network or a timeout occurs), use the blocking flag in the TxFlags element of the message structure (Reference 8.4.2).

#### 7.2.4.1 C / C++ Prototype

```
extern "C" long WINAPI PassThruWriteMsgs
(
    unsigned long ChannelID,
    PASSTHRU_MSG *pMsg,
    unsigned long *pNumMsgs,
    unsigned long Timeout
)
```

#### 7.2.4.2 Parameters

|           |                                                                                                                                                                                                                                                                                                                                                                                    |
|-----------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ChannelID | The channel ID assigned by the PassThruConnect function.                                                                                                                                                                                                                                                                                                                           |
| pMsg      | Pointer to message structure(s).                                                                                                                                                                                                                                                                                                                                                   |
| pNumMsgs  | Pointer to the location where number of messages to write is specified. On return will contain the actual number of messages that were transmitted or placed in the transmit queue.                                                                                                                                                                                                |
| Timeout   | Write timeout (in milliseconds). If a value of 0 is specified the function returns immediately. Otherwise, the API will not return until the Timeout has expired, an error has occurred, or the desired number of messages have been written. If the number of messages requested have been written, the function shall not return ERR_TIMEOUT, even if the timeout value is zero. |

#### 7.2.4.3 Return Values—See Figure 8.

| Definition               | Description                                                                                                                                                                             |
|--------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| STATUS_NOERROR           | Function call successful.                                                                                                                                                               |
| ERR_DEVICE_NOT_CONNECTED | Device not connected to PC.                                                                                                                                                             |
| ERR_INVALID_CHANNEL_ID   | Invalid ChannelID value.                                                                                                                                                                |
| ERR_INVALID_MSG          | Invalid message structure pointed to by pMsg (e.g. sending a 20 byte long J1850PWM message, sending a J1850PWM message where the third data byte is not the same as the node ID, etc.). |
| ERR_NULLPARAMETER        | NULL pointer supplied where a valid pointer is required.                                                                                                                                |
| ERR_FAILED               | Undefined error, use PassThruGetLastError for text description                                                                                                                          |
| ERR_TIMEOUT              | Timeout.                                                                                                                                                                                |
| ERR_MSG_PROTOCOL_ID      | Protocol type in the message does not match protocol associated with the ChannelID                                                                                                      |
| ERR_BUFFER_FULL          | Protocol message buffer is full.                                                                                                                                                        |

FIGURE 8—RETURN VALUES

7.2.5 **PASSTHRUSTARTPERIODICMSG**—This function starts sending a message at the specified interval. If the function operates successfully, a value of STATUS\_NOERROR is returned. The maximum number of periodic messages is ten.

#### 7.2.5.1 C / C++ Prototype

```
extern "C" long WINAPI PassThruStartPeriodicMsg
(
    unsigned long ChannelID,
    PASSTHRU_MSG *pMsg,
    unsigned long *pMsgID,
    unsigned long TimeInterval
)
```

#### 7.2.5.2 Parameters

**ChannelID** The channel ID assigned by the PassThruConnect function.  
**pMsg** Pointer to message structure.  
**pMsgID** Pointer to location for the message ID that is assigned by the DLL.  
**TimeInterval** Time interval between the start of successive transmissions of this message, in milliseconds. The valid range is 5-65535 milliseconds.

#### 7.2.5.3 Return Values—See Figure 9.

| Definition                | Description                                                                        |
|---------------------------|------------------------------------------------------------------------------------|
| STATUS_NOERROR            | Function call successful.                                                          |
| ERR_DEVICE_NOT_CONNECTED  | Device not connected to PC.                                                        |
| ERR_INVALID_CHANNEL_ID    | Invalid ChannelID value.                                                           |
| ERR_INVALID_MSG           | Invalid message structure pointed to by pMsg.                                      |
| ERR_NULLPARAMETER         | NULL pointer supplied where a valid pointer is required.                           |
| ERR_INVALID_TIME_INTERVAL | Invalid TimeInterval value.                                                        |
| ERR_FAILED                | Undefined error, use PassThruGetLastError for text description                     |
| ERR_MSG_PROTOCOL_ID       | Protocol type in the message does not match protocol associated with the ChannelID |
| ERR_EXCEEDED_LIMIT        | Exceeded the maximum number of periodic message IDs or the maximum allocate space. |

FIGURE 9—RETURN VALUES

7.2.6 **PASSTHRUSTOPPERIODICMSG**—This function stops the process of sending a periodic message. If the function operates successfully, a value of STATUS\_NOERROR is returned. After this call the MsgID will be invalid.

7.2.6.1 *C / C++ Prototype*

```
extern "C" long WINAPI PassThruStopPeriodicMsg
(
    unsigned long ChannelID,
    unsigned long MsgID
)
```

7.2.6.2 *Parameters*

ChannelID     The channel ID assigned by the PassThruConnect function.  
 MsgID        Message ID that is assigned by the PassThruStartPeriodicMsg function.

7.2.6.3 *Return Values*—See Figure 10.

| Definition               | Description                                                    |
|--------------------------|----------------------------------------------------------------|
| STATUS_NOERROR           | Function call successful.                                      |
| ERR_DEVICE_NOT_CONNECTED | Device not connected to PC.                                    |
| ERR_INVALID_CHANNEL_ID   | Invalid ChannelID value.                                       |
| ERR_FAILED               | Undefined error, use PassThruGetLastError for text description |
| ERR_INVALID_MSG_ID       | Invalid MsgID value.                                           |

FIGURE 10—RETURN VALUES

7.2.7 **PASSTHRUSTARTMSGFILTER**—This function starts filtering incoming messages. If the function operates successfully, a value of STATUS\_NOERROR is returned. The maximum number of message filters is ten. See Appendices A and B for a description of the use of these message filters for transmission and reception of multi-frame messages.

7.2.7.1 *C / C++ Prototype*

```
extern "C" long WINAPI PassThruStartMsgFilter
(
    unsigned long ChannelID,
    unsigned long FilterType,
    PASSTHRU_MSG *pMaskMsg,
    PASSTHRU_MSG *pPatternMsg,
    PASSTHRU_MSG *pFlowControlMsg,
    unsigned long *pMsgID
)
```

## 7.2.7.2 Parameters

|                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|-----------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ChannelID       | The channel ID assigned by the PassThruConnect function.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| FilterType      | Designates:<br>PASS_FILTER – allows matching messages into the receive queue.<br>BLOCK_FILTER - keeps matching messages out of the receive queue.<br>FLOW_CONTROL_FILTER – defines a filter and outgoing flow control message to support the ISO 15765-2 flow control mechanism.                                                                                                                                                                                                                                                                                                                                                                                                                      |
| pMaskMsg        | Designates a pointer to the mask message that will be applied to each incoming message (i.e., the mask message that will be ANDed to each incoming message) to mask any unimportant bits.<br><br>The usage of the pMaskMsg allows for configuring a filter that passes thru multiple CAN identifiers. In case the filter allows for the reception of multiple CAN identifiers then those messages are only allowed to be SingleFrame messages, because only a single FlowControl CAN identifier can be specified.                                                                                                                                                                                     |
| pPatternMsg     | Designates a pointer to the pattern message that will be compared to the incoming message after the mask message has been applied. If the result matches this pattern message and the FilterType is PASS_FILTER, then the incoming message will be added to the receive queue (otherwise it will be discarded). If the result matches this pattern message and the FilterType is BLOCK_FILTER, then the incoming message will be discarded (otherwise it will be added to the receive queue). Message bytes in the received message that are beyond the DataSize of the pattern message will be treated as “don't care”.                                                                              |
| pFlowControlMsg | Designates a pointer to an ISO 15765-2 flow control message. This message will be sent out when the received message ANDed with the message pointed to by pMaskMsg matches the message pointed to by pPatternMsg and the interface is receiving a segmented message. This message shall only contain the message ID (and extended address byte if the ISO15765_EXT_ADDR flag is set). The interface will provide the PCI bytes when this message is transmitted. To modify the BS and STmin values that are used by the interface, reference the IOCTL section. This pointer only applies to the FLOW_CONTROL_FILTER type and must be set to NULL when the FilterType is PASS_FILTER or BLOCK_FILTER. |
| pMsgID          | Pointer to location for the message ID that is assigned by the DLL.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |

## 7.2.7.3 Filter Type Values—See Figure 11.

| Definition          | Value      |
|---------------------|------------|
| PASS_FILTER         | 0x00000001 |
| BLOCK_FILTER        | 0x00000002 |
| FLOW_CONTROL_FILTER | 0x00000003 |

FIGURE 11—FILTER TYPE VALUES

7.2.7.4 *Return Values*—See Figure 12.

| Definition               | Description                                                                        |
|--------------------------|------------------------------------------------------------------------------------|
| STATUS_NOERROR           | Function call successful.                                                          |
| ERR_DEVICE_NOT_CONNECTED | Device not connected to PC.                                                        |
| ERR_INVALID_CHANNEL_ID   | Invalid ChannelID value.                                                           |
| ERR_INVALID_MSG          | Invalid message structure pointed to by pMsg.                                      |
| ERR_NULLPARAMETER        | NULL pointer supplied where a valid pointer is required.                           |
| ERR_FAILED               | Undefined error, use PassThruGetLastError for text description                     |
| ERR_EXCEEDED_LIMIT       | Exceeded the maximum number of filter message IDs or the maximum allocate space.   |
| ERR_MSG_PROTOCOL_ID      | Protocol type in the message does not match protocol associated with the ChannelID |

FIGURE 12—RETURN VALUES

7.2.8 **PASSTHRUSTOPMSGFILTER**—This function stops the process of filtering messages. If the function operates successfully, a value of STATUS\_NOERROR is returned. After this call the MsgID will be invalid.

7.2.8.1 *C / C++ Prototype*

```
extern "C" long WINAPI PassThruStopMsgFilter
(
    unsigned long ChannelID,
    unsigned long MsgID
)
```

7.2.8.2 *Parameters*

ChannelID    The channel ID assigned by the PassThruConnect function.  
 MsgID        Message ID that is assigned by the PassThruStartMsgFilter function.

7.2.8.3 *Return Values*—See Figure 13.

| Definition               | Description                                                    |
|--------------------------|----------------------------------------------------------------|
| STATUS_NOERROR           | Function call successful.                                      |
| ERR_DEVICE_NOT_CONNECTED | Device not connected to PC.                                    |
| ERR_INVALID_CHANNEL_ID   | Invalid ChannelID value.                                       |
| ERR_FAILED               | Undefined error, use PassThruGetLastError for text description |
| ERR_INVALID_MSG_ID       | Invalid MsgID value.                                           |

FIGURE 13—RETURN VALUES

**7.2.9 PASSTHRUSETPROGRAMMINGVOLTAGE**—This function sets a programming voltage on a specific pin. If the function operates successfully, a value of STATUS\_NOERROR is returned. It is up to the application programmer to insure that voltages are not applied to any pins incorrectly. This function cannot protect from incorrect usage (e.g., applying a voltage to pin 6 when it is being used for the CAN protocol). Note that for SCI protocol, the application would set the PinNumber, set the Voltage to VOLTAGE\_OFF, and set SCI\_TX\_VOLTAGE in TxFlags of the message to pulse the programming voltage to 20 V DC.

#### 7.2.9.1 C / C++ Prototype

```
extern "C" long WINAPI PassThruSetProgrammingVoltage
(
    unsigned long PinNumber,
    unsigned long Voltage
)
```

#### 7.2.9.2 Parameters

**PinNumber** The pin on which the programming voltage will be set. Valid options are:  
 0 – Auxiliary output pin (for non-SAE J1962 connectors)  
 6 – Pin 6 on the SAE J1962 connector.  
 9 – Pin 9 on the SAE J1962 connector.  
 11 – Pin 11 on the SAE J1962 connector.  
 12 – Pin 12 on the SAE J1962 connector.  
 13 – Pin 13 on the SAE J1962 connector.  
 14 – Pin 14 on the SAE J1962 connector.  
 15 – Pin 15 on the SAE J1962 connector (short to ground only).

**Voltage** The voltage (in millivolts) to be set. Valid values are:  
 5000mV-20000mV (limited to 200mA with a resolution of  $\pm 100$  millivolts for pins 0, 6, 9, 11, 12, 13, and 14).  
 VOLTAGE\_OFF – To turn output off (disconnect).  
 SHORT\_TO\_GROUND – Short pin to ground (pin 15 only).

#### 7.2.9.3 Voltage Values—See Figure 14.

| Definition          | Value                                         |
|---------------------|-----------------------------------------------|
| Programming Voltage | 0x00001388 (5000 mV) to 0x00004E20 (20000 mV) |
| SHORT_TO_GROUND     | 0xFFFFFFFF                                    |
| VOLTAGE_OFF         | 0xFFFFFFFF                                    |

FIGURE 14—VOLTAGE VALUES

#### 7.2.9.4 Return Values—See Figure 15.

| Definition               | Description                                                    |
|--------------------------|----------------------------------------------------------------|
| STATUS_NOERROR           | Function call successful.                                      |
| ERR_DEVICE_NOT_CONNECTED | Device not connected to PC.                                    |
| ERR_NOT_SUPPORTED        | Function not supported.                                        |
| ERR_FAILED               | Undefined error, use PassThruGetLastError for text description |
| ERR_PIN_INVALID          | Invalid pin number specified.                                  |

FIGURE 15—RETURN VALUES

7.2.10 **PASSTHRUREADVERSION**—This function returns the version strings associated with the DLL. If the function operates successfully, a value of STATUS\_NOERROR is returned. A buffer of at least eighty (80) characters must be allocated for each pointer by the application.

#### 7.2.10.1 C / C++ Prototype

```
extern "C" long WINAPI PassThruReadVersion
(
    char*pFirmwareVersion,
    char*pDllVersion,
    char*pApiVersion
)
```

#### 7.2.10.2 Parameters

**pFirmwareVersion** Pointer to Firmware version string in XX.YY format (e.g., 01.01). This string is determined by the interface vendor that supplies the device.

**pDllVersion** Pointer to DLL version string in XX.YY format (e.g., 01.01). This string is determined by the interface vendor that supplies the DLL.

**pApiVersion** Pointer to API version string in XX.YY format. This string corresponds to the date of the balloted document.  
 October 2001 Ballot = "01.01"  
 December 2001 Ballot = "01.02"  
 February 2002 Final = "02.02"

#### 7.2.10.3 Return Values—See Figure 16.

| Definition               | Description                                                    |
|--------------------------|----------------------------------------------------------------|
| STATUS_NOERROR           | Function call successful                                       |
| ERR_DEVICE_NOT_CONNECTED | Device not connected to PC                                     |
| ERR_FAILED               | Undefined error, use PassThruGetLastError for text description |
| ERR_NULLPARAMETER        | NULL pointer supplied where a valid pointer is required        |

FIGURE 16—RETURN VALUES

**7.2.11 PASSTHRUGETLASTERROR**—This function returns the text string description for an error detected during the last function call (except PassThruGetLastError). This function must be called before calling any other function. The buffer pointed to by pErrorDescription is allocated by the application and must be at least eighty (80) characters.

#### 7.2.11.1 C / C++ Prototype

```
extern "C" long WINAPI PassThruGetLastError
(
    char *pErrorDescription
)
```

#### 7.2.11.2 Parameters

pErrorDescription    Pointer to error description string.

#### 7.2.11.3 Return Values—See Figure 17.

| Definition        | Description                                             |
|-------------------|---------------------------------------------------------|
| STATUS_NOERROR    | Function call successful                                |
| ERR_NULLPARAMETER | NULL pointer supplied where a valid pointer is required |

FIGURE 17—RETURN VALUES

**7.2.12 PASSTHRUOCTL**—This function is used to read and write all the protocol hardware and software configuration parameters. If the function operates successfully, a value of STATUS\_NOERROR is returned. The structures pointed to by pInput and pOutput are determined by the ioctlID. Please see section on IOCTL structures for details.

#### 7.2.12.1 C / C++ Prototype

```
extern "C" long WINAPI PassThruIoctl
(
    unsigned long ChannelID,
    unsigned long ioctlID,
    void *pInput,
    void *pOutput
)
```

#### 7.2.12.2 Parameters

ChannelID    The channel ID assigned by the PassThruConnect function.  
 ioctlID    ioctl ID (see the IOCTL Section).  
 pInput    Pointer to input structure (see the IOCTL Section).  
 pOutput    Pointer to output structure (see the IOCTL Section).

7.2.12.3 *Ioctl ID Values*—See Figure 18.

| Definition                        | Value                   |
|-----------------------------------|-------------------------|
| GET_CONFIG                        | 0x01                    |
| SET_CONFIG                        | 0x02                    |
| READ_VBATT                        | 0x03                    |
| FIVE_BAUD_INIT                    | 0x04                    |
| FAST_INIT                         | 0x05                    |
| CLEAR_TX_BUFFER                   | 0x07                    |
| CLEAR_RX_BUFFER                   | 0x08                    |
| CLEAR_PERIODIC_MSGS               | 0x09                    |
| CLEAR_MSG_FILTERS                 | 0x0A                    |
| CLEAR_FUNC_MSG_LOOKUP_TABLE       | 0x0B                    |
| ADD_TO_FUNC_MSG_LOOKUP_TABLE      | 0x0C                    |
| DELETE_FROM_FUNC_MSG_LOOKUP_TABLE | 0x0D                    |
| READ_PROG_VOLTAGE                 | 0x0E                    |
| Reserved for SAE                  | 0x0F –<br>0xFFFF        |
| Tool manufacturer specific        | 0x10000 –<br>0xFFFFFFFF |

FIGURE 18—IOCTL ID VALUES

7.2.12.4 *Return Values*—See Figure 19.

| Definition               | Description                                                       |
|--------------------------|-------------------------------------------------------------------|
| STATUS_NOERROR           | Function call successful                                          |
| ERR_DEVICE_NOT_CONNECTED | Device not connected to PC                                        |
| ERR_INVALID_CHANNEL_ID   | Invalid ChannelID value.                                          |
| ERR_INVALID_IOCTL_ID     | Invalid ioctlID value.                                            |
| ERR_NULL_PARAMETER       | NULL pointer supplied where a valid pointer is required           |
| ERR_NOT_SUPPORTED        | Invalid or unsupported parameter/value                            |
| ERR_FAILED               | Undefined error, use<br>PassThruGetLastError for text description |

FIGURE 19—RETURN VALUES

### 7.3 IOCTL Section—Figure 20 provides the details on the IOCTLs available through PassThruIoctl function:

| Value of ioctlID                  | InputPtr represents     | OutputPtr represents     | Purpose                                                                                                              |
|-----------------------------------|-------------------------|--------------------------|----------------------------------------------------------------------------------------------------------------------|
| GET_CONFIG                        | Pointer to SCONFIG_LIST | NULL pointer             | To get the vehicle network configuration of the pass-thru device                                                     |
| SET_CONFIG                        | Pointer to SCONFIG_LIST | NULL pointer             | To set the vehicle network configuration of the pass-thru device                                                     |
| READ_VBATT                        | NULL pointer            | Pointer to unsigned long | To direct the pass-thru device to read the voltage on pin 16 of the J1962 connector                                  |
| FIVE_BAUD_INIT                    | Pointer to SBYTE_ARRAY  | Pointer to SBYTE_ARRAY   | To direct the pass-thru device to initiate a 5 baud initialization sequence                                          |
| FAST_INIT                         | Pointer to PASSTHRU_MSG | Pointer to PASSTHRU_MSG  | To direct the pass-thru device to initiate a fast initialization sequence                                            |
| CLEAR_TX_BUFFER                   | NULL pointer            | NULL pointer             | To direct the pass-thru device to clear all messages in its transmit queue                                           |
| CLEAR_RX_BUFFER                   | NULL pointer            | NULL pointer             | To direct the pass-thru device to clear all messages in its receive queue                                            |
| CLEAR_PERIODIC_MSGS               | NULL pointer            | NULL pointer             | To direct the pass-thru device to clear all periodic messages, thus stopping all periodic message transmission       |
| CLEAR_MSG_FILTERS                 | NULL pointer            | NULL pointer             | To direct the pass-thru device to clear all message filters, thus stopping all filtering                             |
| CLEAR_FUNC_MSG_LOOKUP_TABLE       | NULL pointer            | NULL pointer             | To direct the pass-thru device to clear the Functional Message Look-up Table                                         |
| ADD_TO_FUNC_MSG_LOOKUP_TABLE      | Pointer to SBYTE_ARRAY  | NULL pointer             | To direct the pass-thru device to add a functional address to the Functional Message Look-up Table                   |
| DELETE_FROM_FUNC_MSG_LOOKUP_TABLE | Pointer to SBYTE_ARRAY  | NULL pointer             | To direct the pass-thru device to delete a functional address from the Functional Message Look-up Table              |
| READ_PROG_VOLTAGE                 | NULL pointer            | Pointer to unsigned long | To direct the pass-thru device to read the feedback of the programmable voltage set by PassThruSetProgrammingVoltage |

FIGURE 20—IOCTL DETAILS

- 7.3.1 GET\_CONFIG—The ioctlID value of GET\_CONFIG is used to obtain the vehicle network configuration of the pass-thru device. The calling application is responsible for allocating and initializing the associated parameters described in Figure 21. When the function is successfully completed, the corresponding parameter value(s) indicated in Figures 23A, 23B, and 23C will be placed in each Value.

| Parameter | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|-----------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| IoctlID   | Is set to the define GET_CONFIG.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| InputPtr  | <p>Points to the structure SCONFIG_LIST, which is defined as follows:</p> <pre>typedef struct {     unsigned long NumOfParams; /* number of SCONFIG elements */     SCONFIG *ConfigPtr; /* array of SCONFIG */ } SCONFIG_LIST</pre> <p>where:<br/> NumOfParams is an INPUT, which contains the number of SCONFIG elements in the array pointed to by ConfigPtr.<br/> ConfigPtr is a pointer to an array of SCONFIG structures.</p> <p>The structure SCONFIG is defined as follows:</p> <pre>typedef struct {     unsigned long Parameter; /* name of parameter */     unsigned long Value; /* value of the parameter */ } SCONFIG</pre> <p>where:<br/> Parameter is an INPUT that represents the parameter to be obtained (See Figure 23 for a list of valid parameters).<br/> Value is an OUTPUT that represents the value of that parameter (See Figure 23 for a list of valid values).</p> |
| OutputPtr | Is a NULL pointer, as this parameter is not used.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |

FIGURE 21—GET\_CONFIG DETAIL

- 7.3.2 SET\_CONFIG—The IoctlID value of SET\_CONFIG is used to set the vehicle network configuration of the pass-thru device. The calling application is responsible for allocating and initializing the associated parameters described in Figure 22. When the function is successfully completed the corresponding parameter(s) and value(s) indicated in Figures 23A, 23B, and 23C will be in effect.

| Parameter | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|-----------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| IoctlID   | Is set to the define SET_CONFIG.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| InputPtr  | <p>Points to the structure SCONFIG_LIST, which is defined as follows:</p> <pre>typedef struct {     unsigned long NumOfParams; /* number of SCONFIG elements */     SCONFIG *ConfigPtr; /* array of SCONFIG */ } SCONFIG_LIST</pre> <p>where:<br/> NumOfParams is an INPUT, which contains the number of SCONFIG elements in the array pointed to by ConfigPtr.<br/> ConfigPtr is a pointer to an array of SCONFIG structures.</p> <p>The structure SCONFIG is defined as follows:</p> <pre>typedef struct {     unsigned long Parameter; /* name of parameter */     unsigned long Value; /* value of the parameter */ } SCONFIG</pre> <p>where:<br/> Parameter is an INPUT that represents the parameter to be set (See Figure 23 for a list of valid parameters).<br/> Value is an INPUT that represents the value of that parameter (See Figure 23 for a list of valid values).</p> |
| OutputPtr | Is a NULL pointer, as this parameter is not used.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |

FIGURE 22—SET\_CONFIG DETAILS

| Valid values for Parameter | ID Value | Valid values for Value                          | Description                                                                                                                                                                                    |
|----------------------------|----------|-------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| DATA_RATE                  | 0x01     | 5-500000                                        | Represents the desired baud rate.<br><b>There is no default value.</b>                                                                                                                         |
| Unused                     | 0x02     |                                                 | Reserved for SAE                                                                                                                                                                               |
| LOOPBACK                   | 0x03     | 0 (OFF)<br>1 (ON)                               | 0 = Don't echo transmitted messages in the receive queue.<br>1 = Echo transmitted messages in the receive queue.<br><b>The default value is OFF.</b>                                           |
| NODE_ADDRESS               | 0x04     | 0x00-0xFF                                       | For a protocol ID of J1850PWM, this sets the node address in the physical layer of the vehicle network.                                                                                        |
| NETWORK_LINE               | 0x05     | 0 (BUS_NORMAL)<br>1 (BUS_PLUS)<br>2 (BUS_MINUS) | For a protocol ID of J1850PWM, this sets the network line(s) that are active during communication (for cases where the physical layer allows this).<br><b>The default value is BUS_NORMAL.</b> |
| P1_MIN                     | 0x06     | 0x0-0xFFFF                                      | For protocol ID of ISO9141, this sets the minimum inter-byte time (in milli-seconds) for ECU responses.<br><b>The default value is 0 milli-seconds.</b>                                        |
| P1_MAX                     | 0x07     | 0x0-0xFFFF                                      | For protocol ID of ISO9141, this sets the maximum inter-byte time (in milli-seconds) for ECU responses (in milli-seconds).<br><b>The default value is 20 milli-seconds.</b>                    |
| P2_MIN                     | 0x08     | 0x0-0xFFFF                                      | For protocol ID of ISO9141, this sets the minimum time (in milli-seconds) between tester request and ECU responses or two ECU responses.<br><b>The default value is 25 milli-seconds.</b>      |

FIGURE 23A—IOTL GET\_CONFIG / SET\_CONFIG PARAMETER DETAILS

| Valid values for Parameter | ID Value | Valid values for Value                             | Description                                                                                                                                                                                               |
|----------------------------|----------|----------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| P2_MAX                     | 0x09     | 0x0-0xFFFF                                         | For protocol ID of ISO9141, this sets the maximum time (in milli-seconds) between tester request and ECU responses or two ECU responses.<br><b>The default value is 50 milli-seconds.</b>                 |
| P3_MIN                     | 0x0A     | 0x0-0xFFFF                                         | For protocol ID of ISO9141, this sets the minimum time (in milli-seconds) between end of ECU response and start of new tester request.<br><b>The default value is 55 milli-seconds.</b>                   |
| P3_MAX                     | 0x0B     | 0x0-0xFFFF                                         | For protocol ID of ISO9141, this sets the maximum time (in milli-seconds) between end of ECU response and start of new tester request.<br><b>The default value is 5000 milli-seconds.</b>                 |
| P4_MIN                     | 0x0C     | 0x0-0xFFFF                                         | For protocol ID of ISO9141, this sets the minimum inter-byte time (in milli-seconds) for a tester request.<br><b>The default value is 5 milli-seconds.</b>                                                |
| P4_MAX                     | 0x0D     | 0x0-0xFFFF                                         | For protocol ID of ISO9141, this sets the maximum inter-byte time (in milli-seconds) for a tester request.<br><b>The default value is 20 milli-seconds.</b>                                               |
| W1                         | 0x0E     | 0x0-0xFFFF                                         | For protocol ID of ISO9141, this sets the maximum time (in milli-seconds) from the end of the address byte to the start of the synchronization pattern.<br><b>The default value is 300 milli-seconds.</b> |
| W2                         | 0x0F     | 0x0-0xFFFF                                         | For protocol ID of ISO9141, this sets the maximum time (in milli-seconds) from the end of the synchronization pattern to the start of key byte 1.<br><b>The default value is 20 milli-seconds.</b>        |
| W3                         | 0x10     | 0x0-0xFFFF                                         | For protocol ID of ISO9141, this sets the maximum time (in milli-seconds) between key byte 1 and key byte 2.<br><b>The default value is 20 milli-seconds.</b>                                             |
| W4                         | 0x11     | 0x0-0xFFFF                                         | For protocol ID of ISO9141, this sets the maximum time (in milli-seconds) between key byte 2 and its inversion from the tester.<br><b>The default value is 50 milli-seconds.</b>                          |
| W5                         | 0x12     | 0x0-0xFFFF                                         | For protocol ID of ISO9141, this sets the minimum time (in milli-seconds) before the tester start to transmit the address byte.<br><b>The default value is 300 milli-seconds.</b>                         |
| TIDLE                      | 0x13     | 0x0-0xFFFF                                         | For protocol ID of ISO9141, this sets the amount of bus idle time that is needed before a fast initialization sequence will begin.<br><b>The default is the value of W5.</b>                              |
| TINIL                      | 0x14     | 0x0-0xFFFF                                         | For protocol ID of ISO9141, this sets the duration (in milli-seconds) for the low pulse in fast initialization.<br><b>The default value is 25 milli-seconds.</b>                                          |
| TWUP                       | 0x15     | 0x0-0xFFFF                                         | For protocol ID of ISO9141, this sets the duration (in milli-seconds) of the wake-up pulse in fast initialization. <b>The default value is 50 milli-seconds.</b>                                          |
| PARITY                     | 0x16     | 0 (NO_PARITY)<br>1 (ODD_PARITY)<br>2 (EVEN_PARITY) | For a protocol ID of ISO9141 only.<br><b>The default value is NO_PARITY.</b>                                                                                                                              |
| BIT_SAMPLE_POINT           | 0x17     | 0-100                                              | For a protocol ID of CAN, this sets the desired bit sample point as a percentage of the bit time. <b>The default is 80%.</b>                                                                              |
| SYNC_JUMP_WIDTH            | 0x18     | 0-100                                              | For a protocol ID of CAN, this sets the desired synchronization jump width as a percentage of the bit time. <b>The default is 15%.</b>                                                                    |

FIGURE 23B—IOCTL GET\_CONFIG / SET\_CONFIG PARAMETER DETAILS (CONTINUED)

| Valid values for Parameter | ID Value             | Valid values for Value | Description                                                                                                                                                                                                                                 |
|----------------------------|----------------------|------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Unused                     | 0x19                 |                        | Reserved for SAE                                                                                                                                                                                                                            |
| T1_MAX                     | 0x1A                 | 0x0-0xFFFF             | For protocol ID of SCI_A_ENGINE, SCI_A_TRANS, SCI_B_ENGINE or SCI_B_TRANS, this sets the maximum inter-frame response delay. <b>The default value is 20 milli-seconds.</b>                                                                  |
| T2_MAX                     | 0x1B                 | 0x0-0xFFFF             | For protocol ID of SCI_A_ENGINE, SCI_A_TRANS, SCI_B_ENGINE or SCI_B_TRANS, this sets the maximum inter-frame request delay. <b>The default value is 100 milli-seconds.</b>                                                                  |
| T4_MAX                     | 0x1C                 | 0x0-0xFFFF             | For protocol ID of SCI_A_ENGINE, SCI_A_TRANS, SCI_B_ENGINE or SCI_B_TRANS, this sets the maximum inter-message response delay. <b>The default value is 20 milli-seconds.</b>                                                                |
| T5_MAX                     | 0x1D                 | 0x0-0xFFFF             | For protocol ID of SCI_A_ENGINE, SCI_A_TRANS, SCI_B_ENGINE or SCI_B_TRANS, this sets the maximum inter-message request delay. <b>The default value is 100 milli-seconds.</b>                                                                |
| ISO15765_BS                | 0x1E                 | 0x0-0xFF               | For protocol ID of ISO15765, this sets the block size for segmented transfers. <b>The default value is 0. Default value or value set by the application may be overridden by interface to match the capabilities of the interface.</b>      |
| ISO15765_STMIN             | 0x1F                 | 0x0-0xFF               | For protocol ID of ISO15765, this sets the separation time for segmented transfers. <b>The default value is 0. Default value or value set by the application may be overridden by interface to match the capabilities of the interface.</b> |
| Unused                     | 0x20 - 0xFFFF        |                        | Reserved for SAE                                                                                                                                                                                                                            |
| Tool manufacturer specific | 0x10000 – 0xFFFFFFFF | Manufacturer Specific  | Manufacturer Specific                                                                                                                                                                                                                       |

FIGURE 23C—IOTCL GET\_CONFIG / SET\_CONFIG PARAMETER DETAILS (CONTINUED)

- 7.3.3 READ\_VBATT—The ioctlID value of READ\_VBATT is used to obtain the voltage measured on pin 16 of the SAE J1962 connector from the pass-thru device. The calling application is responsible for allocating and initializing the associated parameters described in Figure 24. When the function is successfully completed, battery voltage will be placed in the variable pointed to by OutputPtr. The units will be in milli-volts and will be rounded to the nearest tenth of a volt.

| Parameter | Description                                       |
|-----------|---------------------------------------------------|
| ioctlID   | Is set to the define READ_VBATT.                  |
| InputPtr  | Is a NULL pointer, as this parameter is not used. |
| OutputPtr | Is a pointer to an unsigned long.                 |

FIGURE 24—READ\_VBATT DETAILS

- 7.3.4 **READ\_PROG\_VOLTAGE**—The `loctID` value of `READ_PROG_VOLTAGE` is used to obtain the programming voltage of the pass-thru device. The calling application is responsible for allocating and initializing the associated parameters described in Figure 25. When the function is successfully completed, programming voltage will be placed in the variable pointed to by `OutputPtr`. The units will be in milli-volts and will be rounded to the nearest tenth of a volt.

| Parameter              | Description                                           |
|------------------------|-------------------------------------------------------|
| <code>loctID</code>    | Is set to the define <code>READ_PROG_VOLTAGE</code> . |
| <code>InputPtr</code>  | Is a NULL pointer, as this parameter is not used.     |
| <code>OutputPtr</code> | Is a pointer to an unsigned long.                     |

FIGURE 25—`READ_PROG_VOLTAGE` DETAILS

- 7.3.5 **FIVE\_BAUD\_INIT**—The `loctID` value of `FIVE_BAUD_INIT` is used to initiate a 5-baud initialization sequence from the pass-thru device. The calling application is responsible for allocating and initializing the associated parameters described in Figure 26. When the function is successfully completed, the key words will be placed in structure pointed to by `OutputPtr`. It should be noted that this only applies to Protocol ID of ISO 9141.

| Parameter              | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>loctID</code>    | Is set to the define <code>FIVE_BAUD_INIT</code> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <code>InputPtr</code>  | Points to the structure <code>SBYTE_ARRAY</code> , which is defined as follows:<br><pre> Typedef struct {     unsigned long NumOfBytes; /* number of bytes in the array */     unsigned char *BytePtr; /* array of bytes */ } SBYTE_ARRAY </pre> <p>where:<br/> <code>NumOfBytes</code> is an INPUT that must be set to "1" and indicates the number of bytes in the array <code>BytePtr</code>.<br/> <code>BytePtr[0]</code> is an INPUT that contains the target address.<br/> The remaining elements in <code>BytePtr</code> are not used.</p> |
| <code>OutputPtr</code> | Points to the structure <code>SBYTE_ARRAY</code> defined above<br><p>where:<br/> <code>NumOfBytes</code> is an INPUT which indicates the maximum size of the array <code>BytePtr</code> and an OUTPUT which indicates the number of bytes in the array <code>BytePtr</code>. May be less than "2".<br/> <code>BytePtr[0]</code> is an OUTPUT that contains key word 1 from the ECU.<br/> <code>BytePtr[1]</code> is an OUTPUT that contains key word 2 from the ECU.<br/> The remaining elements in <code>BytesPtr</code> are not used.</p>       |

FIGURE 26—`FIVE_BAUD_INIT` DETAILS

- 7.3.6 **FAST\_INIT**—The `loctID` value of `FAST_INIT` is used to initiate a fast initialization sequence from the pass-thru device. The calling application is responsible for allocating and initializing the associated parameters described in Figure 27. When the function is successfully completed, the response message will be placed in structure pointed to by `OutputPtr`. It should be noted that this only applies to Protocol ID of ISO 9141.

| Parameter              | Description                                                                                                                                      |
|------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>loctID</code>    | Is set to the define <code>FAST_INIT</code> .                                                                                                    |
| <code>InputPtr</code>  | Points to the structure <code>PASSTHRU_MSG</code> (see the message definition section of this document) which the pass-thru device will send.    |
| <code>OutputPtr</code> | Points to the structure <code>PASSTHRU_MSG</code> (see the message definition section of this document) which the pass-thru device will receive. |

FIGURE 27—`FAST_INIT` DETAILS

- 7.3.7 **CLEAR\_TX\_BUFFER**—The `loctlID` value of `CLEAR_TX_BUFFER` is used to direct the pass-thru device to clear its transmit queue. The calling application is responsible for allocating and initializing the associated parameters described in Figure 28. When the function is successfully completed, the transmit queue will have been cleared.

| Parameter              | Description                                         |
|------------------------|-----------------------------------------------------|
| <code>loctlID</code>   | Is set to the define <code>CLEAR_TX_BUFFER</code> . |
| <code>InputPtr</code>  | Is a NULL pointer, as this parameter is not used.   |
| <code>OutputPtr</code> | Is a NULL pointer, as this parameter is not used.   |

FIGURE 28—CLEAR\_TX\_BUFFER DETAILS

- 7.3.8 **CLEAR\_RX\_BUFFER**—The `loctlID` value of `CLEAR_RX_BUFFER` is used to direct the pass-thru device to clear its receive queue. The calling application is responsible for allocating and initializing the associated parameters described in Figure 29. When the function is successfully completed, the receive queue will have been cleared.

| Parameter              | Description                                         |
|------------------------|-----------------------------------------------------|
| <code>loctlID</code>   | Is set to the define <code>CLEAR_RX_BUFFER</code> . |
| <code>InputPtr</code>  | Is a NULL pointer, as this parameter is not used.   |
| <code>OutputPtr</code> | Is a NULL pointer, as this parameter is not used.   |

FIGURE 29—CLEAR\_RX\_BUFFER DETAILS

- 7.3.9 **CLEAR\_PERIODIC\_MSGS**—The `loctlID` value of `CLEAR_PERIODIC_MSGS` is used to direct the pass-thru device to clear its periodic messages. The calling application is responsible for allocating and initializing the associated parameters described in Figure 30. When the function is successfully completed, the list will have been cleared and all periodic messages will have stopped transmitting.

| Parameter              | Description                                             |
|------------------------|---------------------------------------------------------|
| <code>loctlID</code>   | Is set to the define <code>CLEAR_PERIODIC_MSGS</code> . |
| <code>InputPtr</code>  | Is a NULL pointer, as this parameter is not used.       |
| <code>OutputPtr</code> | Is a NULL pointer, as this parameter is not used.       |

FIGURE 30—CLEAR\_PERIODIC\_MSGS DETAILS

- 7.3.10 **CLEAR\_MSG\_FILTERS**—The `loctlID` value of `CLEAR_MSG_FILTERS` is used to direct the pass-thru device to clear its message filters. The calling application is responsible for allocating and initializing the associated parameters described in Figure 31. When the function is successfully completed, the list will have been cleared and all message filtering will have stopped.

| Parameter              | Description                                           |
|------------------------|-------------------------------------------------------|
| <code>loctlID</code>   | Is set to the define <code>CLEAR_MSG_FILTERS</code> . |
| <code>InputPtr</code>  | Is a NULL pointer, as this parameter is not used.     |
| <code>OutputPtr</code> | Is a NULL pointer, as this parameter is not used.     |

FIGURE 31—CLEAR\_MSG\_FILTERS DETAILS

- 7.3.11 CLEAR\_FUNC\_MSG\_LOOKUP\_TABLE—The `loctlID` value of `CLEAR_FUNC_MSG_LOOKUP_TABLE` is used to direct the pass-thru device to clear its functional message look-up table. The calling application is responsible for allocating and initializing the associated parameters described in Figure 32. When the function is successfully completed, the table will have been cleared. It should be noted that this only applies Protocol ID of SAE J1850PWM.

| Parameter              | Description                                                     |
|------------------------|-----------------------------------------------------------------|
| <code>loctlID</code>   | Is set to the define <code>CLEAR_FUNC_MSG_LOOKUP_TABLE</code> . |
| <code>InputPtr</code>  | Is a NULL pointer, as this parameter is not used.               |
| <code>OutputPtr</code> | Is a NULL pointer, as this parameter is not used.               |

FIGURE 32—CLEAR\_FUNC\_MSG\_LOOKUP\_TABLE DETAILS

- 7.3.12 ADD\_TO\_FUNC\_MSG\_LOOKUP\_TABLE—The `loctlID` value of `ADD_TO_FUNC_MSG_LOOKUP_TABLE` is used to add functional address(es) to the functional message look-up table in the physical layer of the vehicle network on the pass-thru device. The calling application is responsible for allocating and initializing the associated parameters described in Figure 33. When the function is successfully completed, the look-up table will have been altered. It should be noted that this only applies Protocol ID of J1850PWM.

| Parameter              | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>loctlID</code>   | Is set to the define <code>ADD_TO_FUNC_MSG_LOOKUP_TABLE</code> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <code>InputPtr</code>  | Points to the structure <code>SBYTE_ARRAY</code> , which is defined as follows:<br>Typedef struct<br>{<br>unsigned long NumOfBytes;   /* number of bytes in the array */<br>unsigned char *BytePtr;   /* array of bytes */<br>} <code>SBYTE_ARRAY</code><br><br>where:<br>NumOfBytes is an INPUT that indicates the number of bytes in the array BytePtr.<br>BytePtr[0] is an INPUT that contains the first functional address to be added.<br>.<br>.<br>.<br>BytePtr[n] is an INPUT that contains the nth functional address to be added. |
| <code>OutputPtr</code> | Is a NULL pointer, as this parameter is not used.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |

FIGURE 33—ADD\_TO\_FUNC\_MSG\_LOOKUP\_TABLE DETAILS

- 7.3.13 **DELETE\_FROM\_FUNCT\_MSG\_LOOKUP\_TABLE**—The `loctIID` value of `DELETE_FROM_FUNCT_MSG_LOOKUP_TABLE` is used to delete functional address(es) from the functional message look-up table in the physical layer of the vehicle network on the pass-thru device. The calling application is responsible for allocating and initializing the associated parameters described in Figure 34. When the function is successfully completed, the look-up table will have been altered. It should be noted that this only applies Protocol ID of J1850PWM.

| Parameter              | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>loctIID</code>   | Is set to the define <code>DELETE_FROM_FUNCT_MSG_LOOKUP_TABLE</code> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <code>InputPtr</code>  | Points to the structure <code>SBYTE_ARRAY</code> , which is defined as follows:<br>Typedef struct<br>{<br>unsigned long NumOfBytes; /* number of bytes in the array */<br>unsigned char *BytePtr; /* array of bytes */<br>} <code>SBYTE_ARRAY</code><br><br>where:<br>NumOfBytes is an INPUT that indicates the number of bytes in the array <code>BytePtr</code> .<br>BytePtr[0] is an INPUT that contains the first functional address to be deleted.<br>.<br>.<br>.<br>BytePtr[n] is an INPUT that contains the nth functional address to be deleted. |
| <code>OutputPtr</code> | Is a NULL pointer, as this parameter is not used.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |

FIGURE 34—DELETE\_FROM\_FUNCT\_MSG\_LOOKUP\_TABLE DETAILS

8. **Message Structure**—The following message structure will be used for all messages. The total message size (in bytes) is the `DataSize`. The `ExtraDataIndex` points to the IFR or checksum/CRC byte(s) when applicable. For consistency, all interfaces should detect only the errors listed for each protocol in the following sections when returning `ERR_INVALID_MSG`.

### 8.1 C / C++ Definition

```
typedef struct {
    unsigned long ProtocolID;
    unsigned long RxStatus;
    unsigned long TxFlags;
    unsigned long Timestamp;
    unsigned long DataSize;
    unsigned long ExtraDataIndex;
    unsigned char Data[4128];
} PASSTHRU_MSG;
```

### 8.2 Elements

|                             |                                                                                                                                                                          |
|-----------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>ProtocolID</code>     | Protocol type                                                                                                                                                            |
| <code>RxStatus</code>       | Receive message status – See <code>RxStatus</code> in “Message Flags and Status Definition” section                                                                      |
| <code>TxFlags</code>        | Transmit message flags – See <code>TxFlags</code> in “Message Flags and Status Definition” section                                                                       |
| <code>Timestamp</code>      | Received message timestamp (microseconds)                                                                                                                                |
| <code>DataSize</code>       | Data size in bytes                                                                                                                                                       |
| <code>ExtraDataIndex</code> | Start position of extra data in received message (e.g., IFR, CRC, checksum, ...). The extra data bytes follow the body bytes in the Data array. The index is zero-based. |
| <code>Data</code>           | Array of data bytes.                                                                                                                                                     |

**8.3 Message Data Formats**—The following sections describe the bytes in the Data section of the PASSTHRU\_MSG structure. In cases where extra data is included, the ExtraDataIndex will give the byte index from the beginning of the PASSTHRU\_MSG structure Data section to the first byte of extra data.

NOTE— Extra bytes are not supported for PASSTHRU\_MSG structures used for transmitting messages.

**8.3.1 CAN DATA FORMAT**—The CAN protocol is used for raw CAN message interfacing to the vehicle. This protocol can be used to handle any custom CAN messaging protocol, including custom flow control mechanisms. The order of the bytes is shown in Figure 35.

| Offset       | Data                       |
|--------------|----------------------------|
| 0            | CAN ID (bits 24-29)        |
| 1            | CAN ID (bits 16-23)        |
| 2            | CAN ID (bits 8-15)         |
| 3            | CAN ID (bits 0-7)          |
| 4            | First data byte of message |
| ...          | ...                        |
| DataSize - 1 | Last data byte of message  |

FIGURE 35—CAN DATA FORMAT

NOTE— Extra bytes are not supported for PASSTHRU\_MSG structures used for transmitted messages.

**8.3.1.1 CAN Data Format Error Detection**—The following data format errors should be detected when using the ERR\_INVALID\_MSG for CAN data:

- a. DataSize less than four (4) bytes or greater than twelve (12) bytes (4 ID bytes + 8 data bytes).

**8.3.2 ISO 15765-4 DATA FORMAT**—The ISO 15765-4 protocol implements the network layer (i.e., adding the PCI byte to the transmitted messages, performing flow control, and removing the PCI byte from received messages) in the device so the application just sends and receives the actual message data. The order of the bytes is shown in Figure 36.

| Offset       | Data                                                                                            |
|--------------|-------------------------------------------------------------------------------------------------|
| 0            | CAN ID (bits 24-29)                                                                             |
| 1            | CAN ID (bits 16-23)                                                                             |
| 2            | CAN ID (bits 8-15)                                                                              |
| 3            | CAN ID (bits 0-7)                                                                               |
| 4            | First data byte of message (or ISO15765-2 extended address byte when ISO15765_ADDR_TYPE is set) |
| ...          | ...                                                                                             |
| DataSize - 1 | Last data byte of message                                                                       |

FIGURE 36—ISO 15765-4 DATA FORMAT

NOTE— Extra bytes are not supported for PASSTHRU\_MSG structures used for transmitted messages.

8.3.2.1 *ISO 15765-4 Data Format Error Detection*—The following data format errors should be detected when using the ERR\_INVALID\_MSG for ISO 15765-4 data:

- a. DataSize less than four (4) bytes (ID only) or greater than 4101 bytes (4 ID bytes + 1 possible extended address byte + 4096 data bytes).

8.3.3 SAE J1850PWM DATA FORMAT—The order of bytes for J1850PWM is shown in Figure 37.

| Offset         | Data                  |
|----------------|-----------------------|
| 0              | First byte of message |
| ...            | ...                   |
| N              | Last byte of message  |
| ExtraDataIndex | IFR byte or CRC       |
| ...            | ...                   |
| DataSize – 1   | CRC                   |

FIGURE 37—SAE J1850PWM DATA FORMAT

NOTE— Extra bytes are not supported for PASSTHRU\_MSG structures used for transmitted messages.

8.3.3.1 *SAE J1850PWM Data Format Error Detection*—The following data format errors should be detected when using the ERR\_INVALID\_MSG for J1850PWM data:

- a. DataSize less than three (3) bytes (3 header bytes) or greater than 10 bytes (3 header bytes + 7 data bytes).
- b. Source address that is different than the node ID.

8.3.4 SAE J1850VPW DATA FORMAT—The order of bytes for SAE J1850VPW is shown in Figure 38.

| Offset         | Data                  |
|----------------|-----------------------|
| 0              | First byte of message |
| ...            | ...                   |
| N              | Last byte of message  |
| ExtraDataIndex | IFR byte or CRC       |
| ...            | ...                   |
| DataSize - 1   | CRC                   |

FIGURE 38—SAE J1850VPW DATA FORMAT

NOTE— Extra bytes are not supported for PASSTHRU\_MSG structures used for transmitted messages.

8.3.4.1 *SAE J1850VPW Data Format Error Detection*—The following data format errors should be detected when using the ERR\_INVALID\_MSG for SAE J1850VPW data:

- a. DataSize of zero or greater than 4128 bytes.

8.3.5 ISO 9141 DATA FORMAT—The order of bytes for ISO 9141 is shown in Figure 39.

| Offset                        | Data                  |
|-------------------------------|-----------------------|
| 0                             | First byte of message |
| ...                           | ...                   |
| n                             | Last byte of message  |
| ExtraDataIndex / DataSize - 1 | Checksum              |

FIGURE 39—ISO 9141 DATA FORMAT

8.3.5.1 *ISO 9141 Data Format Error Detection*—The following data format errors should be detected when using the ERR\_INVALID\_MSG for ISO 9141 data:

- a. DataSize of zero or greater than 261 bytes.

8.3.6 ISO 14230-4 DATA FORMAT—The order of bytes for ISO 14230-4 is shown in Figure 40.

| Offset                        | Data                  |
|-------------------------------|-----------------------|
| 0                             | First byte of message |
| ...                           | ...                   |
| n                             | Last byte of message  |
| ExtraDataIndex / DataSize - 1 | Checksum              |

FIGURE 40—ISO 14230-4 DATA FORMAT

8.3.6.1 *ISO 14230-4 Data Format Error Detection*—The following data format errors should be detected when using the ERR\_INVALID\_MSG for ISO 14230-4 data:

- a. DataSize of less than four (4 byte header) or greater than 261 bytes (4 byte header + 256 data bytes + 1 byte checksum).

8.3.7 SCI DATA FORMAT—The order of bytes for SCI is shown in Figure 41.

| Offset | Data                  |
|--------|-----------------------|
| 0      | First byte of message |
| ...    | ...                   |
| N      | Last byte of message  |

FIGURE 41—SCI DATA FORMAT

8.3.7.1 *SCI Data Format Error Detection*—The following data format errors should be detected when using the ERR\_INVALID\_MSG for SCI data:

- a. DataSize of zero or greater than 256 bytes.

## 8.4 Message Flag and Status Definitions

8.4.1 RxSTATUS—Definitions for RxStatus bits are shown in Figure 42.

| Definition           | RxStatus Bit(s) | Description                               | Value                                                                             |
|----------------------|-----------------|-------------------------------------------|-----------------------------------------------------------------------------------|
|                      | 31-24           | Unused                                    | Tool manufacturer specific                                                        |
|                      | 23-9            | Unused                                    | Reserved for SAE – shall be set to 0                                              |
| CAN_29BIT_ID         | 8               | CAN ID Type                               | 0 = 11-bit, 1 = 29-bit                                                            |
|                      | 7-3             | Unused                                    | Reserved for SAE – shall be set to 0                                              |
| RX_BREAK             | 2               | Break indication received                 | 0 = no indication, 1 = break received                                             |
| ISO15765_FIRST_FRAME | 1               | ISO15765-2 First Frame Indication         | 0 = no indication, 1 = First Frame<br>Note: no data is reported with this message |
| TX_MSG_TYPE          | 0               | Receive Indication/ Transmit Confirmation | 0 = received, 1 = transmitted                                                     |

FIGURE 42—RXSTATUS BIT DEFINITIONS

8.4.2 TxFLAGS—Definitions for TxFlags bits are shown in Figure 43.

| Definition         | TxFlags Bit(s) | Description                  | Value                                                                                                                                                                  |
|--------------------|----------------|------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                    | 31-24          | Unused                       | Tool manufacturer specific                                                                                                                                             |
| SCI_TX_VOLTAGE     | 23             | SCI programming voltage      | 0 = no voltage after message transmit, 1 = apply 20V after message transmit                                                                                            |
|                    | 22-17          | Unused                       | Reserved for SAE - shall be set to 0                                                                                                                                   |
| BLOCKING           | 16             | Blocking flag                | 0 = non-blocking, 1 = blocking                                                                                                                                         |
|                    | 15-9           | Unused                       | Reserved for SAE - shall be set to 0                                                                                                                                   |
| CAN_29BIT_ID       | 8              | CAN ID type                  | 0 = 11-bit, 1 = 29-bit                                                                                                                                                 |
| ISO15765_ADDR_TYPE | 7              | ISO15765-2 Addressing Method | 0 = no extended address, 1 = extended address is first byte after the ID bytes<br>Note: if different, this will override Flags in the PassThruConnect for this message |
| ISO15765_FRAME_PAD | 6              | ISO15765-2 Frame Padding     | 0 = no padding, 1 = pad all flow controlled messages to a full CAN frame using zeroes                                                                                  |
|                    | 5-0            | Unused                       | Reserved for SAE - shall be set to 0                                                                                                                                   |

FIGURE 43—TXFLAGS BIT DEFINITIONS

## 9. DLL Installation and Registration

**9.1 Naming of Files**—In general, each vendor will provide a different name implementation of the API DLL and a number of these implementations could simultaneously reside on the same PC. No vendor shall name its implementation “J2534.DLL”. All implementations shall have the string “32” suffixed to end of the name of the API DLL to indicate 32-bit. For example, if the company name is “Vendor X” the name could be VENDRX32.DLL. For simplicity, an API DLL shall be named in accordance with the file allocation table (FAT) file system naming convention (which allows up to eight characters for the file name and three characters for the extension with no spaces anywhere). Note that, given this criteria, the major name of an API DLL can be no greater than six characters. The OEM application can determine the name of the appropriate vendor’s DLL using the Win32 Registry mechanism described in this section.

**9.2 Win32 Registration**—This section describes the use of the Windows Registry for storing information about the various vendors supplying the device drivers conforming to this recommended practice, the various devices supported by each vendor, information about each device, etc. The Win32 registration is shown in Figure 44.

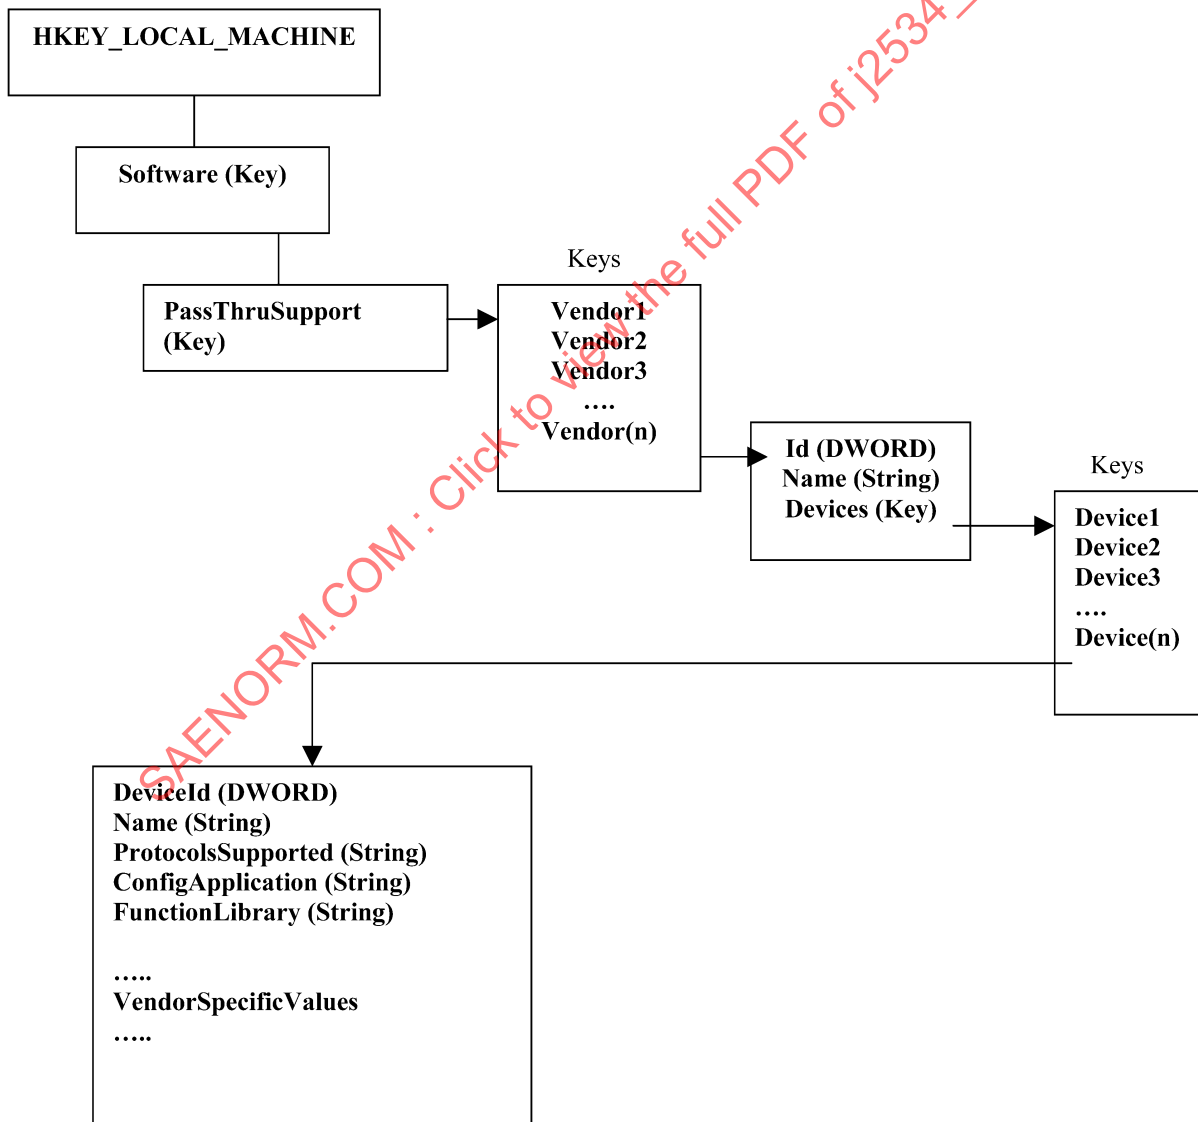


FIGURE 44—WIN32 REGISTRATION

The registry will contain both:

- a. General information used by the user applications for selection of hardware, user information, etc.
- b. Vendor/Device specific information that the vendor uses in the implementation of the API. Considering that the object of this recommended practice is the need for interchangeability of hardware from various vendors, the user application using the this API will be required to use the registry to present to the users all the hardware devices that have been installed and display their capabilities. The user should be allowed to select any hardware having the required capabilities, in terms of protocols supported etc., for a particular reprogramming session.

The Devices key will contain a list of keys, one for each device supported by the vendor.

Ex: ACME Serial Device  
ACME Ethernet Device  
ACME Parallel Device etc.

Each Vendor Device Key will have the entries shown in Figure 45 associated with them:

Example for Key: ACME Ethernet Device

|                          |        |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|--------------------------|--------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| DeviceId                 | DWORD  | A unique ID for the device supplied by the vendor                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| Name                     | String | The name of the device. Ex: "ACME CAN Device over Ethernet"                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| ProtocolsSupported       | String | The various protocols supported by the device are listed here separated by commas. The representations of protocols here will be same as the Protocol Id symbolic constants used in PassThruConnect function for the purpose of consistency. The listing of a protocol here is only for the purpose of information and will not guarantee that the actual hardware will support the protocol, as it is possible that the hardware configuration may have changed.<br>Ex: "CAN, ISO15765, J1850VPW, J1850PWM, ISO9141, ISO14230"<br>A protocol appearing multiple times will indicate that more than one channel supporting the protocol exists on the hardware. |
| ConfigApplication        | String | The complete path of the configuration application for this device. For every device listed in the section the vendor is required to provide a configuration application where the user can set the different parameters required for successfully using the device, like COM port, Ethernet address etc.<br>Ex: "c:\ACME\ACMESERCFG.exe"<br>The user applications using the API will automatically launch this application when the user needs to configure the selected device.                                                                                                                                                                               |
| FunctionLibrary          | String | The complete path of the DLL supplied by the vendor to communicate with this device. The user applications using this device should automatically load the DLL specified here and map into the J2534 API functions.<br>Ex: "C:\ACME\ACMESE32.dll"                                                                                                                                                                                                                                                                                                                                                                                                               |
| <Vendor Specific Values> | -      | The vendor will store all the vendor specific information here.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |

FIGURE 45—WIN32 REGISTRY VALUES

9.2.1 USER APPLICATION INTERACTION WITH THE REGISTRY—The user application should use the registry to present to the user the list of devices available for use from the application. Once the device has been selected by the user the Registry should be used to retrieve all the information regarding the device so that the appropriate DLL can be loaded for use etc. Figure 46 is a flow chart that shows a typical usage.

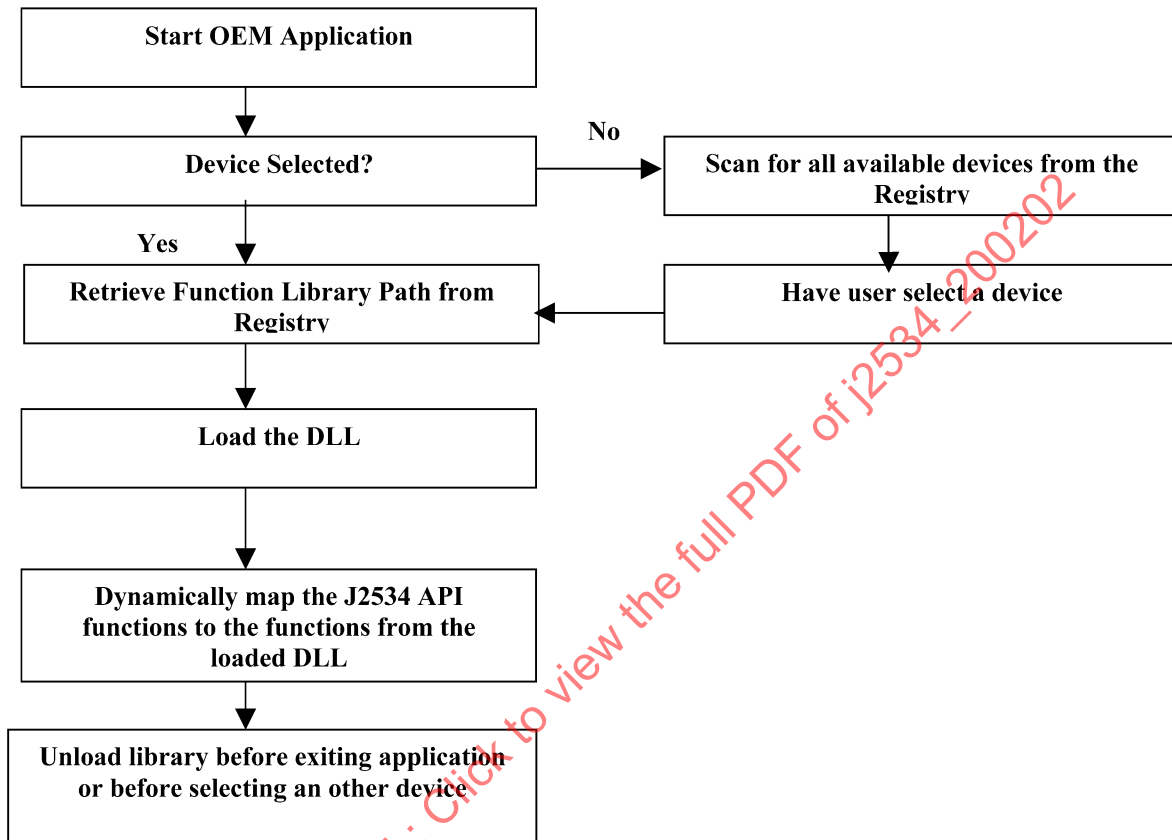


FIGURE 46—APPLICATION INTERACTION WITH REGISTRY

- 9.2.2 ATTACHING TO THE DLL FROM AN APPLICATION—This document requires OEM programming applications to explicitly load the appropriate DLL and resolve references to the DLL supplied functions. This is accomplished by using the native Win32 API functions, LoadLibrary, GetProcAddress and FreeLibrary (see the Win32 API SDK reference for the details of these functions).

When using GetProcAddress, the application must supply the name of the function whose address is being requested. The function names should be used with GetProcAddress in order to explicitly resolve DLL function addresses when using GetProcAddress.

To support this method, it is required that all tool vendors compile their DLL with the following export library definition file. This will help prevent name mangling and allow software developers to use the process defined in this section as well as calling by ordinal for compilers/languages that may not support that functionality.

All vendor DLLs and OEM applications should be built with byte alignment (i.e., packing) set to one (1) byte.

#### 9.2.2.1 Export Library Definition File

;VENDOR32.DEF: Declares the module parameters.

LIBRARY "VENDOR32.DLL"

EXPORTS

|                               |             |
|-------------------------------|-------------|
| PassThruConnect               | @1 PRIVATE  |
| PassThruDisconnect            | @2 PRIVATE  |
| PassThruReadMsgs              | @3 PRIVATE  |
| PassThruWriteMsgs             | @4 PRIVATE  |
| PassThruStartPeriodicMsg      | @5 PRIVATE  |
| PassThruStopPeriodicMsg       | @6 PRIVATE  |
| PassThruStartMsgFilter        | @7 PRIVATE  |
| PassThruStopMsgFilter         | @8 PRIVATE  |
| PassThruSetProgrammingVoltage | @9 PRIVATE  |
| PassThruReadVersion           | @10 PRIVATE |
| PassThruGetLastError          | @11 PRIVATE |
| PassThruIoctl                 | @12 PRIVATE |

10. **Return Value Error Codes**—Figure 47 lists the numerical equivalents and text description for the error or return codes identified in this document.

| Definition                | Value(s)        | Description                                                                                                                                         |
|---------------------------|-----------------|-----------------------------------------------------------------------------------------------------------------------------------------------------|
| STATUS_NOERROR            | 0x00            | Function call successful                                                                                                                            |
| ERR_NOT_SUPPORTED         | 0x01            | Function not supported                                                                                                                              |
| ERR_INVALID_CHANNEL_ID    | 0x02            | Invalid ChannelID value                                                                                                                             |
| ERR_INVALID_PROTOCOL_ID   | 0x03            | Invalid ProtocolID value                                                                                                                            |
| ERR_NULLPARAMETER         | 0x04            | NULL pointer supplied where a valid pointer is required                                                                                             |
| ERR_INVALID_IOCTL_VALUE   | 0x05            | Invalid value for ioctl parameter                                                                                                                   |
| ERR_INVALID_FLAGS         | 0x06            | Invalid flag values                                                                                                                                 |
| ERR_FAILED                | 0x07            | Undefined error. Get description with PassThruGetLastError.                                                                                         |
| ERR_DEVICE_NOT_CONNECTED  | 0x08            | Device not connected to PC                                                                                                                          |
| ERR_TIMEOUT               | 0x09            | Timeout. No message available to read or could not read the specified number of messages. The actual number of messages read is placed in <NumMsgs> |
| ERR_INVALID_MSG           | 0x0A            | Invalid message structure pointed to by pMsg (Reference Section 8 Message Structure)                                                                |
| ERR_INVALID_TIME_INTERVAL | 0x0B            | Invalid TimeInterval value                                                                                                                          |
| ERR_EXCEEDED_LIMIT        | 0x0C            | Exceeded maximum number of message IDs or allocated space                                                                                           |
| ERR_INVALID_MSG_ID        | 0x0D            | Invalid MsgID value                                                                                                                                 |
| ERR_INVALID_ERROR_ID      | 0x0E            | Invalid ErrorID value                                                                                                                               |
| ERR_INVALID_IOCTL_ID      | 0x0F            | Invalid ioctlID value                                                                                                                               |
| ERR_BUFFER_EMPTY          | 0x10            | Protocol message buffer empty                                                                                                                       |
| ERR_BUFFER_FULL           | 0x11            | Protocol message buffer full                                                                                                                        |
| ERR_BUFFER_OVERFLOW       | 0x12            | Protocol message buffer overflow                                                                                                                    |
| ERR_PIN_INVALID           | 0x13            | Invalid pin number                                                                                                                                  |
| ERR_CHANNEL_IN_USE        | 0x14            | Channel already in use                                                                                                                              |
| ERR_MSG_PROTOCOL_ID       | 0x15            | Protocol type does not match the protocol associated with Channel ID                                                                                |
| Unused                    | 0x16-0xFFFFFFFF | Reserved for SAE use                                                                                                                                |

FIGURE 47—ERROR VALUES

PREPARED BY THE SAE PASS-THRU PROGRAMMING SAE J2534 TASK FORCE OF  
THE SAE VEHICLE E/E SYSTEMS DIAGNOSTICS STANDARD COMMITTEE