

INTERNATIONAL STANDARD



**Industrial communication networks – Fieldbus specifications –
Part 5-10: Application layer service definition – Type 10 elements**

IECNORM.COM : Click to view the full PDF of IEC 61158-5-10:2023



THIS PUBLICATION IS COPYRIGHT PROTECTED

Copyright © 2023 IEC, Geneva, Switzerland

All rights reserved. Unless otherwise specified, no part of this publication may be reproduced or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without permission in writing from either IEC or IEC's member National Committee in the country of the requester. If you have any questions about IEC copyright or have an enquiry about obtaining additional rights to this publication, please contact the address below or your local IEC member National Committee for further information.

IEC Secretariat
3, rue de Varembe
CH-1211 Geneva 20
Switzerland

Tel.: +41 22 919 02 11
info@iec.ch
www.iec.ch

About the IEC

The International Electrotechnical Commission (IEC) is the leading global organization that prepares and publishes International Standards for all electrical, electronic and related technologies.

About IEC publications

The technical content of IEC publications is kept under constant review by the IEC. Please make sure that you have the latest edition, a corrigendum or an amendment might have been published.

IEC publications search - webstore.iec.ch/advsearchform

The advanced search enables to find IEC publications by a variety of criteria (reference number, text, technical committee, ...). It also gives information on projects, replaced and withdrawn publications.

IEC Just Published - webstore.iec.ch/justpublished

Stay up to date on all new IEC publications. Just Published details all new publications released. Available online and once a month by email.

IEC Customer Service Centre - webstore.iec.ch/csc

If you wish to give us your feedback on this publication or need further assistance, please contact the Customer Service Centre: sales@iec.ch.

IEC Products & Services Portal - products.iec.ch

Discover our powerful search engine and read freely all the publications previews. With a subscription you will always have access to up to date content tailored to your needs.

Electropedia - www.electropedia.org

The world's leading online dictionary on electrotechnology, containing more than 22 300 terminological entries in English and French, with equivalent terms in 19 additional languages. Also known as the International Electrotechnical Vocabulary (IEV) online.

IECNORM.COM : Click to view the full PDF of IEC 61158-5:2023

INTERNATIONAL STANDARD



**Industrial communication networks – Fieldbus specifications –
Part 5-10: Application layer service definition – Type 10 elements**

INTERNATIONAL
ELECTROTECHNICAL
COMMISSION

ICS 25.040.40; 35.100.70; 35.110

ISBN 978-2-8322-6578-9

Warning! Make sure that you obtained this publication from an authorized distributor.

CONTENTS

FOREWORD.....	17
INTRODUCTION.....	19
1 Scope.....	20
1.1 General.....	20
1.2 Specifications	21
1.3 Conformance	21
2 Normative references	21
3 Terms, definitions, abbreviated terms, symbols and conventions	24
3.1 Referenced terms and definitions.....	24
3.1.1 ISO/IEC 7498-1 terms.....	24
3.1.2 ISO/IEC 8822 terms.....	25
3.1.3 ISO/IEC 9545 terms.....	25
3.1.4 ISO/IEC 8824-1 terms.....	25
3.2 Additional Type 10 terms and definitions.....	25
3.3 Additional Type 10 terms and definitions for media redundancy	33
3.4 Abbreviations and symbols	34
3.4.1 General	34
3.4.2 Additional Type 10 abbreviations and symbols.....	37
3.4.3 Abbreviations and symbols for services.....	40
3.4.4 Void.....	40
3.5 Conventions.....	40
3.5.1 Overview	40
3.5.2 General conventions.....	41
3.5.3 Conventions for class definitions	41
3.5.4 Conventions for service definitions	42
3.5.5 Conventions used in state machines.....	43
4 Concepts	43
5 Data type ASE.....	44
5.1 General.....	44
5.1.1 Overview	44
5.1.2 Date and time type specifics	44
5.1.3 Transfer of user data	44
5.1.4 Data type overview	44
5.2 Formal definition of data type objects.....	47
5.2.1 Data type class.....	47
5.3 FAL defined data types	49
5.3.1 Fixed length types	49
5.3.2 Variable Length types	71
5.4 Data type ASE service specification.....	74
6 Communication model for common services	74
6.1 Concepts	74
6.1.1 General	74
6.1.2 Structure of an end station.....	75
6.1.3 Structure of a bridged end station	76
6.1.4 Structure of a bridge	77
6.1.5 Examples of stations	78

6.1.6	Automation system	79
6.2	ASE data types	80
6.3	ASEs	80
6.3.1	Middle Layer ASEs	80
6.3.2	Remote procedure call ASE	81
6.3.3	Remote service interface ASE	90
6.3.4	Domain name system ASE	103
6.3.5	Simple network management ASE	104
6.3.6	NETCONF ASE	107
6.3.7	NETCONF event ASE	108
6.3.8	IP suite ASE	109
6.3.9	Real time cyclic ASE	113
6.3.10	Real time acyclic ASE	130
6.3.11	Discovery and basic configuration ASE	140
6.3.12	Dynamic host configuration ASE	173
6.3.13	IEEE Std 802.1AB ASE	175
6.3.14	Media redundancy ASE	189
6.3.15	Precision time control ASE	196
6.3.16	IEEE Std 802.1AS ASE	210
6.3.17	IEEE Std 802.1Q ASE	214
6.3.18	IEEE Std 802.1CB ASE	230
6.3.19	Fragmentation ASE	236
6.3.20	IEEE Std 802.3 ASE	238
6.3.21	Void	241
6.3.22	Common DL mapping ASE	241
6.4	Additional information	248
7	Communication model for distributed I/O	248
7.1	Concepts	248
7.1.1	User requirements	248
7.1.2	Features	248
7.1.3	Associations	249
7.1.4	Device types	250
7.1.5	Instance model and device addresses	260
7.1.6	Application process	260
7.1.7	Application service element	268
7.1.8	Application relationship	270
7.2	ASE data types	270
7.3	ASEs	271
7.3.1	AR ASE	271
7.3.2	Real Identification ASE	409
7.3.3	CIM ASE	502
7.3.4	Diagnosis ASE	604
7.3.5	PE ASE	652
7.3.6	LogBook ASE	662
7.3.7	RS ASE	665
7.3.8	Time ASE	690
7.3.9	NME ASE	695
7.4	Application characteristics	734
7.4.1	Device Ident Number	734

7.4.2	Network topology	735
7.5	Summary of FAL services	736
7.5.1	IO device	736
7.5.2	IO controller	737
7.5.3	IO supervisor	738
Annex A (informative)	Device instances	739
Annex B (informative)	Components of an Ethernet interface	742
Annex C (informative)	Scheme of MAC address assignment	746
Annex D (informative)	Measurement of the fast startup time	747
Annex E (informative)	Dynamic Frame Packing	748
Annex F (informative)	Precondition for Diagnosis	756
Bibliography		762
Figure 1	– Structure of an automation station	74
Figure 2	– Overall view of communication ASEs	75
Figure 3	– Structure of an end station	76
Figure 4	– Structure of a bridged end station	77
Figure 5	– IEEE Std 802 station example 1 (end station and bridge configuration portion)	78
Figure 6	– IEEE Std 802 station example 3	79
Figure 7	– IEEE Std 802 station example 4	79
Figure 8	– Automation system example	80
Figure 9	– Middle Layer ASEs communication architecture	80
Figure 10	– Sequence Chart for reading the EndPointMapper	83
Figure 11	– Media redundancy diagnosis dependencies	195
Figure 12	– PTCP applications	196
Figure 13	– Example of periods at a local port	227
Figure 14	– Example of communication between controlling devices and field devices	249
Figure 15	– Example of communication between an engineering station and several controlling and field devices	250
Figure 16	– Example of communication between field devices and a server station	250
Figure 17	– Example of communication between field devices	250
Figure 18	– Interfaces, components and ports	251
Figure 19	– Multiple interfaces, components and ports	252
Figure 20	– Multiple interfaces, one bridge component with one external port	253
Figure 21	– Multiple interfaces, multiple bridge components	253
Figure 22	– Data Objects and Diagnosis Data Model	257
Figure 23	– Example for channel modelling	258
Figure 24	– Mapping to device model	259
Figure 25	– Identification hierarchy	259
Figure 26	– Application Process with application process objects (APOs)	261
Figure 27	– Access to a remote APO	262
Figure 28	– Access to a remote APO for provider/consumer association	263
Figure 29	– Overview of application processes	264

Figure 30 – IO device with APs, slots and subslots	264
Figure 31 – Example 1 structural units for interfaces and ports within API 0	267
Figure 32 – Example 2 structural units for interfaces and ports within API 0	267
Figure 33 – FAL ASEs communication architecture	268
Figure 34 – Example of one AR with two AREPs	270
Figure 35 – Example IO application relationship (one-to-one)	273
Figure 36 – Example IO application relationship one-to-many	274
Figure 37 – Implicit application relationship	275
Figure 38 – State transition diagram DEVSM	308
Figure 39 – State transition diagram CTLSM	316
Figure 40 – Assignment of Communication Relationship to Application Relationship	321
Figure 41 – Overview Communication Relationship Class service interactions	324
Figure 42 – Example for an intersection of IO device, slot, and AR	387
Figure 43 – Substitute Value	417
Figure 44 – State transition diagram RSMSM	425
Figure 45 – Ownership handling	428
Figure 46 – State transition diagram OWNSM	431
Figure 47 – State transition diagram ASSSM	431
Figure 48 – State transition diagram PLUGSM	443
Figure 49 – State transition diagram PULLSM	446
Figure 50 – Location concepts in Asset Management	461
Figure 51 – Basic model for isochronous applications	476
Figure 52 – General isochronous application model (example CACF == 1)	477
Figure 53 – General isochronous application model (example CACF == 2)	478
Figure 54 – ASE relations in an IO device operating in isochronous mode for a submodule	484
Figure 55 – State transition diagram of ISOM_SYNC	486
Figure 56 – State transition diagram ISOM_OUT	489
Figure 57 – State transition diagram ISOM_IN	494
Figure 59 – CIM overview	503
Figure 60 – CIM class principle	504
Figure 61 – MRP interconnection	588
Figure 62 – State transition diagram SYNC_DIAG	599
Figure 63 – Diagnosis Base Model	605
Figure 64 – Filtering of diagnosis	606
Figure 65 – Filtering hierarchy	606
Figure 66 – Severity classification of fault, maintenance and qualified	607
Figure 67 – Data Base Model	608
Figure 68 – State transition diagram DIAG_DIAG	638
Figure 69 – State transition diagram DIAG_MR	641
Figure 70 – State transition diagram DIAG_MD	645
Figure 71 – State transition diagram DIAG_QUALIFIED	649
Figure 72 – Architecture	653

Figure 73 – State transition diagram PESM.....	661
Figure 74 – Reporting System components.....	666
Figure 75 – AR / ARSet and Reporting System	667
Figure 76 – Max Scan Delay	675
Figure 77 – RS Incident window.....	678
Figure 78 – State transition diagram RSOBS	683
Figure 79 – State transition diagram RSBUF.....	687
Figure 80 – State transition diagram TimeSM	693
Figure 81 – Layers from application to network	696
Figure 82 – Assumed application timing model	696
Figure 83 – Relations of the IO controller to the Network Management Engine	697
Figure 84 – Relations of the IO device to the Network Management Engine	698
Figure 85 – Relations of a standalone Network Management Engine	698
Figure 86 – Correlation of the Stream Add parameter	704
Figure 87 – Interaction of the NME class	711
Figure 88 – Interaction of the NCE class.....	714
Figure 89 – Interaction of the TDE class	717
Figure 90 – Interaction of the PCE class	724
Figure 91 – Interaction of the BNME class	727
Figure 92 – Interaction between NME instance and BNME instance.....	727
Figure 93 – Interaction of the NUE class.....	734
Figure 94 – Example of network topology including slower wireless segments	735
Figure 95 – Example of media redundancy including wireless segments	736
Figure A.1 – Instance model in conjunction with CLRPC	739
Figure A.2 – Instance model in conjunction with RSI	740
Figure B.1 – Scheme of an Ethernet interface.....	742
Figure B.2 – Scheme of an Ethernet interface with bridging ability	743
Figure B.3 – Scheme of an Ethernet interface with optical ports.....	744
Figure B.4 – Scheme of an Ethernet interface with bridging ability using radio communication.....	745
Figure B.5 – Scheme of an Ethernet interface with radio communication.....	745
Figure C.1 – Scheme of MAC address assignment.....	746
Figure D.1 – Measurement of the fast startup time	747
Figure E.1 – Frame Layout	748
Figure E.2 – Subframe Layout	749
Figure E.3 – End to End.....	750
Figure E.4 – Dynamic frame packing.....	750
Figure E.5 – Dynamic frame packing – Truncation of outputs.....	751
Figure E.6 – Dynamic frame packing – Outbound Pack.....	751
Figure E.7 – Dynamic frame packing – Concatenation of inputs	752
Figure E.8 – Dynamic frame packing – Inbound Pack	753
Figure E.9 – Dynamic frame packing – Distributed watchdog	755
Figure E.10 – Interrelation between IO CR and dynamically packed frame.....	755

Table 1 – Data type overview.....	45
Table 2 – V2 octets.....	49
Table 3 – L2 octets.....	50
Table 4 – E2 octets.....	51
Table 5 – E2 value range.....	51
Table 6 – Unipolar2.16 octets.....	51
Table 7 – Unipolar2.16 value range.....	51
Table 8 – N2 value range.....	53
Table 9 – N4 value range.....	54
Table 10 – X2 value range.....	55
Table 11 – X4 value range.....	56
Table 12 – C4 value range.....	56
Table 13 – T2 value range.....	58
Table 14 – T4 value range.....	59
Table 15 – D2 value range.....	60
Table 16 – R2 value range.....	60
Table 17 – TimeStamp status value range.....	62
Table 18 – TimeStampDifference status value range.....	63
Table 19 – F message trailer with 4 octets.....	66
Table 20 – Unsigned16_S octets.....	68
Table 21 – Unsigned16_S meaning.....	69
Table 22 – Integer16_S octets.....	69
Table 23 – Integer16_S meaning.....	69
Table 24 – Unsigned8_S octets.....	70
Table 25 – Unsigned8_S meaning.....	70
Table 26 – OctetString_S octets.....	71
Table 27 – OctetString_S status bits.....	72
Table 28 – RPC Connect.....	84
Table 29 – RPC Release.....	85
Table 30 – RPC Read.....	86
Table 31 – RPC Write.....	87
Table 32 – RPC Control.....	88
Table 33 – RPC Read Implicit.....	89
Table 34 – RSI initiator add.....	93
Table 35 – RSI responder add.....	94
Table 36 – RSI initiator remove.....	95
Table 37 – RSI responder remove.....	96
Table 38 – RSI call.....	97
Table 39 – RSI notification.....	99
Table 40 – RSI initiator abort.....	100
Table 41 – RSI responder abort.....	101
Table 42 – RSI get responder instances.....	102
Table 43 – SNMP Enable SNMP v1/v2.....	105

Table 44 – SNMP Set Community Name	106
Table 45 – Add Static ARP Cache Entry	112
Table 46 – Remove Static ARP Cache Entry	113
Table 47 – PPM Set Prov Data	119
Table 48 – PPM Set Prov Status	120
Table 49 – PPM Activate	121
Table 50 – PPM Close	123
Table 51 – PPM Start	123
Table 52 – PPM Error	124
Table 53 – Get cons data	124
Table 54 – CPM Get cons status	125
Table 55 – CPM Set RedRole	126
Table 56 – CPM Activate	127
Table 57 – CPM NoData	129
Table 58 – CPM Stop	129
Table 59 – CPM New Data Indication	130
Table 60 – APMS Activate	132
Table 61 – APMR Activate	134
Table 62 – APMS A Data	136
Table 63 – APMR A Data	137
Table 64 – APMR Ack	137
Table 65 – APMS Error	138
Table 66 – APMS Error ERRCLS/ERRCODE	138
Table 67 – APMR Error	139
Table 68 – APMR Error ERRCLS/ERRCODE	139
Table 69 – APMS_Close	139
Table 70 – APMR_Close	140
Table 71 – Get	150
Table 72 – Set	155
Table 73 – Local Get Command	161
Table 74 – Local Set Command	162
Table 75 – Identify	163
Table 76 – Hello	170
Table 77 – PN DHCP Discover	174
Table 78 – PN DHCP Offer	175
Table 79 – System capabilities	181
Table 80 – Auto negotiation support and status	183
Table 81 – MDI Power Support	183
Table 82 – Remote systems data change	188
Table 83 – Start bridge	203
Table 84 – Start slave	204
Table 85 – Start master	205
Table 86 – Stop bridge	206

Table 87 – Stop slave	207
Table 88 – Stop master	208
Table 89 – Sync state change	208
Table 90 – Line Delay change	209
Table 91 – Local Get Time	213
Table 92 – Local time state info	213
Table 93 – Traffic classes	214
Table 94 – Port state change	221
Table 95 – Set port state	222
Table 96 – Flush filtering data base	222
Table 97 – Add FDB entry	223
Table 98 – Remove FDB entry	223
Table 99 – Config Port	224
Table 100 – Stream ID Add	232
Table 101 – Stream ID Remove	233
Table 102 – Stream Identification	234
Table 103 – Stream Active Identification	235
Table 104 – Stream Send	236
Table 105 – MAU Type change	240
Table 106 – Set MAU Type	241
Table 107 – P Data	242
Table 108 – N Data	243
Table 109 – A Data	245
Table 110 – C Data	246
Table 111 – R Data	247
Table 112 – Requirements and features	249
Table 113 – Internal components and ports in the interface mounted left or up into the rack	252
Table 114 – Internal components and ports mounted interface mounted right or down into the rack	252
Table 115 – Binding application relationship services	276
Table 116 – Device Access	279
Table 117 – Companion AR	280
Table 118 – Acknowledge Companion AR	280
Table 119 – Time Aware System	280
Table 120 – Startup Mode	281
Table 121 – Pull Module Alarm Allowed	281
Table 122 – Input Valid on Backup AR	284
Table 123 – Mode	285
Table 124 – APStructureIdentifier with API := 0	285
Table 125 – APStructureIdentifier with API != 0	286
Table 126 – RS Alarm Transport Mode	286
Table 127 – Connect	289
Table 128 – Connect Device Access	294

Table 129 – Release	296
Table 130 – Prm Begin	298
Table 131 – Prm End	299
Table 132 – Application Ready	301
Table 133 – Abort	302
Table 134 – Local AR Abort	302
Table 135 – Local Set AR State	303
Table 136 – Local AR In Data	303
Table 137 – Data elements of Read AR Data	304
Table 138 – Data elements of Expected Fast Startup Data	306
Table 139 – Remote primitives issued or received by DEVSM	307
Table 140 – Local primitives issued or received by DEVSM	307
Table 141 – State table DEVSM	309
Table 142 – Functions, Macros, Timers and Variables by DEVSM	314
Table 143 – Remote primitives issued or received by CTLSM	315
Table 144 – Local primitives issued or received by CTLSM	315
Table 145 – State table CTLSM	317
Table 146 – Functions, Macros, Timers and Variables used by CTLSM	319
Table 147 – Binding communication relationship services	325
Table 148 – Traffic Classes versus RT Class	327
Table 149 – Local Set Input	336
Table 150 – Local Set Input IOCS	337
Table 151 – Local Get Input	338
Table 152 – Local Get Input IOCS	339
Table 153 – Local New Input	340
Table 154 – Local Set Output	341
Table 155 – Local Set Output IOCS	342
Table 156 – Local Get Output	343
Table 157 – Local Get Output IOCS	344
Table 158 – Local New Output	345
Table 159 – Local Set Provider State	345
Table 160 – Local Set Redundancy	346
Table 161 – Local Set State	347
Table 162 – Local Data State Changed	347
Table 163 – Binding expected identification services	354
Table 164 – Module State	356
Table 165 – AR Info	360
Table 166 – Ident Info	360
Table 167 – General Data definition for identification services	361
Table 168 – Data elements of Read Module Diff Block	363
Table 169 – Alarm type	367
Table 170 – Alarm types attached to diagnosis ASE	369
Table 171 – Alarm types attached to ownership	370

Table 172 – Alarm types attached to common profiles, profiles, and application	370
Table 173 – Binding Alarm services	370
Table 174 – Alarm Notification	374
Table 175 – Channel Diagnosis	376
Table 176 – Manufacturer Specific Diagnosis.....	376
Table 177 – Submodule Diagnosis State.....	377
Table 178 – AR Diagnosis State	377
Table 179 – User Structure Identifier	378
Table 180 – Semantics of Specifier.....	380
Table 181 – Binding Record Data services.....	388
Table 182 – Read	389
Table 183 – Read Services	391
Table 184 – Read Implicit	394
Table 185 – Read Query	395
Table 186 – Read Query Services.....	396
Table 187 – Write	396
Table 188 – Write Services	397
Table 189 – Data elements of Write Combined Object Container	399
Table 190 – Local Write Multiple	400
Table 191 – Local New Write Multiple	402
Table 192 – Binding real identification services.....	409
Table 193 – Local Add Submodule.....	413
Table 194 – Local Remove Submodule	414
Table 195 – Data elements of Read API Data	415
Table 196 – Data elements of Read Record Input Data Object Element	416
Table 197 – Data elements of Read Record Output Data Object Element	419
Table 198 – Data elements of Read Substitute Value.....	420
Table 199 – Selector for Read GSD Data.....	422
Table 200 – Data elements of Read GSD Data	422
Table 201 – Remote primitives issued or received by RSMSM	424
Table 202 – Local primitives issued or received by RSMSM.....	424
Table 203 – State table RSMSM	425
Table 204 – Functions, Macros, Timers and Variables used by RSMSM	427
Table 205 – Rules for Submodule State.Ident Info	427
Table 206 – Remote primitives issued or received by OWNSM and ASSSM.....	430
Table 207 – Local primitives issued or received by OWNSM	430
Table 208 – State table OWNSM	432
Table 209 – State table ASSSM.....	438
Table 210 – Functions, Macros, Timers and Variables used by OWNSM.....	439
Table 211 – Functions, Macros, Timers and Variables used by ASSSM	440
Table 212 – Rules for Submodule State.AR Info	440
Table 213 – Remote primitives issued or received by PLUGSM	441
Table 214 – Local primitives issued or received by PLUGSM	442

Table 215 – State table PLUGSM	444
Table 216 – Functions, Macros, Timers and Variables used by PLUGSM.....	445
Table 217 – Remote primitives issued or received by PULLSM	446
Table 218 – Local primitives issued or received by PULLSM.....	446
Table 219 – State table PULLSM	447
Table 220 – Functions, Macros, Timers and Variables used by PULLSM	448
Table 221 – Binding I&M data services	450
Table 222 – Data elements of Read I&M0 Filter Data.....	464
Table 223 – Data elements of Read I&M0 Data.....	467
Table 224 – Data elements of Write I&M1 Data.....	468
Table 225 – Data elements of Write I&M2 Data.....	469
Table 226 – Data elements of Write I&M3 Data.....	469
Table 227 – Data elements of Write I&M4 Data.....	470
Table 228 – Data elements of Read I&M5 Data.....	471
Table 229 – Data elements of Read Asset Management Data	474
Table 230 – Binding Isochronous Mode Application services.....	478
Table 231 – Data elements of Write Isochronous Mode Data.....	483
Table 232 – Remote primitives issued or received by ISOM_SYNC.....	485
Table 233 – Local primitives issued or received by ISOM_SYNC	485
Table 234 – State table ISOM_SYNC.....	486
Table 235 – Functions, Macros, Timers and Variables used by the ISOM_SYNC	487
Table 236 – Remote primitives issued or received for ISOM_OUT	487
Table 237 – Local primitives issued or received for ISOM_OUT	488
Table 238 – State table ISOM_OUT.....	490
Table 239 – Functions, Macros, Timers and Variables used by the ISOM_OUT	492
Table 240 – Remote primitives issued or received for ISOM_IN	493
Table 241 – Local primitives issued or received for ISOM_IN.....	493
Table 242 – State table ISOM_IN.....	495
Table 243 – Functions, Macros, Timers and Variables used by the ISOM_IN	496
Table 244 – Observer service binding	498
Table 245 – Binding Communication Interface Management services	505
Table 246 – Subslot number for interface submodules	508
Table 247 – Subslot number for port submodules	511
Table 248 – Data elements of Read PDev Data	518
Table 249 – Data elements of Read PD Real Data.....	519
Table 250 – Data elements of Read PD Expected Data.....	520
Table 251 – Data elements of Read PD Interface Data Real	522
Table 252 – Data elements of Write PD Interface Adjust	523
Table 253 – Data elements of Write PD Interface FSU Data Adjust.....	523
Table 254 – Data elements of Write PD NC Data Check	524
Table 255 – Data elements of Read PD Port Statistic	525
Table 256 – Data elements of Read PD Port Data Real	526
Table 257 – Data elements of Read PD Port Data Real Extended.....	527

Table 258 – Data elements of Write PD Port Data Check	529
Table 259 – Data elements of Write PD Port Data Adjust	530
Table 260 – Data elements of Read Port FO Data Real	531
Table 261 – Data elements of Write PD Port FO Data Check	532
Table 262 – Data elements of Write PD Port FO Data Adjust	532
Table 263 – Data elements of Write PD Port SFP Data Check	533
Table 264 – Data elements of Read RSI Instances	534
Table 265 – Binding IEEE Std 802.1AS services	539
Table 266 – Binding IEEE Std 802.1Q bridge services	543
Table 267 – Allowed values of Forwarding Mode	550
Table 268 – Allowed values of Fast Forwarding Multicast MAC Add	550
Table 269 – Tx Port Entry	553
Table 270 – Dependencies of RedPeriodBegin and GreenPeriodBegin	556
Table 271 – Distributed Watchdog Factor	557
Table 272 – Restart Factor For Distributed Watchdog	558
Table 273 – DFP Mode	558
Table 274 – SFIOCRProperties.DFPRedundantPathLayout	559
Table 275 – SFCRC16	559
Table 276 – Data elements of Write PD IR Data	570
Table 277 – Data elements of Write PD IR Subframe Data	572
Table 278 – Write CIM NetConf Stream Forward Data	575
Table 279 – Binding Media Redundancy services	577
Table 280 – Data elements of Read PD Interface MRP Data Real	579
Table 281 – Data elements of Write PD Interface MRP Data Check	581
Table 282 – Data elements of Write PD Interface MRP Data Adjust	582
Table 283 – Data elements of Read PD Port MRP Data Real	583
Table 284 – Data elements of Write PD Port MRP Data Adjust	584
Table 285 – Data elements of Read PD Port MRPIC Data Real	585
Table 286 – Data elements of Write PD Port MRPIC Data Check	585
Table 287 – Data elements of Write PD Port MRPIC Data Adjust	586
Table 288 – Binding PTCP services	590
Table 289 – Sync Properties Role	593
Table 290 – Sync Class	593
Table 291 – Data elements of Write PD Sync Data	594
Table 292 – Local Sync State Info	596
Table 293 – Local SYNCH Event	597
Table 294 – Remote primitives issued or received by SYNC_DIAG	598
Table 295 – Local primitives issued or received by SYNC_DIAG	598
Table 296 – State table SYNC_DIAG	599
Table 297 – Functions, Macros, Timers and Variables used by SYNC_DIAG	601
Table 298 – List of supported MIBs	601
Table 299 – Cross-referencing of MIB-II objects	602
Table 300 – Cross-referencing of LLDP-MIB objects	602

Table 301 – Cross-referencing of LLDP-EXT-PNO MIB objects	603
Table 302 – Cross-referencing of LLDP-EXT-DOT3 MIB objects	603
Table 303 – IEEE Std 802.1Q ASE related YANG modules (type definitions)	604
Table 304 – Diagnosis Records (index).....	612
Table 305 – Binding Diagnosis services.....	613
Table 306 – General Data definition for Diagnosis services.....	618
Table 307 – Local Add Diagnosis Entry.....	620
Table 308 – Local Remove Diagnosis Entry	622
Table 309 – Local Update Diagnosis Entry.....	623
Table 310 – Remote primitives issued or received by DIAG_DIAG	637
Table 311 – Local primitives issued or received by DIAG_DIAG	637
Table 312 – State table DIAG_DIAG	638
Table 313 – Functions, Macros, Timers and Variables used by DIAG_DIAG	639
Table 314 – Remote primitives issued or received by DIAG_MR	641
Table 315 – Local primitives issued or received by DIAG_MR.....	641
Table 316 – State table DIAG_MR	642
Table 317 – Functions, Macros, Timers and Variables used by DIAG_MR.....	643
Table 318 – Remote primitives issued or received by DIAG_MD	644
Table 319 – Local primitives issued or received by DIAG_MD	644
Table 320 – State table DIAG_MD	646
Table 321 – Functions, Macros, Timers and Variables used by the maintenance demanded entry	647
Table 322 – Remote primitives issued or received by DIAG_QUALIFIED	648
Table 323 – Local primitives issued or received by DIAG_QUALIFIED	649
Table 324 – State table DIAG_QUALIFIED	650
Table 325 – Functions, Macros, Timers and Variables used by DIAG_QUALIFIED	650
Table 326 – Binding PE services.....	654
Table 327 – Local Add PE Entity.....	655
Table 328 – Local Remove PE Entity	656
Table 329 – Local Update PE_OperationalMode	657
Table 330 – PE Entity Filter Data definition.....	658
Table 331 – PE Entity Filter Data definition.....	659
Table 332 – Remote primitives issued or received by PESM	660
Table 333 – Local primitives issued or received by PESM.....	661
Table 334 – State table PESM	662
Table 335 – Functions, Macros, Timers and Variables used by PESM	662
Table 336 – Binding LogBook services	663
Table 337 – Data elements of Read LogBook Data	664
Table 338 – Local Create LogBook Entry	665
Table 339 – Binding RS services	672
Table 340 – Immanent observers	674
Table 341 – Configured observers	674
Table 342 – Data elements of Local Add RS Event	680

Table 343 – Data elements of RS Get Event	680
Table 344 – Data elements of RS Ack Event	681
Table 345 – Data elements of RS Adjust Observer	682
Table 346 – Local primitives issued or received by RSOBS	683
Table 347 – State table RSOBS	685
Table 348 – Functions, Macros, Timers and Variables used by RSOBS	686
Table 349 – Remote primitives issued or received by RSBUF	686
Table 350 – Local primitives issued or received by RSBUF	687
Table 351 – State table RSBUF	688
Table 352 – Functions, Macros, Timers and Variables used by RSBUF	690
Table 353 – Binding Time services	691
Table 354 – Local Get Time	691
Table 355 – Local primitives issued or received by TimeSM	692
Table 356 – State table TimeSM	694
Table 357 – Functions, Macros, Timers and Variables used by TimeSM	694
Table 358 – NME Start	701
Table 359 – NME Stop	702
Table 360 – NME Stream Add	703
Table 361 – NME Stream Remove	707
Table 362 – NME Stream Renew	709
Table 363 – NCE Activate	712
Table 364 – NCE Deactivate	712
Table 365 – NCE NetworkConfig Changed	713
Table 366 – TDE Activate	715
Table 367 – TDE Close	716
Table 368 – TDE Topology Changed	716
Table 369 – PCE Activate	718
Table 370 – PCE Deactivate	719
Table 371 – PCE Stream Add	720
Table 372 – PCE Stream Remove	721
Table 373 – PCE Stream Renew	722
Table 374 – PCE Path Changed	723
Table 375 – BNME Activate	725
Table 376 – BNME Close	726
Table 377 – BNME Role Changed	726
Table 378 – NUE Activate	729
Table 379 – NUE Deactivate	729
Table 380 – NUE Stream Add	731
Table 381 – NUE Stream Remove	732
Table 382 – NUE Stream Renew	733
Table 383 – FAL services of the IO device	736
Table 384 – FAL services of the IO controller	737
Table F.1 – ChannelErrorType	756

Table F.2 – Preconditions ChannelErrorType 0 – 0xFF	757
Table F.3 – Preconditions for ChannelErrorType 0x0100 – 0x7FFF, 0x9000 – 0x9FFF	757
Table F.4 – Preconditions for ChannelErrorType “Data transmission impossible”	757
Table F.5 – Preconditions for ChannelErrorType “Remote mismatch”	758
Table F.6 – Preconditions for ChannelErrorType “Media redundancy mismatch – ring”	758
Table F.7 – Preconditions for ChannelErrorType “Media redundancy mismatch – interconnection”	759
Table F.8 – Preconditions for ChannelErrorType “Sync mismatch”	759
Table F.9 – Preconditions for ChannelErrorType “Isochronous mode mismatch”	759
Table F.10 – Preconditions for ChannelErrorType “Multicast CR mismatch”	759
Table F.11 – Preconditions for ChannelErrorType “Fiber optic mismatch”	760
Table F.12 – Preconditions for ChannelErrorType “Network component function mismatch”	760
Table F.13 – Preconditions for ChannelErrorType “Dynamic Frame Packing function mismatch”	760
Table F.14 – Preconditions for ChannelErrorType “Media redundancy with planned duplication mismatch”	760
Table F.15 – Preconditions for ChannelErrorType “Multiple interface mismatch”	761
Table F.16 – Preconditions for ChannelErrorType “Power failure over Single Pair Ethernet”	761

IECNORM.COM : Click to view the full PDF of IEC 61158-5-10:2023

INTERNATIONAL ELECTROTECHNICAL COMMISSION

**INDUSTRIAL COMMUNICATION NETWORKS –
FIELDBUS SPECIFICATIONS –****Part 5-10: Application layer service definition –
Type 10 elements****FOREWORD**

- 1) The International Electrotechnical Commission (IEC) is a worldwide organization for standardization comprising all national electrotechnical committees (IEC National Committees). The object of IEC is to promote international co-operation on all questions concerning standardization in the electrical and electronic fields. To this end and in addition to other activities, IEC publishes International Standards, Technical Specifications, Technical Reports, Publicly Available Specifications (PAS) and Guides (hereafter referred to as "IEC Publication(s)"). Their preparation is entrusted to technical committees; any IEC National Committee interested in the subject dealt with may participate in this preparatory work. International, governmental and non-governmental organizations liaising with the IEC also participate in this preparation. IEC collaborates closely with the International Organization for Standardization (ISO) in accordance with conditions determined by agreement between the two organizations.
- 2) The formal decisions or agreements of IEC on technical matters express, as nearly as possible, an international consensus of opinion on the relevant subjects since each technical committee has representation from all interested IEC National Committees.
- 3) IEC Publications have the form of recommendations for international use and are accepted by IEC National Committees in that sense. While all reasonable efforts are made to ensure that the technical content of IEC Publications is accurate, IEC cannot be held responsible for the way in which they are used or for any misinterpretation by any end user.
- 4) In order to promote international uniformity, IEC National Committees undertake to apply IEC Publications transparently to the maximum extent possible in their national and regional publications. Any divergence between any IEC Publication and the corresponding national or regional publication shall be clearly indicated in the latter.
- 5) IEC itself does not provide any attestation of conformity. Independent certification bodies provide conformity assessment services and, in some areas, access to IEC marks of conformity. IEC is not responsible for any services carried out by independent certification bodies.
- 6) All users should ensure that they have the latest edition of this publication.
- 7) No liability shall attach to IEC or its directors, employees, servants or agents including individual experts and members of its technical committees and IEC National Committees for any personal injury, property damage or other damage of any nature whatsoever, whether direct or indirect, or for costs (including legal fees) and expenses arising out of the publication, use of, or reliance upon, this IEC Publication or any other IEC Publications.
- 8) Attention is drawn to the Normative references cited in this publication. Use of the referenced publications is indispensable for the correct application of this publication.
- 9) Attention is drawn to the possibility that some of the elements of this IEC Publication may be the subject of patent rights. IEC shall not be held responsible for identifying any or all such patent rights.

IEC 61158-5-10 has been prepared by subcommittee 65C: Industrial networks, of IEC technical committee 65: Industrial-process measurement, control and automation. It is an International Standard.

This fifth edition cancels and replaces the fourth edition published in 2019. This edition constitutes a technical revision.

This edition includes the following significant technical changes with respect to the previous edition:

- a) integration of system redundancy basic functionality;
- b) integration of dynamic reconfiguration basic functionality;
- c) integration of reporting system basic functionality;
- d) integration of asset management basic functionality;

e) integration of media redundancy ring interconnection basic functionality.

The text of this International Standard is based on the following documents:

Draft	Report on voting
65C/1203/FDIS	65C/1244/RVD

Full information on the voting for its approval can be found in the report on voting indicated in the above table.

The language used for the development of this International Standard is English.

This document was drafted in accordance with ISO/IEC Directives, Part 2, and developed in accordance with ISO/IEC Directives, Part 1 and ISO/IEC Directives, IEC Supplement, available at www.iec.ch/members_experts/refdocs. The main document types developed by IEC are described in greater detail at www.iec.ch/publications.

A list of all parts of the IEC 61158 series, published under the general title *Industrial communication networks – Fieldbus specifications*, can be found on the IEC web site.

The committee has decided that the contents of this document will remain unchanged until the stability date indicated on the IEC website under webstore.iec.ch in the data related to the specific document. At this date, the document will be

- reconfirmed,
- withdrawn,
- replaced by a revised edition, or
- amended.

IMPORTANT – The "colour inside" logo on the cover page of this document indicates that it contains colours which are considered to be useful for the correct understanding of its contents. Users should therefore print this document using a colour printer.

INTRODUCTION

This part of IEC 61158 is one of a series produced to facilitate the interconnection of automation system components. It is related to other standards in the set as defined by the “three-layer” fieldbus reference model described in IEC 61158-1.

The application service is provided by the application protocol making use of the services available from the data-link or other immediately lower layer. This document defines the application service characteristics that fieldbus applications and/or system management can exploit.

Throughout the set of fieldbus standards, the term “service” refers to the abstract capability provided by one layer of the OSI Basic Reference Model to the layer immediately above. Thus, the application layer service defined in this document is a conceptual architectural service, independent of administrative and implementation divisions.

IECNORM.COM : Click to view the full PDF of IEC 61158-5-10:2023

INDUSTRIAL COMMUNICATION NETWORKS – FIELDBUS SPECIFICATIONS –

Part 5-10: Application layer service definition – Type 10 elements

1 Scope

1.1 General

The fieldbus application layer (FAL) provides user programs with a means to access the fieldbus communication environment. In this respect, the FAL can be viewed as a "window between corresponding application programs".

This part of IEC 61158 provides common elements for basic time-critical and non-time-critical messaging communications between application programs in an automation environment and material specific to Type 10 fieldbus. The term "time-critical" is used to represent the presence of a time-window, within which one or more specified actions are required to be completed with some defined level of certainty. Failure to complete specified actions within the time window risks failure of the applications requesting the actions, with attendant risk to equipment, plant and possibly human life.

This document defines in an abstract way the externally visible service provided by the Type 10 fieldbus application layer in terms of:

- an abstract model for defining application resources (objects) capable of being manipulated by users via the use of the FAL service;
- the primitive actions and events of the service;
- the parameters associated with each primitive action and event, and the form which they take; and
- the interrelationship between these actions and events, and their valid sequences.

The purpose of this document is to define the services provided to:

- the FAL user at the boundary between the user and the application layer of the fieldbus reference model, and
- Systems Management at the boundary between the application layer and Systems Management of the fieldbus reference model.

This document specifies the structure and services of the Type 10 fieldbus application layer, in conformance with the OSI Basic Reference Model (ISO/IEC 7498-1) and the OSI application layer structure (ISO/IEC 9545).

FAL services and protocols are provided by FAL application-entities (AE) contained within the application processes. The FAL AE is composed of a set of object-oriented application service elements (ASEs) and a layer management entity (LME) that manages the AE. The ASEs provide communication services that operate on a set of related application process object (APO) classes. One of the FAL ASEs is a management ASE that provides a common set of services for the management of the instances of FAL classes.

Although these services specify, from the perspective of applications, how request and responses are issued and delivered, they do not include a specification of what the requesting and responding applications are to do with them. That is, the behavioral aspects of the applications are not specified; only a definition of what requests and responses they can send/receive is specified. This permits greater flexibility to the FAL users in standardizing such object behavior. In addition to these services, some supporting services are also defined in this document to provide access to the FAL to control certain aspects of its operation.

1.2 Specifications

The principal objective of this document is to specify the characteristics of conceptual application layer services suitable for time-critical communications, and thus supplement the OSI Basic Reference Model in guiding the development of application layer protocols for time-critical communications.

A secondary objective is to provide migration paths from previously existing industrial communications protocols. It is this latter objective which gives rise to the diversity of services standardized as the various Types of IEC 61158, and the corresponding protocols standardized in subparts of IEC 61158-6.

This document can be used as the basis for formal application programming interfaces. Nevertheless, it is not a formal programming interface, and any such interface will need to address implementation issues not covered by this specification, including

- a) the sizes and octet ordering of various multi-octet service parameters, and
- b) the correlation of paired request and confirm, or indication and response, primitives.

1.3 Conformance

This document does not specify individual implementations or products, nor does it constrain the implementations of application layer entities within industrial automation systems.

There is no conformance of equipment to this application layer service definition standard. Instead, conformance is achieved through implementation of conforming application layer protocols that fulfill the Type 10 application layer services as defined in this document.

2 Normative references

The following documents are referred to in the text in such a way that some or all of their content constitutes requirements of this document. For dated references, only the edition cited applies. For undated references, the latest edition of the referenced document (including any amendments) applies.

NOTE All parts of the IEC 61158 series, as well as the IEC 61784-1 series and the IEC 61784-2 series are maintained simultaneously. Cross-references to these documents within the text therefore refer to the editions as dated in this list of normative references.

IEC 61131-3:2013, *Programmable controllers – Part 3: Programming languages*

IEC 61158-1:2023, *Industrial communication networks – Fieldbus specifications – Part 1: Overview and guidance for the IEC 61158 and IEC 61784 series*

IEC 61158-2:2023, *Industrial communication networks – Fieldbus specifications – Part 2: Physical layer specification and service definition*

IEC 61158-5-3:2023, *Industrial communication networks – Fieldbus specifications – Part 5-3: Application layer service definition – Type 3 elements*

IEC 61158-6-3:2023, *Industrial communication networks – Fieldbus specifications – Part 6-3: Application layer protocol specification – Type 3 elements*

IEC 61158-6-10:2023, *Industrial communication networks – Fieldbus specifications – Part 6-10: Application layer protocol specification – Type 10 elements*

IEC 61784-3-3, *Industrial communication networks – Profiles – Part 3-3: Functional safety fieldbuses – Additional specifications for CPF 3*

IEC 61800-7-203:2015, *Adjustable speed electrical power drive systems – Part 7-203: Generic interface and use of profiles for power drive systems – Profile type 3 specification*

IEC 62439-2:2021, *Industrial communication networks – High availability automation networks – Part 2: Media Redundancy Protocol (MRP)*

ISO/IEC 646:1991, *Information technology – ISO 7-bit coded character set for information interchange*

ISO/IEC 7498-1, *Information technology – Open Systems Interconnection – Basic Reference Model: The Basic Model*

ISO/IEC 8822, *Information technology – Open Systems Interconnection – Presentation service definition*

ISO/IEC 8824-1, *Information technology – Abstract Syntax Notation One (ASN.1) – Part 1: Specification of basic notation*

ISO/IEC 9545, *Information technology – Open Systems Interconnection – Application Layer structure*

ISO/IEC 9834-8, *Information technology – Procedures for the operation of object identifier registration authorities – Part 8: Generation of universally unique identifiers (UUIDs) and their use in object identifiers*

ISO/IEC 10646, *Information technology – Universal coded character set (UCS)*

ISO/IEC 10731, *Information technology – Open Systems Interconnection – Basic Reference Model – Conventions for the definition of OSI services*

ISO/IEC/IEEE 60559:2020, *Information technology – Microprocessor Systems – Floating-Point arithmetic*

ISO 8601-1:2019, *Data and time – Representations for information interchange – Part 1: Basic rules*

IEEE Std 802.1AB-2016, *IEEE Standard for Local and metropolitan area networks: Station and Media Access Control Connectivity Discovery*

IEEE Std 802.1AS-2020, *IEEE Standard for Local and Metropolitan Area Networks – Timing and Synchronization for Time-Sensitive Applications*

IEEE Std 802.1CB-2017, *IEEE Standard for Local and metropolitan area networks – Frame Replication and Elimination for Reliability*

IEEE Std 802.1Q-2018, *IEEE Standard for Local and Metropolitan Area Networks – Bridges and Bridged Networks*

IEEE Std 802.3-2018, *IEEE Standard for Ethernet*

IETF RFC 768, J. Postel, "User Datagram Protocol", August 1980, available at <https://www.rfc-editor.org/info/rfc768> [viewed 2022-09-29]

IETF RFC 791, J. Postel, "Internet Protocol", September 1981, available at <https://www.rfc-editor.org/info/rfc791> [viewed 2022-09-29]

IETF RFC 792, J. Postel, "Internet Control Message Protocol", September 1981, available at <https://www.rfc-editor.org/info/rfc792> [viewed 2022-09-29]

IETF RFC 826, D. Plummer, "An Ethernet Address Resolution Protocol: Or Converting Network Protocol Addresses to 48.bit Ethernet Address for Transmission on Ethernet Hardware", November 1982, available at <https://www.rfc-editor.org/info/rfc826> [viewed 2022-09-29]

IETF RFC 894, C. Hornig, "A Standard for the Transmission of IP Datagrams over Ethernet Networks", April 1984, available at <https://www.rfc-editor.org/info/rfc894> [viewed 2022-09-29]

IETF RFC 1034, P.V. Mockapetris, "Domain names – concepts and facilities", November 1987, available at <https://www.rfc-editor.org/info/rfc1034> [viewed 2022-09-29]

IETF RFC 1112, S.E. Deering, "Host extensions for IP multicasting", August 1989, available at <https://www.rfc-editor.org/info/rfc1112> [viewed 2022-09-29]

IETF RFC 1157, J.D. Case, M. Fedor, M.L. Schoffstall, J. Davin, "Simple Network Management Protocol (SNMP)", May 1990, available at <https://www.rfc-editor.org/info/rfc1157> [viewed 2022-09-29]

IETF RFC 1213, K. McCloghrie, M. Rose, "Management Information Base for Network Management of TCP/IP-based internets: MIB-II", March 1991, available at <https://www.rfc-editor.org/info/rfc1213> [viewed 2022-09-29]

IETF RFC 2131, R. Droms, "Dynamic Host Configuration Protocol", March 1997, available at <https://www.rfc-editor.org/info/rfc2131> [viewed 2022-09-29]

IETF RFC 2132, S. Alexander, R. Droms, "DHCP Options and BOOTP Vendor Extensions", March 1997, available at <https://www.rfc-editor.org/info/rfc2132> [viewed 2022-09-29]

IETF RFC 2365, D. Meyer, "Administratively Scoped IP Multicast", July 1998, available at <https://www.rfc-editor.org/info/rfc2365> [viewed 2022-09-29]

IETF RFC 2674, E. Bell, A. Smith, P. Langille, A. Rijhsinghani, K. McCloghrie, "Definitions of Managed Objects for Bridges with Traffic Classes, Multicast Filtering and Virtual LAN Extensions", August 1999, available at <https://www.rfc-editor.org/info/rfc2674> [viewed 2022-09-29]

IETF RFC 2737, K. McCloghrie, A. Bierman, "Entity MIB (Version 2)", December 1999, available at <https://www.rfc-editor.org/info/rfc2737> [viewed 2022-09-29]

IETF RFC 2863, K. McCloghrie, F. Kastenholz, "The Interfaces Group MIB", June 2000, available at <https://www.rfc-editor.org/info/rfc2863> [viewed 2022-09-29]

IETF RFC 3418, R. Presuhn, Ed., "Management Information Base (MIB) for the Simple Network Management Protocol (SNMP)", December 2002, available at <https://www.rfc-editor.org/info/rfc3418> [viewed 2022-09-29]

IETF RFC 3490, P. Faltstrom, P. Hoffman, A. Costello, "Internationalizing Domain Names in Applications (IDNA)", March 2003, available at <https://www.rfc-editor.org/info/rfc3490> [viewed 2022-09-29]

IETF RFC 3621, A. Berger, D. Romascanu, "Power Ethernet MIB", December 2003, available at <https://www.rfc-editor.org/info/rfc3621> [viewed 2022-09-29]

IETF RFC 4836, E. Beili, "Definitions of Managed Objects for IEEE 802.3 Medium Attachment Units (MAUs)", April 2007, available at <https://www.rfc-editor.org/info/rfc4836> [viewed 2022-09-29]

IETF RFC 5905, D. Mills, J. Martin, Ed., J. Burbank, W. Kasch, "Network Time Protocol Version 4: Protocol and Algorithms Specification", June 2010, available at <https://www.rfc-editor.org/info/rfc5905> [viewed 2022-09-29]

IETF RFC 6020, M. Bjorklund, Ed., "YANG – A Data Modeling Language for the Network Configuration Protocol (NETCONF)", October 2010, available at <https://www.rfc-editor.org/info/rfc6020> [viewed 2022-09-29]

IETF RFC 6241, R. Enns, Ed., M. Bjorklund, Ed., J. Schoenwaelder, Ed., A. Bierman, Ed., "Network Configuration Protocol (NETCONF)", June 2011, available at <https://www.rfc-editor.org/info/rfc6241> [viewed 2022-09-29]

IETF RFC 6890, M. Cotton, L. Vegoda, R. Bonica, Ed., B. Haberman, "Special-Purpose IP Address Registries", April 2013, available at <https://www.rfc-editor.org/info/rfc6890> [viewed 2022-09-29]

The Open Group – Publication C706, *Technical standard DCE1.1: Remote Procedure Call*; available at www.opengroup.org/onlinepubs/9629399/toc.htm [viewed 2022-09-29]

Metro Ethernet Forum – MEF 10.4:2018, Subscriber Ethernet Service Attributes, available at <https://www.mef.net/resources/mef-10-4-subscriber-ethernet-services-attributes> [viewed 2022-09-29]

3 Terms, definitions, abbreviated terms, symbols and conventions

For the purposes of this document, the following terms, definitions, symbols, abbreviated terms and conventions apply.

ISO and IEC maintain terminological databases for use in standardization at the following addresses:

- IEC Electropedia: available at <http://www.electropedia.org/>
- ISO Online browsing platform: available at <http://www.iso.org/obp>

3.1 Referenced terms and definitions

3.1.1 ISO/IEC 7498-1 terms

For the purposes of this document, the following terms as defined in ISO/IEC 7498-1 apply:

- a) application entity
- b) application process
- c) application protocol data unit
- d) application service element
- e) application entity invocation

- f) application process invocation
- g) application transaction
- h) real open system
- i) transfer syntax

3.1.2 ISO/IEC 8822 terms

For the purposes of this document, the following terms as defined in ISO/IEC 8822 apply:

- a) abstract syntax
- b) presentation context

3.1.3 ISO/IEC 9545 terms

For the purposes of this document, the following terms as defined in ISO/IEC 9545 apply:

- a) application-association
- b) application-context
- c) application context name
- d) application-entity-invocation
- e) application-entity-type
- f) application-process-invocation
- g) application-process-type
- h) application-service-element
- i) application control service element

3.1.4 ISO/IEC 8824-1 terms

For the purposes of this document, the following terms as defined in ISO/IEC 8824-1 apply:

- a) object identifier
- b) type

3.2 Additional Type 10 terms and definitions

3.2.1

alarm

activation of an event that shows a critical state

3.2.2

alarm ack

acknowledgment of an event that shows a critical state

3.2.3

alarm data object

object(s) which represent(s) critical states referenced by device/API/slot/subslot/alarm type

3.2.4

allocate

take a resource from a common area and assign that resource for the exclusive use of a specific entity

3.2.5

application

function or data structure for which data is consumed or produced

3.2.6

application layer interoperability

capability of application entities to perform coordinated and cooperative operations using the services of the FAL

3.2.7

application objects

multiple object classes that manage and provide a runtime exchange of Protocol Data Units (PDUs) across the network and within the network device

3.2.8

application process

part of a distributed application on a network, which is located on one device and unambiguously addressed

3.2.9

application process identifier

attribute that identifies an application process used in a device

3.2.10

application process object

component of an application process that is identifiable and accessible through an FAL application relationship

Note 1 to entry: Application process object definitions are composed of a set of values for the attributes of their class (see the definition for Application Process Object Class Definition). Application process object definitions may be accessed remotely using the services of the FAL Object Management ASE. FAL Object Management services can be used to load or update object definitions, to read object definitions, and to dynamically create and delete application process objects and their corresponding definitions.

3.2.11

application process object class

class of application process objects defined in terms of the set of their network-accessible attributes and services

3.2.12

application relationship

cooperative association between two or more application-entity-invocations for the purpose of exchange of information and coordination of their joint operation

Note 1 to entry: This relationship is activated either by the exchange of application-protocol-data-units or as a result of preconfiguration activities

3.2.13

application relationship application service element

application-service-element that provides the exclusive means for establishing and terminating all application relationships

3.2.14

application relationship endpoint

context and behavior of an application relationship as seen and maintained by one of the application processes involved in the application relationship

Note 1 to entry: Each application process involved in the application relationship maintains its own application relationship endpoint.

3.2.15**attribute**

description of an externally visible characteristic or feature of an object

Note 1 to entry: The attributes of an object contain information about variable portions of an object. Typically, they provide status information or govern the operation of an object. Attributes can also affect the behavior of an object. Attributes are divided into class attributes and instance attributes.

3.2.16**backup**

status of the Input Output Application Relationship (IO AR) which indicates that it is in the backup state

Note 1 to entry: An IO AR needs to be established to enter backup state.

3.2.17**behavior**

indication of how an object responds to particular events

3.2.18**channel**

representation of a single physical or logical link of an input or output application object of a server to the process in order to support addressing of diagnosis information

Note 1 to entry: The channel typically represents a single connector or clamp as a physical interface of a module or submodule. This reference is used to identify points of failure within diagnosis PDUs.

3.2.19**channel diagnosis**

information concerning a specific element of an input or output application object, provided for maintenance purposes

EXAMPLE Wire break

3.2.20**class**

set of objects, all of which represent the same kind of system component

Note 1 to entry: A class is a generalization of an object; a template for defining variables and methods. All objects in a class are identical in form and behavior, but usually contain different data in their attributes.

3.2.21**class attributes**

attribute that is shared by all objects within the same class

3.2.22**class code**

unique identifier assigned to each object class

3.2.23**class specific service**

service defined by a particular object class to perform a required function which is not performed by a common service

Note 1 to entry: A class specific object is unique to the object class which defines it.

3.2.24**clear**

status of the IO controller which indicates that the control algorithm is currently not running

3.2.25

client

<client server> initiator of a PDU to which a server reacts

3.2.26

common profile

collection of device independent information and functionality providing consistency between all devices

3.2.27

communication data object

object(s) which is(are) parameter(s) of communication relationships and referenced by device/ slot/ subslot/ index

3.2.28

configuration check

comparison of the expected IO-Data object structuring of the client with the real IO-Data object structuring to the server in the start-up phase

3.2.29

configuration fault

unacceptable difference between the expected IO-Data object structuring and the real IO-Data object structuring, as detected by the server

3.2.30

configuration identifier

representation of a portion of IO Data of a single input- and/or output-module of a server

3.2.31

consume

act of receiving data from a provider

3.2.32

consumer

node or sink receiving data from a provider

3.2.33

context management

network-accessible information (communication objects) that supports managing the operation of the fieldbus system, including the application layer

Note 1 to entry: Managing includes functions such as controlling, monitoring and diagnosing.

3.2.34

conveyance path

unidirectional flow of Application Protocol Data Units (APDUs) in an application relationship

3.2.35

credential

Information that an entity (a person or device) possesses that allow it to make a verifiable claim of identity, i.e., to be authenticated.

Note 1 to entry: In this document, IDevIDs and LDevIDs are credentials.

3.2.36

cyclic

repetitive in a regular manner

3.2.37**data consistency**

means for coherent transmission and access of the input- or output-data object between and within client and server

3.2.38**device**

physical hardware connected to the link

Note 1 to entry: A device can contain more than one node.

3.2.39**device ID**

vendor assigned device type identification

3.2.40**device profile**

collection of device dependent information and functionality providing consistency between similar devices of the same device type

3.2.41**diagnosis data object**

object(s) which contain(s) diagnosis information referenced by device /API/ slot/ subslot/ index

3.2.42**diagnosis information**

all data available at the server for maintenance purposes

3.2.43**dynamic reconfiguration**

change of IO data objects without interruption of an established application relationship and continuous updating of non-changed IO data objects

3.2.44**endpoint**

one of the communicating entities involved in a connection

3.2.45**engineering**

abstract term that characterizes the client application or device responsible for configuring an automation system

3.2.46**error**

discrepancy between a computed, observed or measured value or condition and the specified or theoretically correct value or condition

3.2.47**error class**

general grouping of related error definitions and corresponding error codes

3.2.48**error code**

identification of a specific type of error within an error class

3.2.49**event**

instance of a change of conditions

3.2.50

extended channel diagnosis

information concerning a specific element of a specific application object, provided for maintenance purposes

EXAMPLE Link Fail

3.2.51

fast startup

accelerated procedure to setup an IO device after a power cycle

3.2.52

frame

unit of data transmission on an IEEE Std 802 Local Area Network (LAN) that conveys a Media Access Control (MAC) Protocol Data Unit (MPDU)

3.2.53

identification data object

object(s) that contain(s) information about device, module and submodule manufacturer and type referenced by device/ API/ slot/ subslot/ index

3.2.54

implicit AR endpoint

AR endpoint that is defined locally within a device without use of the Create service

3.2.55

index

address of a record data object within an application process

3.2.56

instance

actual physical occurrence of an object within a class that identifies one of many objects within the same object class

3.2.57

instance attributes

attribute that is unique to an object instance and not shared by the object class

3.2.58

instantiated

object instance that has been created in a device

3.2.59

invocation

act of using a service or other resource of an application process

Note 1 to entry: Each invocation represents a separate thread of control that can be described by its context. Once the service completes, or use of the resource is released, the invocation ceases to exist. For service invocations, a service that has been initiated but not yet completed is referred to as an outstanding service invocation. Also for service invocations, an Invoke ID can be used to unambiguously identify the service invocation and differentiate it from other outstanding service invocations.

3.2.60

IO controller

controlling device, which acts as client for several IO devices (field devices)

Note 1 to entry: This is usually a programmable controller or a distributed control system.

3.2.61**IO data object**

object designated to be transferred cyclically for the purpose of processing and referenced by device/API/slot/subslot

3.2.62**IO device**

field device which acts as server for IO operation

3.2.63**IO parameter server**

server for application parameters of IO devices (client)

Note 1 to entry: This is usually a device to backup parameter data and to log online changes of device parameters.

3.2.64**IO subsystem**

subsystem composed of one IO controller and all its associated IO devices

3.2.65**IO supervisor**

engineering device which manages commissioning and diagnosis of an IO system

3.2.66**IO system**

system composed of all its IO subsystems

Note 1 to entry: As an example, a PLC with more than one IO controller (network interface) controls one IO system composed of an IO subsystem for each IO controller.

3.2.67**Isochronous mode**

IO system operating tightly synchronized with a jitter of less than 1 μ s

3.2.68**member**

piece of an attribute that is structured as an element of an array

3.2.69**method**

synonym for an operational service which is provided by the server ASE and invoked by a client

3.2.70**module**

hardware or logical component of a physical device

3.2.71**network**

set of nodes connected by some type of communication medium, including any intervening repeaters, bridges, routers and lower-layer gateways

3.2.72**object**

abstract representation of a particular component within a device, usually a collection of related data (in the form of variables) and methods (procedures) for operating on that data that have a clearly defined interface and behavior

3.2.73

object specific service

service unique to the object class which defines it

3.2.74

operate

status of the IO controller that indicates that the control algorithm is currently running

3.2.75

peer

role of an AR endpoint in which it is capable of acting as both client and server

3.2.76

physical device

automation or other network device

3.2.77

point-to-point connection

connection that exists between exactly two application objects

3.2.78

primary

status of the IO AR that indicates that it is in the operating state

Note 1 to entry: Besides a primary IO AR a backup IO AR may exist. For example used for redundancy and dynamic reconfiguration of IO data.

3.2.79

provider

node or source sending data to one or many consumer

3.2.80

PTCP domain

certain number of PTCP subdomains in one IP subnet

3.2.81

PTCP subdomain

certain amount of DTEs with synchronized clocks

3.2.82

record data object

object(s) which are already pre-processed and transferred acyclically for the purpose of information or further processing and referenced by device/API/slot/subslot/index

3.2.83

resource

processing or information capability

3.2.84

run

status of the IO controller which indicates that the control algorithm is currently operating

3.2.85

server

<client server> object which provides services to another (client) object

3.2.86**service**

operation or function that an object and/or object class performs upon a request from another object and/or object class

3.2.87**slot**

address of a structural unit within an IO device

Note 1 to entry: Within a modular device, a slot typically addresses a physical module. Within compact devices, a slot typically addresses a logical function or virtual module.

3.2.88**stop**

status of the IO controller which indicates that the control algorithm is currently not running

3.2.89**submodule**

hardware or logical component of a module

3.2.90**subslot**

address of a structural unit within a slot

Note 1 to entry: A subslot can address a physical interface for submodules within a module. Generally, a subslot is a second level to structure data within a device.

3.2.91**vendor ID**

central administrative number used as manufacturer identification

3.3 Additional Type 10 terms and definitions for media redundancy**3.3.1****failure**

termination of the ability of an item to perform a required function

Note 1 to entry: After failure the item has a fault.

Note 2 to entry: "Failure" is an event, as distinguished from "fault", which is a state.

Note 3 to entry: This concept as defined does not apply to items considering of software only.

3.3.2**fault**

state of an item characterized by its inability to perform a required function, excluding the inability during preventive maintenance or other planned actions, or due to lack of external resources

Note 1 to entry: A fault is often the result of a failure of the item itself, but can exist without prior failure.

3.3.3**recovery**

event when the item regains the ability to perform a required function, after a fault

3.3.4**recovery time**

time period required for recovery

3.3.5 redundancy

existence in an item of two or more means of performing a required function

Note 1 to entry: In this context, the existence of more than one path (consisting of links and switches) between end nodes.

3.3.6 ring

network where each node is connected in series to two other nodes

Note 1 to entry: Nodes are connected to one another in the logical shape of a circle.

Note 2 to entry: Frames are passed sequentially between active nodes, each able to examine or modify the frame before forwarding it.

3.3.7 ringport

port of a switch to which a ring link is attached

3.3.8 ring link

link that connects two switches of a ring

3.3.9 switch node

MAC bridge as defined in IEEE Std 802.1Q

Note 1 to entry: It is called “switch” in this context.

3.4 Abbreviations and symbols

3.4.1 General

AE	Application Entity
AL	Application Layer
ALME	Application Layer Management Entity
ALP	Application Layer Protocol
AP	Application Process
APDU	Application Protocol Data Unit
API	Application Process Identifier
APMR	Acyclic Protocol Machine Receiver
APMS	Acyclic Protocol Machine Sender
APO	Application Process Object
AR	Application Relationship
AREP	Application Relationship End Point

ARL	Application Relationship List
ASE	Application Service Element
BMA	Best Master Algorithm
BMP	Basic Multilingual Page
CID	Connection ID
CIM	Communication Interface Management
CIP	Control and Information Protocol
CNC	Centralized Network Configuration
CR	Communication Relationship
CRC	Cyclic Redundancy Check
CREP	Communication Relationship End Point
CTLSP	Controller state machine
DEVSP	Device state machine
DIAG_DIAG	Diagnosis entry state machine
DIAG_MD	Maintenance demanded entry state machine
DIAG_MR	Maintenance required entry state machine
DIAG_QUALIFIED	Qualified entry state machine
DL-	(as a prefix) Data Link-
DLC	Data Link Connection
DLL	Data Link Layer
DLSAP	Data Link Service Access Point
DNS	Domain Name System
DP	Decentralized Peripherals
FAL	Fieldbus Application Layer
FIFO	First In First Out
FODIAG	Fiber Optic Diagnosis

FOMD	Fiber Optic Maintenance Demanded
FOMR	Fiber Optic Maintenance Required
Gbps	Gigabits per second
HMI	Human Machine Interface
ID	Identifier
IEC	International Electrotechnical Commission
IP	Internet Protocol
ISO	International Organization for Standardization
LLC	Logical Link Control
LME	Layer Management Entity
LOC_LNK	Local Link
MAU	Medium Attachment Unit
Mbps	Megabits per second
MIB	Management Information Base
MRA	Media Redundancy Manager (auto negotiation)
MRC	Media Redundancy Client
MRM	Media Redundancy Manager
MRP	Media Redundancy Protocol
MRPD	Media Redundancy with Planned Duplication of frames
ns	Nano second
OSI	Open Systems Interconnect
OWNSM	Ownership Submodule
PDev	Physical Device
PDU	Protocol Data Unit
PL	Physical Layer
PLUGSM	Plug State Machine

PULLSM	Pull State Machine
ps	Pico second
REM_CHK	Remote check (neighborhood check)
REP	Route Endpoint
RSMSM	Real Submodule State Machine
SAP	Service Access Point
SCL	Security Level
SDU	Service Data Unit
SEM	State Event Matrix
SMIB	System Management Information Base
SMK	System Management Kernel
SNMP	Simple Network Management Protocol
STD	State Transition Diagram, used to describe object behavior
S-VFD	Simple Virtual Field Device
SYNC_DIAG	Synchronization Diagnosis
TSN	Time Sensitive Network
UTC	Universal Time Coordinated

3.4.2 Additional Type 10 abbreviations and symbols

ACD	Access Control Decision
ACK	Acknowledged
ALPMI	Alarm Protocol Machine Initiator
ALPMR	Alarm Protocol Machine Responder
ARP	Address Resolution Protocol
BBUU	Buffer Buffer Unconfirmed Unidirectional
BBUU-OM	Buffer Buffer Unconfirmed Unidirectional – One to Many
BMC	Best Master Clock

BNME	Best Network Management Engine
CL-RPC	Connectionless Remote Procedure Call
CM	Context Management
CMDEV	Context Management Protocol Machine Device
CMDEV_DA	Context Management Device Access Protocol Machine Device
CMCTL	Context Management Protocol Machine Controller
CMCTL_DA	Context Management Device Access Protocol Machine Controller
COC	Combined object container
CPM	Cyclic Consumer Protocol Machine
CRV	Credential Vault
DCE	OSF Distributed Computing Environment
DCP	Discovery and basic Configuration Protocol
DHCP	Dynamic Host Configuration Protocol
DLPDU	Data Link-Protocol Data Unit
DTE	Data Terminal Equipment
GSDML	General Station Description Markup Language
I&M	Identification and Maintenance Profile
IANA	Internet Assigned Numbers Authority
ICMP	Internet Control Message Protocol
IDNA	Internationalizing Domain Names in Applications
IOCR	Input Output Communication Relation
IOCS	Input Output Object Consumer Status
IOPS	Input Output Object Provider Status
IR	Isochronous Relay
IRT	Isochronous Real Time Protocol
ISO	International Organization for Standardization

IsoM	Isochronous Mode
ISOM_IN	Isochronous Mode Input Data state machine
ISOM_OUT	Isochronous Mode Output Data state machine
ISOM_SYNC	Isochronous Mode Sync state machine
LED	Light Emitting Diode
LLDP	Link Layer Discovery Protocol
LME	Layer Management Entity
lsb	Least Significant Bit
LT	Length/Type
MAC	Medium Access Control
MCR	Multicast Communication Relation
msb	Most Significant Bit
NCA	Network Computing Architecture
NCE	Network Configuration Engine
NME	Network Management Engine
NUE	Network Update Engine
PCE	Path Compute Engine
PL	Physical Layer
PPM	Cyclic Provider Protocol Machine
PRO	Protection
PTCP	Precision Transparent Clock Protocol
QQCB-CL	Queue Queue Confirmed Bi-directional – Connectionless
QQCB-CO	Queue Queue Confirmed Bi-directional – Connection-Oriented
RAZ	Role Authorization
RPC	Remote Procedure Call
RT	Real Time

RTA	Real Time Protocol Acyclic
RTC	Real Time Protocol Cyclic
RTC3PSM	Realtime Class 3 Port State Machine
SAM	Security Association Management
SAV	Security Association Vault
SCM	Site Credential Management
TCI	VLAN Tag Control Information
TDE	Topology Discovery Engine
TLV	Type Length Value (coding rule)
UDP	User Datagram Protocol
UUID	Universally Unique Identifier
VLAN	Virtual Local Area Network
VLAN ID	Virtual Local Area Network Identifier (see also IEEE Std 802.1Q VID)

3.4.3 Abbreviations and symbols for services

cnf	Confirmation
ind	Indication
req	Request
rsp	Response

3.4.4 Void

Intentionally left blank.

3.5 Conventions

3.5.1 Overview

The FAL is defined as a set of object-oriented ASEs. Each ASE is specified in a separate subclause. Each ASE specification is composed of two parts, its class specification, and its service specification.

The class specification defines the attributes of the class. The attributes are accessible from instances of the class using the Object Management ASE services specified in Clause 5 of this document. The service specification defines the services that are provided by the ASE.

3.5.2 General conventions

This document uses the descriptive conventions given in ISO/IEC 10731.

3.5.3 Conventions for class definitions

Class definitions are described using templates. Each template consists of a list of attributes for the class. The general form of the template is shown below:

FAL ASE:	ASE Name
CLASS:	Class Name
CLASS ID:	#
PARENT CLASS:	Parent Class Name
ATTRIBUTES:	
1	(o) Key Attribute: numeric identifier
2	(o) Key Attribute: name
3	(m) Attribute: attribute name(values)
4	(m) Attribute: attribute name(values)
4.1	(s) Attribute: attribute name(values)
4.2	(s) Attribute: attribute name(values)
4.3	(s) Attribute: attribute name(values)
5	(c) Constraint: constraint expression
5.1	(m) Attribute: attribute name(values)
5.2	(o) Attribute: attribute name(values)
6	(m) Attribute: attribute name(values)
6.1	(s) Attribute: attribute name(values)
6.2	(s) Attribute: attribute name(values)
SERVICES:	
1	(o) OpsService: service name
2	(c) Constraint: constraint expression
2.1	(o) OpsService: service name
3	(m) MgtService: service name

- 1) The "FAL ASE:" entry is the name of the FAL ASE that provides the services for the class being specified.
- 2) The "CLASS:" entry is the name of the class being specified. All objects defined using this template will be an instance of this class. The class may be specified by this document, or by a user of this document.
- 3) The "CLASS ID:" entry is a number that identifies the class being specified. This number is unique within the FAL ASE that will provide the services for this class. When qualified by the identity of its FAL ASE, it unambiguously identifies the class within the scope of the FAL. The value "NULL" indicates that the class cannot be instantiated. Class IDs between 1 and 255 are reserved by this document to identify standardized classes. They have been assigned to maintain compatibility with existing national standards. CLASS IDs between 256 and 2 048 are allocated for identifying user defined classes.
- 4) The "PARENT CLASS:" entry is the name of the parent class for the class being specified. All attributes defined for the parent class and inherited by it are inherited for the class being defined, and therefore do not have to be redefined in the template for this class.

NOTE The parent-class "TOP" indicates that the class being defined is an initial class definition. The parent class TOP is used as a starting point from which all other classes are defined. The use of TOP is reserved for classes defined by this document.

- 5) The "ATTRIBUTES" label indicate that the following entries are attributes defined for the class.
 - a) Each of the attribute entries contains a line number in column 1, a mandatory (m) / optional (o) / conditional (c) / selector (s) indicator in column 2, an attribute type label in column 3, a name or a conditional expression in column 4, and optionally a list of enumerated values in column 5. In the column following the list of values, the default value for the attribute may be specified.
 - b) Objects are normally identified by a numeric identifier or by an object name, or by both. In the class templates, these key attributes are defined under the key attribute.
 - c) The line number defines the sequence and the level of nesting of the line. Each nesting level is identified by period. Nesting is used to specify
 - i) fields of a structured attribute (4.1, 4.2, 4.3),
 - ii) attributes conditional on a constraint statement (5). Attributes may be mandatory (5.1) or optional (5.2) if the constraint is true. Not all optional attributes require constraint statements as does the attribute defined in (5.2),
 - iii) the selection fields of a choice type attribute (6.1 and 6.2).
- 6) The "SERVICES" label indicates that the following entries are services defined for the class.
 - a) An (m) in column 2 indicates that the service is mandatory for the class, while an (o) indicates that it is optional. A (c) in this column indicates that the service is conditional. When all services defined for a class are defined as optional, at least one shall be selected when an instance of the class is defined.
 - b) The label "OpsService" designates an operational service (1).
 - c) The label "MgtService" designates a management service (2).
 - d) The line number defines the sequence and the level of nesting of the line. Each nesting level is identified by period. Nesting within the list of services is used to specify services conditional on a constraint statement.

Attributes and services are addressed with the following syntax:

- ASE:class:attribute
- ASE::attribute (if ASE contains only one class with same name)
- ASE:class:service():parameter
- ASE::service():parameter (if ASE contains only one class with same name)

Among other things, this is used for relation definitions.

3.5.4 Conventions for service definitions

3.5.4.1 General

The service model, service primitives, and time-sequence diagrams used are entirely abstract descriptions; they do not represent a specification for implementation.

3.5.4.2 Service parameters

Service primitives are used to represent service user/service provider interactions (see ISO/IEC 10731). These services convey parameters which indicate information available in the user/provider interaction. Not all parameters need be explicitly stated for an interface.

The service specifications of this document use a tabular format to describe the component parameters of the ASE service primitives. The parameters which apply to each group of service primitives are set out in tables. Each table consists of up to five columns for the

- a) parameter name,
- b) request primitive,

- c) indication primitive,
- d) response primitive, and
- e) confirm primitive.

One parameter (or component of it) is listed in each row of each table. Under the appropriate service primitive columns, a code is used to specify the type of usage of the parameter on the primitive specified in the column:

- M Parameter is mandatory for the primitive.
- U Parameter is a user option and can be provided or not depending on dynamic usage of the service user. This does not imply that the support of the parameter is optional. When not provided, a default value for the parameter is assumed.
- C Parameter is conditional upon other parameters or upon the environment of the service user.
- (Blank.) Parameter is never present.
- S Parameter is a selected item.

Some entries are further qualified by items in brackets. These may be

- 1) a parameter-specific constraint:
 - “(=)” indicates that the parameter is semantically equivalent to the parameter in the service primitive to its immediate left in the table.
- 2) an indication that some note applies to the entry:
 - “(n)” indicates that the following note “n” contains additional information pertaining to the parameter and its use.

3.5.4.3 Service procedures

The procedures are defined in terms of

- the interactions between application entities through the exchange of fieldbus Application Protocol Data Units, and
- the interactions between an application layer service provider and an application layer service user in the same system through the invocation of application layer service primitives. These services get a “local” prefix in this document.

These procedures are applicable to instances of communication between systems which support time-constrained communications services within the Fieldbus Application Layer.

Interactions between the ASEs in the same layer are not shown here.

3.5.5 Conventions used in state machines

The same conventions apply as defined in IEC 61158-6-10, Clause 3 “Conventions used in state machines”.

4 Concepts

IEC 61158-1, Clause 9 describes the concepts of the application layer service descriptions and the templates used in this document.

5 Data type ASE

5.1 General

5.1.1 Overview

Fieldbus data types specify the machine independent syntax for application data conveyed by FAL services. The fieldbus application layer supports the definition and transfer of both basic and constructed data types. Encoding rules for the data types specified in Clause 5 are provided in IEC 61158-6-10.

Basic types are atomic types that cannot be decomposed into more elemental types. Constructed types are types composed of basic types and other constructed types. Their complexity and depth of nesting is not constrained by this document.

The basic data classes are used to define fixed length and bitstring data types. Standard types are taken from ISO/IEC 8824-1, other standard basic data types are defined specifically for fieldbus applications.

5.1.2 Date and time type specifics

Any date and time related data type, i.e. BinaryDate, TimeOfDay with and without date indication, TimeDifference with and without date indication, NetworkTime, NetworkTimeDifference, and TimeStamp is always related to a specific timescale.

Possible timescales are:

- Local time / local counter; used e.g. for working duration, ...
- WORKING_CLOCK; used e.g. for SendClock, Tinput, Toutput, SampleTime, ...
- Global time / Wall clock; Used e.g. for a comparable point in time, a start time, a stop time, ...

Usable timescales need to be strict monotonously rising, like TAI (temps atomique international), to allow any TimeDifference to be calculated.

Any usage of these data types is only meaningful when having the information, to which timescale the value is related.

Only the data type TimeStamp offers the timescale related to and whether the time is synchronized. All other data types have no indication to which timescale they belong to, or whether the time is synchronized to other devices.

NOTE IEEE Std 802.1AS provides a mechanism to synchronize devices to the TAI timescale. Thus, no Universal Time Coordinated (UTC) information is available.

5.1.3 Transfer of user data

User data is transferred between applications by the FAL protocol. All encoding and decoding are performed by the FAL user.

The rules for encoding user data in FAL protocol data units is data type dependent. These rules are defined in IEC 61158-6-10. User-defined data types for which there are no encoding rules are transferred as a variable-length sequence of octets. The format of the data within the OctetString is defined by the user.

5.1.4 Data type overview

Table 1 gives an overview over all data types defined within here.

Table 1 – Data type overview

Data type numeric identifier	Data type name	Usage	Alias name	Definition
1	Boolean	Type 10, Type 3	—	see 5.3.1.1
2	Integer8	Type 10, Type 3	char, int8_t	see 5.3.1.3.3.1
3	Integer16	Type 10, Type 3	short, int16_t	see 5.3.1.3.3.2
4	Integer32	Type 10, Type 3	long, int32_t	see 5.3.1.3.3.3
5	Unsigned8	Type 10, Type 3	unsigned char, uint8_t	see 5.3.1.3.4.1
6	Unsigned16	Type 10, Type 3	unsigned short, uint16_t	see 5.3.1.3.4.2
7	Unsigned32	Type 10, Type 3	unsigned long, uint32_t	see 5.3.1.3.4.3
8	Float32	Type 10, Type 3	float, float32_t	see 5.3.1.3.1.1
9	VisibleString	Type 10, Type 3	—	see 5.3.2.2
10	OctetString	Type 10, Type 3	—	see 5.3.2.1
12	TimeOfDay with date indication	Type 10, Type 3 should not use it	—	see 5.3.1.5.3
13	TimeDifference	obsolete	—	see 5.3.1.5.5
15	Float64	Type 10, Type 3	double, float64_t	see 5.3.1.3.1.2
39	UNICODEString	Type 10, Type 3 should not use it	—	see 5.3.2.4
40	UnicodeString8	Type 10, Type 3	—	see 5.3.2.5
41	61131_STRING	Type 10	—	see 5.3.2.6
42	61131_WSTRING	Type 10	—	see 5.3.2.7
50	BinaryDate	Type 10, Type 3 should not use it	—	see 5.3.1.5.2
52	TimeOfDay without date indication	Type 10, Type 3 should not use it	Unsigned32	see 5.3.1.5.4
53	TimeDifference with date indication	Type 10, Type 3 should not use it	—	see 5.3.1.5.6
54	TimeDifference without date indication	Type 10, Type 3 should not use it	Unsigned32	see 5.3.1.5.7
55	Integer64	Type 10, Type 3	int64_t	see 5.3.1.3.3.4
56	Unsigned64	Type 10, Type 3	uint64_t	see 5.3.1.3.4.4
58	NetworkTime	Type 10, Type 3 should not use it	Unsigned64	see 5.3.1.5.8

Data type numeric identifier	Data type name	Usage	Alias name	Definition
59	NetworkTimeDifference	Type 10, Type 3 should not use it	Integer64	see 5.3.1.5.9
60	TimeStamp	Type 10, Type 3	—	see 5.3.1.4.1
61	TimeStampDifference	Type 10, Type 3	—	see 5.3.1.4.2
62	TimeStampDifferenceShort	Type 10, Type 3	Integer64	see 5.3.1.4.3
100	Float64+Unsigned8	Type 10, Type 3	—	see 5.3.1.6.5
101	Float32+Unsigned8	Type 10, Type 3	—	see 5.3.1.6.6
102	Unsigned8+Unsigned8	Type 10, Type 3	—	see 5.3.1.6.7
103	OctetString2+Unsigned8	Type 10, Type 3	—	see 5.3.1.6.4
104	Unsigned16_S	Type 10, Type 3	—	see 5.3.1.6.8
105	Integer16_S	Type 10, Type 3	—	see 5.3.1.6.9
106	Unsigned8_S	Type 10, Type 3	—	see 5.3.1.6.10
107	OctetString_S	Type 10, Type 3	—	see 5.3.2.2
110	F message trailer with 4 octets	Type 10, Type 3	—	see 5.3.1.6.2
111	F message trailer with 5 octets	Type 10, Type 3	—	see 5.3.1.6.2
113	N2	Type 10, Type 3	Integer16	see 5.3.1.3.3.5
114	N4	Type 10, Type 3	Integer32	see 5.3.1.3.3.6
115	V2	Type 10, Type 3	—	see 5.3.1.2.1
116	L2	Type 10, Type 3	—	see 5.3.1.2.2
117	R2	Type 10, Type 3	Unsigned16	see 5.3.1.3.8
118	T2	Type 10, Type 3	Unsigned16	see 5.3.1.3.5
119	T4	Type 10, Type 3	Unsigned32	see 5.3.1.3.6
120	D2	Type 10, Type 3	Unsigned16	see 5.3.1.3.7
121	E2	Type 10, Type 3	—	see 5.3.1.3.2.1
122	C4	Type 10, Type 3	Integer32	see 5.3.1.3.3.9
123	X2	Type 10, Type 3	Integer16	see 5.3.1.3.3.7
124	X4	Type 10, Type 3	Integer32	see 5.3.1.3.3.8

Data type numeric identifier	Data type name	Usage	Alias name	Definition
125	Unipolar2.16	Type 10, Type 3	—	see 5.3.1.3.2.2
128 – 255	for this document: reserved for Type 3: user specific data types	Type 3	—	—
256 – 1 024	Reserved	Type 10	—	—
1 025	UUID	Type 10	—	see 5.3.1.6.1
1 026 – 65 535	Reserved	Type 10	—	—
Other	Reserved	Type 10, Type 3	—	—

5.2 Formal definition of data type objects

5.2.1 Data type class

5.2.1.1 Template

The data type class specifies the root of the data type class tree. Its parent class “top” indicates the top of the FAL class tree.

FAL ASE:	DATA TYPE ASE
CLASS:	DATA TYPE
CLASS ID:	5 (FIXED LENGTH & STRING), 6 (STRUCTURE), 12 (ARRAY)
PARENT CLASS:	TOP
ATTRIBUTES:	
1	(m) Key Attribute: Data type Numeric Identifier
2	(o) Key Attribute: Data type Name
3	(m) Attribute: Format (FIXED LENGTH, STRING, STRUCTURE, ARRAY)
4	(c) Constraint: Format = FIXED LENGTH STRING
4.1	(m) Attribute: Octet Length
5	(c) Constraint: Format = STRUCTURE
5.1	(m) Attribute: Number of Fields
5.2	(m) Attribute: List of Fields
5.2.1	(o) Attribute: Field Name
5.2.2	(m) Attribute: Field Data type
6	(c) Constraint: Format = ARRAY
6.1	(m) Attribute: Number of Array Elements
6.2	(m) Attribute: Array Element Data type

5.2.1.2 Attributes

Data type Numeric Identifier

This attribute identifies the numeric identifier of the related data type. The data type numeric identifier has a data type of Unsigned32.

Data type Name

This optional attribute identifies the name of the related data type.

Format

This attribute identifies the data type as a fixed-length, string, array, or data structure.

Octet Length

This conditional attribute defines the representation of the dimensions of the associated data type object. It is present when the value of the format attribute is “FIXED LENGTH” or “STRING”. For FIXED LENGTH data types, it represents the length in octets. For STRING data types, it represents the length in octets for a single element of a string.

Number of Fields

This conditional attribute defines the number of fields in a structure. It is present when the value of the format attribute is "STRUCTURE".

List of Fields

This conditional attribute is an ordered list of fields contained in the structure. Each field is specified by its number and its type. Fields are numbered sequentially from 0 (zero) in the order in which they occur. Partial access to fields within a structure is supported by identifying the field by number. This attribute is present when the value of the format attribute is "STRUCTURE".

Field Name

This conditional, optional attribute specifies the name of the field. It can be present when the value of the format attribute is "STRUCTURE".

Field Data type

This conditional attribute specifies the data type of the field. It is present when the value of the format attribute is "STRUCTURE". This attribute can itself specify a constructed data type either by referencing a constructed data type definition by its numeric id, or by embedding a constructed data type definition here. When embedding a description, the Embedded Data type description shown below is used.

Number of Array Elements

This conditional attribute defines the number of elements for the array type. Array elements are indexed starting at "0" through "n-1" where the size of the array is "n" elements. This attribute is present when the value of the format attribute is "ARRAY".

Array Element Data type

This conditional attribute specifies the data type for the elements of an array. All elements of the array have the same data type. It is present when the value of the format attribute is "ARRAY". This attribute can itself specify a constructed data type either by referencing a constructed data type definition by its numeric id, or by embedding a constructed data type definition here. When embedding a description, the Embedded Data type description shown below is used.

Embedded Data type Description

This attribute is used to recursively define embedded data types within a structure or array. The template below defines its contents. The attributes shown in the template are defined above in the data type class, except for the Embedded Data type attribute, which is a recursive reference to this attribute. It is used to define nested elements.

ATTRIBUTES:

1	(m) Attribute:	Format (FIXED LENGTH, STRING, STRUCTURE, ARRAY)
2	(c) Constraint:	Format = FIXED LENGTH STRING
2.1	(m) Attribute:	Data type Numeric ID value
2.2	(m) Attribute:	Octet Length
3	(c) Constraint:	Format = STRUCTURE
3.1	(m) Attribute:	Number of Fields
3.2	(m) Attribute:	List of Fields
3.2.1	(m) Attribute:	Embedded Data type Description
4	(c) Constraint:	Format = ARRAY
4.1	(m) Attribute:	Number of Array Elements
4.2	(m) Attribute:	Embedded Data type Description

5.3 FAL defined data types

5.3.1 Fixed length types

5.3.1.1 Boolean types

5.3.1.1.1 Boolean

CLASS: Data type

ATTRIBUTES:

1	Data type Numeric Identifier	= 1
2	Data type Name	= Boolean
3	Format	= FIXED LENGTH
4.1	Octet Length	= 1

This data type expresses a Boolean data type with the values TRUE (non zero) and FALSE (zero).

5.3.1.2 Bitstring types

5.3.1.2.1 Bit sequence V2

CLASS: Data type

ATTRIBUTES:

1	Data type Numeric Identifier	= 115
2	Data type Name	= V2
3	Format	= FIXED LENGTH
4.1	Octet Length	= 2

This data type expresses a Bitstring data type consisting of 16 single bits combined in two octets and coded according to Table 2.

Each single bit has the values TRUE (1) and FALSE (0).

Table 2 – V2 octets

Bit	8	7	6	5	4	3	2	1
Octet 1	15	14	13	12	11	10	9	8
Octet 2	7	6	5	4	3	2	1	0

5.3.1.2.2 Nibble L2

CLASS: Data type

ATTRIBUTES:

1	Data type Numeric Identifier	= 116
2	Data type Name	= L2
3	Format	= FIXED LENGTH
4.1	Octet Length	= 2

This data type expresses a Bitstring data type consisting of four nibbles combined in two octets. A nibble consists of four associated bits. The data type is coded according to Table 3.

The definition of a single nibble is not specified.

Table 3 – L2 octets

Bit	8	7	6	5	4	3	2	1
Octet 1	Nibble 3				Nibble 2			
Octet 2	Nibble 1				Nibble 0			

The definition of a single nibble is not specified.

5.3.1.3 Numeric types

5.3.1.3.1 Floating point types

5.3.1.3.1.1 Float32

CLASS: Data type

ATTRIBUTES:

1	Data type Numeric Identifier	= 8
2	Data type Name	= Float32
3	Format	= FIXED LENGTH
4.1	Octet Length	= 4

This type has a length of four octets. The format for float32 is that defined by ISO/IEC/IEEE 60559 as single precision.

NOTE "Float" is an alias name for this data type.

5.3.1.3.1.2 Float64

CLASS: Data type

ATTRIBUTES:

1	Data type Numeric Identifier	= 15
2	Data type Name	= Float64
3	Format	= FIXED LENGTH
4.1	Octet Length	= 8

This type has a length of eight octets. The format for float64 is that defined by ISO/IEC/IEEE 60559 as double precision.

NOTE "Double" is an alias name for this data type.

5.3.1.3.2 Fixed point types

5.3.1.3.2.1 Fixed point value E2

CLASS: Data type

ATTRIBUTES:

1	Data type Numeric Identifier	= 121
2	Data type Name	= E2
3	Format	= FIXED LENGTH
4.1	Octet Length	= 2

This data type is a signed linear fixed-point value with a length of two octets having a sign-bit, eight binary places before the decimal point and seven binary places after it. The octets are coded according to Table 4.

Table 4 – E2 octets

Bit	8	7	6	5	4	3	2	1
Octet 1	SN	2^7	2^6	2^5	2^4	2^3	2^2	2^1
	sign	integer						
Octet 2	2^0	2^{-1}	2^{-2}	2^{-3}	2^{-4}	2^{-5}	2^{-6}	2^{-7}
	integer	fraction						

The value range of E2 is shown in Table 5.

Table 5 – E2 value range

Range of values	Resolution
$-256 \cdot 2^{-7}$ to $256 \cdot 2^{-7}$	$2^{-7} = 0,0078125$

5.3.1.3.2.2 Unipolar2.16

CLASS: Data type

ATTRIBUTES:

- 1 Data type Numeric Identifier = 125
- 2 Data type Name = Unipolar2.16
- 3 Format = FIXED LENGTH
- 4.1 Octet Length = 2

This data type is an unsigned linear fixed-point value with two octets having two binary places before the decimal point and fourteen binary places after it. The octets are coded according to Table 6 with a value range shown in Table 7. The data type expresses a value in percent of a span.

Table 6 – Unipolar2.16 octets

Bit	8	7	6	5	4	3	2	1
Octet 1	2^1	2^0	2^{-1}	2^{-2}	2^{-3}	2^{-4}	2^{-5}	2^{-6}
	integer		fraction					
Octet 2	2^{-7}	2^{-8}	2^{-9}	2^{-10}	2^{-11}	2^{-12}	2^{-13}	2^{-14}
	fraction							

Table 7 – Unipolar2.16 value range

Range of values	Resolution
$0 \% \leq i \leq (400 \cdot 2^{-14}) \%$	$2^{-14} = 0,0061 \%$

NOTE This type is also used in IEC 61375-2-1 and expressed in IEC 60870-5-4 as 'unsigned fixed point number'.

5.3.1.3.3 Integer types

5.3.1.3.3.1 Integer8

CLASS:		Data type
ATTRIBUTES:		
1	Data type Numeric Identifier	= 2
2	Data type Name	= Integer8
3	Format	= FIXED LENGTH
4.1	Octet Length	= 1

This integer type is a two's complement binary number with a length of one octet.

NOTE "Char" is an alias name for this data type.

5.3.1.3.3.2 Integer16

CLASS:		Data type
ATTRIBUTES:		
1	Data type Numeric Identifier	= 3
2	Data type Name	= Integer16
3	Format	= FIXED LENGTH
4.1	Octet Length	= 2

This integer type is a two's complement binary number with a length of two octets.

NOTE "Short" is an alias name for this data type.

5.3.1.3.3.3 Integer32

CLASS:		Data type
ATTRIBUTES:		
1	Data type Numeric Identifier	= 4
2	Data type Name	= Integer32
3	Format	= FIXED LENGTH
4.1	Octet Length	= 4

This integer type is a two's complement binary number with a length of four octets.

NOTE "Long" is an alias name for this data type.

5.3.1.3.3.4 Integer64

CLASS:		Data type
ATTRIBUTES:		
1	Data type Numeric Identifier	= 55
2	Data type Name	= Integer64
3	Format	= FIXED LENGTH
4.1	Octet Length	= 8

This integer type is a two's complement binary number with a length of eight octets.

5.3.1.3.3.5 Normalized value N2

CLASS:		Data type
ATTRIBUTES:		
1	Data type Numeric Identifier	= 113
2	Data type Name	= N2
3	Format	= FIXED LENGTH
4.1	Octet Length	= 2

This integer type is the same as Integer16, however having a special interpretation.

The value provides a linear normalized value, such that the integer value 214 (i.e. 16 384) equates to 100 %. The value is thus interpreted according to the following equation:

$$\text{Normalized Value N2 (in \%)} = \text{Value} / 16\,384 \quad (1)$$

where

Normalized Value N2 is the calculated linear normalized value
Value is the raw value for interpretation

The data type offers thus a resolution of 0,006 1 % (= 1 / 16 384). The N2 value range is shown in Table 8.

Table 8 – N2 value range

Value	Meaning
-32 768	-200 %
-32 767 ... -1	-199,993 896 484 375 % ... -0,006 1 %
-16 384	-100 %
0	0 %
16 384	100 %
1 ... 32 766	0,006 1 % ... 199,993 896 484 375 %
32 767	199,993 896 484 375 %

5.3.1.3.3.6 Normalized value N4

CLASS: Data type

ATTRIBUTES:

1	Data type Numeric Identifier	= 114
2	Data type Name	= N4
3	Format	= FIXED LENGTH
4.1	Octet Length	= 4

This integer type is the same as Integer32, however having a special interpretation.

The value provides a linear normalized value, such that the integer value 230 (i.e. 1 073 741 824) equates to 100 %. The value is thus interpreted according to the following equation:

$$\text{Normalized Value N4 (in \%)} = \text{Value} / 1\,073\,741\,824 \quad (2)$$

where

Normalized Value N4 is the calculated linear normalized value
Value is the raw value for interpretation

The data type offers thus a resolution of approx. 0,000 000 093 1 % (= 1 / 1 073 741 824). The N4 value range is shown in Table 9.

Table 9 – N4 value range

Value	Meaning
-2 147 483 648	-200 %
-1 073 741 824	-100 %
-2 147 483 647 ... -1	approx. -199,999 999 906 9 % ... -0,000 000 093 1 %
0	0 %
1 ... 2 147 483 646	approx. 0,000 000 093 1 % ... 199,999 999 813 7 %
1 073 741 824	100 %
2 147 483 647	approx. 199,999 999 906 9 %

5.3.1.3.3.7 Variable normalized X2

CLASS: Data type

ATTRIBUTES:

1	Data type Numeric Identifier	= 123
2	Data type Name	= X2
3	Format	= FIXED LENGTH
4.1	Octet Length	= 2

This integer type is the same as Integer16, however having a special interpretation.

The value is interpreted as a linear normalized value (a value expressed as percentage). The interpretation is similar to the data type N2, however the normalization to 100 % is variable and determined by an additional parameter “X” outside the scope of this data type, such that the integer value 2^X equates to 100 %.

NOTE If the additional specified constant X equates to 14, the value range of X2 equates to that of the data type N2.

The value is interpreted according to the following equation:

$$\text{Normalized Value X2 (in \%)} = \text{Value} / 2^X \quad (3)$$

where

<i>Normalized Value X2</i>	is the calculated linear normalized value
<i>Value</i>	is the raw value for interpretation
<i>X</i>	is the exponent for calculation, outside the scope of data type definition

The data type offers thus a resolution of $1 / 2^X$ % or else 2^{-X} . Lower and upper bound of the value are computed according to the following equations:

$$\text{Lower Bound X2 (in \%)} = -2^{(15-X)} \quad (4)$$

$$\text{Upper Bound X2 (in \%)} = 2^{(15-X)} - 2^{-X} \quad (5)$$

where

<i>Lower Bound X2</i>	is the lower bound of the calculated value
<i>Upper Bound X2</i>	is the upper bound of the calculated value
<i>X</i>	is the exponent for calculation, outside the scope of data type definition

The X2 value range for selected values of “X” is shown in Table 10.

Table 10 – X2 value range

Parameter “X”	Value	Meaning
—	-32 768 ... 32 767	$-2^{(15-X)} \% \leq i \leq (2^{(15-X)} - 2^{-X}) \%$
e.g. X = 10	-32 768 ... 32 767	-3 200 % $\leq i \leq$ -3 199,90 %
e.g. X = 12	-32 768 ... 32 767	-800 % $\leq i \leq$ 799,98 %
e.g. X = 14	-32 768 ... 32 767	-200 % $\leq i \leq$ 199,99 %

The value of this normalized value parameter refers to the additional specified constant X. The associated constant X is required in order to interpret the internal value.

5.3.1.3.3.8 Variable normalized X4

CLASS: Data type

ATTRIBUTES:

1	Data type Numeric Identifier	=	124
2	Data type Name	=	X4
3	Format	=	FIXED LENGTH
4.1	Octet Length	=	4

This integer type is the same as Integer32, however having a special interpretation.

The value is interpreted as a linear normalized value (a value expressed as percentage). The interpretation is similar to the data type N4, however the normalization to 100 % is variable and determined by an additional parameter “X” outside the scope of this data type, such that the integer value 2^X equates to 100 %.

NOTE If the additional specified constant X equates to 30, the value range of X4 equates to that of the data type N4.

The value is interpreted according to the following equation:

$$\text{Normalized Value X4 (in \%)} = \text{Value} / 2^X \quad (6)$$

where

<i>Normalized Value X4</i>	is the calculated linear normalized value
<i>Value</i>	is the raw value for interpretation
<i>X</i>	is the exponent for calculation, outside the scope of data type definition

The data type offers thus a resolution of $1 / 2^X \%$ or else 2^{-X} . Lower and upper bound of the value are computed according to the following equations:

$$\text{Lower Bound X4 (in \%)} = -2^{(31-X)} \quad (7)$$

$$\text{Upper Bound X4 (in \%)} = 2^{(31-X)} - 2^{-X} \quad (8)$$

where

<i>Lower Bound X4</i>	is the lower bound of the calculated value
<i>Upper Bound X4</i>	is the upper bound of the calculated value
<i>X</i>	is the exponent for calculation, outside the scope of data type definition

The X4 value range for selected values of “X” is shown in Table 11.

Table 11 – X4 value range

Parameter “X”	Value	Meaning
—	-2 147 483 648 ... 2 147 483 647	$-2^{(31-X)} \% \leq i \leq (2^{(31-X)} - 2^{-X}) \%$
e.g. X = 26	-2 147 483 648 ... 2 147 483 647	$-3\,200 \% \leq i \leq -3\,200 \%$
e.g. X = 28	-2 147 483 648 ... 2 147 483 647	$-800 \% \leq i \leq 800 \%$
e.g. X = 30	-2 147 483 648 ... 2 147 483 647	$-200 \% \leq i \leq 200 \%$

The value of this normalized value parameter refers to the additional specified constant X. The associated constant X is required in order to interpret the internal value.

5.3.1.3.3.9 Fixed point value C4

CLASS: Data type

ATTRIBUTES:

1	Data type Numeric Identifier	=	122
2	Data type Name	=	C4
3	Format	=	FIXED LENGTH
4.1	Octet Length	=	4

This data type is the same as Integer32, however having a special interpretation.

The value is interpreted as a linear fixed point value with four decimal places according to the following equation:

$$\text{Fixed Point Value C4} = \text{Value} / 10\,000 \quad (9)$$

where

Fixed Point Value C4 is the calculated linear fixed point value

Value is the raw value for interpretation

The data type offers thus a resolution of 0,000 1 (= 1 / 10 000). The C4 value range is shown in Table 12.

Table 12 – C4 value range

Value	Meaning
-2 147 483 648	-214 748,3648
0	0
2 147 483 647	214 748,3647

5.3.1.3.4 Unsigned types

5.3.1.3.4.1 Unsigned8

CLASS:		Data type
ATTRIBUTES:		
1	Data type Numeric Identifier	= 5
2	Data type Name	= Unsigned8
3	Format	= FIXED LENGTH
4.1	Octet Length	= 1

This type is a binary number. The most significant bit of the most significant octet is always used as the most significant bit of the binary number; no sign bit is included. This type has a length of one octet.

NOTE “Unsigned char” is an alias name for this data type.

5.3.1.3.4.2 Unsigned16

CLASS:		Data type
ATTRIBUTES:		
1	Data type Numeric Identifier	= 6
2	Data type Name	= Unsigned16
3	Format	= FIXED LENGTH
4.1	Octet Length	= 2

This type is a binary number. The most significant bit of the most significant octet is always used as the most significant bit of the binary number; no sign bit is included. This unsigned type has a length of two octets.

NOTE “Unsigned short” is an alias name for this data type.

5.3.1.3.4.3 Unsigned32

CLASS:		Data type
ATTRIBUTES:		
1	Data type Numeric Identifier	= 7
2	Data type Name	= Unsigned32
3	Format	= FIXED LENGTH
4.1	Octet Length	= 4

This type is a binary number. The most significant bit of the most significant octet is always used as the most significant bit of the binary number; no sign bit is included. This unsigned type has a length of four octets.

NOTE “Unsigned long” is an alias name for this data type.

5.3.1.3.4.4 Unsigned64

CLASS:		Data type
ATTRIBUTES:		
1	Data type Numeric Identifier	= 56
2	Data type Name	= Unsigned64
3	Format	= FIXED LENGTH
4.1	Octet Length	= 8

This type is a binary number. The most significant bit of the most significant byte is always used as the most significant bit of the binary number; no sign bit is included. This unsigned type has a length of eight octets.

5.3.1.3.5 Time constant T2

CLASS: Data type

ATTRIBUTES:

1	Data type Numeric Identifier	=	118
2	Data type Name	=	T2
3	Format	=	FIXED LENGTH
4.1	Octet Length	=	2

This integer type is the same as Unsigned16, however having a special interpretation.

The value provides a time value based on a defined sampling time “Ta” outside the scope of this data type.

The value is interpreted according to the following equation:

$$\text{Time Value} = \text{Value} \times T_a \quad (10)$$

where

<i>Time Value</i>	is the calculated time value
<i>Value</i>	is the raw value for interpretation
<i>Ta</i>	is the defined sampling time, outside the scope of this data type

The data type offers thus a resolution of “Ta”. The T2 value range is shown in Table 13.

Table 13 – T2 value range

Value	Meaning
0 – 32 767	Value × Ta
32 768 – 65 535	0

The value of this time parameter refers to the additional specified constant sampling time Ta. The associated sampling time Ta is required in order to interpret the internal value.

5.3.1.3.6 Time constant T4

CLASS: Data type

ATTRIBUTES:

1	Data type Numeric Identifier	=	119
2	Data type Name	=	T4
3	Format	=	FIXED LENGTH
4.1	Octet Length	=	4

This integer type is the same as Unsigned32, however having a special interpretation.

The value provides a time value based on a defined sampling time “Ta” outside the scope of this data type.

The value is interpreted according to the following equation:

$$\text{Time Value} = \text{Value} \times T_a \quad (11)$$

where

<i>Time Value</i>	is the calculated time value
<i>Value</i>	is the raw value for interpretation
<i>T_a</i>	is the defined sampling time, outside the scope of this data type

The data type offers thus a resolution of “*T_a*”. The T4 value range is shown in Table 14. In contrary to the data type T2 the value range is not restricted.

Table 14 – T4 value range

Value	Meaning
0 – 4 294 967 295	Value × <i>T_a</i>

The value of this time parameter refers to the additional specified constant sampling time *T_a*. The associated sampling time *T_a* is required in order to interpret the internal value.

5.3.1.3.7 Time constant D2

CLASS: Data type

ATTRIBUTES:

1	Data type Numeric Identifier	=	120
2	Data type Name	=	D2
3	Format	=	FIXED LENGTH
4.1	Octet Length	=	2

This integer type is the same as Unsigned16, however having a special interpretation.

The value provides a time value based on a defined sampling time “*T_a*” outside the scope of this data type.

The value is interpreted according to the following equation:

$$\text{Time value} = \text{Value} \times (T_a / 16\,384) \quad (12)$$

where

<i>Time Value</i>	is the calculated time value
<i>Value</i>	is the raw value for interpretation
<i>T_a</i>	is the defined sampling time, outside the scope of this data type

The data type offers thus a fraction of the constant sampling time with a resolution of “*T_a* / 16 384”. The D2 value range is shown in Table 15. Note that the value range is restricted; values outside the result provide a time value of “0”.

Table 15 – D2 value range

Value	Meaning
0 – 32 767	$\text{Value} \times (\text{Ta} / 16\,384)$
32 768 – 65 535	0

The value of this time parameter refers to the additional specified constant sampling time T_a . The associated sampling time T_a is required in order to interpret the internal value.

5.3.1.3.8 Time constant R2

CLASS: Data type

ATTRIBUTES:

1	Data type Numeric Identifier	=	117
2	Data type Name	=	R2
3	Format	=	FIXED LENGTH
4.1	Octet Length	=	2

This integer type is the same as Unsigned16, however having a special interpretation.

The value provides a time value based on a defined sampling time “ T_a ” outside the scope of this data type.

The value is interpreted according to the following equation:

$$\text{Time value} = 16\,384 \times (\text{Ta} / \text{Value}) \quad (13)$$

where

<i>Time Value</i>	is the calculated time value
<i>T_a</i>	is the defined sampling time, outside the scope of data type definition
<i>Value</i>	is the raw value for interpretation

The data type offers thus a reciprocal multiple of the constant sampling time with a resolution of “ T_a / Value ”. The R2 value range is shown in Table 16. Note that the value range is restricted; values outside the result provide a time value of “0”.

Table 16 – R2 value range

Value	Meaning
0	16 384
1 – 16 384	$16\,384 \times (\text{Value} / \text{Ta})$
16 385 – 65 535	16 384

The value of this time parameter refers to the additional specified constant sampling time T_a . The associated sampling time T_a is required in order to interpret the internal value.

5.3.1.4 Time and date types independent of calendar and time zone

5.3.1.4.1 TimeStamp

CLASS: Data type

ATTRIBUTES:

1	Data type Numeric Identifier	=	60
2	Data type Name	=	TimeStamp
3	Format	=	STRUCTURE
3.1	Number of Fields	=	4
3.2.1	Field Name	=	Status
3.2.2	Field Data type	=	Unsigned16
3.2.3	Field Name	=	SecondsHigh
3.2.4	Field Data type	=	Unsigned16
3.2.5	Field Name	=	SecondsLow
3.2.6	Field Data type	=	Unsigned32
3.2.7	Field Name	=	Nanoseconds
3.2.8	Field Data type	=	Unsigned32

This data type defines a 12 octet fixed length data type.

The value is interpreted according to the following equation:

$$\text{TimeStamp.Seconds} = (\text{SecondsHigh} \ll 32) + \text{SecondsLow} \quad (14)$$

$$\text{TimeStamp.Nanoseconds} = \text{Nanoseconds}$$

where

<i>TimeStamp.Seconds</i>	is the seconds part of the calculated timestamp value (a 48 bit value)
<i>TimeStamp.Nanoseconds</i>	is the nanoseconds part of the calculated timestamp value
<i>SecondsHigh</i>	is the raw value for interpretation
<i>SecondsLow</i>	is the raw value for interpretation
<i>Nanoseconds</i>	is the raw value for interpretation

A TimeStamp is built according to Table 17 and the following definitions:

- If the device is synchronized and in sync with the global time master the TimeStamp is related to the global time,
- Otherwise, if the device has means of a local time, the TimeStamp is related to the local time.
- If the time is not battery buffered while the device is in power off, the status is set to “local time (arbitrary time scale)” until the device is synchronized to the global time.
- If the synchronization for the global time is lost, the status changes to “local time” until power off.

Table 17 – TimeStamp status value range

Value	Meaning
0	TimeStamp related to the global synchronized time
1	TimeStamp related to the local time
2	TimeStamp related to the local time (arbitrary time scale)
Other	Reserved

5.3.1.4.2 TimeStampDifference**CLASS:** Data type**ATTRIBUTES:**

1	Data type Numeric Identifier	=	61
2	Data type Name	=	TimeStampDifference
3	Format	=	STRUCTURE
3.1	Number of Fields	=	4
3.2.1	Field Name	=	Status
3.2.2	Field Data type	=	Unsigned16
3.2.3	Field Name	=	SecondsHigh
3.2.4	Field Data type	=	Unsigned16
3.2.5	Field Name	=	SecondsLow
3.2.6	Field Data type	=	Unsigned32
3.2.7	Field Name	=	Nanoseconds
3.2.8	Field Data type	=	Unsigned32

This data type defines a 12 octet fixed length data type.

A TimeStampDifference is built by subtracting two TimeStamps.

The value is interpreted according to the following equation:

$$\text{TimeStampDifference.Seconds} = (\text{SecondsHigh} \ll 32) + \text{SecondsLow} \quad (15)$$

$$\text{TimeStampDifference.Nanoseconds} = \text{Nanoseconds}$$

where

<i>TimeStamp.Seconds</i>	is the seconds part of the calculated timestamp value (a 48 bit value)
<i>TimeStamp.Nanoseconds</i>	is the nanoseconds part of the calculated timestamp value
<i>SecondsHigh</i>	is the raw value for interpretation
<i>SecondsLow</i>	is the raw value for interpretation
<i>Nanoseconds</i>	is the raw value for interpretation

A TimeStampDifference is built according to Table 18:

Table 18 – TimeStampDifference status value range

Value	Meaning
0	TimeStampDifference is positive
1	TimeStampDifference is negative
Other	Reserved

5.3.1.4.3 TimeStampDifferenceShort**CLASS:** Data type**ATTRIBUTES:**

1	Data type Numeric Identifier	=	62
2	Data type Name	=	TimeStampDifferenceShort
3	Format	=	FIXED LENGTH
3.1	Octet Length	=	8

This data type is the same as Integer64. The value is interpreted as the difference between two TimeStamp values in nanoseconds.

5.3.1.5 Time and date types needing calendar and time zone knowledge**5.3.1.5.1 General**

The following data types need both calendar and time zone knowledge. Therefore the limitation of 5.1.2 applies. These data types should not be used.

5.3.1.5.2 BinaryDate**CLASS:****Data type****ATTRIBUTES:**

1	Data type Numeric Identifier	=	50
2	Data type Name	=	BinaryDate
3	Format	=	STRUCTURE
3.1	Number of Fields	=	6
3.2.1	Field Name	=	Milliseconds
3.2.2	Field Data type	=	Unsigned16
3.2.3	Field Name	=	Minutes
3.2.4	Field Data type	=	Unsigned8
3.2.5	Field Name	=	Hours
3.2.6	Field Data type	=	Unsigned8
3.2.7	Field Name	=	Day
3.2.8	Field Data type	=	Unsigned8
3.2.9	Field Name	=	Month
3.2.10	Field Data type	=	Unsigned8
3.2.11	Field Name	=	Year
3.2.12	Field Data type	=	Unsigned8

This structure expresses calendar date (by Year, Month, and Day) and time (by Hours, Minutes, and Milliseconds).

The field Day contains both day of the week and day of month; see IEC 61158-6-10 for coding.

The values 0 ... 50 of the field Year correspond to the years 2000 to 2050; the values 51 ... 99 correspond to the years 1951 to 1999.

This data type should not be used; see 5.1.2.

5.3.1.5.3 TimeOfDay with date indication**CLASS:** Data type**ATTRIBUTES:**

1	Data type Numeric Identifier	= 12
2	Data type Name	= TimeOfDay with date indication
3	Format	= STRUCTURE
3.1	Number of Fields	= 2
3.2.1	Field Name	= Milliseconds
3.2.2	Field Data type	= Unsigned32
3.2.3	Field Name	= Days
3.2.4	Field Data type	= Unsigned16

The field Milliseconds gives the time after the midnight in milliseconds.

The field Days gives the date counting the days from 1984-01-01.

This data type should not be used; see 5.1.2.

5.3.1.5.4 TimeOfDay without date indication**CLASS:** Data type**ATTRIBUTES:**

1	Data type Numeric Identifier	= 52
2	Data type Name	= TimeOfDay without date indication
3	Format	= FIXED LENGTH
3.1	Octet Length	= 4

This data type is the same as Unsigned32. It gives the time after the midnight in milliseconds.

This data type should not be used; see 5.1.2.

5.3.1.5.5 TimeDifference

This data type is obsolete; use the data types TimeDifference with date indication (see 5.3.1.5.6) or TimeDifference without date indication (see 5.3.1.5.7) instead.

5.3.1.5.6 TimeDifference with date indication**CLASS:** Data type**ATTRIBUTES:**

1	Data type Numeric Identifier	= 53
2	Data type Name	= TimeDifference with date indication
3	Format	= STRUCTURE
3.1	Number of Fields	= 2
3.2.1	Field Name	= Milliseconds
3.2.2	Field Data type	= Unsigned32
3.2.3	Field Name	= Days
3.2.4	Field Data type	= Unsigned16

This data type gives the time difference in milliseconds and number of days.

This data type should not be used; see 5.1.2.

5.3.1.5.7 TimeDifference without date indication**CLASS:** Data type**ATTRIBUTES:**

1	Data type Numeric Identifier	=	54
2	Data type Name	=	TimeDifference without date indication
3	Format	=	FIXED LENGTH
3.1	Octet Length	=	4

This data type is the same as Unsigned32. It gives the time difference in milliseconds.

This data type should not be used; see 5.1.2.

5.3.1.5.8 NetworkTime**CLASS:** Data type**ATTRIBUTES:**

1	Data type Numeric Identifier	=	58
2	Data type Name	=	NetworkTime
3	Format	=	FIXED LENGTH
3.1	Octet Length	=	8

This data type is the same as Unsigned64. Its interpretation is based on IETF RFC 5905. For encoding see IEC 61158-6-10.

This data type should not be used; see 5.1.2.

5.3.1.5.9 NetworkTimeDifference**CLASS:** Data type**ATTRIBUTES:**

1	Data type Numeric Identifier	=	59
2	Data type Name	=	NetworkTimeDifference
3	Format	=	FIXED LENGTH
3.1	Octet Length	=	8

This data type is the same as Integer64. For encoding see IEC 61158-6-10.

This data type should not be used; see 5.1.2.

5.3.1.6 Further types**5.3.1.6.1 UUID****CLASS:** Data type**ATTRIBUTES:**

1	Data type Numeric Identifier	=	1 025
2	Data type Name	=	UUID
3	Format	=	STRUCTURE
3.1	Number of Fields	=	4
3.2.1	Field Name	=	Data1
3.2.2	Field Data type	=	Unsigned32
3.2.3	Field Name	=	Data2
3.2.4	Field Data type	=	Unsigned16
3.2.5	Field Name	=	Data3
3.2.6	Field Data type	=	Unsigned16
3.2.7	Field Name	=	Data4
3.2.8	Field Data type	=	OctetString[8]

This data type defines a 16 octet fixed length data type. The semantic is specified by The Open Group – Publication C706 and beyond the scope of this document.

Specific values for decentralized peripherals items are defined in IEC 61158-6-10.

5.3.1.6.2 F message trailer with 4 octets

CLASS: Data type

ATTRIBUTES:

- 1 Data type Numeric Identifier = 110
- 2 Data type Name = F message trailer with 4 octets
- 3 Format = FIXED LENGTH
- 3.1 Octet Length = 4

This data structure consists of the status/control octet and 3 octets CRC parameters. This data type can be associated with input or output data up to 12 octets.

This data type is structured and coded according to Table 19.

Table 19 – F message trailer with 4 octets

Bits	7	6	5	4	3	2	1	0
Octet 1	Status/Control octet							
Octet 2	1. octet CRC (most significant octet)							
Octet 3	2. octet CRC							
Octet 4	3. octet CRC (least significant octet)							

5.3.1.6.3 F message trailer with 5 octets

CLASS: Data type

ATTRIBUTES:

- 1 Data type Numeric Identifier = 111
- 2 Data type Name = F message trailer with 5 octets
- 3 Format = STRUCTURE
- 3.1 Number of Fields = 2
- 3.2 List of Fields
- 3.2.1 Field Name = Status/Control
- 3.2.2 Field Data type = Unsigned8
- 3.2.3 Field Name = CRC
- 3.2.4 Field Data type = Unsigned32

This data type defines the F message trailer with 5 octets and is structured as follows.

Status/Control

This field contains the value as Unsigned8.

CRC

This field describes the CRC.

This data type can be associated with input or output data up to 122 octets.

5.3.1.6.4 OctetString2+Unsigned8**CLASS:** Data type**ATTRIBUTES:**

1	Data type Numeric Identifier	=	103
2	Data type Name	=	OctetString2+Unsigned8
3	Format	=	STRUCTURE
3.1	Number of Fields	=	2
3.2	List of Fields		
3.2.1	Field Name	=	Value
3.2.2	Field Data type	=	OctetString[2]
3.2.3	Field Name	=	ProcessValueStatus
3.2.4	Field Data type	=	Unsigned8

This data type defines the OctetString2+Unsigned8 and is structured as follows.

Value

This field contains the value as OctetString with the length of 2.

ProcessValueStatus

This field contains the validity of the value (see 7.3.1.4.6.1.6).

5.3.1.6.5 Float64+Unsigned8**CLASS:** Data type**ATTRIBUTES:**

1	Data type Numeric Identifier	=	100
2	Data type Name	=	Float64+Unsigned8
3	Format	=	STRUCTURE
3.1	Number of Fields	=	2
3.2	List of Fields		
3.2.1	Field Name	=	Value
3.2.2	Field Data type	=	Float64
3.2.3	Field Name	=	ProcessValueStatus
3.2.4	Field Data type	=	Unsigned8

This data type defines the Float64+Unsigned8 and is structured as follows.

Value

This field contains the value as Float64.

ProcessValueStatus

This field contains the validity of the value (see 7.3.1.4.6.1.6).

5.3.1.6.6 Float32+Unsigned8**CLASS:** Data type**ATTRIBUTES:**

1	Data type Numeric Identifier	=	101
2	Data type Name	=	Float32+Unsigned8
3	Format	=	STRUCTURE
3.1	Number of Fields	=	2
3.2	List of Fields		
3.2.1	Field Name	=	Value
3.2.2	Field Data type	=	Float32
3.2.3	Field Name	=	ProcessValueStatus
3.2.4	Field Data type	=	Unsigned8

This data type defines the Float32+Unsigned8 and is structured as follows.

Value

This field contains the value as Float32.

ProcessValueStatus

This field contains the validity of the value (see 7.3.1.4.6.1.6).

5.3.1.6.7 Unsigned8+Unsigned8

CLASS: Data type

ATTRIBUTES:

- 1 Data type Numeric Identifier = 102
- 2 Data type Name = Unsigned8+Unsigned8
- 3 Format = STRUCTURE
- 3.1 Number of Fields = 2
- 3.2 List of Fields
 - 3.2.1 Field Name = Value
 - 3.2.2 Field Data type = Unsigned8
 - 3.2.3 Field Name = ProcessValueStatus
 - 3.2.4 Field Data type = Unsigned8

This data type defines the Unsigned8+Unsigned8 and is structured as follows.

Value

This field contains the value as Unsigned8.

ProcessValueStatus

This field contains the validity of the value (see 7.3.1.4.6.1.6).

5.3.1.6.8 Unsigned16_S

CLASS: Data type

ATTRIBUTES:

- 1 Data type Numeric Identifier = 104
- 2 Data type Name = Unsigned16_S
- 3 Format = FIXED LENGTH
- 3.1 Octet Length = 2

This data type is structured and coded according to Table 20 and Table 21.

Table 20 – Unsigned16_S octets

Bits	7	6	5	4	3	2	1	0
Octets 1	2 ¹³	2 ¹²	2 ¹¹	2 ¹⁰	2 ⁹	2 ⁸	2 ⁷	2 ⁶
Octets 2	2 ⁵	2 ⁴	2 ³	2 ²	2 ¹	2 ⁰	St1	St0

ST1 and ST2 contain the status of the value (see 7.3.1.4.6.1.6).

Table 21 – Unsigned16_S meaning

St1 (bit1)	St0 (bit0)	Meaning
0	0	Input channel: bad (value is fail-safe value) Output channel: reserved
0	1	Input channel: simulation Output channel: reserved
1	0	Input channel: uncertain Output channel: reserved
1	1	Input channel: good Output channel: reserved

5.3.1.6.9 Integer16_S**CLASS:****Data type****ATTRIBUTES:**

1	Data type Numeric Identifier	= 105
2	Data type Name	= Integer16_S
3	Format	= FIXED LENGTH
3.1	Octet Length	= 2

This data type is structured and coded according to Table 22 and Table 23.

SN: sign 0 = positive, 1 = negative

Table 22 – Integer16_S octets

Bits	7	6	5	4	3	2	1	0
Octets 1	SN	2^{12}	2^{11}	2^{10}	2^9	2^8	2^7	2^6
Octets 2	2^5	2^4	2^3	2^2	2^1	2^0	St1	St0

ST1 and ST2 contain the status of the value (see 7.3.1.4.6.1.6).

Table 23 – Integer16_S meaning

St1 (bit1)	St0 (bit0)	Meaning
0	0	Input channel: bad (value is fail-safe value) Output channel: reserved
0	1	Input channel: simulation Output channel: reserved
1	0	Input channel: uncertain Output channel: reserved
1	1	Input channel: good Output channel: reserved

5.3.1.6.10 Unsigned8_S**CLASS:****Data type****ATTRIBUTES:**

1	Data type Numeric Identifier	= 106
2	Data type Name	= Unsigned8_S
3	Format	= FIXED LENGTH

3.1 Octet Length = 1

This data type is structured and coded according to Table 24 and Table 25.

Table 24 – Unsigned8_S octets

Bits	7	6	5	4	3	2	1	0
Octets 1	2 ⁵	2 ⁴	2 ³	2 ²	2 ¹	2 ⁰	St1	St0

ST1 and ST2 contain the status of the value (see 7.3.1.4.6.1.6).

Table 25 – Unsigned8_S meaning

St1 (bit1)	St0 (bit0)	meaning
0	0	Input channel: bad (value is fail-safe value) Output channel: reserved
0	1	Input channel: simulation Output channel: reserved
1	0	Input channel: uncertain Output channel: reserved
1	1	Input channel: good Output channel: reserved

5.3.1.6.11 CIMPortID

CLASS:

Data type:

ATTRIBUTES:

- 1 Data type Numeric Identifier = 1 026
- 2 Data type Name = CIMPortID
- 3 Format = STRUCTURE
- 3.1 Number of Fields = 2
- 3.2.1 Field Name = Slot Number
- 3.2.2 Field Data type = Unsigned16
- 3.2.3 Field Name = Subslot Number
- 3.2.4 Field Data type = Unsigned16

Slot Number

This attribute contains the slot number of the module containing the submodule.

Attribute type: Unsigned16

Allowed values: 0x0000 to 0x7FFF

Subslot Number

This attribute contains the subslot number.

Attribute type: Unsigned16

For an interface subslot number according to Table 246 shall be used.

For a port subslot number according to Table 247 shall be used.

For end station and bridge component subslot number according to Table 113 and according to Table 114 shall be used.

5.3.2 Variable Length types

5.3.2.1 OctetString

CLASS: Data type

ATTRIBUTES:

- 1 Data type Numeric Identifier = 10
- 2 Data type Name = OctetString
- 3 Format = STRING
- 3.1 Octet Length = 1 to n

An OctetString is an ordered sequence of octets, numbered from 1 to n. For the purposes of discussion, octet 1 of the sequence is referred to as the first octet. IEC 61158-6-10 defines the order of transmission.

NOTE IEC 61158-6-3 follows the definition of IEC 61158-6-10.

5.3.2.2 OctetString_S

CLASS: Data type

ATTRIBUTES:

- 1 Data type Numeric Identifier = 107
- 2 Data type Name = OctetString_S
- 3 Format = STRING
- 3.1 Octet Length = 3 to n

This data type is structured and coded according to Table 26 and Table 27.

Table 26 – OctetString_S octets

Bits	bit7	bit6	bit5	bit4	bit3	bit2	bit1	bit0
Octet 1	ch(8)	ch(7)	ch(6)	ch(5)	ch(4)	ch(3)	ch(2)	ch(1)
...	...	...	...	...	...	...	...	...
Octet m	ch(m×8)	ch(m×8-1)	ch(m×8-2)	ch(m×8-3)	ch(m×8-4)	ch(m×8-5)	ch(m×8-6)	ch(m×8-7)
Octet m+1	s1(4)	s0(4)	s1(3)	s0(3)	s1(2)	s0(2)	s1(1)	s0(1)
Octet m+2	s1(8)	s0(8)	s1(7)	s0(7)	s1(6)	s0(6)	s1(5)	s0(5)
...	...	...	...	...	...	...	...	...
Octet 3×m – 1	s1(m×8-4)	s0(m×8-4)	s1(m×8-5)	s0(m×8-5)	s1(m×8-6)	s0(m×8-6)	s1(m×8-7)	s0(m×8-7)
Octet 3×m	s1(m×8)	s0(m×8)	s1(m×8-1)	s0(m×8-1)	s1(m×8-2)	s0(m×8-2)	s1(m×8-3)	s0(m×8-3)

For each octet with channel values, there are two additional status octets “at the end”.

- ch(x) value for channel x
- s1(x) and s2(x) status for channel x (see 7.3.1.4.6.1.6 and table below)

Table 27 – OctetString_S status bits

s1 (bit1)	s0 (bit0)	Meaning
0	0	Input channel: bad (value is fail-safe value) Output channel: reserved
0	1	Input channel: simulation Output channel: reserved
1	0	Input channel: uncertain Output channel: reserved
1	1	Input channel: good Output channel: reserved

5.3.2.3 VisibleString

CLASS: Data type

ATTRIBUTES:

- 1 Data type Numeric Identifier = 9
- 2 Data type Name = VisibleString
- 3 Format = STRING
- 3.1 Octet Length = 1 to n

This type is defined according to the ISO/IEC 646 International Reference Version string type without the "del" (coding 0x7F) character.

5.3.2.4 UNICODEString

CLASS: Data type

ATTRIBUTES:

- 1 Data type Numeric Identifier = 39
- 2 Data type Name = UNICODEString
- 3 Format = ARRAY
- 3.1 Number of Array Elements = 1 to n
- 3.2 Array Element Data type = Unsigned16

This type is defined as the ISO/IEC 10646 string type with all UTF-16 coding.

This data type should not be used.

If the actual data contains a string which uses the full length of the data type (i.e. "n"), no terminator is needed. If the actual data is a string with a smaller length, a terminator with the value 0x0000 is needed to terminate the string.

To determine the string length, search from begin for 0x0000, if not found the value is "n", otherwise the position of the terminator minus 1.

5.3.2.5 UnicodeString8

CLASS: Data type

ATTRIBUTES:

- 1 Data type Numeric Identifier = 40
- 2 Data type Name = UnicodeString8
- 3 Format = STRING
- 3.1 Octet Length = 1 to n

This type is defined as the ISO/IEC 10646 string type with all UTF-8 coding.

If the actual data contains a string which uses the full length of the data type (i.e. “n”), no terminator is needed. If the actual data is a string with a smaller length, a terminator with the value 0x00 terminates the string.

To determine the string length, search from begin for NULL, if not found the value is “n”, otherwise the position of the terminator minus 1.

5.3.2.6 61131_STRING

CLASS:		Data type
ATTRIBUTES:		
1	Data type Numeric Identifier	= 41
2	Data type Name	= 61131_STRING
3	Format	= STRUCTURE
3.1	Number of Fields	= 3
3.2	List of Fields	
3.2.1	Field Name	= MaxLength
3.2.2	Field Data type	= Unsigned8
3.2.3	Field Name	= ActualLength
3.2.4	Field Data type	= Unsigned8
3.2.5	Field Name	= SBCString
3.2.6	Format	= STRING
3.2.6.1	Octet Length	= MaxLength

This type is defined as the IEC 61131-3 STRING type, whereas SBCString is an ISO/IEC 646 International Reference Version string type without the “del” (coding 0x7F) character.

MaxLength is the maximum count of characters in SBCString and shall be greater than zero. ActualLength is the actual count of characters in SBCString and shall be lower or equal to MaxLength.

5.3.2.7 61131_WSTRING

CLASS:		Data type
ATTRIBUTES:		
1	Data type Numeric Identifier	= 42
2	Data type Name	= 61131_WSTRING
3	Format	= STRUCTURE
3.1	Number of Fields	= 3
3.2	List of Fields	
3.2.1	Field Name	= MaxLength
3.2.2	Field Data type	= Unsigned16
3.2.3	Field Name	= ActualLength
3.2.4	Field Data type	= Unsigned16
3.2.5	Field Name	= DBCString
3.2.6.1	Format	= ARRAY
3.2.8.4.1	Number of Array Elements	= MaxLength
3.2.8.4.2	Array Element Data type	= Unsigned16

This type is defined as the IEC 61131-3 WSTRING type, whereas DBCString is an ISO/IEC 10646 string type with all UCS-2 coding. Allowed are Unicode characters from the BMP (basic multilingual page) only.

MaxLength is the maximum count of characters in DBCString and shall be greater than zero. ActualLength is the actual count of characters in DBCString and shall be lower or equal to MaxLength.

5.4 Data type ASE service specification

There are no operational services defined for the data type object.


6 Communication model for common services

6.1 Concepts

6.1.1 General

This document defines common services, which are used for distributed I/O. Furthermore, this document defines the usage of, refinements, or extensions to the referenced standards of end station and bridges.


Figure 1 shows the overall structure of an automation station.

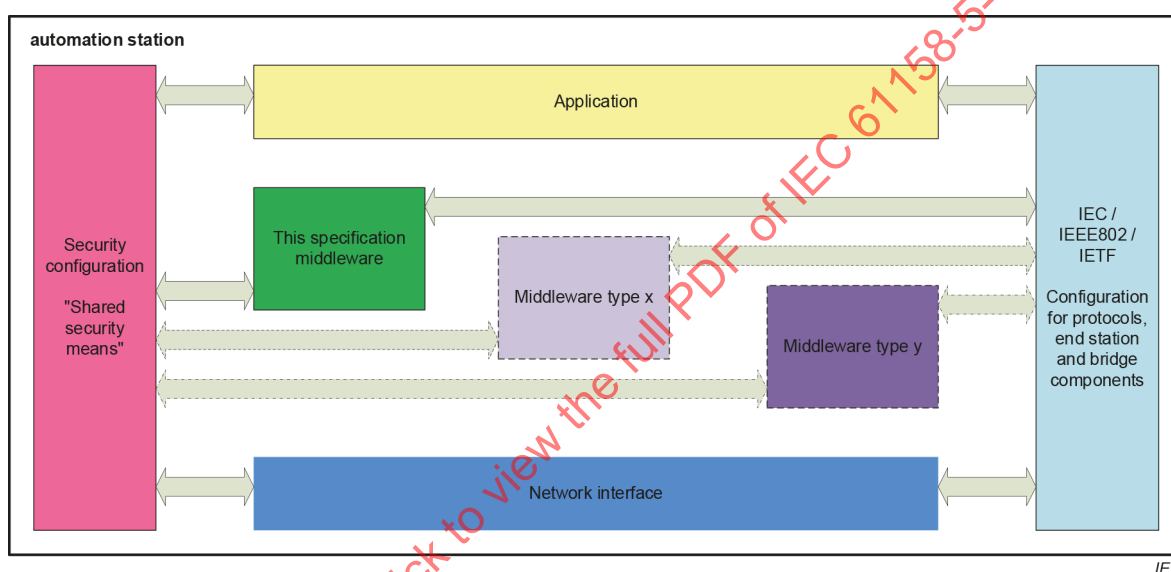

IEC

Figure 1 – Structure of an automation station

Figure 2 shows the internal structure of this specification middleware shown in Figure 1.

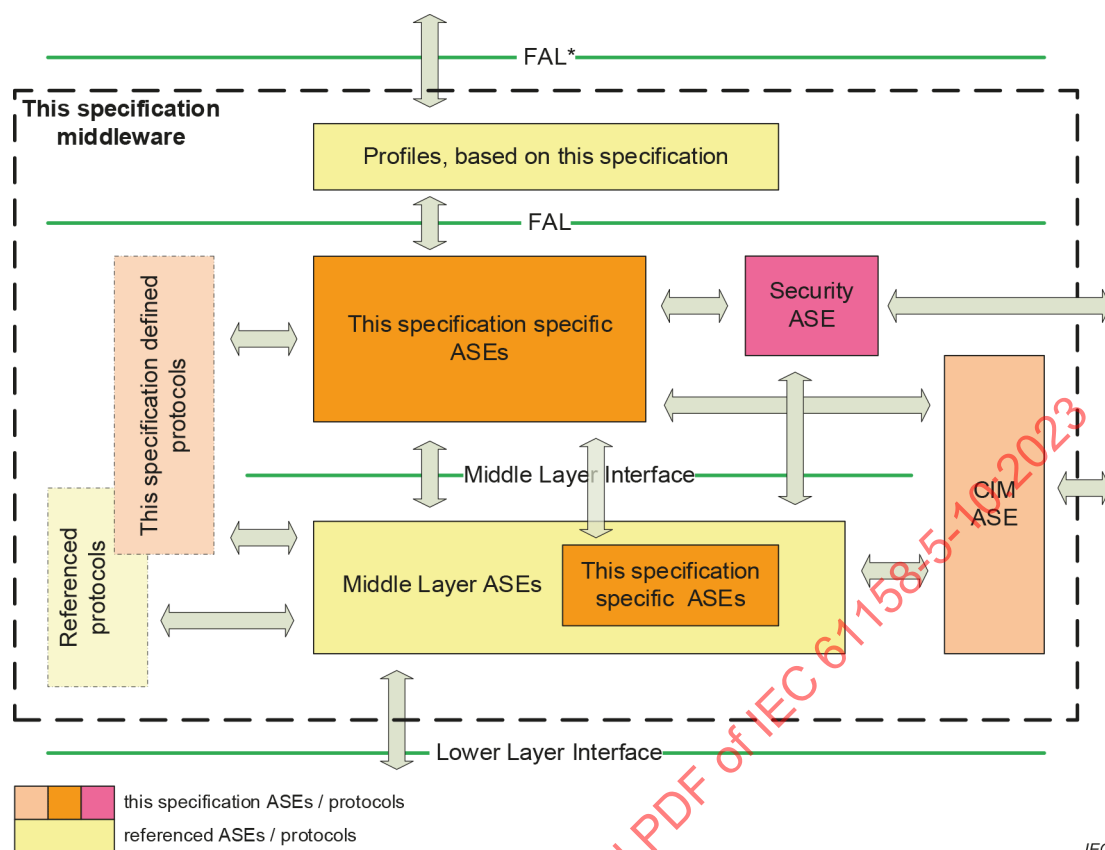

IEC

Figure 2 – Overall view of communication ASES

The Fieldbus Application connected via FAL / FAL* is outside of the scope for this document.

Profiles based on this specification are e.g. specified within IEC 61784-3-3 or IEC 61800-7-203.

This specification specific ASES are defined in this document and described in detail in 7.3.

The Middle Layer ASES summarizing the referenced standards, adds some ASES specific for this document, and is described in 6.3.

The Security ASE is reserved for security.

The CIM ASE, described in 7.3.3, forms the interface between the ASES of this document and the referenced standards.

The Lower Layer Interface connects the end station component and if available the bridge component.

6.1.2 Structure of an end station

Figure 3 shows the structure of an end station.

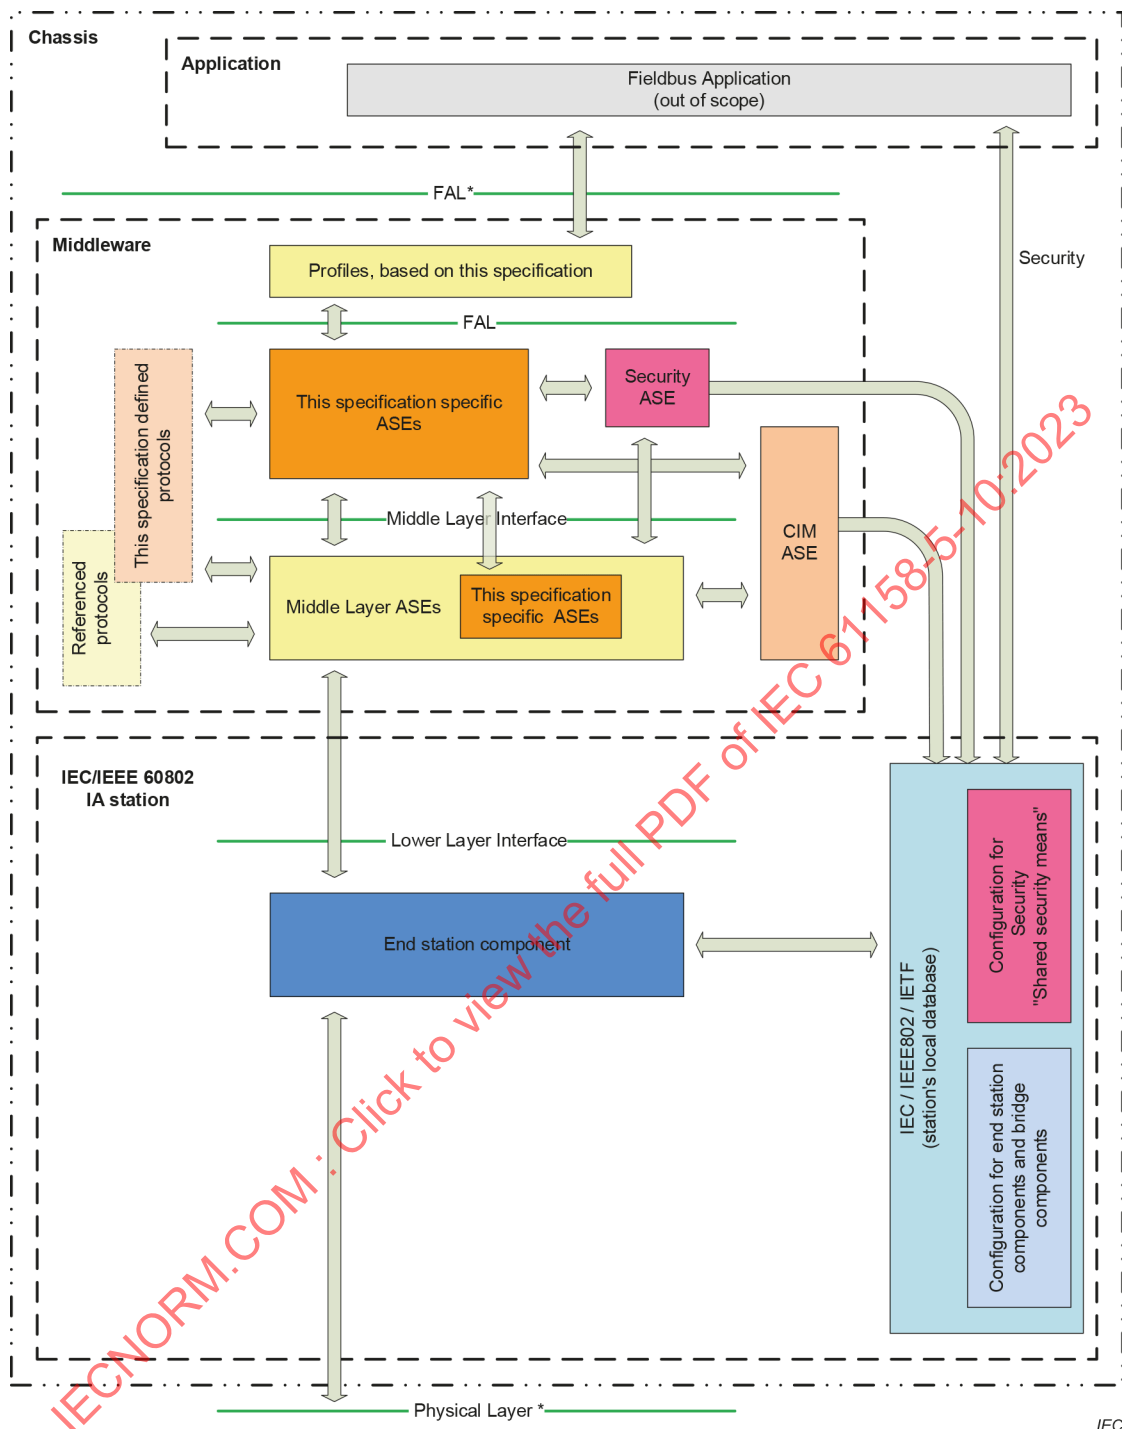


Figure 3 – Structure of an end station

The basic definitions for the end station component are derived from IEEE Std 802.3 and IEEE Std 802.1Q.

The physical layer is derived from IEEE Std 802.3 and IEC 61158-2.

6.1.3 Structure of a bridged end station

Figure 4 shows the structure of a bridged end station.

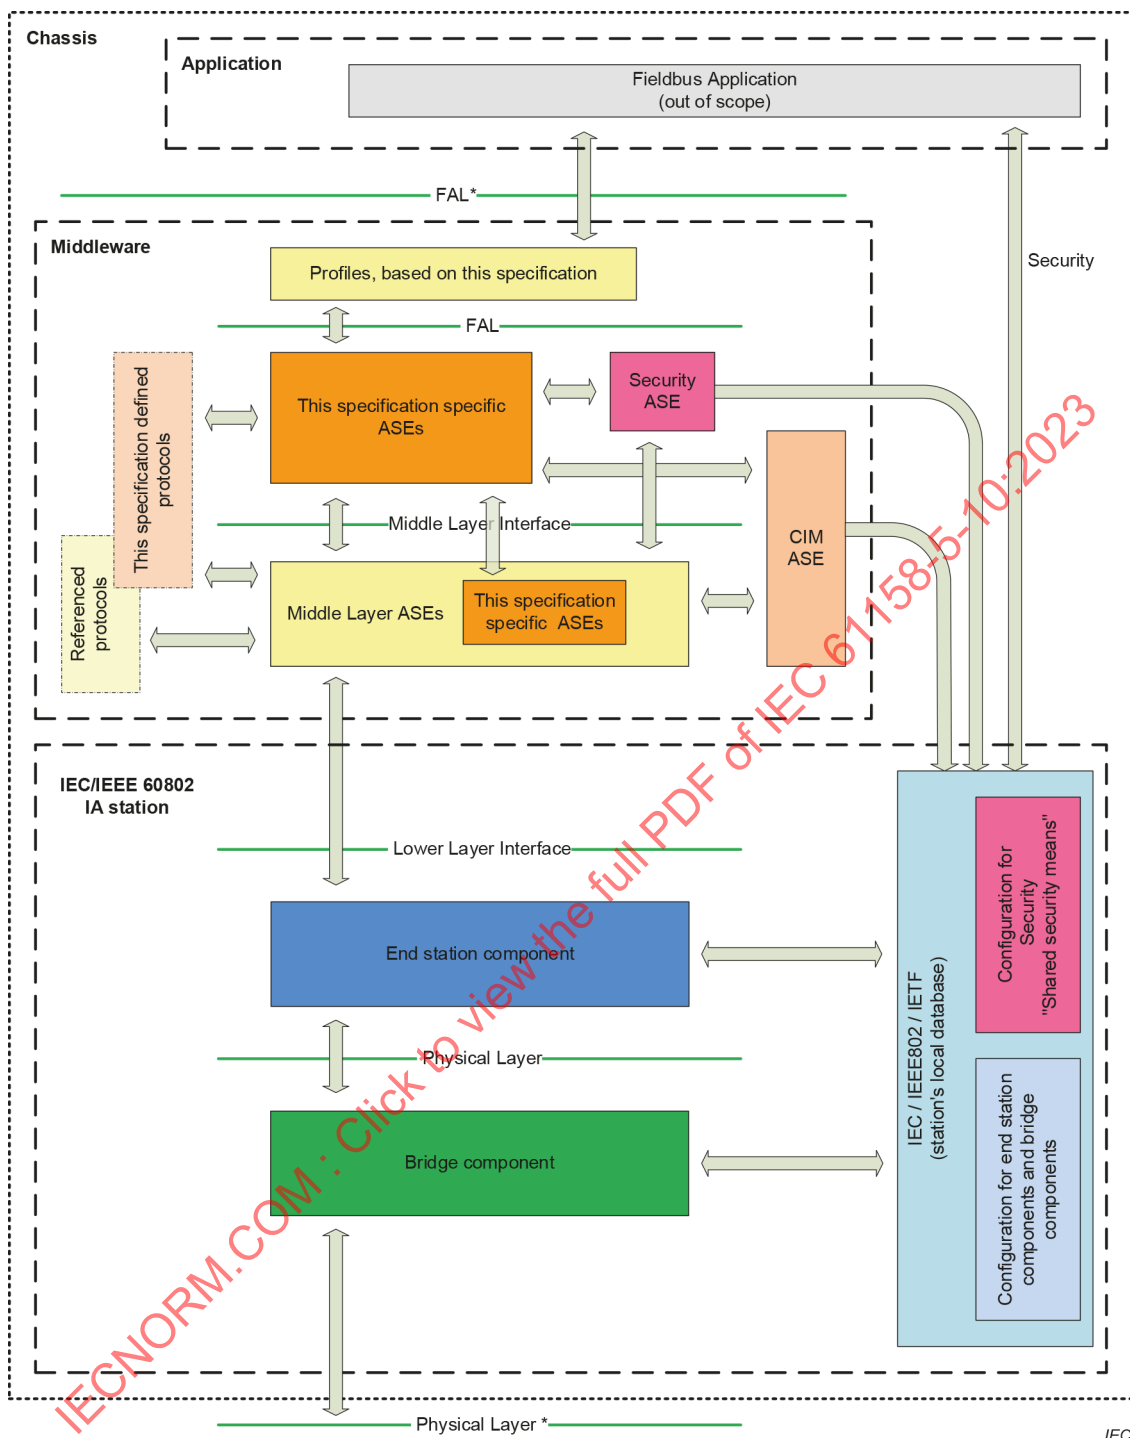


Figure 4 – Structure of a bridged end station

The basic definitions for the end station component are derived from IEEE Std 802.3 and IEEE Std 802.1Q.

The basic definitions for the bridge component are derived from IEEE Std 802.1Q.

The physical layer is derived from IEEE Std 802.3 and IEC 61158-2.

6.1.4 Structure of a bridge

Bridge requirements are defined by the standard IEC/IEEE 60802.

6.1.5 Examples of stations

Figure 5 shows IEEE Std 802 stations containing multiple IEEE Std 802.1 bridge and end station components including network configuration. The content of the middleware is shown in Figure 2.

Figure 6 shows an example with multiple internal physical bridge components. These multiple internal components shall not be visible in this specification view. They shall appear to the outside as one bridge component.

Figure 7 shows an example for system redundancy with two network access points.

The CIM of a middleware offers interfaces for parameterization and supervision access to the IEC / IEEE Std 802 / IETF configuration. This access is limited to the scope of the assigned end station and bridge component. The parametrization access may be substituted by the NETCONF access interface, but the supervision access is still required.

The SEC of a middleware is reserved for parameterization and supervision access to the security configuration. This access is limited to the scope of the middleware. The parametrization access may be substituted by the NETCONF access interface, but the supervision access is still required.

Middleware's, network interfaces, fieldbus applications ... are separated from each other to decouple network interfaces from its users. Thus, the network interface can be configured independent from the application.

The IEC/IEEE 60802 view is defined by YANG module. The access to this YANG element using the CIM interface requires a translation from YANG into the definition scope of this standard.

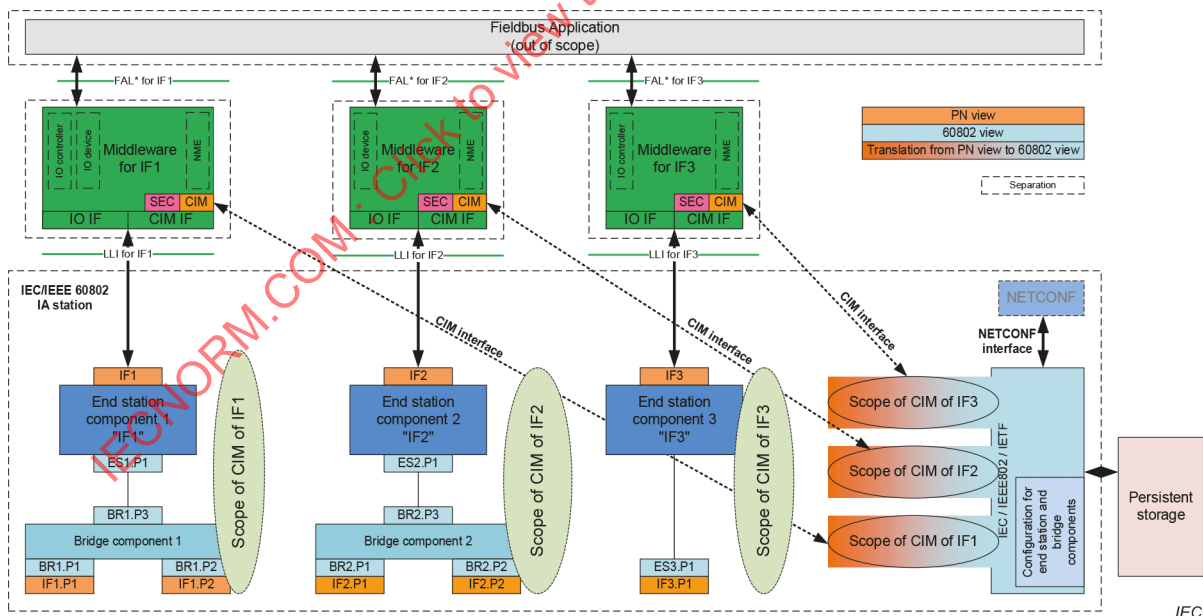


**Figure 5 – IEEE Std 802 station example 1
(end station and bridge configuration portion)**

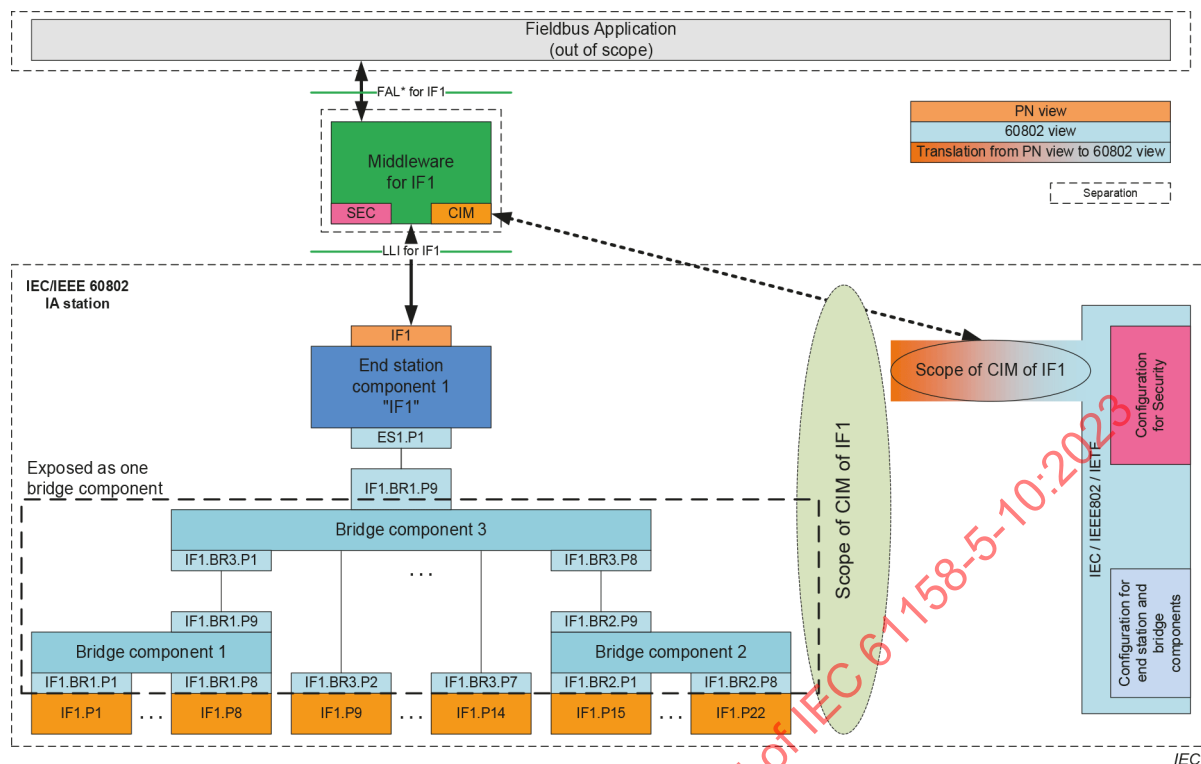


Figure 6 – IEEE Std 802 station example 3

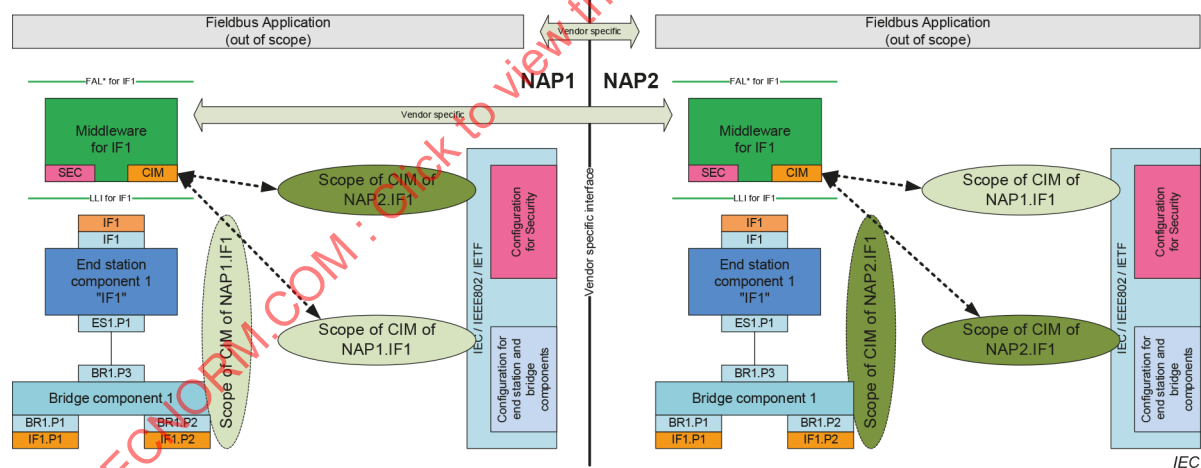


Figure 7 – IEEE Std 802 station example 4

6.1.6 Automation system

Figure 8 shows an example of an automation system consisting of end station and bridged end stations.

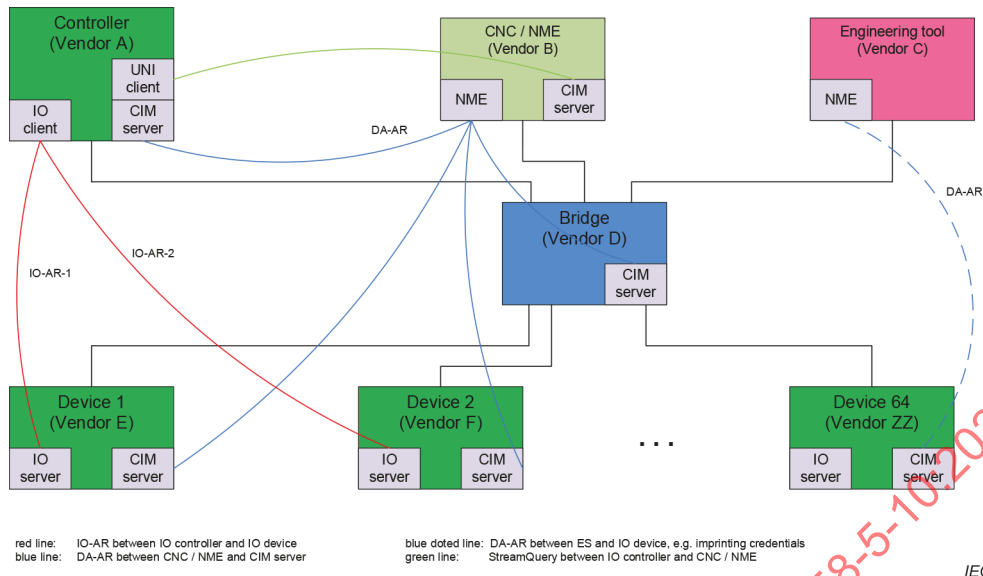


Figure 8 – Automation system example

6.2 ASE data types

The data types defined in Clause 5 are supported.

6.3 ASEs

6.3.1 Middle Layer ASEs

Figure 9 shows the common services ASEs according to their OSI layer.

ASEs specifically defined within this communication system are marked in orange, ASEs defined elsewhere but used here are marked in yellow.

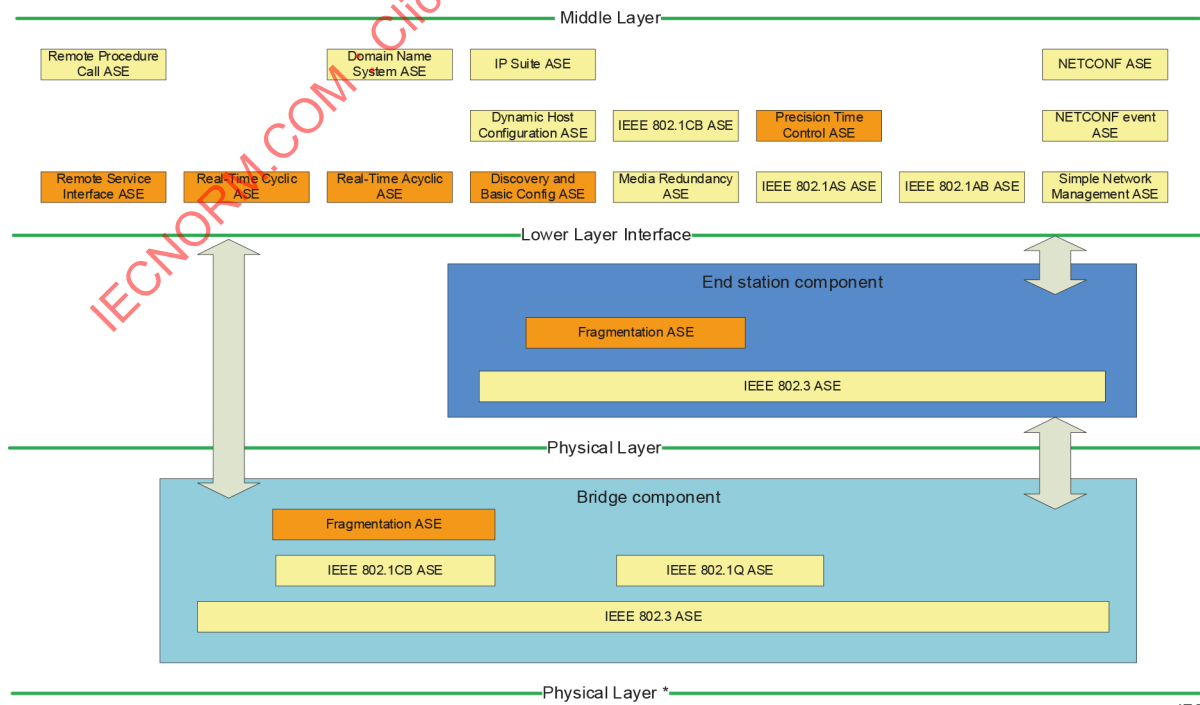


Figure 9 – Middle Layer ASEs communication architecture

6.3.2 Remote procedure call ASE

6.3.2.1 Overview

The remote procedure call (RPC) concepts according to Publication C706 of the Open Group shall be applied. This ASE defines the special usage of the Publication C706 of the Open Group as a transport protocol.

6.3.2.2 RPC class specification

6.3.2.2.1 Template

The RPC object is described by the following template:

ASE:	RPC ASE
CLASS:	RPC
CLASS ID:	not used
PARENT CLASS:	TOP
ATTRIBUTES and SERVICES	
1	(m) Key Attribute: Implicit
2	(m) Attribute: Interface EMap
2.1	(o) OpsService: Insert
2.2	(o) OpsService: Delete
2.3	(m) OpsService: Lookup
2.4	(o) OpsService: Map
2.5	(m) OpsService: LookupHandleFree
2.6	(o) OpsService: InqObject
2.7	(o) OpsService: MgmtDelete
3	(m) Attribute: Interface IOD, IOC, IOS, CIM, IOPParameterServer
3.1	(m) OpsService: Connect
3.2	(m) OpsService: Release
3.3	(m) OpsService: Read
3.4	(m) OpsService: Write
3.5	(m) OpsService: Control
3.6	(m) OpsService: Read Implicit
3.7	(o) OpsService: Security Association Control

6.3.2.2.2 Attributes

Implicit

The key attribute Implicit indicates that the object is implicitly addressed by the service.

Interface EMap

This attribute contains the end point mapper interface of the device. There is exactly one instance of this interface per device.

Interface IOD, IOC, IOS, CIM, IOPParameterServer

This attribute contains the IO interface of the device. The type of the interface determines the addressed functionality (i.e. IO device, IO controller, IO supervisor, CIM interface or IO parameter server). From each type there can be several instances of each interface; for details, see Annex A.

6.3.2.2.3 General service behavior

An AR class service request (i.e. connect, read...) shall be answered within less than 300 s; otherwise the client of the service shall assume that the service request timed out.

At any point of time at most one outstanding service call is supported between an RPC client and the RPC server; thus, succeeding service calls have to be in sequential order.

The explicit or implicit abort of a remote procedure call according to Publication C706 of the Open Group is implemented by local means.

The end point mapper is mapped to port 0x8894 (34 964) in opposite to the end point mapper as specified by Publication C706 which is mapped to port 0x0087 (135). Thus the end point mapper library functions (bound on port 135) of a standard RPC client are not usable; the client shall call the end point mapper interface (e.g. Lookup) at the port 0x8894 and evaluate its response.

The lookup response contains for a particular interface instance in its Protocol Tower information the destination port to use for the communication to this instance.

If a client makes a direct call to an interface instance, it shall respect the port forwarding of RPC end point mapper. The initial client request to the interface is directed to port 0x8894; the response of the server is issued from its port. This source port of the response shall thus be used as destination port in further client calls to the interface instance.

6.3.2.3 RPC service specification

6.3.2.3.1 Interface EPMMap

6.3.2.3.1.1 Insert

For the definition of this optional service, see Publication C706 of the Open Group.

6.3.2.3.1.2 Delete

For the definition of this optional service, see Publication C706 of the Open Group.

6.3.2.3.1.3 Lookup

For the definition of this service, see Publication C706 of the Open Group.

Figure 10 shows the correct behavior of the client and the server regarding an endpoint mapper lookup sequence.

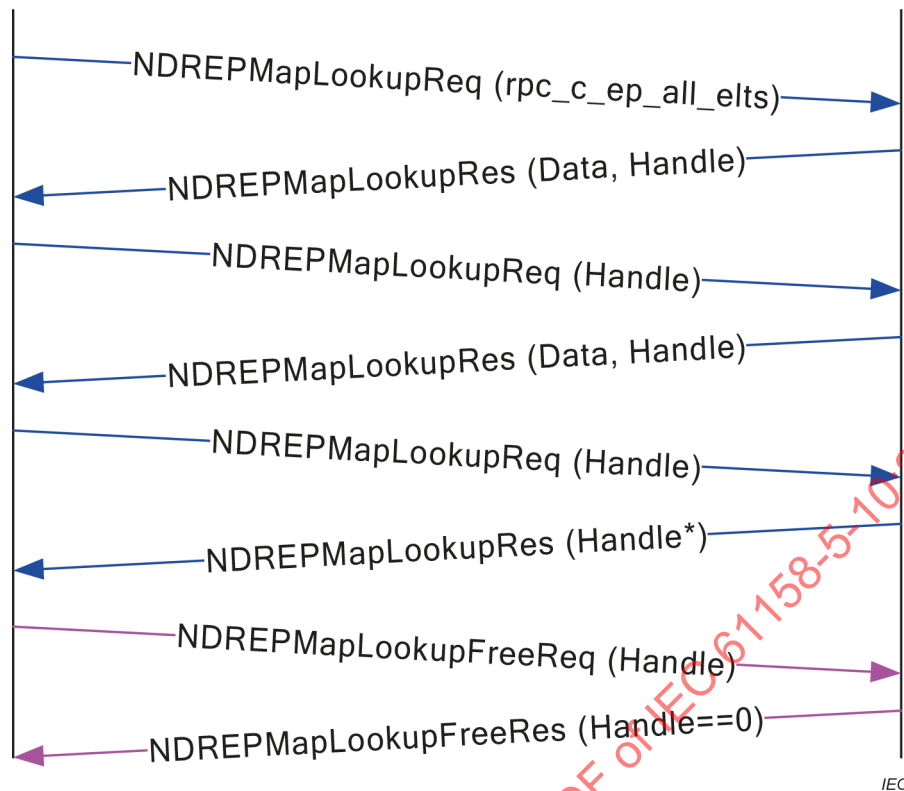


Figure 10 – Sequence Chart for reading the EndPointMapper

A server shall offer the client an auto destroy Handle feature by responding “Handle*:=0” without Data, if the client reads up to the end of the list. The client shall skip in this case the NDREPMAPLookupFreeReq service.

If the client reads not up to the end of list and skips the NDREPMAPLookupFreeReq, then the server destroys the Handle after a timeout defined in Publication C706 of the Open Group.

It is recommended to use a shorter timeout than the RPC default (e.g. 2 minutes to 5 minutes) to free resources earlier in this case (e.g. set timeout to 30 seconds).

6.3.2.3.1.4 Map

For the definition of this optional service, see Publication C706 of the Open Group.

6.3.2.3.1.5 LookupHandleFree

For the definition of this service, see Publication C706 of the Open Group.

6.3.2.3.1.6 InqObject

For the definition of this optional service, see Publication C706 of the Open Group.

6.3.2.3.1.7 MgmtDelete

For the definition of this optional service, see Publication C706 of the Open Group.

6.3.2.3.2 Interface IOD, IOC, IOS, CIM, IOParameterServer

6.3.2.3.2.1 Connect

This confirmed service shall be used to establish a connection by means of Connectionless Remote Procedure Call (CL-RPC) Table 28 shows the parameters of the service.

Table 28 – RPC Connect

Parameter name	req	ind	rsp	cnf
Argument	M	M(=)		
Args Max	M	M(=)		
Args Len	M	M(=)		
Args	M	M(=)		
Result(+)			S	S(=)
PNIO Status			M	M(=)
Args Max			M	M(=)
Args			M	M(=)
Result(-)			S	S(=)
PNIO Status			M	M(=)

Argument

The argument shall convey the service specific parameters of the service request.

Args Max

This parameter shall contain the maximum buffer size available for the response.

Attribute type: Unsigned32

Args Len

This parameter shall contain the actual number of octets for the parameter Args.

Attribute type: Unsigned32

Args

This parameter shall contain the RPC user data.

Attribute type: OctetString

Result(+)

This parameter indicates that the service request succeeded.

PNIO Status

This parameter shall be set to zero.

Attribute type: Unsigned32

Result(-)

This parameter indicates that the service request failed.

PNIO Status

This parameter shall contain the actual error code according to the protocol definition.

Attribute type: Unsigned32

6.3.2.3.2.2 Release

This confirmed service shall be used to release a connection by means of CL-RPC. Table 29 shows the parameters of the service.

Table 29 – RPC Release

Parameter name	req	ind	rsp	cnf
Argument	M	M(=)		
Args Max	M	M(=)		
Args Len	M	M(=)		
Args	M	M(=)		
Result(+)			S	S(=)
PNIO Status			M	M(=)
Args Max			M	M(=)
Args			M	M(=)
Result(-)			S	S(=)
PNIO Status			M	M(=)

Argument

The argument shall convey the service specific parameters of the service request.

Args Max

This parameter shall contain the maximum buffer size available for the response.

Attribute type: Unsigned32

Args Len

This parameter shall contain the actual number of octets for the parameter Args.

Attribute type: Unsigned32

Args

This parameter shall contain the RPC user data.

Attribute type: OctetString

Result(+)

This parameter indicates that the service request succeeded.

PNIO Status

This parameter shall be set to zero.

Attribute type: Unsigned32

Result(-)

This parameter indicates that the service request failed.

PNIO Status

This parameter shall contain the actual error code according to the protocol definition.

Attribute type: Unsigned32

6.3.2.3.2.3 Read

This confirmed service shall be used to convey a higher layer read service by means of CL-RPC. Table 30 shows the parameters of the service.

Table 30 – RPC Read

Parameter name	req	ind	rsp	cnf
Argument	M	M(=)		
Args Max	M	M(=)		
Args Len	M	M(=)		
Args	M	M(=)		
Result(+)			S	S(=)
PNIO Status			M	M(=)
Args Max			M	M(=)
Args			M	M(=)
Result(-)			S	S(=)
PNIO Status			M	M(=)

Argument

The argument shall convey the service specific parameters of the service request.

Args Max

This parameter shall contain the maximum buffer size available for the response.

Attribute type: Unsigned32

Args Len

This parameter shall contain the actual number of octets for the parameter Args.

Attribute type: Unsigned32

Args

This parameter shall contain the RPC user data.

Attribute type: OctetString

Result(+)

This parameter indicates that the service request succeeded.

PNIO Status

This parameter shall be set to zero.

Attribute type: Unsigned32

Result(-)

This parameter indicates that the service request failed.

PNIO Status

This parameter shall contain the actual error code according to the protocol definition.

Attribute type: Unsigned32

6.3.2.3.2.4 Write

This confirmed service shall be used to convey a higher layer write service by means of CL-RPC. Table 31 shows the parameters of the service.

Table 31 – RPC Write

Parameter name	req	ind	rsp	cnf
Argument	M	M(=)		
Args Max	M	M(=)		
Args Len	M	M(=)		
Args	M	M(=)		
Result(+)			S	S(=)
PNIO Status			M	M(=)
Args Max			M	M(=)
Args			M	M(=)
Result(-)			S	S(=)
PNIO Status			M	M(=)

Argument

The argument shall convey the service specific parameters of the service request.

Args Max

This parameter shall contain the maximum buffer size available for the response.

Attribute type: Unsigned32

Args Len

This parameter shall contain the actual number of octets for the parameter Args.

Attribute type: Unsigned32

Args

This parameter shall contain the RPC user data.

Attribute type: OctetString

Result(+)

This parameter indicates that the service request succeeded.

PNIO Status

This parameter shall be set to zero.

Attribute type: Unsigned32

Result(-)

This parameter indicates that the service request failed.

PNIO Status

This parameter shall contain the actual error code according to the protocol definition.

Attribute type: Unsigned32

6.3.2.3.2.5 Control

This confirmed service shall be used to convey a higher layer control service by means of CL-RPC. Table 32 shows the parameters of the service.

Table 32 – RPC Control

Parameter name	req	ind	rsp	cnf
Argument	M	M(=)		
Args Max	M	M(=)		
Args Len	M	M(=)		
Args	M	M(=)		
Result(+)			S	S(=)
PNIO Status			M	M(=)
Args Max			M	M(=)
Args			M	M(=)
Result(-)			S	S(=)
PNIO Status			M	M(=)

Argument

The argument shall convey the service specific parameters of the service request.

Args Max

This parameter shall contain the maximum buffer size available for the response.

Attribute type: Unsigned32

Args Len

This parameter shall contain the actual number of octets for the parameter Args.

Attribute type: Unsigned32

Args

This parameter shall contain the RPC user data.

Attribute type: OctetString

Result(+)

This parameter indicates that the service request succeeded.

PNIO Status

This parameter shall be set to zero.

Attribute type: Unsigned32

Result(-)

This parameter indicates that the service request failed.

PNIO Status

This parameter shall contain the actual error code according to the protocol definition.

Attribute type: Unsigned32

6.3.2.3.2.6 Read Implicit

This confirmed service shall be used to convey a higher layer read implicit service by means of CL-RPC. Table 33 shows the parameters of the service.

Table 33 – RPC Read Implicit

Parameter name	req	ind	rsp	cnf
Argument	M	M(=)		
Args Max	M	M(=)		
Args Len	M	M(=)		
Args	M	M(=)		
Result(+)			S	S(=)
PNIO Status			M	M(=)
Args Max			M	M(=)
Args			M	M(=)
Result(-)			S	S(=)
PNIO Status			M	M(=)

Argument

The argument shall convey the service specific parameters of the service request.

Args Max

This parameter shall contain the maximum buffer size available for the response.

Attribute type: Unsigned32

Args Len

This parameter shall contain the actual number of octets for the parameter Args.

Attribute type: Unsigned32

Args

This parameter shall contain the RPC user data.

Attribute type: OctetString

Result(+)

This parameter indicates that the service request succeeded.

PNIO Status

This parameter shall be set to zero.

Attribute type: Unsigned32

Result(-)

This parameter indicates that the service request failed.

PNIO Status

This parameter shall contain the actual error code according to the protocol definition.

Attribute type: Unsigned32

6.3.2.3.2.7 Security Association Control

Reserved for security

6.3.2.4 Invocation of the RPC object

There is one RPC object for the device.

6.3.3 Remote service interface ASE

6.3.3.1 Overview

The remote service interface (RSI) is a transport protocol allowing an initiator to call a service on the responder. The initiator is usually located on the IO controller and the responder is usually located on the IO device. The RSI uses IEEE Std 802.3 services.

There are two kinds of supported connection modes:

The connection-oriented mode starts with an RSI call with OpNum Connect by the initiator. Then the connection is used by the RSI service calls (Read, Write, ..). The connection is stopped with RSI abort when it is no longer needed.

The connectionless mode consists of only one RSI call. The allowed OpNums are Read Implicit and Read Connectionless. After the RSI call confirmation, it is not necessary to call RSI abort.

6.3.3.2 RSI class specification

6.3.3.2.1 Template

An RSI object is described by the following template:

ASE: RSI ASE

CLASS: RSI

CLASS ID: not used

PARENT CLASS: TOP

ATTRIBUTES:

1	(m) Key Attribute:	Implicit
2	(o) Attribute:	List of Initiator
2.1	(m) Attribute:	Initiator MAC address
2.2	(m) Attribute:	Initiator service access point
2.3	(m) Attribute:	Device Ident
2.4	(m) Attribute:	Device Instance
2.5	(m) Attribute:	RSI Interface
2.6	(m) Attribute:	Responder MAC address
2.7	(m) Attribute:	Responder service access point
2.8	(m) Attribute:	Initial SendSeqNum
3	(o) Attribute:	List of Responder
3.1	(m) Attribute:	Responder MAC address
3.2	(m) Attribute:	Responder service access point
3.3	(m) Attribute:	Device Ident
3.4	(m) Attribute:	Device Instance
3.5	(m) Attribute:	RSI Interface
3.6	(m) Attribute:	Initiator MAC address
3.7	(m) Attribute:	Initiator service access point
3.8	(m) Attribute:	CallBuffer
3.9	(m) Attribute:	Notification Mode

SERVICES:

1	(m) OpsService:	RSI initiator add
2	(m) OpsService:	RSI responder add
3	(m) OpsService:	RSI initiator remove
4	(m) OpsService:	RSI responder remove
5	(m) OpsService:	RSI call
6	(m) OpsService:	RSI notification
7	(m) OpsService:	RSI initiator abort
8	(m) OpsService:	RSI responder abort
9	(m) OpsService:	RSI get instances

6.3.3.2.2 Attributes**List of Initiator**

This optional attribute list shall be present if the device supports a client role. It contains all objects which are supported by the initiator.

The Initiator service access point identifies the RSII instance of the protocol machine to which the data belong.

Initiator MAC address

This attribute contains the SA according to IEEE Std 802.3 of this Initiator instance.

Attribute type: OctetString[6]

Initiator service access point

This attribute contains the service access point of this Initiator instance (e.g. IO controller).

Attribute type: Unsigned16

Device Ident

This attribute contains the Device ID and the Vendor ID (as described in 7.4.1) of the addressed responder.

Attribute type: Unsigned32

Device Instance

This attribute contains the Device Instance of the addressed responder.

Attribute type: Unsigned16

RSI Interface

This attribute contains the RSI Interface of the addressed responder.

Attribute type: Unsigned8

Allowed values: IO_DEVICE, IO_DEVICE_READIMPLICIT, CIM_INTERFACE, CIM_INTERFACE_READIMPLICIT

Responder MAC address

This attribute contains the DA according to IEEE Std 802.3 of the addressed responder.

Attribute type: OctetString[6]

Responder service access point

This attribute contains the service access point of the addressed responder (e.g. IO device).

Attribute type: Unsigned16

Initial SendSeqNum

This attribute contains the SendSeqNum of the initial call. It should be a random number within the allowed range.

Attribute type: Unsigned16

List of Responder

This optional attribute list shall be present if the device supports a server role. It contains all objects which are supported by the responder.

The Responder service access point identifies the RSIR instance of the protocol machine to which the data belong.

Responder MAC address

This attribute contains the SA according to IEEE Std 802.3 of this Responder instance.

Attribute type: OctetString[6]

Responder service access point

This attribute contains the service access point of this Responder instance (e.g. IO device).

Attribute type: Unsigned16

Device Ident

This attribute contains the Device ID and the Vendor ID (as described in 7.4.1) for this responder instance.

Attribute type: Unsigned32

Device Instance

This attribute contains the Device Instance for this responder instance.

Attribute type: Unsigned16

RSI Interface

This attribute contains the RSI Interface for this responder instance. This limits the allowed OpNums for this responder instance.

Attribute type: Unsigned8

Allowed values: IO_DEVICE, IO_DEVICE_READIMPLICIT, CIM_SERVER, CIM_SERVER_READIMPLICIT

Initiator MAC address

This attribute contains the DA of the device according to IEEE Std 802.3.

Attribute type: OctetString[6]

Initiator service access point

This attribute contains the identifier of the Initiator instance (e.g. IO controller).

Attribute type: Unsigned16

CallBuffer

This attribute contains the receive buffer for one call. The size of this buffer shall be given in the corresponding GSD description.

Attribute type: OctetString[]

Notification Mode

This attribute contains the current state for the notification.

Allowed values: SET, RESET

6.3.3.3 RSI service specification

6.3.3.3.1 RSI initiator add

This service is used to initialize a local initiator instance. Table 34 shows the parameters of the service.

Table 34 – RSI initiator add

Parameter name	req	cnf
Argument	M	
Initiator MAC address	M	
Initiator service access point	M	
Responder MAC address	M	
Device Ident	M	
Device Instance	M	
RSI Interface	M	
Initial SendSeqNum	M	
Result(+)		S
Initiator service access point		M
Result(-)		S
Initiator service access point		M
Error Class		M
Error Code		M

Argument

The argument shall convey the service specific parameters of the service request. These parameters shall correspond with the ASE attributes.

Initiator MAC address

This parameter shall be used for the physical address of the device according to IEEE Std 802.3.

Initiator service access point

This parameter identifies the instance of the protocol machine. This identifier should be specified by the caller.

Responder MAC address

This parameter shall be used for the physical address of the destination device according to IEEE Std 802.3.

Device Ident

This parameter shall be used for the Device ID and the Vendor ID (as described in 7.4.1) of the destination device.

Device Instance

This parameter shall be used for the Instance of the destination device.

RSI Interface

This parameter shall be used for requested RSI Interface of the destination device.

Initial SendSeqNum

This parameter shall be used as initial random number for the initiator state machine.

Result(+)

This parameter indicates that the service request succeeded.

Initiator service access point

This parameter identifies the instance of the protocol machine.

Result(-)

This parameter indicates that the service request failed.

Initiator service access point

This parameter identifies the instance of the protocol machine.

Error Class

This parameter selects the error class.

Attribute type: Unsigned8

Error Code

This parameter selects the error code.

Attribute type: Unsigned8

6.3.3.3.2 RSI responder add

This service is used to initialize a local responder instance. Table 35 shows the parameters of the service.

Table 35 – RSI responder add

Parameter name	req	cnf
Argument	M	
Responder MAC address	M	
Responder service access point	M	
Device Ident	M	
Device Instance	M	
RSI Interface	M	
CallBuffer	M	
	M	
Result(+)		S
Responder service access point		M
Result(+)		S
Responder service access point		M
Error Class		M
Error Code		M

Argument

The argument shall convey the service specific parameters of the service request. These parameters shall correspond with the ASE attributes.

Responder MAC address

This parameter shall be used for the physical address of the device according to IEEE Std 802.3.

Responder service access point

This parameter identifies the instance of the protocol machine. This identifier should be specified by the caller.

Device Ident

This parameter shall be used for the Device ID and the Vendor ID (as described in 7.4.1) of the device.

Device Instance

This parameter shall be used for the Instance of the device.

RSI Interface

This parameter shall be used for the RSI Interface of the device.

CallBuffer

This parameter shall be used as the buffer for future call indications.

Result(+)

This parameter indicates that the service request succeeded.

Responder service access point

This parameter identifies the instance of the protocol machine.

Result(-)

This parameter indicates that the service request failed.

Responder service access point

This parameter identifies the instance of the protocol machine.

Error Class

This parameter selects the error class.

Attribute type: Unsigned8

Error Code

This parameter selects the error code.

Attribute type: Unsigned8

6.3.3.3.3 RSI initiator remove

This service is used to remove a local initiator instance. Table 36 shows the parameters of the service.

Table 36 – RSI initiator remove

Parameter name	req	cnf
Argument	M	
Initiator service access point	M	
	M	
Result(+)		S
Initiator service access point	M	
Result(-)		S
Initiator service access point	M	
Error Class		M
Error Code		M

Argument

The argument shall convey the service specific parameters of the service request. These parameters shall correspond with the ASE attributes.

Initiator service access point

This parameter identifies the instance of the protocol machine.

Result(+)

This parameter indicates that the service request succeeded.

Initiator service access point

This parameter identifies the instance of the protocol machine.

Result(-)

This parameter indicates that the service request failed.

Initiator service access point

This parameter identifies the instance of the protocol machine.

Error Class

This parameter selects the error class.

Attribute type: Unsigned8

Error Code

This parameter selects the error code.

Attribute type: Unsigned8

6.3.3.3.4 RSI responder remove

This service is used to remove a local responder instance. Table 37 shows the parameters of the service.

Table 37 – RSI responder remove

Parameter name	req	cnf
Argument	M	
Responder service access point	M	
	M	
Result(+)		S
Responder service access point		M
Result(-)		S
Responder service access point		M
Error Class		M
Error Code		M

Argument

The argument shall convey the service specific parameters of the service request. These parameters shall correspond with the ASE attributes.

Responder service access point

This parameter identifies the instance of the protocol machine.

Result(+)

This parameter indicates that the service request succeeded.

Responder service access point

This parameter identifies the instance of the protocol machine.

Result(-)

This parameter indicates that the service request failed.

Responder service access point

This parameter identifies the instance of the protocol machine.

Error Class

This parameter selects the error class.

Attribute type: Unsigned8

Error Code

This parameter selects the error code.

Attribute type: Unsigned8

6.3.3.3.5 RSI call

This service shall be used to send the given parameters from the initiator to the responder. After the data is sent (ArgsReq), the service waits for a response (ArgsRsp). The OpNum specifies the remote service to build the response. When the response is received, this is confirmed by the service.

The initial call uses the given InitialSendSeqNum. The communication follows a strict monotonically increasing SendSeqNum by always adding 1. Wrap around is done according to the specification. Additionally, the initial call uses the Device Ident, the Device Instance and the RSI Interface to identify a proper responder.

If ArgsReq or ArgsRsp exceeds the maximum Ethernet frame size, fragmentation occurs in the underlying state machine. This is not visible to the RSI call parameters.

The underlying state machines allow only one active call for each instance. The possible RSI reruns are handled by the underlying state machine too.

Table 38 shows the parameters of the service.

Table 38 – RSI call

Parameter name	req	Ind	rsp	cnf
Argument	M	M(=)		
Initiator service access point	M			
Responder service access point		M		
OpNum	M	M(=)		
ArgsRspMaxLength	M	M(=)		
ArgsReqLength	M	M(=)		
ArgsReq	M	M(=)		
Result(+)			S	S(=)
Responder service access point			M	
Initiator service access point				M
PNIO Status			M	M(=)
ArgsRspLength			M	M(=)
ArgsRsp			M	M(=)
Result(-)			S	S(=)
Responder service access point			M	
Initiator service access point				M
PNIO Status			M	M(=)

Argument

The argument shall convey the service specific parameters of the service request.

Initiator service access point

This parameter identifies the instance of the initiator protocol machine.

Responder service access point

This parameter identifies the instance of the responder protocol machine.

OpNum

This parameter shall be used to identify the remote service.

Attribute type: Unsigned8

Allowed values:

With RSI Interface IO_DEVICE or CIM_SERVER:

Connect, Read, Write, Control, ReadConnectionless, ReadNotification,
PrmWriteMore, PrmWriteEnd

With RSI Interface IO_DEVICE_READIMPLICIT or CIM_SERVER_READIMPLICIT:

Read Implicit

ArgsRspMaxLength

This parameter shall contain the maximum buffer size available for the response.

Attribute type: Unsigned32

ArgsReqLength

This parameter shall contain the actual number of octets for the parameter ArgsReq.

Attribute type: Unsigned32

ArgsReq

This parameter shall contain the RSI user request data.

Attribute type: OctetString

Result(+)

This parameter indicates that the service request succeeded.

Initiator service access point

This parameter identifies the instance of the initiator protocol machine.

Responder service access point

This parameter identifies the instance of the responder protocol machine.

PNIO Status

This parameter shall be set to zero.

Attribute type: Unsigned32

ArgsRspLength

This parameter shall contain the actual number of octets for the parameter ArgsRsp.

Attribute type: Unsigned32

ArgsRsp

This parameter shall contain the RSI user response data.

Attribute type: OctetString

Result(-)

This parameter indicates that the service request failed.

Initiator service access point

This parameter identifies the instance of the initiator protocol machine.

Responder service access point

This parameter identifies the instance of the responder protocol machine.

PNIO Status

This parameter shall contain the actual error code according to the protocol definition.

Attribute type: Unsigned32

6.3.3.3.6 RSI notification

This service is used for the parameterization sequence. If the device calls the service Application Ready, this service is used by the responder to SET the notification mode. If the mode is SET, a cyclic RSI notification.ind will be sent to the initiator. Once the initiator becomes aware of this, the initiator shall read the Application Ready Block with the service ReadNotification. If the block has been read, the responder RESET the notification mode and the cyclic notification will be stopped.

NOTE The notification mode is transferred by the bit Notification within the ACK-RTA-PDU or the FRSP-RTA-PDU.

Table 39 shows the parameters of the service.

Table 39 – RSI notification

Parameter name	req	Ind	cnf
Argument	M	M(=)	
Responder service access point	M		
Initiator service access point		M	
Mode	M	M(=)	
Result(+)			S
Responder service access point			M
Result(-)			S
Responder service access point			M
Error Class			M
Error Code			M

Argument

The argument shall convey the service specific parameters of the service request. These parameters shall correspond with the ASE attributes.

Responder service access point

This parameter identifies the instance of the responder protocol machine.

Initiator service access point

This parameter identifies the instance of the initiator protocol machine.

Mode

This parameter shall contain the Notification Mode.

Attribute type: Unsigned8

Allowed values: SET, RESET

Result(+)

This parameter indicates that the service request succeeded.

Responder service access point

This parameter identifies the instance of the responder protocol machine.

Result(-)

This parameter indicates that the service request failed.

Responder service access point

This parameter identifies the instance of the responder protocol machine.

Error Class

This parameter selects the error class.

Attribute type: Unsigned8

Error Code

This parameter selects the error code.

Attribute type: Unsigned8

6.3.3.3.7 RSI initiator abort

This service shall be used by the initiator to abort an established RSI connection. Table 40 shows the parameters of the service.

Table 40 – RSI initiator abort

Parameter name	req	Ind	cnf
Argument	M	M	
Initiator service access point	M		
Responder service access point		M	
PNIO Status	M	M(=)	
Result(+)			S
Initiator service access point			M
Result(-)			S
Initiator service access point			M
Error Class			M
Error Code			M

Argument

The argument shall convey the service specific parameters of the service request.

Initiator service access point

This parameter identifies the instance of the initiator protocol machine.

Responder service access point

This parameter identifies the instance of the responder protocol machine.

PNIO Status

This parameter contains the PNIO Status with the reason for abort.

Attribute type: Unsigned32

Result(+)

This parameter indicates that the service request succeeded.

Initiator service access point

This parameter identifies the instance of the initiator protocol machine.

Result(-)

This parameter indicates that the service request failed.

Initiator service access point

This parameter identifies the instance of the initiator protocol machine.

Error Class

This parameter selects the error class.

Attribute type: Unsigned8

Error Code

This parameter selects the error code.

Attribute type: Unsigned8

6.3.3.3.8 RSI responder abort

This service shall be used by the responder to abort an established RSI connection. Table 41 shows the parameters of the service.

Table 41 – RSI responder abort

Parameter name	Req	Ind	cnf
Argument	M	M	
Responder service access point	M		
Initiator service access point		M	
PNIO Status	M	M(=)	
Result(+)			S
Responder service access point			M
Result(-)			S
Responder service access point			M
Error Class			M
Error Code			M

Argument

The argument shall convey the service specific parameters of the service request.

Responder service access point

This parameter identifies the instance of the responder protocol machine.

Initiator service access point

This parameter identifies the instance of the initiator protocol machine.

PNIO Status

This parameter contains the PNIO Status with the reason for abort.

Attribute type: Unsigned32

Result(+)

This parameter indicates that the service request succeeded.

Responder service access point

This parameter identifies the instance of the responder protocol machine.

Result(-)

This parameter indicates that the service request failed.

Responder service access point

This parameter identifies the instance of the responder protocol machine.

Error Class

This parameter selects the error class.

Attribute type: Unsigned8

Error Code

This parameter selects the error code.

Attribute type: Unsigned8

6.3.3.3.9 RSI get responder instances

This service is used to retrieve a unique list of responder instances. Table 42 shows the parameters of the service.

Table 42 – RSI get responder instances

Parameter name	req	cnf
Argument	M	
—	—	
Result(+)		S
List of responder instances		M
Device Ident		M
Device Instance		M
RSI Interface		M
Result(-)		S
Error Class		M
Error Code		M

Argument

There are no arguments for this service request.

Result(+)

This parameter indicates that the service request succeeded.

List of responder instances

This parameter shall contain a unique list of RSI responder instances.

Device Ident

This parameter shall be used for the Device ID and the Vendor ID (as described in 7.4.1) of the device.

Device Instance

This parameter shall be used for the Instance of the responder.

RSI Interface

This parameter shall be used for the RSI Interface of the responder.

Result(-)

This parameter indicates that the service request failed.

Responder service access point

This parameter identifies the instance of the protocol machine.

Error Class

This parameter selects the error class.

Attribute type: Unsigned8

Error Code

This parameter selects the error code.

Attribute type: Unsigned8

6.3.3.4 Invocation of the RSI object

There is one RSI object for the end station component.

6.3.4 Domain name system ASE**6.3.4.1 Overview**

The utilization of the IETF RFC 1034 (DNS) is defined for this specification. It includes the usage and the content syntax of domain name.

6.3.4.2 DNS class specification**6.3.4.2.1 General**

The DNS ASE defines one DNS object type:

6.3.4.2.2 Template

A DNS object is described by the following template:

ASE: DNS ASE

CLASS: DNS

CLASS ID: not used

PARENT CLASS: top

ATTRIBUTES:

1	(m) Key Attribute: Implicit
2	(m) Attribute: DNS
2.1	(m) Attribute: Preferred DNS Server
2.2	(m) Attribute: Alternate DNS Server 1
2.3	(m) Attribute: Alternate DNS Server 2
2.4	(m) Attribute: Alternate DNS Server 3

SERVICES:

1	(o) OpsService: DNS Get Host By Name

6.3.4.2.3 Attributes

Implicit

The key attribute Implicit indicates that the DNS object is implicitly addressed by the service.

DNS

This attribute contains the following attributes:

Preferred DNS Server

This attribute contains the IP address of the preferred DNS server according to IETF RFC 791.

Attribute type: Unsigned32

Alternate DNS Server 1

This attribute contains the IP address of the first alternate DNS server according to IETF RFC 791.

Attribute type: Unsigned32

Alternate DNS Server 2

This attribute contains the IP address of the second alternate DNS server according to IETF RFC 791.

Attribute type: Unsigned32

Alternate DNS Server 3

This attribute contains the IP address of the third alternate DNS server according to IETF RFC 791.

Attribute type: Unsigned32

6.3.4.3 DNS service specification

The DNS services shall be derived from the IETF RFC 1034 (DNS).

6.3.4.4 Invocation of the DNS object

There is one DNS object for the device.

6.3.5 Simple network management ASE

6.3.5.1 Overview

SNMP is described in the IETF RFC 1157 (SNMP).

6.3.5.2 Void

Intentionally left blank.

6.3.5.3 SNMP class specification

6.3.5.3.1 General

The SNMP ASE defines one SNMP object type.

6.3.5.3.2 Template

A SNMP object is described by the following template:

ASE: **SNMP ASE**

CLASS: **SNMP**

CLASS ID: **not used**

PARENT CLASS: **top**

ATTRIBUTES:

1 (m) Key Attribute: Implicit

SERVICES:

1 (m) OpsService: SNMP Get

2 (m) OpsService: SNMP Get Next

3 (m) OpsService: SNMP Set

4 (m) OpsService: SNMP Enable SNMP v1/v2

5 (m) OpsService: SNMP Set Community Name

6.3.5.3.3 Attributes

Implicit

The key attribute Implicit indicates that the SNMP object is implicitly addressed by the service.

6.3.5.4 SNMP service specification

6.3.5.4.1 General

The SNMP services shall be derived from the IETF RFC 1157 (SNMP).

6.3.5.4.2 SNMP Enable SNMP v1/v2

This service is used to enable or disable the access to the attributes of the SNMP ASE. Table 43 shows the parameters of the service.

The values shall be stored in the secure storage and restored after power-on.

Table 43 – SNMP Enable SNMP v1/v2

Parameter name	req	cnf
Argument	M	
Enable	M	
Result(+)		S
Status		M
Result(-)		S
Status		M

Argument

There are no arguments for this service request.

Enable

This parameter enables or disables the access to the attributes.

Allowed values: Disabled, ReadOnly, ReadWrite

Default value: Disabled

Result(+)

This parameter indicates that the service request succeeded.

Status

This parameter contains the service specific error code.

Result(-)

This parameter indicates that the service request failed.

Status

This parameter contains the service specific error code.

6.3.5.4.3 SNMP Set Community Name

This service is used to set the community name for read-write and for read-only access. Table 44 shows the parameters of the service.

The values shall be stored in the secure storage and restored after power-on.

Table 44 – SNMP Set Community Name

Parameter name	req	cnt
Argument	M	
ReadWrite Community Name	O	
ReadOnly Community Name	O	
Result(+)		S
Status		M
Result(-)		S
Status		M

Argument

There are no arguments for this service request.

ReadWrite Community Name

This parameter contains the value of the community name.

Default: "private"

ReadOnly Community Name

This parameter contains the value of the community name.

Default: "public"

Result(+)

This parameter indicates that the service request succeeded.

Status

This parameter contains the service specific error code.

Result(-)

This parameter indicates that the service request failed.

Status

This parameter contains the service specific error code.

6.3.5.5 Invocation of the SNMP object

There is one SNMP object for the device.

6.3.5.6 Behavior

6.3.5.6.1 Persistency

For persistency of the SNMP object the persistency defined in the Communication Interface Management ASE is used; see 7.3.3.3.6.2 for details.

6.3.6 NETCONF ASE

6.3.6.1 Overview

NETCONF (Network configuration protocol) is described in the IETF RFC 6241.

6.3.6.2 Void

Intentionally left blank.

6.3.6.3 NETCONF class specification

6.3.6.3.1 General

The NETCONF ASE defines one NETCONF object type. The NETCONF ASE is used to transport YANG documents in XML or JSON. NETCONF describes the operation to execute, the YANG document describes the parameters of the operations (e.g. the managed objects to get, or to edit).

6.3.6.3.2 Template

A NETCONF object is described by the following template:

ASE:	NETCONF ASE
CLASS:	NETCONF
CLASS ID:	not used
PARENT CLASS:	top
ATTRIBUTES:	
1	(m) Key Attribute: Implicit
SERVICES:	
1	(m) OpsService: NETCONF get
2	(m) OpsService: NETCONF get-config
3	(m) OpsService: NETCONF edit-config
4	(m) OpsService: NETCONF copy-config
5	(m) OpsService: NETCONF delete-config
6	(o) OpsService: NETCONF discard-changes
7	(o) OpsService: NETCONF create-subscription
8	(m) OpsService: NETCONF lock
9	(m) OpsService: NETCONF unlock
10	(o) OpsService: NETCONF commit
11	(o) OpsService: NETCONF cancel-commit
12	(o) OpsService: NETCONF validate
13	(m) OpsService: NETCONF close-session
14	(m) OpsService: NETCONF kill-session

6.3.6.3.3 Attributes

Implicit

The key attribute Implicit indicates that the NETCONF object is implicitly addressed by the service.

6.3.6.4 NETCONF service specification

The NETCONF services shall be derived from the IETF RFC 6241 (NETCONF).

6.3.6.5 Invocation of the NETCONF object

There is one NETCONF object for the device.

6.3.6.6 Behavior

6.3.6.6.1 Persistency

For persistency of the NETCONF object the persistency defined in the Communication Interface Management ASE is used; see 7.3.3.3.6.2 for details.

6.3.6.6.2 Configuration stores

NETCONF defines the existence of one or more configuration datastores and allows configuration operations on them. A configuration datastore is defined as the complete set of configuration data that is required to get a device from its initial default state into a desired operational state. The configuration datastore does not include state data or executive commands.

The running configuration datastore holds the complete configuration currently active on the network device. Only one configuration datastore of this type exists on the device, and it is always present. NETCONF protocol operations refer to this datastore using the <running> element.

Only the <running> configuration datastore is present in the base model.

6.3.6.6.3 Length of YANG document

A YANG document object transported using NETCONF event shall not exceed the total length of MaxRecordSize octets.

6.3.7 NETCONF event ASE

6.3.7.1 Overview

NETCONF event notifications are described in IETF RFC 5277.

6.3.7.2 NETCONF event class specification

6.3.7.2.1 General

The NETCONF event ASE defines one NETCONF object type. The NETCONF event ASE is used to transport YANG documents in XML or JSON. NETCONF event describes the operation, the YANG document describes the parameters of the event.

6.3.7.2.2 Template

A NETCONF Event object is described by the following template:

ASE: NETCONF Event ASE
CLASS: NETCONF Event
CLASS ID: not used
PARENT CLASS: top
ATTRIBUTES:
1 (m) Key Attribute: Implicit
SERVICES:
1 (m) OpsService: NETCONF notification

6.3.7.2.3 Attributes

Implicit

The key attribute Implicit indicates that the NETCONF event object is implicitly addressed by the service.

6.3.7.3 NETCONF Event service specification

The NETCONF Event services shall be derived from the IETF RFC 5277 (NETCONF Event Notifications).

6.3.7.4 Invocation of the NETCONF Event object

There is one NETCONF event object for the device.

6.3.7.5 Behavior

A YANG document object transported using NETCONF event shall not exceed the total length of MaxRecordSize octets.

6.3.8 IP suite ASE

6.3.8.1 Overview

The utilization of the IETF RFC 768 (UDP), IETF RFC 791 (IP), IETF RFC 792 (ICMP), IETF RFC 826 (ARP), IETF RFC 1112 (IP Multicasting) is defined for this document. It includes definitions for UDP ports and IP multicast addresses and utilization of IP header fields for RT over UDP.

This ASE shall contain current volatile values of operation. Permanent values in nonvolatile memory shall be a matter of the DCP ASE defined in 6.3.2.

6.3.8.2 ARP cache behavior

Any communication relying on IP needs ARP (address resolution protocol) for the address translation between IP and MAC addresses.

ARP itself uses a so called ARP cache to minimize the amount of address translation queries going over the network.

This ARP cache is partitioned into static and dynamic entries, whereas static entries have an “unlimited” lifetime (entry type = STATIC); they are only lost with a Power Cycle. Dynamic entries (entry type = AGED) are aged out using the Cache Timeout parameter. They require thus a new address translation query on the network after each ARP cache timeout resulting in a higher ARP netload. If a dynamic entry has a wrong content (e.g. due to duplicated IP addresses on the network, or due to usage of the same IP address for multiple devices), the communication will work only again after aging out the ARP cache.

Therefore a static entry should be added to the ARP cache by IO controller and IO device whenever an application relation is established.

A static entry related to an application relation shall be removed whenever the application relation is released respectively aborted.

This has two benefits: On one hand it avoids superfluous ARPs to maintain the dynamic ARP cache entries, on the other hand it allows fast shutdown.

ARP announcements are meaningless together with static ARP cache entries and thus should not be issued by IO devices and/or IO controllers.

The minimum number of static entries should be equal or higher than either

- the number of supported application relations for an IO controller, or
- the number of concurrent application relations for an IO device.

If both are supported concurrently, the sum of entries shall be supported.

More entries, static and/or dynamic, are needed for other protocols or additional communication partners.

6.3.8.3 IP suite class specification

6.3.8.3.1 General

The IP suite ASE defines one Communication Interface Management object type:

6.3.8.3.2 Template

An IP suite object is described by the following template:

ASE: IP suite ASE

CLASS: IP suite

CLASS ID: not used

PARENT CLASS: top

ATTRIBUTES:

1	(m) Key Attribute: Implicit
2	(m) Attribute: IP
2.1	(m) Attribute: IP Address
2.2	(m) Attribute: Subnet Mask
2.3	(m) Attribute: Standard Gateway
3	(m) Attribute: ARP
3.1	(m) Attribute: Cache Size
3.2	(m) Attribute: Cache Timeout
3.3	(m) Attribute: List of Cache Entries
3.3.1	(m) Attribute: Entry Type
3.3.2	(m) Attribute: IEEE Std 802.3 MAC Address
3.3.3	(m) Attribute: IP Address

4 (m) Attribute: List of IP Multicast addresses

4.1 (m) Attribute: IP Multicast address

SERVICES:

1 (o) OpsService: Add Static ARP Cache Entry

2 (o) OpsService: Remove Static ARP Cache Entry

6.3.8.3.3 Attributes

Implicit

The key attribute Implicit indicates that the IP suite object is implicitly addressed by the service.

IP

This attribute contains the following attributes:

IP Address

This attribute contains the current IP address according to IETF RFC 791.

Attribute type: Unsigned32 (usually written as 4 octets separated by a dot)

Subnet Mask

This attribute contains the current subnet mask according to IETF RFC 791.

Attribute type: Unsigned32 (usually written as 4 octets separated by a dot)

Standard Gateway

This attribute contains the current IP address of the standard gateway according to IETF RFC 791.

Attribute type: Unsigned32 (usually written as 4 octets separated by a dot)

ARP

This attribute contains the following attributes:

Cache Size

This attribute contains the size of the ARP cache and shall contain a value to cache all devices that the device is connected to.

NOTE The cache size influences the performance of the IO operation.

Attribute type: Unsigned32

Cache Timeout

This attribute contains the timeout value for the refresh of the dynamic ARP cache entry (see IETF RFC 826). This attribute influences the time to recognize changed IP address / MAC address couples in case of device replacement.

Attribute type: Unsigned32

List of Cache Entries

This attribute list contains the following attributes:

Entry Type

This attribute contains the lifetime of the cache entry.

Attribute type: Unsigned8

Allowed values: AGED (entry is subject for cache refresh), STATIC (static entry)

IEEE Std 802.3 MAC Address

This attribute contains the value of the IEEE Std 802.3 MAC address corresponding to the IP address.

Attribute type: OctetString[6]

IP Address

This attribute contains the IP address according to IETF RFC 791.

Attribute type: Unsigned32

List of IP Multicast addresses

This attribute list contains the following attributes:

IP Multicast address

This attribute contains the IP Multicast address used for multicast communication relation. It shall be set according to IETF RFC 2365 and shall follow the building rule in relation to the Frame ID shown in IEC 61158-6-10.

Attribute type: Unsigned32

Allowed values with associated MAC address and Frame ID are listed in IEC 61158-6-10.

6.3.8.4 IP suite service specification

6.3.8.4.1 Add Static ARP Cache Entry

This optional local service adds a new static ARP cache entry, which from now on is leading for the IP to MAC resolution.

Table 45 shows the parameters of the service.

Table 45 – Add Static ARP Cache Entry

Parameter name	req	cnf
Argument	M	
IEEE Std 802.3 MAC Address	M	
IP Address	M	
Result(+)		S(=)
Result(-)		S(=)

Argument

The argument shall convey the service specific parameters of the service request.

IEEE Std 802.3 MAC Address

This parameter contains the value for the equivalent ASE attribute.

IP Address

This parameter contains the value for the equivalent ASE attribute.

Result(+)

This parameter indicates that the service request succeeded.

Result(-)

This parameter indicates that the service request failed.

6.3.8.4.2 Remove Static ARP Cache Entry

This optional local service removes a static ARP cache entry.

Table 46 shows the parameters of the service.

Table 46 – Remove Static ARP Cache Entry

Parameter name	req	cnf
Argument	M	
IEEE Std 802.3 MAC Address	M	
IP Address	M	
Result(+)		S(=)
Result(-)		S(=)

Argument

The argument shall convey the service specific parameters of the service request.

IEEE Std 802.3 MAC Address

This parameter contains the value for the equivalent ASE attribute.

IP Address

This parameter contains the value for the equivalent ASE attribute.

Result(+)

This parameter indicates that the service request succeeded.

Result(-)

This parameter indicates that the service request failed.

6.3.8.5 Invocation of the IP suite object

There is one IP suite object for the end station component.

6.3.9 Real time cyclic ASE**6.3.9.1 Overview**

The real time protocol cyclic (RTC) is a concept of reading and writing cyclic data by means of buffered services. It uses IEEE Std 802.3 or User Datagram Protocol (UDP) services, and the virtual bridges and MAC bridges ASE (see 6.3.17).

6.3.9.2 RTC class specification**6.3.9.2.1 General**

The RTC ASE defines for each particular CR one RTC object.

6.3.9.2.2 Template

A RTC object is described by the following template:

ASE: RTC ASE

CLASS: RTC

CLASS ID: not used

PARENT CLASS: TOP

ATTRIBUTES:

1 (m) Key Attribute: CREP

2 (m) Attribute: Protocol machine Parameter

2.1 (m) Attribute: DA

2.2 (m) Attribute: SA

2.3	(m) Attribute:	Frame ID
2.4	(m) Attribute:	Protocol Machine
2.5	(c) Constraint:	Protocol Machine = PPM
2.5.1	(m) Attribute:	VLAN Prio
2.5.2	(m) Attribute:	VLAN ID
2.5.3	(m) Attribute:	Tx Option
2.5.3.1	(m) Attribute:	RT Class
2.5.3.2	(c) Constraint:	RT Class = RT_CLASS_3
2.5.3.2.1	(m) Attribute:	Frame Send Offset
2.5.3.2.2	(m) Attribute:	Tx Port
2.5.3.2.3	(m) Attribute:	Startup Mode
2.5.3.2.4	(m) Attribute:	Media Redundancy
2.5.3.2.5	(c) Constraint:	Media Redundancy = TRUE
2.5.3.2.5.1	(m) Attribute:	Redundant Frame ID
2.5.3.2.5.2	(m) Attribute:	Redundant Frame Send Offset
2.5.3.2.5.3	(m) Attribute:	Redundant Tx Port
2.5.3.2.6	(m) Attribute:	DFP
2.5.3.2.7	(c) Constraint:	DFP = TRUE
2.5.3.2.7.3	(m) Attribute:	Subframe Position
2.5.4	(m) Attribute:	Reduction Ratio
2.5.5	(m) Attribute:	Phase
2.5.6	(m) Attribute:	Sequence
2.6	(c) Constraint:	Protocol Machine = CPM
2.6.1	(m) Attribute:	Rx Option
2.6.1.1	(m) Attribute:	RT Class
2.6.1.2	(c) Constraint:	RT Class = RT_CLASS_3
2.6.1.2.1	(m) Attribute:	Startup Mode
2.6.1.2.2	(m) Attribute:	Media Redundancy
2.6.1.2.3	(c) Constraint:	Media Redundancy = TRUE
2.6.1.2.3.1	(m) Attribute:	Redundant Frame ID
2.6.1.2.3.2	(m) Attribute:	Redundancy Watchdog
2.6.1.2.4	(m) Attribute:	DFP
2.6.1.2.5	(c) Constraint:	DFP = TRUE
2.6.1.2.5.1	(m) Attribute:	Subframe Position
2.6.2	(m) Attribute:	Data Hold Factor

SERVICES:

1	(m) OpsService:	PPM Set Prov Data
2	(m) OpsService:	PPM Set Prov Status
3	(m) OpsService:	PPM Activate
4	(m) OpsService:	PPM Close
5	(m) OpsService:	PPM Start
6	(m) OpsService:	PPM Error
7	(m) OpsService:	CPM Get Cons Data
8	(m) OpsService:	CPM Get Cons Status
9	(m) OpsService:	CPM Set RedRole
10	(m) OpsService:	CPM Activate
11	(m) OpsService:	CPM NoData
12	(m) OpsService:	CPM Stop

6.3.9.2.3 Attributes

CREP

This key attribute contains the CR's identifier (see AR ASE, class Communication Relationship).

Attribute type: Unsigned32

Protocol machine Parameter

This attribute contains the following attributes to describe the behavior of the protocol machines:

DA

This parameter contains the destination address (i.e. the consumer's address) according to IEEE Std 802.3.

Attribute type: OctetString[6]

SA

This parameter contains the source address (i.e. the provider's address) according to IEEE Std 802.3.

Attribute type: OctetString[6]

Frame ID

This attribute contains the identifier of the frame.

Attribute type: Unsigned16

Protocol Machine

This attribute contains the particular protocol machine selected for this CR. The protocol machine is set to PPM (cyclic provider protocol machine), when the device is provider of the particular CR. Otherwise it is set to CPM (cyclic consumer protocol machine), when the device is consumer of the particular CR.

Attribute type: Unsigned8

Allowed Value: PPM, CPM

VLAN Prio

This conditional attribute is present when the value of the protocol machine attribute is "PPM". It contains the priority of the frame according to IEEE Std 802.1Q.

Attribute type: Unsigned8

VLAN ID

This conditional attribute is present when the value of the protocol machine attribute is "PPM". It contains the VLAN ID according to IEEE Std 802.1Q.

Attribute type: Unsigned16

Tx Option

This conditional attribute is present when the value of the protocol machine attribute is "PPM". It specifies the provider's transmit options and consists of the following attributes:

RT Class

This attribute contains the provider's communication class.

Attribute type: Unsigned32

Allowed values: RT_CLASS_1, RT_CLASS_2, RT_CLASS_3, RT_CLASS_UDP, RT_CLASS_STREAM

NOTE 1 RT_CLASS_2 is usable in the context of legacy startup only.

Frame Send Offset

This conditional attribute is present when the value of the RT Class attribute is "RT_CLASS_3". It contains the relative send offset to the start of the related reduction ratio and phase. The time base is 1 ns. The value shall be less than the duration of one phase.

Attribute type: Unsigned32

Allowed values: BEST_EFFORT – (mandatory) as soon as possible, 0 – 0x003D08FF for optimized scheduling

Tx Port

This conditional attribute is present when the value of the RT Class attribute is “RT_CLASS_3”. It indicates the transmit port, where the frame shall be sent.

Attribute type: Unsigned8

Allowed values: 0x01 to 0xFF

Startup Mode

This conditional attribute is present when the value of the RT Class attribute is “RT_CLASS_3”. It indicates the startup mode for RT_CLASS_3.

Allowed values: Legacy, Advanced

Media Redundancy

This conditional attribute is present when the value of the RT Class attribute is “RT_CLASS_3”. It indicates the usage of Media Redundancy with Planned Duplication of frames (MRPD).

Allowed values: FALSE, TRUE

Redundant Frame ID

This conditional attribute is present when the value of the Media Redundancy attribute is set to “TRUE”. It contains the identifier of the redundant frame.

Attribute type: Unsigned16

Redundant Frame Send Offset

This conditional attribute is present when the value of the Media Redundancy attribute is set to “TRUE”. It contains the relative send offset to the start of the related reduction ratio and phase. The time base is 1 ns. The value shall be less than the duration of one phase.

Attribute type: Unsigned32

Allowed values: BEST_EFFORT – (mandatory) as soon as possible, 0 – 0x003D08FF for optimized scheduling

Redundant Tx Port

This conditional attribute is present when the value of the Media Redundancy attribute is set to “TRUE”. It indicates the port, where the redundant frame shall be sent.

Attribute type: Unsigned8

Allowed values: 0x01 to 0xFF

DFP

This conditional attribute is present when the value of the RT Class attribute is “RT_CLASS_3”. It indicates the usage of DFP.

Allowed values: FALSE, TRUE

Subframe Position

This conditional attribute is present when the value of the DFP attribute is “TRUE”. It defines the position number of the subframe. The position number shall be strictly increasing within the list of Subframe Data.

Attribute type: Unsigned8

Allowed values: 0x01 to 0x3F for packetizing and unpacking of subframes during transport and end to end; 0x40 to 0x7F for packetizing and unpacking of subframes end to end; 0x00 and 0x80 to 0xFF reserved

Reduction Ratio

This conditional attribute is present when the value of the protocol machine attribute is “PPM”. It contains the reduction ratio of the CR. The actual send cycle is determined by Reduction Ratio multiplied with the send clock.

Attribute type: Unsigned16

Allowed values: see IEC 61158-6-10

Phase

This conditional attribute is present when the value of the protocol machine attribute is “PPM”. It indicates in which particular send cycle the data shall be sent. This parameter depends on the parameter Reduction Ratio.

Attribute type: Unsigned16

Allowed values: 1 to selected Reduction Ratio.

Sequence

This conditional attribute is present when the value of the protocol machine attribute is “PPM”. It contains the position of the data frame in the sending queue. The value 0 shall be used to indicate an undefined sequence.

Attribute type: Unsigned16

Rx Option

This conditional attribute is present when the value of the protocol machine attribute is “CPM”. It specifies the consumer's receive options and consists of the following attributes:

RT Class

This attribute contains the consumer's communication class.

Attribute type: Unsigned32

Allowed values: RT_CLASS_1, RT_CLASS_2, RT_CLASS_3, RT_CLASS_UDP

NOTE 2 RT_CLASS_2 is usable in the context of legacy startup only.

Startup Mode

This conditional attribute is present when the value of the RT Class attribute is “RT_CLASS_3”. It indicates the startup mode of the related AR.

Allowed values: Legacy, Advanced

Media Redundancy

This conditional attribute is present when the value of the RT Class attribute is “RT_CLASS_3”. It indicates the usage of MRPD.

Allowed values: FALSE, TRUE

Redundant Frame ID

This conditional attribute is present when the value of the Media Redundancy attribute is set to “TRUE”. It contains the identifier of the redundant frame.

Attribute type: Unsigned16

Redundancy Watchdog Timer

This conditional attribute is present when the value of the Media Redundancy attribute is set to "TRUE". It contains the value for the redundancy watchdog timer.

Attribute type: Unsigned16

Time Base: 1 s

Allowed values: 0x0001 to 0x0100

Default value: 0x0001

NOTE 3 The redundancy watchdog is meant to detect "static" ring problems (e.g. a cable is pulled). Thus the resolution of the redundancy watchdog timer is relaxed.

DFP

This conditional attribute is present when the value of the RT Class attribute is "RT_CLASS_3". It indicates the usage of DFP.

Allowed values: FALSE, TRUE

Subframe Position

This conditional attribute is present when the value of the DFP attribute is "TRUE". It defines the position number of the subframe. The position number shall be strictly increasing within the list of Subframe Data.

Attribute type: Unsigned8

Allowed values: 0x01 to 0x3F for packetizing and unpacking of subframes during transport and end to end; 0x40 to 0x7F for packetizing and unpacking of subframes end to end; 0x00 and 0x80 to 0xFF reserved

Data Hold Factor

This conditional attribute is present when the value of the protocol machine attribute is "CPM". It contains a factor, which is used to calculate the Data Hold Time. This time is the time interval for holding last output data if no IO data have been received.

The interval for the Data Hold Time is the product of the attribute values of Data Hold Factor, Send Clock Factor, Reduction Ratio and the time base of 31,25 µs related to the monitored consumer. The Data Hold Time shall be equal to or less than 1,92 s if the value of the AR attribute RT Class is 0x01, 0x02 or 0x03 and equal to or less than 49,152 s if the value of the AR attribute RT Class is 0x04.

Attribute type: Unsigned16

Allowed values: 0x0001 to 0x1E00 for RT Class 0x01, 0x02 or 0x03; 0x0001 to 0xF000 for RT Class 0x04

6.3.9.3 RTC service specification

6.3.9.3.1 PPM Set Prov Data

This local service is used to update the provider's transmit buffer with new data. Table 47 shows the parameters of the service.

Table 47 – PPM Set Prov Data

Parameter name	req	cnf
Argument	M	
CREP	M	
Data	M	
Result(+)		S
CREP		M
Result(-)		S
CREP		M
Error Class		M
Error code		M

Argument

The argument shall convey the service specific parameters of the service request.

CREP

This parameter contains the CR's local identifier.

Data

This parameter contains the data to update the transmit buffer.

Result(+)

This parameter indicates that the service request succeeded.

Result(-)

This parameter indicates that the service request failed.

Error Class

This parameter selects the error class.

Attribute type: Unsigned8

Allowed Value: CTXT

Error code

This parameter selects the error code.

Attribute type: Unsigned16

Allowed Value: INVALID_STATE

6.3.9.3.2 PPM Set Prov Status

This local service is used to update the APDU status of the provider's transmit buffer. Table 48 shows the parameters of the service.

Table 48 – PPM Set Prov Status

Parameter name	req	cnf
Argument	M	
CREP	M	
Status	M	
Result(+)		S
CREP		M
Result(-)		S
CREP		M
Error Class		M
Error code		M

Argument

The argument shall convey the service specific parameters of the service request.

CREP

This parameter contains the CR's local identifier.

Status

This parameter contains the APDU status to update for the transmit buffer.

Result(+)

This parameter indicates that the service request succeeded.

Result(-)

This parameter indicates that the service request failed.

Error Class

This parameter selects the error class.

Attribute type: Unsigned8

Allowed Value: CTXT

Error code

This parameter selects the error code.

Attribute type: Unsigned16

Allowed Value: INVALID_STATE

6.3.9.3.3 PPM Activate

This local service is used to activate the provider protocol machine (PPM). Table 49 shows the parameters of the service.

Table 49 – PPM Activate

Parameter name	req	cnf
Argument	M	
CREP	M	
DA	M	
SA	M	
Frame ID	M	
VLAN Prio	M	
VLAN ID	M	
Tx Option	M	
RT Class	M	
Frame Send Offset	C	
Tx Port	C	
Startup Mode	C	
Media Redundancy	C	
Redundant Frame ID	C	
Redundant Frame Offset	C	
Redundant Frame Tx Port	C	
DFP	C	
Subframe Position	C	
Reduction Ratio	M	
Phase	M	
Sequence	M	
Default Values	M	
Default Status	M	
Result(+)		S
CREP		M
Result(-)		S
CREP		M
Error Class		M
Error code		M

Argument

The argument shall convey the service specific parameters of the service request.

CREP

This parameter contains the CR's local identifier.

DA

This parameter contains the destination MAC address to be used for the RTC frame.

SA

This parameter contains the source MAC address to be used for the RTC frame.

Frame ID

This parameter contains the Frame ID to be used for the RTC frame.

VLAN Prio

This parameter contains the VLAN Prio to be used for the RTC frame.

VLAN ID

This parameter contains the VLAN ID to be used for the RTC frame.

Tx Option

This attribute defines the transmit option. It is composed of the following elements:

RT Class

This attribute contains the provider's communication class.

Frame Send Offset

This conditional attribute is present when the value of the RT Class attribute is "RT_CLASS_3". It contains the relative send offset to the start of the related reduction ratio and phase.

Tx Port

This conditional attribute is present when the value of the RT Class attribute is "RT_CLASS_3". It indicates the transmit port, where the frame shall be sent.

Startup Mode

This conditional attribute is present when the value of the RT Class attribute is "RT_CLASS_3". It indicates the startup mode of the related AR.

Media Redundancy

This conditional attribute is present when the value of the RT Class attribute is "RT_CLASS_3". It indicates the usage of MRPD.

Redundant Frame ID

This conditional attribute is present when the value of the Media Redundancy attribute is set to "TRUE". It contains the identifier of the redundant frame.

Redundant Frame Send Offset

This conditional attribute is present when the value of the Media Redundancy attribute is set to "TRUE". It contains the relative send offset to the start of the related reduction ratio and phase.

Redundant Tx Port

This conditional attribute is present when the value of the Media Redundancy attribute is set to "TRUE". It indicates the port, where the redundant frame shall be sent.

DFP

This conditional attribute is present when the value of the RT Class attribute is "RT_CLASS_3". It indicates the usage of DFP.

Subframe Position

This conditional attribute is present when the value of the DFP attribute is "TRUE". It defines the position number of the subframe.

Reduction Ratio

This parameter contains the Reduction Ratio to be used for the RTC frame.

Phase

This parameter contains the Phase to be used for the RTC frame.

Sequence

This parameter contains the Sequence to be used for the RTC frame.

Default Value

This parameter contains the initial data for the transmit buffer.

Default Status

This parameter contains the initial APDU status for the transmit buffer.

Result(+)

This parameter indicates that the service request succeeded.

Result(-)

This parameter indicates that the service request failed.

Error Class

This parameter selects the error class.

Attribute type: Unsigned8

Allowed Value: CTXT

Error code

This parameter selects the error code.

Attribute type: Unsigned16

Allowed Value: INVALID_STATE

6.3.9.3.4 PPM Close

This local service is used to close the provider protocol machine (PPM) and thus to stop the transmission. Table 50 shows the parameters of the service.

Table 50 – PPM Close

Parameter name	req	cnf
Argument	M	
CREP	M	
Result(+)		M
CREP		M

Argument

The argument shall convey the service specific parameters of the service request.

CREP

This parameter contains the CR's local identifier.

Result(+)

This parameter indicates that the service request succeeded.

6.3.9.3.5 PPM Start

This local service is used to start the transmission of the provider protocol machine (PPM). Table 51 shows the parameters of the service.

Table 51 – PPM Start

Parameter name	ind
Argument	M
CREP	M

Argument

The argument shall convey the service specific parameters of the service indication.

CREP

This parameter contains the CR's local identifier.

6.3.9.3.6 PPM Error

This local service is used to indicate an error during transmission of the provider protocol machine (PPM). Table 52 shows the parameters of the service.

Table 52 – PPM Error

Parameter name	ind
Argument	M
CREP	M
No Data Send	M

Argument

The argument shall convey the service specific parameters of the service indication.

CREP

This parameter contains the CR's local identifier.

No Data Send

This parameter indicates the failure of data transmission.

6.3.9.3.7 CPM Get cons data

This local service is used to read data from a consumer's receive buffer. Table 53 shows the parameters of the service.

Table 53 – Get cons data

Parameter name	req	cnf
Argument	M	
CREP	M	
Result(+)		S
CREP		M
Data		M
Result(-)		S
CREP		M
Error Class		M
Error code		M

Argument

The argument shall convey the service specific parameters of the service request.

CREP

This parameter contains the CR's local identifier.

Result(+)

This parameter indicates that the service request succeeded.

Data

This parameter contains the data from the receive buffer.

Result(-)

This parameter indicates that the service request failed.

Error Class

This parameter selects the error class.

Attribute type: Unsigned8

Allowed Value: CTXT

Error code

This parameter selects the error code.

Attribute type: Unsigned16

Allowed Value: INVALID_STATE

6.3.9.3.8 CPM Get cons status

This local service is used to read the APDU status from the consumer's receive buffer. Table 54 shows the parameters of the service.

Table 54 – CPM Get cons status

Parameter name	req	cnf
Argument	M	
CREP	M	
Result(+)		S
CREP		M
Status		M
Recv Counter		M
Result(-)		S
CREP		M
Error Class		M
Error code		M

Argument

The argument shall convey the service specific parameters of the service request.

CREP

This parameter contains the CR's local identifier.

Result(+)

This parameter indicates that the service request succeeded.

Status

This parameter contains the APDU status.

Recv Counter

This parameter contains the receive counter.

Result(-)

This parameter indicates that the service request failed.

Error Class

This parameter selects the error class.

Attribute type: Unsigned8

Allowed Value: CTXT

Error code

This parameter selects the error code.

Attribute type: Unsigned16

Allowed Value: INVALID_STATE

6.3.9.3.9 CPM Set RedRole

This local service is used to set the redundancy status of the CR. Table 55 shows the parameters of the service.

Table 55 – CPM Set RedRole

Parameter name	req	cnf
Argument	M	
CREP	M	
Red Role	M	
Result(+)		S
CREP		M
Result(-)		S
CREP		M
Error Class		M
Error code		M

Argument

The argument shall convey the service specific parameters of the service request.

CREP

This parameter contains the CR's local identifier.

Red Role

This parameter determines the redundancy role (primary, backup) of the CR.

Result(+)

This parameter indicates that the service request succeeded.

Result(-)

This parameter indicates that the service request failed.

Error Class

This parameter selects the error class.

Attribute type: Unsigned8

Allowed Value: CTXT

Error code

This parameter selects the error code.

Attribute type: Unsigned16

Allowed Value: INVALID_STATE

6.3.9.3.10 CPM Activate

This local service is used to activate the consumer protocol machine (CPM). Table 56 shows the parameters of the service.

Table 56 – CPM Activate

Parameter name	req	cnf
Argument	M	
CREP	M	
DA	M	
SA	M	
Frame ID	M	
Rx Option	M	
RT Class	M	
Startup Mode	C	
Media Redundancy	C	
Redundant Frame ID	C	
Redundancy Watchdog Timer	C	
DFP	C	
Subframe Position	C	
Expected Length	M	
Start Ton	M	
Datahold Factor	M	
Default Value	M	
Default Status	M	
Result(+)		S
CREP		M
Result(-)		S
CREP		M
Error Class		M
Error code		M

Argument

The argument shall convey the service specific parameters of the service request.

CREP

This parameter contains the CR's local identifier.

DA

This parameter shall be used for the destination MAC address.

SA

This parameter shall be used for the source MAC address.

Frame ID

This parameter contains the value of the corresponding attribute of the CR ASE object.

Rx Option

This conditional attribute specifies the consumer's receive options and consists of the following attributes:

RT Class

This attribute contains the consumer's communication class.

Startup Mode

This conditional attribute is present when the value of the RT Class attribute is "RT_CLASS_3". It indicates the startup mode of the related AR.

Media Redundancy

This conditional attribute is present when the value of the RT Class attribute is "RT_CLASS_3". It indicates the usage of MRPD.

Redundant Frame ID

This conditional attribute is present when the value of the Media Redundancy attribute is set to "TRUE". It contains the identifier of the redundant frame.

Redundancy Watchdog Timer

This conditional attribute is present when the value of the Media Redundancy attribute is set to "TRUE". It contains the value for the redundancy watchdog timer.

DFP

This conditional attribute is present when the value of the RT Class attribute is "RT_CLASS_3". It indicates the usage of DFP.

Subframe Position

This conditional attribute is present when the value of the DFP attribute is "TRUE". It defines the position number of the subframe.

Expected Length

This parameter contains the expected length of the CR.

Start Ton

This parameter shall be set to true if the timeout shall be monitored immediately. Otherwise it starts with the reception of the first frame.

Datahold Factor

This parameter contains the datahold factor.

Default Value

This parameter contains the initial value of the receive buffer's data.

Default Status

This parameter contains the initial value of the receive buffer's APDU status.

Result(+)

This parameter indicates that the service request succeeded.

Result(-)

This parameter indicates that the service request failed.

Error Class

This parameter selects the error class.

Attribute type: Unsigned8

Allowed Value: CTXT

Error code

This parameter selects the error code.

Attribute type: Unsigned16

Allowed Value: INVALID_STATE

6.3.9.3.11 CPM NoData

This local service is used to indicate that the cyclic consumer protocol machine (CPM) did not receive data within the data hold timer. Table 57 shows the parameters of the service.

Table 57 – CPM NoData

Parameter name	req	cnf
Argument	M	
CREP	M	
Result(+)		M
CREP		M

Argument

The argument shall convey the service specific parameters of the service request.

CREP

This parameter contains the CR's local identifier.

Result(+)

This parameter indicates that the service request succeeded.

6.3.9.3.12 CPM Stop

This local service is used to stop the CPM and thus the reception. Table 58 shows the parameters of the service.

Table 58 – CPM Stop

Parameter name	req	cnf
Argument	M	
CREP	M	
Result(+)		M
CREP		M

Argument

The argument shall convey the service specific parameters of the service request.

CREP

This parameter contains the CR's local identifier.

Result(+)

This parameter indicates that the service request succeeded.

6.3.9.3.13 CPM New Data Indication

This local service is used to indicate an update of the CPM data. Table 59 shows the parameters of the service.

Table 59 – CPM New Data Indication

Parameter name	req	cnf
Argument	M	
CREP	M	
Result(+)		M
CREP		M

Argument

The argument shall convey the service specific parameters of the service request.

CREP

This parameter contains the CR's local identifier.

Result(+)

This parameter indicates that the service request succeeded.

6.3.9.4 Invocation of the RTC object

There is one RTC object for each CR of each application relationship.

6.3.10 Real time acyclic ASE

6.3.10.1 Overview

The real time protocol acyclic (RTA) is a concept of reading and writing acyclic data by means of acknowledged services. It uses IEEE Std 802.3 or UDP services.

6.3.10.2 RTA class specification

6.3.10.2.1 General

The RTA ASE defines for each CR one RTA object type:

6.3.10.2.2 Template

A RTA object is described by the following template:

ASE: RTA ASE

CLASS: RTA

CLASS ID: not used

PARENT CLASS: TOP

ATTRIBUTES:

- 1 (m) Key Attribute: CREP
- 2 (m) Attribute: Protocol machine Parameter
- 2.1 (m) Attribute: DA
- 2.2 (m) Attribute: SA
- 2.3 (m) Attribute: Frame ID
- 2.4 (m) Attribute: VLAN Prio
- 2.5 (m) Attribute: VLAN ID
- 2.6 (m) Attribute: RTA Timeout Factor

2.7	(m) Attribute:	M Retry
2.8	(m) Attribute:	Send Seq Num
2.9	(m) Attribute:	Ack Seq Num
2.10	(m) Attribute:	Dst IP
2.11	(m) Attribute:	Src IP
2.12	(m) Attribute:	Transport

SERVICES:

1	(m) OpsService:	APMS Activate
2	(m) OpsService:	APMR Activate
3	(m) OpsService:	APMS A Data
4	(m) OpsService:	APMR A Data
5	(m) OpsService:	APMR Ack
6	(m) OpsService:	APMS Error
7	(m) OpsService:	APMR Error
8	(m) OpsService:	APMS Close
9	(m) OpsService:	APMR Close

6.3.10.2.3 Attributes**CREP**

This key attribute identifies the instance of the protocol machine to which the data belong.

Attribute type: Unsigned32

Protocol machine Parameter

This attribute contains the following attributes to describe the behavior of the protocol machines:

DA

This attribute contains the physical address of the destination device according to IEEE Std 802.3.

Attribute type: OctetString[6]

SA

This attribute contains the physical address of the device according to IEEE Std 802.3.

Attribute type: OctetString[6]

Frame ID

This attribute contains the identifier of the data within the frame.

Attribute type: Unsigned16

VLAN Prio

This attribute contains the priority of the frame according to IEEE Std 802.1Q.

Attribute type: Unsigned8

Allowed values: LOW, HIGH

VLAN ID

This attribute contains the VLAN ID according to IEEE Std 802.1Q.

Within an NME domain this value shall be according to the network definition (NonStream VID). Otherwise the value shall be 0.

Attribute type: Unsigned16

RTA Timeout Factor

This attribute contains the timeout factor within which a sent RTA Data frame shall be acknowledged (ACK).

Attribute type: Unsigned16

Time Base: 100 ms

Allowed values: 1 up to 100 mandatory, 101 to 216-1 optional

M Retry

This attribute contains the number of retries if no ACK received within RTA Timeout Factor. The value range is from 3 to 15 retries.

Attribute type: Unsigned16

Send Seq Num

This attribute contains the Sender Sequence Number.

Attribute type: Unsigned16

Allowed values: see IEC 61158-6-10

Ack Seq Num

This attribute contains the Acknowledge Sequence Number.

Attribute type: Unsigned16

Allowed values: see IEC 61158-6-10

Dst IP

This attribute contains the destination IP address if UDP Services shall be used.

Attribute type: Unsigned32

Src IP

This attribute contains the local IP address if UDP Services shall be used.

Attribute type: Unsigned32

Transport

This attribute contains the requested conveyance.

Attribute type: Unsigned8

Allowed values: RTC, UDP

6.3.10.3 RTA service specification

6.3.10.3.1 APMS Activate

This local service shall be used to activate the Acyclic Protocol Machine Sender (APMS). Table 60 shows the parameters of the service.

Table 60 – APMS Activate

Parameter name	req	cnf
Argument	M	
CREP	M	
DA	M	
SA	M	
Frame ID	M	
VLAN Prio	M	
VLAN ID	M	
RTA Timeout Factor	M	
M Retry	M	

Parameter name	req	cnf
Transport	M	
Dst IP	O	
Src IP	O	
Result(+)		S
CREP		M
Result(-)		S
CREP		M
Error Class		M
Error code		M

Argument

The argument shall convey the service specific parameters of the service request. These parameters shall correspond with the ASE attributes.

CREP

This parameter identifies the instance of the protocol machine.

DA

This parameter shall be used for the physical address of the destination device according to IEEE Std 802.3.

SA

This parameter shall be used for the physical address of the device according to IEEE Std 802.3.

Frame ID

This parameter shall be used for the Frame ID.

VLAN Prio

This parameter shall contain the priority of the frame according to IEEE Std 802.1Q.

VLAN ID

This parameter shall contain the VLAN ID according to IEEE Std 802.1Q.

RTA Timeout Factor

This parameter shall contain the timeout factor.

M Retry

This parameter shall contain the number of retries.

Dst IP

This parameter shall contain the destination IP address if UDP services shall be used. Not used if IEEE Std 802.3 services shall be used.

Src IP

This parameter shall contain the local IP address if UDP services shall be used. Not used if IEEE Std 802.3 services shall be used.

Transport

This parameter shall contain the requested conveyance.

Result(+)

This parameter indicates that the service request succeeded.

Result(-)

This parameter indicates that the service request failed.

Error Class

This parameter selects the error class.

Attribute type: Unsigned16

Allowed Value: CTXT

Error code

This parameter selects the error code.

Attribute type: Unsigned16

Allowed Value: INVALID_STATE

6.3.10.3.2 APMR Activate

This local service shall be used to activate the Acyclic Protocol Machine Receiver (APMR). Table 61 shows the parameters of the service.

Table 61 – APMR Activate

Parameter name	req	cnf
Argument	M	
CREP	M	
DA	M	
SA	M	
Frame ID	M	
VLAN Prio	M	
VLAN ID	M	
Transport	M	
Dst IP	O	
Src IP	O	
Result(+)		S
CREP		M
Result(-)		S
CREP		M
Error Class		M
Error code		M

Argument

The argument shall convey the service specific parameters of the service request. These parameters shall correspond with the ASE attributes.

CREP

This parameter identifies the instance of the protocol machine.

DA

This parameter shall be used for the physical address of the destination device according to IEEE Std 802.3.

SA

This parameter shall be used for the physical address of the device according to IEEE Std 802.3.

Frame ID

This parameter shall be used for the Frame ID.

VLAN Prio

This parameter shall contain the priority of the frame according to IEEE Std 802.1Q

VLAN ID

This parameter shall contain the VLAN ID according to IEEE Std 802.1Q.

Transport

This parameter shall contain the requested conveyance.

Dst IP

This parameter shall contain the destination IP address if UDP services shall be used. Not used if IEEE Std 802.3 services shall be used.

Src IP

This parameter shall contain the local IP address if UDP services shall be used. Not used if IEEE Std 802.3 services shall be used.

Result(+)

This parameter indicates that the service request succeeded.

Result(-)

This parameter indicates that the service request failed.

Error Class

This parameter selects the error class.

Attribute type: Unsigned16

Allowed Value: CTXT

Error code

This parameter selects the error code.

Attribute type: Unsigned16

Allowed Value: INVALID_STATE

6.3.10.3.3 APMS A Data

This service shall be used to send RTA Data. After a RTA Data frame was sent, it shall be acknowledged within a specified time (based on RTA Timeout Factor). If no ACK arrives the data frame will be resent a specified number of times (M Retry). If no ACK arrived at all an APMS Error will be indicated (TIMEOUT). The communication uses sequence numbers to ensure proper sequence of data. Both communication endpoints have to be setup for communication to ensure proper sequence number setup. Only one service can be handled at a time. So the service shall be finished before a new one can be issued (INVALID_STATE result shall be returned if not finished). Table 62 shows the parameters of the service.

Table 62 – APMS A Data

Parameter name	req	cnf
Argument	M	
CREP	M	
Data	M	
Result(+)		S
CREP		M
Result(-)		S
CREP		M
ERRCLS		M
ERRCODE		M

Argument

The argument shall convey the service specific parameters of the service request. These parameters shall correspond with the ASE attributes.

CREP

This parameter identifies the instance of the protocol machine.

Data

This parameter shall be used for RTA-SDU data to be sent. The length is limited by ADPU size.

Result(+)

This parameter indicates that the service request succeeded.

Result(-)

This parameter indicates that the service request failed.

ERRCLS

This parameter selects the error class.

Attribute type: Unsigned16

Allowed Value: CTXT

ERRCODE

This parameter selects the error code.

Attribute type: Unsigned16

Allowed Value: INVALID_STATE

6.3.10.3.4 APMR A Data

This local service is used to receive RTA data. Table 63 shows the parameters of the service.

Table 63 – APMR A Data

Parameter name	ind
Argument	M
CREP	M
Data	M

Argument

The argument shall convey the service specific parameters of the service request.

CREP

This parameter identifies the instance of the protocol machine.

Data

This parameter contains the received RTA-SDU data.

Result(+)

This parameter indicates that the service request succeeded.

6.3.10.3.5 APMR Ack

This service shall be used to send a RTA ACK after reception of a RTA Data. After RTA Data was received, it shall be acknowledged by sending an ACK. Sending the ACK signals the sender that the Data was successfully received and further data may be sent. If the ACK will not be sent, the sender retries and will timeout if no ACK arrives at all. Only one service call can be handled at a time. So the service shall be finished before a new one can be issued (INVALID_STATE result is set in not finished). Table 64 shows the parameters of the service.

Table 64 – APMR Ack

Parameter name	req	cnf
Argument	M	
CREP	M	
Result(+)		S
CREP		M
Result(-)		S
CREP		M
ERRCLS		M
ERRCODE		M

Argument

The argument shall convey the service specific parameters of the service request.

CREP

This parameter identifies the instance of the protocol machine.

Result(+)

This parameter indicates that the service request succeeded.

Result(-)

This parameter indicates that the service request failed.

ERRCLS

This parameter selects the error class.

Attribute type: Unsigned16

Allowed Value: CTXT

ERRCODE

This parameter selects the error code.

Attribute type: Unsigned16

Allowed Value: INVALID_STATE

6.3.10.3.6 APMS Error

This local service is used to indicate an APMS error. Table 65 shows the parameters of the service.

Table 65 – APMS Error

Parameter name	ind
Argument	M
CREP	M
ERRCLS	M
ERRCODE	M

Argument

The argument shall convey the service specific parameters of the service request.

CREP

This parameter identifies the instance of the protocol machine.

ERRCLS

This parameter selects the error class.

Attribute type: Unsigned16

Allowed Value: see Table 66

ERRCODE

This parameter selects the error code.

Attribute type: Unsigned16

Allowed Value: see Table 66

Table 66 – APMS Error ERRCLS/ERRCODE

ERRCLS	ERRCODE	Meaning
PROTOCOL	TIMEOUT	Transmission timeout occurred
PROTOCOL	SEQNUM	Sequence number mismatch
PROTOCOL	LMPM	LMPM error

6.3.10.3.7 APMR Error

This local service is used to indicate an APMR error. Table 67 shows the parameters of the service.

Table 67 – APMR Error

Parameter name	ind
Argument	M
CREP	M
ERRCLS	M
ERRCODE	M

Argument

The argument shall convey the service specific parameters of the service request.

CREP

This parameter identifies the instance of the protocol machine.

ERRCLS

This parameter selects the error class.

Attribute type: Unsigned16

Allowed Value: see Table 68

ERRCODE

This parameter selects the error code.

Attribute type: Unsigned16

Allowed Value: see Table 68

Table 68 – APMR Error ERRCLS/ERRCODE

ERRCLS	ERRCODE	Meaning
PROTOCOL	SEQNUM	Sequence number of received data mismatch
PROTOCOL	LMPM	LMPM error

6.3.10.3.8 APMS_Close

This local service shall be used to close the APMS. Table 69 shows the parameters of the service.

Table 69 – APMS_Close

Parameter name	req	cnf
Argument	M	
CREP	M	
ErrCode	U	
Result(+)		S
CREP		M

Argument

The argument shall convey the service specific parameters of the service request.

CREP

This parameter identifies the instance of the protocol machine.

ErrCode

This optional parameter selects the error code.

Attribute type: Unsigned16

Allowed Value: See corresponding ASE attribute

Result(+)

This parameter indicates that the service request succeeded.

6.3.10.3.9 APMR_Close

This local service shall be used to close the APMR. Table 70 shows the parameters of the service.

Table 70 – APMR_Close

Parameter name	req	cnf
Argument	M	
CREP	M	
Result(+)		S
CREP		M

Argument

The argument shall convey the service specific parameters of the service request.

CREP

This parameter identifies the instance of the protocol machine.

Result(+)

This parameter indicates that the service request succeeded.

6.3.10.4 Invocation of the RTA object

There is one RTA object for each application relationship.

6.3.11 Discovery and basic configuration ASE

6.3.11.1 Overview

The discovery and basic configuration is an Application Service Element for reading and writing basic network configuration parameters and discovering devices by means of different filter criteria. It uses IEEE Std 802.3 services.

The Discovery and basic Configuration Protocol (DCP) ASE is focused towards a particular Ethernet interface. Be aware that a particular device can have more than one Ethernet interface. The DCP ASE itself has no knowledge whether several interfaces belong to the same device; other ASE (e.g. simple network management ASE or else Communication Interface Management ASE) provide such means.

Although DCP uses the word “device”, the scope used here is the “interface”.

6.3.11.2 DCP class specification

6.3.11.2.1 Template

A DCP object is described by the following template:

ASE:	DCP ASE
CLASS:	DCP
CLASS ID:	not used
PARENT CLASS:	IEEE Std 802.1AB
ATTRIBUTES:	
1	(m) Key Attribute: Implicit
2	(m) Attribute: List of Device Options
2.1	(m) Attribute: Device Option
2.2	(m) Attribute: Device Suboption
3	(m) Attribute: IP Option
3.1	(m) Attribute: MAC Address
3.2	(o) Attribute: IP Parameter
3.2.1	(m) Attribute: IP Address
3.2.2	(m) Attribute: Subnet Mask
3.2.3	(m) Attribute: Standard Gateway
3.2.4	(o) Attribute: DNS Server Addresses
4	(m) Attribute: Device Properties Option
4.1	(m) Attribute: Name Of Station
4.2	(m) Attribute: List of Ports
4.2.1	(m) Attribute: Alias Name Of Station
4.3	(m) Attribute: Device Vendor
4.4	(m) Attribute: Device Ident
4.5	(m) Attribute: Device Role
4.6	(o) Attribute: Device Instance
4.7	(o) Attribute: OEM Device Ident
4.8	(o) Attribute: RSI Properties
5	(o) Attribute: DHCP Option
5.1	(o) Attribute: Host Name
5.2	(o) Attribute: Vendor Specific Information
5.3	(o) Attribute: Server Identifier
5.4	(o) Attribute: Parameter Request List
5.5	(o) Attribute: Class Identifier
5.6	(o) Attribute: DHCP Client Identifier
5.7	(o) Attribute: Fully Qualified Domain Name
5.8	(o) Attribute: UUID/GUID-based Client Identifier
5.9	(m) Attribute: Control DHCP for Address Resolution
6	(o) Attribute: Device Initiative Option
6.1	(m) Attribute: Device Initiative
7	(o) Attribute: Manufacturer Specific Option
7.1	(m) Attribute: List of Manufacturer Specific Suboptions
7.1.1	(m) Attribute: Manufacturer Specific Suboption
7.1.2	(m) Attribute: Manufacturer OUI
7.1.3	(m) Attribute: Manufacturer Specific String
8	(m) Attribute: Protocol machine Parameter
8.1	(m) Attribute: Max Retry Limit
8.2	(m) Attribute: Set/Get Timeout
8.3	(m) Attribute: Identify Timeout
8.4	(m) Attribute: TagControlInformation

8.4.1	(m) Attribute:	VLAN ID
8.4.2	(m) Attribute:	Priority
8.5	(m) Attribute:	Client Hold Time
8.6	(o) Attribute:	Initial Delay
8.5	(o) Attribute:	Number of DCP-Hello-ReqPDUs
8.5	(o) Attribute:	Hello Interval
9	(o) Attribute:	NME Properties Option
9.1	(m) Attribute:	NME Domain
9.1.1	(m) Attribute:	NME Domain Name
9.1.1	(m) Attribute:	NME Domain UUID
9.3	(o) Attribute:	NME Prio
9.3.1	(m) Attribute:	NME Priority
9.4	(o) Attribute:	NME Parameter
9.4.1	(m) Attribute:	NME Parameter UUID
9.5	(m) Attribute:	NME Name
9.5.1	(o) Attribute:	NME Name UUID
9.6	(o) Attribute:	CIM Interface
9.6.1	(m) Attribute:	CIM Server Ident
9.6.2	(m) Attribute:	CIM Server Instance

SERVICES:

1	(m) OpsService:	Get
2	(m) OpsService:	Set
3	(m) OpsService:	Local Get Command
4	(m) OpsService:	Local Set Command
5	(m) OpsService:	Identify
6	(o) OpsService:	Hello

6.3.11.2.2 Attributes

Implicit

The key attribute Implicit indicates that the DCP object is implicitly addressed by the service.

List of Device Options

This attribute list shall contain all options and suboptions which are supported by the device. It acts as an inventory over the supported DCP options and suboptions:

Device Option

This attribute contains an option that is supported by the device.

Attribute type: Unsigned8

Allowed values: IP, DEVICE_PROPERTIES, DHCP, CONTROL, DEVICE_INITIATIVE, NME_OPTION, MANUFACTURER_SPECIFIC_128, ... MANUFACTURER_SPECIFIC_254, ALL_SELECTOR

Device Suboption

This attribute contains a suboption related to a specific option that is supported by the device.

Attribute type: Unsigned8

Allowed values:

On Device Option = IP:

MAC_ADDRESS, IP_PARAMETER, FULL_IP_SUITE

On Device Option = DEVICE_PROPERTIES:

DEVICE_VENDOR, NAME_OF_STATION, DEVICE_ID, DEVICE_ROLE,
DEVICE_OPTIONS, ALIAS_NAME, DEVICE_INSTANCE, OEM_DEVICE_ID,
STANDARD_GATEWAY, RSI_PROPERTIES

On Device Option = DHCP:

DHCP_PARAMETER

On Device Option = CONTROL:

START, STOP, SIGNAL, FACTORY_RESET, RESET_TO_FACTORY

On Device Option = DEVICE_INITIATIVE:

DEVICE_INITIATIVE_STATE

On Device Option = NME_OPTION:

NME_DOMAINNAME, NME_PRIO, NME_PARAMETER_UUID, NME_NAME,
CIM_INTERFACE

On Device Option = MANUFACTURER_SPECIFIC_128, ...
MANUFACTURER_SPECIFIC_254:

MANUFACTURER_SPECIFIC_0, ... MANUFACTURER_SPECIFIC_255

IP Options

This attribute consists of the following attributes:

MAC Address

This attribute contains the physical address of the Ethernet interface according to IEEE Std 802.3 MAC address.

The MAC Address shall be nonvolatile. It can be read by means of the Get service or it can be used within the Identify service as a filter. It is not possible to alter the MAC address by using the Set service.

Attribute type: OctetString[6]

IP Parameter

The optional IP Parameter shall have the same meaning as the corresponding attributes within the IP suite ASE as defined in 6.3.17.5. This attribute list contains the following attributes:

IP Address

This attribute contains the IP address of the Ethernet interface according to IETF RFC 791 and IETF RFC 6890.

Attribute type: Unsigned32

Default Value: 0.0.0.0

Subnet Mask

This attribute contains the subnet mask of the Ethernet interface according to IETF RFC 791 and IETF RFC 6890.

Attribute type: Unsigned32

Default Value: 0.0.0.0

Standard Gateway

This attribute contains the IP address of the standard gateway according to IETF RFC 791 and IETF RFC 6890.

Attribute type: Unsigned32

Default Value: 0.0.0.0

DNS Server Addresses

This attribute contains up to 4 DNS server IP addresses. The value “0.0.0.0” indicates no address.

Attribute type: Unsigned32[4]

Default Value: 0.0.0.0

Device Properties Option

This attribute contains the following suboption attributes:

Name Of Station

This attribute contains the name of the interface set by local means or by the Set service. The values “port-xyz” or “port-xyz-rstuv” where x,y,z is in the range “0”-“9” from “001” up to “255” and r, s, t, u, v is in the range “0”-“9” from “00000” up to “65535” shall not be used.

The attribute Name Of Station is in contrast to its misleading name a Name Of Interface, since as stated above the focus of the DCP ASE is a particular end station component.

Attribute type: VisibleString[240]

Default Value: “” (empty string)

List of Ports

This attribute contains for each of the interface’s ports the following attributes.

Alias Name Of Station

This attribute contains an alias name for the interface derived from the IEEE Std 802.1AB ASE information. For each port at most one alias name exists.

A particular alias name is derived from the peers Port ID and Chassis ID; if exactly one neighbor is detected on that port. Otherwise (i.e. no neighbor or multiple neighbors are detected on this port) no alias name is built for this port.

If the peers Port ID contains the value “port-xyz” or “port-xyz-rstuv” (where x,y,z is in the range “0”-“9” from 001 up to 255 and r, s, t, u, v is in the range “0”-“9” from 00000 up to 65535), the alias name is built by concatenating the peers Port ID, a “.” and the peers Chassis ID.

If the peers Port ID consists of more than one token (separated by “.”) and the first token contains the value “port-xyz” or “port-xyz-rstuv” (where x,y,z is in the range “0”-“9” from 001 up to 255 and r, s, t, u, v is in the range “0”-“9” from 00000 up to 65535), the alias name is set to the peers Port ID.

An empty string (i.e. “”) indicates that no alias name exists on this port.

The Alias Name Of Station may only be used as a filter in the Identify service. The services Get, Set and Hello do not offer access to this attribute.

NOTE Example for Alias Name Of Station = “port-001.mill-1.factory3.org”.

Attribute type: VisibleString[255]

Device Role

This attribute contains a bit map to indicate the device roles on this Ethernet interface.

If it may act as IO device, indicate this role using the bits IO_DEVICE and IO_MULTIDEVICE. IO_DEVICE indicates thereby that at most one IO device instance is active, IO_MULTIDEVICE that multiple IO device instances are active in parallel.

IO_CONTROLLER indicates that it is acting act as IO controller.

IO_SUPERVISOR indicates that it is acting as IO supervisor.

Attribute type: Unsigned8

Allowed values: IO_DEVICE, IO_CONTROLLER, IO_MULTIDEVICE, IO_SUPERVISOR

Device Vendor

This attribute contains a vendor specific string. It can be the type of the device or an ordering number.

Attribute type: VisibleString

Device Ident

This attribute contains the Device Ident Number as described in 7.4.1.

Attribute type: Unsigned32

Device Instance

This attribute contains the instance or node number of the IO device's object UUID.

Attribute type: Unsigned16

OEM Device Ident

This optional attribute contains the OEM Device Ident Number as described in 7.4.1.

Devices built by using separately hand able OEM parts (e.g. pluggable interface submodules) provide their own Device Ident as usual. The Device Ident of the OEM part can additionally be offered using OEM Device Ident. In this case the OEM shall also provide the I&M5 Data as described in the I&M Data class.

Attribute type: Unsigned32

RSI Properties

This attribute contains a bit map to indicate all available transport protocol according to the MAC Address.

Attribute type: Unsigned16

Allowed values: IPSTACK_AVAILABLE, CLRPC_AVAILABLE, RSI_AR_INTERFACE, RSI_AR_READIMPLICIT_INTERFACE, RSI_CIM_INTERFACE, RSI_CIM_READIMPLICIT_INTERFACE

DHCP Option

This optional attribute consists of the following suboption attributes.

Most of the DHCP suboptions are optional. If a particular attribute is supported, it can be in the state activated or deactivated. In the state activated a value is provided for the attribute by the get service indicated by having a length different from 0, otherwise the length of the returned attribute is 0. A suboption is deactivated by setting the length of the suboption attribute to 0 using the set service. Activated suboptions are contained in the DHCP protocol frames.

Host Name

This optional attribute contains the value according to IETF RFC 2132.

Attribute type: see IETF RFC 2132

Vendor Specific Information

This optional attribute contains the value according to IETF RFC 2132.

Attribute type: see IETF RFC 2132

Server Identifier

This optional attribute contains the value according to IETF RFC 2132.

Attribute type: see IETF RFC 2132

Parameter Request List

This optional attribute contains the value according to IETF RFC 2132.

Attribute type: see IETF RFC 2132

Class Identifier

This optional attribute contains the value according to IETF RFC 2132.

Attribute type: see IETF RFC 2132

DHCP Client Identifier

This optional attribute contains the client identifier for the usage of Dynamic Host Configuration Protocol (DHCP)

Attribute type: see IETF RFC 2132

Fully Qualified Domain Name

This optional attribute contains the value according to IETF RFC 2132.

Attribute type: see IETF RFC 2132

UUID/GUID-based Client Identifier

This optional attribute contains the value according to IETF RFC 2132.

Attribute type: see IETF RFC 2132

Control DHCP for Address Resolution

This mandatory attribute allows controlling the general behavior of DHCP.

Attribute type: Unsigned8

Allowed values: DONT_USE_DHCP, DONT_USE_AND_RESET_DHCP_OPTIONS, USE_DHCP

Device Initiative Option

This optional attribute contains the following suboption attributes:

Device Initiative

This attribute contains the value to enable or disable the issuing of the Hello service.

Attribute type: Unsigned16

Allowed values: ON, OFF

Manufacturer Specific Option

This optional attribute contains the following suboption attributes:

List of Manufacturer Specific Suboptions

This attribute list contains the following attributes:

Manufacturer Specific Suboption

This attribute contains the manufacturer specific value.

Attribute type: Unsigned8

Manufacturer OUI

This attribute contains the organizational unique identifier to identify the vendor.

Attribute type: OctetString[3]

Manufacturer Specific String

This attribute contains the individual information.

Attribute type: OctetString

Protocol machine Parameter

This attribute contains the following attributes to describe the behavior of the protocol machines:

Max Retry Limit

This attribute contains the maximum limit to repeat a service in case no answer has been received by the client.

Attribute type: Unsigned8

Default Value: 2

Allowed values: 0 to 15

Set/Get Timeout

This attribute contains the maximum value in seconds, which a client waits for a unicast response.

Attribute type: Unsigned16

Default Value: 1

Allowed values: 1 to 30

Identify Timeout

This attribute contains the maximum value in milliseconds, which a client waits for all possible identify responses. It shall be greater than the calculated Response Delay Time using the Response Delay Factor from the request. It shall be 400 ms if the Response Delay Factor equals one and rounded up to a full second plus 1 s otherwise.

Attribute type: Unsigned16

Allowed values: 400 to 65 000

Tag Control Information

This attribute contains the following attributes:

VLAN ID

This attribute contains the VLAN ID according to IEEE Std 802.1Q.

Attribute type: Unsigned16

Priority

This attribute contains the priority tag of the frame according to IEEE Std 802.1Q.

Attribute type: Unsigned8

Allowed Value: 0

Client Hold Time

This attribute contains the maximum value in seconds, which a server shall only allow Get or Set services from the last active client. Service requests from other server shall be ignored before.

Attribute type: Unsigned16

Allowed Value: 3

Initial Delay

This parameter contains the delay time for the first DCP-Hello-ReqPDU. This parameter can be modified by CIM as FSU parameter.

Time base: 1 ms

Parameter type: Unsigned32

Allowed values: 0, 50, 100, 500, 1 000

Number of DCP-Hello-ReqPDUs

This parameter contains the number of DCP-Hello-ReqPDUs that shall be issued with the service request. This parameter can be modified by CIM as FSU parameter.

Parameter type: Unsigned32

Allowed values: 1 to 15

Default Values: 3

Hello Interval

This parameter contains the time interval between transmitting the first and each subsequent DCP-Hello-ReqPDU. This parameter can be modified by CIM as FSU parameter.

Parameter type: Unsigned16

Allowed values: 30_MILLISECONDS, 50_MILLISECONDS, 100_MILLISECONDS, 300_MILLISECONDS, 500_MILLISECONDS, 1_SECOND

Default Values: 30_MILLISECONDS

NME Properties Option

This optional attribute contains the following suboption attributes:

NME Domain

This attribute consists of the following attributes.

NME Domain Name

This writeable attribute contains the name of the NME domain to which this end station belongs.

Attribute type: OctetString[240]

NME Domain UUID

This writeable attribute contains the MD5 hash of the NME Domain Name and is used as shorter identification of the NME Domain Name. The calculation of the UUID shall be done by the engineering tool. If no domain name is assigned, the length of the NME Domain Name is zero and the corresponding NME Domain UUID is NIL.

Attribute type: UUID

NME Prio

This optional attribute exists if this NME instance can act as CNC. It also indicates the availability of a DeviceAccess controller.

NME Priority

This attribute contains the priority of this NME. This attribute shall only be available together with the attribute NME Management Addr. The NME with the highest priority acts as the “Best NME” and is therefore responsible for the NME domain.

If one or more NMEs have the same priority, the NME with the smallest EUI-48 address will act as the “Best NME”.

Attribute type: Unsigned16

NME Parameter

This optional attribute contains the following attributes:

NME Parameter UUID

This attribute contains a UUID identifying a set of NME parameters. This UUID is calculated by the NME and written to the CIM server. NIL indicates a non-parameterized NME ASE.

Attribute type: UUID

NME Name

This optional attribute contains the following attributes:

NME Name UUID

This optional attribute contains a UUID. If present, this UUID identifies the NME configuring the CIM. The UUID is calculated by the NME and written to the CIM. NIL indicates that the CIM NetConf Data Adjust record has not yet been written.

Attribute type: UUID

CIM Interface

This optional attribute shall be present, if the CIM Interface exists according to the MAC Address. This attribute consists of the following attributes.

CIM Server Ident

This attribute contains the Device Ident Number of the CIM interface as described in 7.4.1.

Attribute type: Unsigned32

CIM Server Instance

This attribute contains the instance of the CIM interface.

Attribute type: Unsigned16

6.3.11.3 DCP service specification**6.3.11.3.1 Get**

The Get service is used to read one or more ASE attributes by means of the client server communication model. The attribute group shall be addressed by means of an option. The subgroup shall be addressed by means of a suboption.

The server shall respond with the individual status “not supported” if optional options or suboptions are not available.

If the Get service requests multiple Option/Suboption and the response would result in too much data exceeding the available size of the response PDU, it shall skip starting with the first non-fitting all following Options/Suboptions silently without notice. The user of the Get service shall check which requested Options/Suboptions are responded.

Table 71 shows the parameters of the service.

Table 71 – Get

Parameter name	req	ind	rsp	cnf
Argument	M	M(=)		
DA	M	M(=)		
List Of Requests	M	M(=)		
Type	M	M(=)		
Option	M	M(=)		
Suboption	M	M(=)		
Result(+)			S	S(=)
List Of Responses			M	M(=)
Type			M	M(=)
Option			M	M(=)
Suboption			M	M(=)
DCP Block Length			M	M(=)
Block Info			C	C(=)
Value			C	C(=)
OriginalType			C	C(=)
Option			M	M(=)
Suboption			M	M(=)
Block Error			C	C(=)
AddDataValue			C	C(=)
Result(-)			S	S(=)
ERRCLS			M	M(=)
ERRCODE			M	M(=)

Argument

The argument shall convey the service specific parameters of the service request.

DA

This parameter shall contain the individual IEEE Std 802.3 MAC address of the server.

List Of Requests

This list contains all requested options with their related suboptions. These parameters shall correspond with the ASE attributes.

Type

This parameter contains the information to be read from the device. It consists of the following attributes:

Option

This parameter describes the type's option.

Allowed values: IP, DEVICE_PROPERTIES, DHCP, DEVICE_INITIATIVE, NME_OPTION, MANUFACTURER_SPECIFIC_128, ...
MANUFACTURER_SPECIFIC_254

Suboption

This parameter describes the type's suboption.

Allowed values:

On Option = IP:

MAC_ADDRESS, IP_PARAMETER, FULL_IP_SUITE

On Option = DEVICE_PROPERTIES:

DEVICE_VENDOR, NAME_OF_STATION, DEVICE_ID, DEVICE_ROLE,
DEVICE_OPTIONS, DEVICE_INSTANCE, OEM_DEVICE_ID

On Option = DHCP:

DHCP_PARAMETER

On Option = DEVICE_INITIATIVE:

DEVICE_INITIATIVE_STATE

On Device Option = NME_OPTION:

NME_DOMAINNAME, NME_PRIO, NME_PARAMETER_UUID

On Option = MANUFACTURER_SPECIFIC_128, ...
MANUFACTURER_SPECIFIC_254:

MANUFACTURER_SPECIFIC_0, ... MANUFACTURER_SPECIFIC_255

Result(+)

This parameter indicates that the service request succeeded. It shall contain the requested values or an error code if an option/suboption is not available. Omitted elements due to the restricted size of the response are not indicated. The element order in the response is arbitrary.

List Of Responses

This parameter shall contain values of requested options/suboptions.

Type

This parameter identifies the responded information, which was requested from the device.

It consists of the following attributes:

Option

This parameter contains a requested option. Additionally, it can contain CONTROL, if there was an error retrieving the information.

Allowed values: IP, DEVICE_PROPERTIES, DHCP, CONTROL,
DEVICE_INITIATIVE, NME_OPTION, MANUFACTURER_SPECIFIC_128, ...
MANUFACTURER_SPECIFIC_254

Suboption

This parameter contains a suboption requested from the device. Additionally, it can contain RESPONSE, if there was an error retrieving the information.

Allowed values:

On Option = IP:

MAC_ADDRESS, IP_PARAMETER, FULL_IP_SUITE

On Option = DEVICE_PROPERTIES:

DEVICE_VENDOR, NAME_OF_STATION, DEVICE_ID, DEVICE_ROLE,
DEVICE_OPTIONS, DEVICE_INSTANCE, OEM_DEVICE_ID

On Option = DHCP:

DHCP_PARAMETER

On Option = CONTROL:

RESPONSE

On Option = DEVICE_INITIATIVE:

DEVICE_INITIATIVE_STATE

On Option = NME_OPTION:

NME_DOMAINNAME, NME_PRIO, NME_PARAMETER_UUID

On Option = MANUFACTURER_SPECIFIC:

MANUFACTURER_SPECIFIC_0, ... MANUFACTURER_SPECIFIC_255

DCP Block Length

This parameter contains the number of octets of the following data for this option/suboption.

Block Info

This conditional parameter is present only if option / suboption are unequal to CONTROL / RESPONSE.

Allowed values:

On Option = IP, Suboption = IP_PARAMETER:

NO_IP – No IP Parameter set

IP_VIA_SET – IP Parameter via Set service received,

IP_VIA_SET_DUP – IP Parameter via Set service received, IP address conflict detected,

IP_VIA_DHCP – IP Parameter via DHCP service received,

IP_VIA_DHCP_DUP – IP Parameter via DHCP service received, IP address conflict detected

All other Option & Suboption

NO_BLOCK_INFO – No additional block information

Value

This conditional parameter is present only if option / suboption are unequal to CONTROL / RESPONSE.

This parameter contains the value of the requested ASE attribute.

Allowed values:

On Option = IP, Suboption = MAC_ADDRESS:

Value is set to the value of ASE attribute IP Options / MAC Address.

On Option = IP, Suboption = IP_PARAMETER:

Value is set to parts of the value of ASE attribute IP Options / IP Parameter, restricted to IP address, Subnet Mask, and Standard Gateway.

On Option = IP, Suboption = FULL_IP_SUITE:

Value is set to the value of ASE attribute IP Options / IP Parameter, i.e. IP address, Subnet Mask, Standard Gateway, and DNS server addresses.

On Option = DEVICE_PROPERTIES, Suboption = DEVICE_VENDOR:

Value is set to the value of ASE attribute Device Properties Options / Device Vendor.

On Option = DEVICE_PROPERTIES, Suboption = NAME_OF_STATION:

Value is set to the value of ASE attribute Device Properties Options / Name Of Station.

On Option = DEVICE_PROPERTIES, Suboption = DEVICE_ID:

Value is set to the value of ASE attribute Device Properties Options / Device Ident.

On Option = DEVICE_PROPERTIES, Suboption = DEVICE_ROLE:

Value is set to the value of ASE attribute Device Properties Options / Device Role.

On Option = DEVICE_PROPERTIES, Suboption = DEVICE_OPTIONS:

The Value is set to a list containing the optional options / suboptions supported by the device.

On Option = DEVICE_PROPERTIES, Suboption = DEVICE_INSTANCE:

Value is set to the value of ASE attribute Device Properties Options / Device Instance.

On Option = DEVICE_PROPERTIES, Suboption = OEM_DEVICE_ID:

Value is set to the value of ASE attribute Device Properties Options / OEM Device Ident.

On Option = DHCP, Suboption = DHCP_PARAMETER :

Value is set to the value of ASE attribute DHCP Option.

On Option = DEVICE_INITIATIVE, Suboption = DEVICE_INITIATIVE_STATE:

Value is set to the value of ASE attribute Device Initiative Option / Device Initiative.

On Option = NME_OPTION, Suboption = NME_DOMAINNAME:

Value is set to the value of ASE attribute NME Properties Option / NME Domain Name.

On Option = NME_OPTION, Suboption = NME_PRIO:

Value is set to the value of ASE attribute NME Properties Option / NME Prio.

On Option = NME_OPTION, Suboption = NME_PARAMETER_UUID:

Value is set to the value of ASE attribute NME Properties Option / NME PARAMETER UUID.

On Option = MANUFACTURER_SPECIFIC, Suboption =
MANUFACTURER_SPECIFIC_0, ... MANUFACTURER_SPECIFIC_255:

Value is set to the value of ASE attribute Manufacturer Specific Option / Manufacturer Specific Suboption.

OriginalType

This conditional parameter is present only if option / suboption are equal to CONTROL / RESPONSE. It contains the original requested type.

Block Error

This conditional parameter is present only if option / suboption are equal to CONTROL / RESPONSE.

This parameter contains the status of the parameter Data.

Allowed values:

OPTION_NOT_SUPPORTED – requested Option is not supported

SUBOPTION_NOT_SUPPORTED – requested suboption is not supported

RESOURCE_ERROR – temporary resource error within the server

AddDataValue

This conditional and optional parameter is present only if option / suboption are equal to CONTROL / RESPONSE.

It can contain additional specific data in a vendor specific format.

Result(-)

This parameter indicates that the service request failed in general for local reasons.

ERRCLS

The parameter ERRCLS contains the error class of the specific error.

Attribute type: Unsigned16

Allowed values: CTXT – local context invalid, PROTOCOL – transmission error

ERRCODE

The parameter ERRCODE contains the error code of the specific error.

Attribute type: Unsigned16

Allowed values: INVALID_STATE if ERRCLS = CTX, LMPM if ERRCLS = PROTOCOL (local error during transmission), TIMEOUT if ERRCLS = PROTOCOL (remote station was not responding)

6.3.11.3.2 Set

The Set service is used to write one or more ASE attributes by means of the client server communication model. The attribute group shall be addressed by means of an option. The subgroup shall be addressed by means of a suboption.

Furthermore, special control commands control the behavior of the server. The commands Start Transaction and Stop Transaction shall be used to group a sequence of set service and the server shall be locked for a client in this case. Locking is an optional feature in case the server supports transactions.

The command Signal allows with its suboption FlashOnce to identify the addressed end station component visually.

The command Reset To Factory Settings allows with its block qualifier to reset in particular the application data, communication parameters, engineering parameters, all parameters, the complete device, or the firmware. Note that this command modifies the persistency defined in the Communication Interface Management ASE; see 7.3.3.3.6.2 for details.

The server shall respond with the individual status “not supported” if optional options or suboptions are not available. The element order is arbitrary. Table 72 shows the parameters of the service.

Requesting a Set service containing more “blocks, to be set” than could be acknowledged in the response is malformed. The client shall take care of that.

Table 72 – Set

Parameter name	req	ind	rsp	cnf
Argument	M	M(=)		
DA	M	M(=)		
Start Transaction	C	C(=)		
Type	M	M(=)		
Option	M	M(=)		
Suboption	M	M(=)		
Block Qualifier	M	M(=)		
List Of Requests	M	M(=)		
Type	M	M(=)		
Option	M	M(=)		
Suboption	M	M(=)		
DCP Block Length	M	M(=)		
Block Qualifier	M	M(=)		
Value	M	M(=)		
Stop Transaction	C	C(=)		
Type	M	M(=)		
Option	M	M(=)		
Suboption	M	M(=)		
Block Qualifier	M	M(=)		
Result(+)			S	S(=)
List Of Responses			M	M(=)
Option Control			M	M(=)
Suboption Response			M	M(=)
DCP Block Length			M	M(=)
Original Type			M	M(=)
Option			M	M(=)
Suboption			M	M(=)
Block Error			M	M(=)
Add Data Value			C	C(=)
Result(-)			S	S
ERRCLS			M	M
ERRCODE			M	M

Argument

The argument shall convey the service specific parameters of the service request.

DA

This parameter shall contain the individual IEEE Std 802.3 MAC address of the server.

Start Transaction

This optional parameter shall mark the start of a transaction to bracket a set of Set services.

If the server supports transactions, it shall lock the ASE attributes for the requesting client until the Stop Transaction is indicated or the Set/Get Timeout occurs. Otherwise the parameter shall be ignored.

Type

This parameter contains the type for start transaction. It consists of the following attributes:

Option

This parameter describes the type's option.

Allowed values: CONTROL

Suboption

This parameter describes the type's suboption.

Allowed values: START

Block Qualifier

This parameter contains further information for the data to be set to the server.

Allowed values: 0

List Of Requests

This list contains all requested options with their related suboptions. These parameters shall correspond with the ASE attributes.

The list shall contain only one request, if option is set to CONTROL and suboption is set to FACTORY_RESET or RESET_FACTORY_SETTING.

Type

This parameter contains the information to be read from the device. It consists of the following attributes:

Option

This parameter describes the type's option.

Allowed values: IP, DEVICE_PROPERTIES, DHCP, CONTROL, NME_OPTION, MANUFACTURER_SPECIFIC_128, ... MANUFACTURER_SPECIFIC_254

Suboption

This parameter describes the type's suboption.

Allowed values:

On Option = IP:

IP_PARAMETER, FULL_IP_SUITE

On Option = DEVICE_PROPERTIES:

NAME_OF_STATION

On Option = DHCP:

DHCP_PARAMETER

On Option = CONTROL:

SIGNAL, FACTORY_RESET, RESET_FACTORY_SETTINGS

On Option = NME_OPTION:

NME_DOMAINNAME

On Option = MANUFACTURER_SPECIFIC_128, ...
MANUFACTURER_SPECIFIC_254:

MANUFACTURER_SPECIFIC_0, ... MANUFACTURER_SPECIFIC_255

DCP Block Length

This parameter contains the number of octets of the following data for this option/suboption.

Block Qualifier

This parameter contains further information for the data to be set to the server.

Allowed Values for Option IP, DEVICE_PROPERTIES, DHCP, NME_OPTION and MANUFACTURER_SPECIFIC:

USE_TEMPORARY – Store the value of the option/suboption and its attribute “temporary” in the DCP ASE and use the value subsequently. The value shall be reset to its default value after a power off / power on cycle.

SAVE_PERMANENT – Store the value of the option/suboption and its attribute “permanent” in the DCP ASE and use the value subsequently. The value shall still be available after a power off / power on cycle.

Allowed Values for Option CONTROL, Suboption RESET_FACTORY_SETTINGS:

RESET_APPLICATION_DATA

Reset data which has been stored permanent in submodules and modules to factory values.

Manufacturer specific Record-Data shall be set to factory values.

All I&M Data shall be set to factory values, excluding I&M0, I&M4, I&M5. Furthermore, the iParameters including the access password should not be reset.

The support of this suboption is recommended.

RESET_COMMUNICATION_PARAMETER

All parameters active for the interface or the ports and the ARs shall be set to the default values and if permanently stored reset.

This mode is intended to set the addressed communication interface of a device into a state which almost similar to the “out of the box” state.

In particular these are:

NameOfStation shall be set to “” (empty string).

IP suite parameter shall be set to 0.0.0.0

DHCP parameters (if available) shall be reset to factory values.

NME Domain Name shall be set to “” (empty string).

NME Domain UUID shall be set to NIL.

All PDev parameters (PD IR Data, PD Port Data Adjust, PD Interface MRP Data Adjust...) shall be set to factory values.

All CIM parameters (CIM NetConf Data Adjust, CIM NetConf Sync Tree Data...) shall be set to factory values.

Parameters adjusted by SNMP, like sysContact, sysName, and sysLocation from MIB-II shall be set to factory values.

The support of this suboption is mandatory.

RESET_ENGINEERING_PARAMETER

Reset engineering parameters which have been stored permanent in the IOC or IOD to factory values.

If a node is able to switch its functionality from IOC to IOD and vice versa via engineering system, the factory functionality shall be activated.

An application program loaded by an engineering system shall be reset (or removed).

A configuration loaded by an engineering system shall be reset (or removed).

The support of this suboption is recommended.

If an IOC or IOD has not such kind of parameters, it shall respond with success.

RESET_ALL_STORED_DATA

Resets all stored data in the IOD or IOC to its factory values.

This covers all data related to RESET_APPLICATION_DATA, RESET_COMMUNICATION_PARAMETER and RESET_ENGINEERING_PARAMETER (if the particular service is implemented).

If a node is able to switch its functionality from IOC to IOD and vice versa via engineering system, the factory functionality shall be activated.

The support of this suboption is recommended.

RESET_DEVICE

Resets all stored data in the IOD or IOC to its factory values.

The service has the same behavior as RESET_ALL_STORED_DATA applied to all interfaces.

This service shall reset the communication parameters of all interfaces of the device and should reset all stored data of the device.

This mode is intended to set the device into a state which is similar to the “out of the box” state.

The support of this suboption is recommended.

RESET_AND_RESTORE_DATA

Reset installed software revisions to factory images.

The support of this suboption is optional.

Allowed Values for all other Options and Suboptions:

Only the value “0” is allowed.

Value

This parameter contains the value of the ASE attribute to set.

Allowed values:

On Option = IP, Suboption = IP_PARAMETER:

Contains value to set ASE attribute IP Options / IP Parameter to, restricted to IP address, Subnet Mask, and Standard Gateway.

On Option = IP, Suboption = FULL_IP_SUITE:

Contains value to set ASE attribute IP Options / IP Parameter to.

On Option = DEVICE_PROPERTIES, Suboption = NAME_OF_STATION:

Contains value to set ASE attribute Device Properties Options / Name Of Station to.

On Option = DHCP, Suboption = DHCP_PARAMETER :

Contains value to set ASE attribute DHCP Option to.

On Option = NME_OPTION, Suboption = NME_DOMAINNAME:

Contains value to set ASE attribute NME Properties Option / NME Domain.

The behavior is described in 6.3.11.5.2.

On Option = MANUFACTURER_SPECIFIC, Suboption = MANUFACTURER_SPECIFIC_0, ... MANUFACTURER_SPECIFIC_255:

Contains value to set ASE attribute Manufacturer Specific Option / Manufacturer Specific Suboption to.

On Option = CONTROL, Suboption = FLASH_ONCE:

Contains value to initiate flashing an LED (e.g. the Ethernet LINK LED) or an alternative signalization with a duration of 3 s.

Allowed value: 0x0100

Stop Transaction

This optional parameter shall mark the end of a sequence of different Set services.

If the server supports transactions, the server shall unlock the ASE attributes. Otherwise the parameter shall be ignored.

Type

This parameter contains the type for stop transaction. It consists of the following attributes:

Option

This parameter describes the type's option.

Allowed values: CONTROL

Suboption

This parameter describes the type's suboption.

Allowed values: STOP

Block Qualifier

This parameter contains further information for the data to be set to the server.

Allowed values: 0

Result(+)

This parameter indicates that the service request succeeded.

List Of Responses

This parameter contains the return values of the write operation of the requested option/suboption.

Option

This parameter is set to CONTROL.

Suboption

This parameter is set to RESPONSE.

DCP Block Length

This parameter contains the number of octets of the subsequent data.

Original Type

This parameter contains the original type of the service request.

Option

This parameter contains the requested original option.

Suboption

This parameter contains the requested original suboption.

Block Error

This parameter contains the result of the set service for the requested option/suboption.

Allowed values:

NO_ERROR – requested data has been set,
 OPTION_NOT_SUPPORTED – requested optional Option is not supported,
 SUBOPTION_NOT_SUPPORTED – requested optional suboption is not supported,
 SET_NOT_POSSIBLE – set not possible for local reasons,
 RESOURCE_ERROR – temporary resource error within server,
 SET_NOT_POSSIBLE_LOCAL – set not possible for local reasons,
 IN_OPERATION – set not possible because of operating application

AddDataValue

This optional parameter contains additional specific data in a vendor specific format.

Result(-)

This parameter indicates that the service request failed in general for local reasons.

ERRCLS

The parameter ERRCLS contains the error class of the specific error.

Attribute type: Unsigned16

Allowed values: CTXT – local context invalid, PROTOCOL – transmission error

ERRCODE

The parameter ERRCODE contains the error code of the specific error.

Attribute type: Unsigned16

Allowed values: INVALID_STATE if ERRCLS = CTX, LMPM if ERRCLS = PROTOCOL (local error during transmission), TIMEOUT if ERRCLS = PROTOCOL (remote station was not responding)

6.3.11.3.3 Local Get Command

The local Get Command service is used to indicate a Get service to the FAL.

The service passes the arguments of the Get service; thus for further description regarding the arguments, see 6.3.11.3.1.

Table 74 shows the parameters of the service.

Table 73 – Local Get Command

Parameter name	req	cnf
Argument	M	
DA	M	
List Of Requests	M	
Type	M	
Option	M	
Suboption	M	
Result(+)		S(=)
List Of Responses		M(=)
Type		M(=)
Option		M(=)
Suboption		M(=)
DCP Block Length		M(=)
Block Info		C(=)
Value		C(=)
OriginalType		C(=)
Option		M(=)
Suboption		M(=)
Block Error		C(=)
AddDataValue		C(=)
Result(-)		S(=)
ERRCLS		M(=)
ERRCODE		M(=)

6.3.11.3.4 Local Set Command

The local Set Command service is used to indicate a Set service to the FAL.

The service passes the arguments of the Set service; thus for further description regarding the arguments, see 6.3.11.3.2.

Table 74 shows the parameters of the service.

Table 74 – Local Set Command

Parameter name	req	cnf
Argument	M	
DA	M	
Start Transaction	C	
Type	M	
Option	M	
Suboption	M	
Block Qualifier	M	
List Of Requests	M	
Type	M	
Option	M	
Suboption	M	
DCP Block Length	M	
Block Qualifier	M	
Value	M	
Stop Transaction	C	
Type	M	
Option	M	
Suboption	M	
Block Qualifier	M	
Result(+)		S
List Of Responses		M
Option Control		M
Suboption Response		M
DCP Block Length		M
Original Type		M
Option		M
Suboption		M
Block Error		M
Add Data Value		C
Result(-)		S
ERRCLS		M
ERRCODE		M

6.3.11.3.5 Identify

The Identify service can be used to discover devices on the network.

The service request shall be sent to a well-known multicast IEEE Std 802.3 MAC address that is defined by the DCP protocol (see IEC 61158-6-10). The Identify confirmation shall contain all responses received within the Identify Timeout interval. The responding devices are identified by their IEEE Std 802.3 source MAC address. The confirmation contains an empty list, if no device responded within the time interval.

The service allows specifying either “all”, meaning all devices supporting the Identify service shall respond, or a list of filters, meaning only those devices that fulfill **all** requested filters shall respond.

The response of a particular server shall contain the following ASE attributes:

- All options and suboptions which have been requested as a filter,
- Device Properties Option / Name Of Station,
- IP Option / IP Parameter,
- Device Properties Option / Device Ident,
- Device Properties Option / Device Vendor,
- Device Properties Option / Device Options,
- Device Properties Option / Device Role,
- Device Properties Option / Device Instance (optional),
- Device Properties Option / OEM Device Ident (optional),
- Device Properties Option / RSI Properties (optional),
- Device Initiative Option / Device Initiative (optional),
- NME Properties Option / NME Domain (optional),
- NME Properties Option / NME Prio (optional),
- NME Properties Option / NME Name (optional),
- NME Properties Option / CIM Interface (optional).

The sequence of data blocks can be arbitrary. Table 75 shows the parameters of the service.

Table 75 – Identify

Parameter name	req	ind	rsp	cnf
Argument	M	M(=)		
Response Delay Factor	M	M(=)		
DA	M	M(=)		
List Of Filter	S	S(=)		
Type	M	M(=)		
Option	M	M(=)		
Suboption	M	M(=)		
DCP Block Length	M	M(=)		
Filter	M	M(=)		
Result(+)			S	S(=)
List of Devices			C	C(=)
SA				M
List of Responses			M	M(=)
Type			M	M(=)
Option			M	M(=)
Suboption			M	M(=)
DCP Block Length			M	M(=)
Block Info			M	M(=)
Value			C	C(=)

Parameter name	req	ind	rsp	cnf
Result(-)			S	S(=)
ERRCLS			M	M(=)
ERRCODE			M	M(=)

Argument

The argument shall convey the service specific parameters of the service request.

DA

This parameter shall contain the well-known multicast IEEE Std 802.3 MAC address.

Response Delay Factor

This parameter contains the factor for the server to calculate the spread value to delay the response if the List Of Filter criteria are fulfilled. The time base is 10 ms. The calculated delay of the server shall be between 10 ms and 64 s.

Parameter type: Unsigned16

Allowed values: 1 to 6 400

Default Values: 1 (IO controller)

List Of Filter

This conditional parameter indicates that options/suboptions are used to decide whether the device shall respond. The list shall be used to filter the request on the server side. More than one filter shall be handled with an AND operation at the server side.

NOTE AND operation means that a server only responds to an identify request within the response delay time if all filter criteria match with currently used attribute values.

Type

This parameter contains the type of the filter. It consists of the following attributes:

Option

This parameter describes the type's option.

Allowed values: ALL, IP, DEVICE_PROPERTIES, DHCP, DEVICE_INITIATIVE, MANUFACTURER_SPECIFIC_128, ... MANUFACTURER_SPECIFIC_254

Suboption

This parameter describes the type's suboption.

Allowed values:

On Option = ALL:

ALL

If ALL / ALL is specified, there shall be only one filter.

On Option = IP:

MAC_ADDRESS, IP_PARAMETER

On Option = DEVICE_PROPERTIES:

DEVICE_VENDOR, NAME_OF_STATION, DEVICE_ID, DEVICE_ROLE, DEVICE_OPTIONS, ALIAS_NAME, OEM_DEVICE_ID

On Option = DHCP:

DHCP_PARAMETER

On Device Option = NME_OPTION:

NME_DOMAINNAME, NME_PRIO, NME_NAME, CIM_INTERFACE

On Option = MANUFACTURER_SPECIFIC_128 ..
MANUFACTURER_SPECIFIC_254:

MANUFACTURER_SPECIFIC_0, ... MANUFACTURER_SPECIFIC_255

DCP Block Length

This parameter contains the length of the filter.

Filter

This parameter contains the filter for the content of the appropriate ASE attribute identified by Type.

Allowed values:

On Option = ALL, Suboption = ALL:

Filter is not provided, since all devices shall reply.

On Option = IP, Suboption = MAC_ADDRESS:

Contains filter for content of ASE attribute IP Options / MAC address.

On Option = IP, Suboption = IP_PARAMETER:

Contains filter for content of ASE attribute IP Options / IP Parameter, restricted to IP address, Subnet Mask, and Standard Gateway.

On Option = DEVICE_PROPERTIES, Suboption = DEVICE_VENDOR:

Contains filter for content of ASE attribute Device Properties Options / Device Vendor.

On Option = DEVICE_PROPERTIES, Suboption = NAME_OF_STATION:

Contains filter for content of ASE attribute Device Properties Options / Name Of Station.

If the filter DEVICE_PROPERTIES / NAME_OF_STATION is used, it shall be the first filter in the List of Filters. In this case the filter DEVICE_PROPERTIES / ALIAS_NAME shall not be used.

On Option = DEVICE_PROPERTIES, Suboption = ALIAS_NAME:

Contains filter for content of ASE attribute Device Properties Options / Alias Name Of Station.

If the filter DEVICE_PROPERTIES / ALIAS_NAME is used, it shall be the first filter in the List of Filters. In this case the filter DEVICE_PROPERTIES / NAME_OF_STATION shall not be used.

On Option = DEVICE_PROPERTIES, Suboption = DEVICE_ID:

Contains filter for content of ASE attribute Device Properties Options / Device Ident.

On Option = DEVICE_PROPERTIES, Suboption = DEVICE_ROLE:

Contains filter for content of ASE attribute Device Properties Options / Device Role.

On Option = DEVICE_PROPERTIES, Suboption = DEVICE_OPTIONS:

Contains filter for content of ASE attribute Device Options.

On Option = DEVICE_PROPERTIES, Suboption = OEM_DEVICE_ID:

Contains filter for content of ASE attribute Device Properties Options / OEM Device Ident.

On Option = DHCP, Suboption = DHCP_PARAMETER :

Contains filter for content of ASE attribute DHCP Option.

On Option = NME_OPTION, Suboption = NME_DOMAINNAME:

Contains filter for content of ASE attribute NME Properties Option / NME Domain.

On Option = NME_OPTION, Suboption = NME_PRIO

Contains filter for the existence of ASE attribute NME Properties Option / NME Prio.

On Option = NME_OPTION, Suboption = NME_NAME:

Contains filter for the existence of ASE attribute NME Properties Option / NME Name.

On Option = NME_OPTION, Suboption = CIM_INTERFACE:

Contains filter for the existence of ASE attribute NME Properties Option / CIM Interface.

On Option = MANUFACTURER_SPECIFIC, Suboption = MANUFACTURER_SPECIFIC_0, ... MANUFACTURER_SPECIFIC_255:

Contains filter for content of ASE attribute Manufacturer Specific Option / Manufacturer Specific Suboption.

Result(+)

This parameter indicates that the service request succeeded. It shall contain the requested values.

List of Devices

This parameter contains the list of devices returned from the identification.

SA

This parameter contains the individual IEEE Std 802.3 MAC address of a device, which has responded to the Identify service.

List of Responses

This parameter contains the responded data of the device specified by SA.

It consists of the following elements:

Type

This parameter contains the type of the filter. It consists of the following attributes:

Option

This parameter describes the type's option.

Allowed values: IP, DEVICE_PROPERTIES, DHCP, DEVICE_INITIATIVE, MANUFACTURER_SPECIFIC_128, ... MANUFACTURER_SPECIFIC_254

Suboption

This parameter describes the type's suboption.

Allowed values:

On Option = IP:

MAC_ADDRESS, IP_PARAMETER

On Option = DEVICE_PROPERTIES:

DEVICE_VENDOR, NAME_OF_STATION, DEVICE_ID, DEVICE_ROLE,
DEVICE_OPTIONS, ALIAS_NAME, OEM_DEVICE_ID

On Option = DHCP:

DHCP_PARAMETER

On Option = MANUFACTURER_SPECIFIC_128 ..
MANUFACTURER_SPECIFIC_254:

MANUFACTURER_SPECIFIC_0, ... MANUFACTURER_SPECIFIC_255

DCP Block Length

This parameter contains the length of the returned data.

Block Info

This parameter contains additional information to the returned data.

Allowed values:

On Option = IP, Suboption = IP_PARAMETER:

NO_IP – No IP Parameter set

IP_VIA_SET – IP Parameter via Set service received,

IP_VIA_SET_DUP – IP Parameter via Set service received, IP address
conflict detected,

IP_VIA_DHCP – IP Parameter via DHCP service received,

IP_VIA_DHCP_DUP – IP Parameter via DHCP service received, IP address
conflict detected

All other Option & Suboption

NO_BLOCK_INFO – No additional block information

Value

This parameter contains the value.

Allowed values:

On Option = IP, Suboption = MAC_ADDRESS:

Value is set to the value of ASE attribute IP Options / MAC Address.

Included in the list of responses only if requested as a filter.

On Option = IP, Suboption = IP_PARAMETER:

Value is set to parts of the value of ASE attribute IP Options / IP Parameter,
restricted to IP address, Subnet Mask, and Standard Gateway.

Always included in the list of responses.

On Option = DEVICE_PROPERTIES, Suboption = DEVICE_VENDOR:

Value is set to the value of ASE attribute Device Properties Options / Device Vendor.

Always included in the list of responses.

On Option = DEVICE_PROPERTIES, Suboption = NAME_OF_STATION:

Value is set to the value of ASE attribute Device Properties Options / Name Of Station.

Always included in the list of responses.

On Option = DEVICE_PROPERTIES, Suboption = DEVICE_ID:

Value is set to the value of ASE attribute Device Properties Options / Device Ident.

Always included in the list of responses.

On Option = DEVICE_PROPERTIES, Suboption = DEVICE_ROLE:

Value is set to the value of ASE attribute Device Properties Options / Device Role.

Always included in the list of responses.

On Option = DEVICE_PROPERTIES, Suboption = DEVICE_OPTIONS:

Value is set to a list containing the mandatory options / suboptions plus those optional options / suboptions supported by the device.

Always included in the list of responses.

On Option = DEVICE_PROPERTIES, Suboption = ALIAS_NAME:

Value is set to the value of the ASE attribute Device Properties Options / Alias Name. Only the requested alias name is responded; further alias names are not responded.

Included in the list of responses only if requested as a filter.

On Option = DEVICE_PROPERTIES, Suboption = DEVICE_INSTANCE:

Value is set to the value of ASE attribute Device Properties Options / Device Instance.

Optionally included in the list of responses.

On Option = DEVICE_PROPERTIES, Suboption = OEM_DEVICE_ID:

Value is set to the value of ASE attribute Device Properties Options / OEM Device Ident.

Optionally included in the list of responses.

On Option = DEVICE_PROPERTIES, Suboption = RSI_PROPERTIES:

Value is set to the value of ASE attribute Device Properties Options / RSI Properties.

Optionally included in the list of responses.

On Option = DHCP, Suboption = DHCP_PARAMETER:

Value is set to the value of ASE attribute DHCP Option.

Included in the list of responses only if requested as a filter.

On Option = DEVICE_INITIATIVE, Suboption = DEVICE_INITIATIVE_STATE:

Value is set to the value of ASE attribute Device Initiative Option / Device Initiative.

Optionally included in the list of responses.

On Option = NME_OPTION, Suboption = NME_DOMAINNAME:

Value is set to the value of ASE attribute NME Properties Option / NME Domain.

Optionally included in the list of responses.

On Option = NME_OPTION, Suboption = NME:

Value is set to the value of ASE attribute NME Properties Option / NME.

Optionally included in the list of responses.

On Option = NME_OPTION, Suboption = NME_NAME:

Value is set to the value of ASE attribute NME Properties Option / NME Name.

Optionally included in the list of responses.

On Option = NME_OPTION, Suboption = CIM_INTERFACE:

Value is set to the value of ASE attribute NME Properties Option / CIM Interface.

Optionally included in the list of responses.

On Option = MANUFACTURER_SPECIFIC, Suboption = MANUFACTURER_SPECIFIC_0, ... MANUFACTURER_SPECIFIC_255:

Value is set to the value of ASE attribute Manufacturer Specific Option / Manufacturer Specific Suboption.

Included in the list of responses only if requested as a filter.

Result(-)

This parameter indicates that the service request failed in general for local reasons.

ERRCLS

The parameter ERRCLS contains the error class of the specific error.

Attribute type: Unsigned16

Allowed values: CTXT – local context invalid, PROTOCOL – transmission error

ERRCODE

The parameter ERRCODE contains the error code of the specific error.

Attribute type: Unsigned16

Allowed values: INVALID_STATE if ERRCLS = CTX, LMPM if ERRCLS = PROTOCOL (local error during transmission), TIMEOUT if ERRCLS = PROTOCOL (remote station was not responding)

6.3.11.3.6 Hello

The Hello service is used to announce the presence of a device in a network. The service shall be sent to a well-known multicast IEEE Std 802.3 MAC address that is defined by the DCP protocol (see IEC 61158-6-10).

After powerup, the persistent setting of this ASE is used. If the attribute Device Initiative is ON, this device waits until it is “communication ready” (FS Hello Mode ON_LINKUP) or until it is “communication ready” with an additional FS Hello Delay (FS Hello Mode ON_LINKUP_AFTER_DELAY). The service is initiated multiple times, as specified by the ASE attribute FS Hello Retry, whereas the ASE attribute FS Hello Interval defines the period between each of the hello requests. Further link-up are not considered.

The hello request of a server shall contain the following ASE attributes:

- Device Properties Option / Name Of Station,
- IP Option / IP Parameter,
- Device Properties Option / Device Ident,
- Device Properties Option / Device Role,
- Device Initiative Option / Device Initiative,
- Device Properties Option / Device Options (optional, should be omitted),
- Device Properties Option / Device Vendor (optional, should be omitted)

Table 76 shows the parameters of the service.

Table 76 – Hello

Parameter name	req	ind
Argument	M	M(=)
List of Data	M	M(=)
Type	M	M(=)
Option	M	M(=)
Suboption	M	M(=)
DCP Block Length	M	M(=)
Block Info	M	M(=)
Value	C	C(=)

Argument

The argument shall convey the service specific parameters of the service request.

List Of Data

This parameter list consists of the following parameters.

Type

This parameter contains the information to be read from the device. It consists of the following attributes:

Option

This parameter describes the type’s option.

Allowed values: IP, DEVICE_PROPERTIES, DEVICE_INITIATIVE

Suboption

This parameter describes the type’s suboption.

Allowed values:

On Option = IP:

IP_PARAMETER

On Option = DEVICE_PROPERTIES:

NAME_OF_STATION, DEVICE_ID, DEVICE_ROLE, DEVICE_OPTIONS,
DEVICE_VENDOR

On Option = DEVICE_INITIATIVE:

DEVICE_INITIATIVE_STATE

DCP Block Length

This parameter contains the number of octets of the following data for this option/suboption.

Block Info

This parameter contains additional information for the data.

Allowed values:

On Option = IP, Suboption = IP_PARAMETER:

NO_IP – No IP Parameter set

IP_VIA_SET – IP Parameter via Set service received,

IP_VIA_SET_DUP – IP Parameter via Set service received, IP address conflict detected,

IP_VIA_DHCP – IP Parameter via DHCP service received,

IP_VIA_DHCP_DUP – IP Parameter via DHCP service received, , IP address conflict detected

All other Option & Suboption

NO_BLOCK_INFO – No additional block information

Value

This parameter contains the value of the ASE attribute.

Allowed values:

On Option = IP, Suboption = IP_PARAMETER:

Value is set to parts of the value of ASE attribute IP Options / IP Parameter, restricted to IP address, Subnet Mask, and Standard Gateway.

On Option = DEVICE_PROPERTIES, Suboption = NAME_OF_STATION:

Value is set to the value of ASE attribute Device Properties Options / Name Of Station.

On Option = DEVICE_PROPERTIES, Suboption = DEVICE_ID:

Value is set to the value of ASE attribute Device Properties Options / Device Ident.

On Option = DEVICE_PROPERTIES, Suboption = DEVICE_ROLE:

Value is set to the value of ASE attribute Device Properties Options / Device Role.

On Option = DEVICE_PROPERTIES, Suboption = DEVICE_OPTIONS:

The Value is set to a list containing the mandatory options / suboptions plus those optional options / suboptions supported by the device.

On Option = DEVICE_PROPERTIES, Suboption = DEVICE_VENDOR:

Value is set to the value of ASE attribute Device Properties Options / Device Vendor.

On Option = DEVICE_INITIATIVE, Suboption = DEVICE_INITIATIVE_STATE:

Value is set to the value of ASE attribute Device Initiative Option / Device Initiative.

6.3.11.4 Invocation of the DCP object

There is one DCP object for the end station component.

6.3.11.5 Behavior

6.3.11.5.1 Persistency

For persistency of the DCP object the persistency defined in the Communication Interface Management ASE is used; see 7.3.3.3.6.2 for details.

6.3.11.5.2 Datastore model

See 7.3.3.7.6.

Writing of NME Domain Name and NME Domain UUID starts a transaction for a new candidate datastore. The candidate datastore is populated with the factory default datastore and then written to the running database which updates the persistent storage.

Writing of this record initiate the following sequence of services:

- a) Check with running datastore whether to be written NME Domain Name and NME Domain UUID are identical.
- b) if not identical:
 - 1) CIM Create Candidate (factory default database)
 - 2) Write NME Domain Name and NME Domain UUID
 - 3) CIM Check and Write Candidate
- c) if identical:
 - 1) do nothing

Thus, if the NME Domain or NME Domain UUID is changed, all entries that belonging to the running database are set to factory default.

6.3.11.5.3 Void

Intentionally left blank.

6.3.12 Dynamic host configuration ASE

6.3.12.1 Overview

The utilization of the IETF RFC 2131 (DHCP) is defined for this specification. It includes the usage and the content syntax of Client ID.

6.3.12.2 DHCP class specification

6.3.12.2.1 General

The DHCP ASE defines one DHCP object type:

6.3.12.2.2 Template

A DHCP object is described by the following template:

ASE:	DHCP ASE
CLASS:	DHCP
CLASS ID:	not used
PARENT CLASS:	top
ATTRIBUTES:	
1	(m) Key Attribute: Implicit
2	(m) Attribute: IP Option
2.1	(o) Attribute: IP Parameter
2.1.1	(m) Attribute: IP Address
2.1.2	(m) Attribute: Subnet Mask
2.1.3	(m) Attribute: Standard Gateway
SERVICES:	
1	(o) OpsService: PN DHCP Discover
2	(o) OpsService: PN DHCP Offer

6.3.12.2.3 Attributes

Implicit

The key attribute Implicit indicates that the DHCP object is implicitly addressed by the service.

IP Options

This attribute consists of the following attributes:

IP Parameter

The optional IP Parameter shall have the same meaning as the corresponding attributes within the IP suite ASE as defined in 6.3.8.3. This attribute list contains the following attributes:

IP Address

This attribute contains the IP address of the Ethernet interface according to IETF RFC 791 and IETF RFC 6890.

Subnet Mask

This attribute contains the subnet mask of the Ethernet interface according to IETF RFC 791 and IETF RFC 6890.

Standard Gateway

This attribute contains the IP address of the standard gateway according to IETF RFC 791 and IETF RFC 6890.

6.3.12.3 DHCP service specification

6.3.12.3.1 General

The DHCP services shall be derived from the IETF RFC 2131 (DHCP).

The interface to this specification is given by the service PN DHCP Discover and PN DHCP Offer. All other services and timeouts according to IETF RFC 2131 are not visible.

6.3.12.3.2 PN DHCP Discover

This additional service is used by this specification state machine to request or stop offers from the DHCP server. Table 77 shows the parameters of the service.

Table 77 – PN DHCP Discover

Parameter name	req	cnf
Argument	M	
Options	M	
Result(+)		S
Status		M
Result(-)		S
Status		M

Argument

There are no arguments for this service request.

Options

This parameter controls the DHCP state machine according to IETF RFC 2131.

Allowed values: Start, Stop

Result(+)

This parameter indicates that the service request succeeded.

Status

This parameter contains the service specific error code.

Result(-)

This parameter indicates that the service request failed.

Status

This parameter contains the service specific error code.

6.3.12.3.3 PN DHCP Offer

This additional service is used to indicate the accepted offer from a DHCP server to the state machine of this specification. Table 78 shows the parameters of the service.

Table 78 – PN DHCP Offer

Parameter name	ind
Argument	M
..IP Paramter	O
IP Address	M
Subnet Mask	M
Standard Gateway	M
NameOfStation	O

Argument

There are no arguments for this service request.

IP Paramter

This optional attribute consists of the following attributes:

IP Address

This parameter contains the value for the attribute of the ASE.

Subnet Mask

This parameter contains the value for the attribute of the ASE.

Standard Gateway

This parameter contains the value for the attribute of the ASE.

NameOfStation

This optional parameter contains the value for the attribute of the ASE.

6.3.12.4 Invocation of the DHCP object

There is one DHCP object for the end station component.

6.3.13 IEEE Std 802.1AB ASE**6.3.13.1 Overview**

The concepts according to IEEE Std 802.1AB shall be applied. This document defines the special usage of Chassis ID, Port ID, Chassis ID Subtype, Port ID Subtype, and Time to live. Furthermore, extensions for the OUI regarding frames and MIB are defined.

Furthermore, the IETF RFC 3490 (IDNA) shall be applied for the content syntax of Chassis ID and Port ID.

If Simple Network Management Protocol (SNMP) is supported, the system shall conform to the LLDP management specifications and shall implement the sections of the basic LLDP MIB for the operating mode being implemented. If SNMP is not supported, the system shall provide storage and retrieval capability equivalent to the functionality for the operating mode being implemented.

6.3.13.2 IEEE Std 802.1AB class specification

6.3.13.2.1 Template

The IEEE Std 802.1AB object is described by the following template:

ASE: Link Layer Discovery ASE

CLASS: IEEE Std 802.1AB

CLASS ID: not used

PARENT CLASS: TOP

ATTRIBUTES:

1	(m)	Key Attribute:	Implicit
2	(m)	Attribute:	Multiple Interface Mode
2.1	(m)	Attribute:	Name Of Device
3	(m)	Attribute:	Chassis ID
4	(m)	Attribute:	Port ID
5	(m)	Attribute:	LLDP Time To Live
6	(o)	Attribute:	Port Description
7	(o)	Attribute:	System Name
8	(o)	Attribute:	System Description
9	(o)	Attribute:	System Capabilities
10	(m)	Attribute:	Management Address
11	(o)	Attribute:	Object Identifier
12	(o)	Attribute:	List of Organizationally-specific extensions
12.1	(m)	Attribute:	Organizationally Unique Identifier
12.2	(c)	Constraint:	Organizationally Unique Identifier = 00-80-C2
12.2.1	(m)	Attribute:	List of IEEE Std 802.1 Subtypes
12.2.1.1	(m)	Attribute:	Subtype
12.2.1.2	(c)	Constraint:	Subtype = PORT_VLAN_ID
12.2.1.2.1	(m)	Attribute:	Port VLAN Identifier
12.2.1.3	(c)	Constraint:	Subtype = PORT_AND_PROTOCOL_VLAN_ID
12.2.1.3.1	(m)	Attribute:	Flags
12.2.1.3.2	(m)	Attribute:	PPVID Reference Number
12.2.1.4	(c)	Constraint:	Subtype = VLAN_NAME
12.2.1.4.1	(m)	Attribute:	VLAN ID
12.2.1.4.2	(m)	Attribute:	VLAN Name
12.2.1.5	(c)	Constraint:	Subtype = PROTOCOL_IDENTITY
12.2.1.5.1	(m)	Attribute:	List of Protocol Identities
12.2.1.5.1.1	(m)	Attribute:	Protocol Identity
12.3	(c)	Constraint:	Organizationally Unique Identifier = 00-12-0F
12.3.1	(m)	Attribute:	List of IEEE Std 802.3 Subtypes
12.3.1.1	(m)	Attribute:	Subtype
12.3.1.2	(c)	Constraint:	Subtype = MAC_PHY_CONFIGURATION_STATUS
12.3.1.2.1	(m)	Attribute:	Auto Negotiation Support And Status
12.3.1.2.2	(m)	Attribute:	Advertised Capability
12.3.1.2.3	(m)	Attribute:	Operational MAU type
12.3.1.3	(c)	Constraint:	Subtype = POWER_VIA_MDI
12.3.1.3.1	(m)	Attribute:	MDI Power Support
12.3.1.3.2	(m)	Attribute:	Power Pair
12.3.1.3.3	(m)	Attribute:	Power Class
12.3.1.5	(c)	Constraint:	Subtype = MAXIMUM_FRAME_SIZE
12.3.1.5.1	(m)	Attribute:	Maximum Frame Size
12.3.1.6	(c)	Constraint:	Subtype = ADDITIONAL_ETHERNET_CAPABILITIES
12.3.1.6.1	(m)	Attribute:	Preemption Capability Support

12.3.1.6.2	(m) Attribute:	Preemption Capability Status
12.3.1.6.3	(m) Attribute:	Preemption Capability Active
12.3.1.6.4	(m) Attribute:	Additional Fragment Size
12.4	(c) Constraint:	Organizationally Unique Identifier = 00-0E-CF
12.4.1	(m) Attribute:	List of PNIO Subtypes
12.4.1.1	(m) Attribute:	Subtype
12.4.1.2	(c) Constraint:	Subtype = LLDP_PNIO_DELAY
12.4.1.2.1	(m) Attribute:	PnioDelay
12.4.1.2.1.1	(m) Attribute:	PTCP_PortRxDelayLocal
12.4.1.2.1.2	(m) Attribute:	PTCP_PortRxDelayRemote
12.4.1.2.1.3	(m) Attribute:	PTCP_PortTxDelayLocal
12.4.1.2.1.4	(m) Attribute:	PTCP_PortTxDelayRemote
12.4.1.2.1.5	(m) Attribute:	CableDelayLocal
12.4.1.3	(c) Constraint:	Subtype = LLDP_PNIO_PORTSTATUS
12.4.1.3.1	(m) Attribute:	PnioPortStatus
12.4.1.3.1.1	(m) Attribute:	RTClass2_PortStatus
12.4.1.3.1.1.1	(m) Attribute:	Status
12.4.1.3.1.2	(m) Attribute:	RTClass3_PortStatus
12.4.1.3.1.2.1	(m) Attribute:	Status
12.4.1.3.1.2.2	(m) Attribute:	Fragmentation
12.4.1.3.1.2.3	(m) Attribute:	PreambleLength
12.4.1.3.1.2.4	(m) Attribute:	Optimized
12.4.1.4	(c) Constraint:	Subtype = LLDP_PNIO_ALIAS
12.4.1.4.1	(m) Attribute:	AliasNameValue
12.4.1.5	(c) Constraint:	Subtype = LLDP_PNIO_MRPPORTSTATUS
12.4.1.5.1	(m) Attribute:	PnioMRPPortStatus
12.4.1.5.1.1	(m) Attribute:	MRP_DomainUUID
12.4.1.5.1.2	(m) Attribute:	MRRT_PortStatus
12.4.1.6	(c) Constraint:	Subtype = LLDP_PNIO_CHASSIS_MAC
12.4.1.6.1	(m) Attribute:	ChassisMacAddress
12.4.1.7	(c) Constraint:	Subtype = LLDP_PNIO_PTCPSTATUS
12.4.1.7.1	(m) Attribute:	PnioPTCPStatus
12.4.1.7.1.1	(m) Attribute:	PTCP_MasterSourceAddress
12.4.1.7.1.2	(m) Attribute:	PTCP_SubdomainUUID
12.4.1.7.1.3	(m) Attribute:	IRDataUUID
12.4.1.7.1.4	(m) Attribute:	LLDP_LengthOfPeriod
12.4.1.7.1.4.1	(m) Attribute:	Length
12.4.1.7.1.4.2	(m) Attribute:	Validity
12.4.1.7.1.5	(m) Attribute:	LLDP_RedPeriodBegin
12.4.1.7.1.6	(m) Attribute:	LLDP_GreenPeriodBegin
12.4.1.8	(c) Constraint:	Subtype = LLDP_PNIO_MAUTYPEEXTENSION
12.4.1.8.1	(m) Attribute:	PnioMAUTYPEEXTENSION
12.4.1.8.1.1	(m) Attribute:	MAUTYPEEXTENSION
12.4.1.9	(c) Constraint:	Subtype = LLDP_PNIO_NMEDOMAIN
12.4.1.9.1	(m) Attribute:	NME Domain UUID
12.4.1.10	(c) Constraint:	Subtype = LLDP_PNIO_NMEMANAGEMENT
12.4.1.10.1	(m) Attribute:	NME Management Addr
13	(m) Attribute:	List of Remote Systems Data
13.1	(m) Attribute:	Port ID
13.2	(m) Attribute:	Chassis ID
13.3	(m) Attribute:	MAC Address
13.4	(m) Attribute:	LLDP Time To Live
13.5	(o) Attribute:	Port Description

13.6	(o) Attribute:	System Name
13.7	(o) Attribute:	System Description
13.8	(o) Attribute:	System Capabilities
13.9	(o) Attribute:	Management Address
13.10	(o) Attribute:	Object Identifier
13.11	(m) Attribute:	Line Delay
13.12	(m) Attribute:	List of Organizationally-specific extensions
13.12.1	(m) Attribute:	Organizationally Unique Identifier
13.12.2	(c) Constraint:	Organizationally Unique Identifier = 00-80-C2
13.12.2.1	(m) Attribute:	List of IEEE Std 802.1 Subtypes
13.12.2.1.1	(m) Attribute:	Subtype
13.12.2.1.2	(c) Constraint:	Subtype = PORT_VLAN_ID
13.12.2.1.2.1	(m) Attribute:	Port VLAN Identifier
13.12.2.1.3	(c) Constraint:	Subtype = PORT_AND_PROTOCOL_VLAN_ID
13.12.2.1.3.1	(m) Attribute:	Flags
13.12.2.1.3.2	(m) Attribute:	PPVID Reference Number
13.12.2.1.4	(c) Constraint:	Subtype = VLAN_NAME
13.12.2.1.4.1	(m) Attribute:	VLAN ID
13.12.2.1.4.2	(m) Attribute:	VLAN Name
13.12.2.1.5	(c) Constraint:	Subtype = PROTOCOL_IDENTITY
13.12.2.1.5.1	(m) Attribute:	List of Protocol Identities
13.12.2.1.5.1.1	(m) Attribute:	Protocol Identity
13.12.3	(c) Constraint:	Organizationally Unique Identifier = 00-12-0F
13.12.3.1	(m) Attribute:	List of IEEE Std 802.3 Subtypes
13.12.3.1.1	(m) Attribute:	Subtype
13.12.3.1.2	(c) Constraint:	Subtype = MAC_PHY_CONFIGURATION_STATUS
13.12.3.1.2.1	(m) Attribute:	Auto Negotiation Support And Status
13.12.3.1.2.2	(m) Attribute:	Advertised Capability
13.12.3.1.2.3	(m) Attribute:	Operational MAU type
13.12.3.1.3	(c) Constraint:	Subtype = POWER_VIA_MDI
13.12.3.1.3.1	(m) Attribute:	MDI Power Support
13.12.3.1.3.2	(m) Attribute:	Power Pair
13.12.3.1.3.3	(m) Attribute:	Power Class
13.12.3.1.4	(c) Constraint:	Subtype = MAXIMUM_FRAME_SIZE
13.12.3.1.4.1	(m) Attribute:	Maximum Frame Size
13.12.3.1.5	(c) Constraint:	Subtype = ADDITIONAL_ETHERNET_CAPABILITIES
13.12.3.1.5.1	(m) Attribute:	Preemption Capability Support
13.12.3.1.5.2	(m) Attribute:	Preemption Capability Status
13.12.3.1.5.3	(m) Attribute:	Preemption Capability Active
13.12.3.1.5.4	(m) Attribute:	Additional Fragment Size
13.12.4	(c) Constraint:	Organizationally Unique Identifier = 00-0E-CF
13.12.4.1	(m) Attribute:	List of PNIO Subtypes
13.12.4.1.1	(m) Attribute:	Subtype
13.12.4.1.2	(c) Constraint:	Subtype = LLDP_PNIO_DELAY
13.12.4.1.2.1	(m) Attribute:	PnioDelay
13.12.4.1.2.1.1	(m) Attribute:	PTCP_PortRxDelayLocal
13.12.4.1.2.1.2	(m) Attribute:	PTCP_PortRxDelayRemote
13.12.4.1.2.1.3	(m) Attribute:	PTCP_PortTxDelayLocal
13.12.4.1.2.1.4	(m) Attribute:	PTCP_PortTxDelayRemote
13.12.4.1.2.1.5	(m) Attribute:	CableDelayLocal
13.12.4.1.3	(c) Constraint:	Subtype = LLDP_PNIO_PORTSTATUS
13.12.4.1.3.1	(m) Attribute:	PnioPortStatus
13.12.4.1.3.1.1	(m) Attribute:	RTClass2_PortStatus

13.12.4.1.3.1.2	(m) Attribute:	RTClass3_PortStatus
13.12.4.1.3.1.2.1	(m) Attribute:	Status
13.12.4.1.3.1.2.2	(m) Attribute:	Fragmentation
13.12.4.1.3.1.2.3	(m) Attribute:	PreambleLength
13.12.4.1.3.1.2.4	(m) Attribute:	Optimized
13.12.4.1.4	(c) Constraint:	Subtype = LLDP_PNIO_ALIAS
13.12.4.1.4.1	(m) Attribute:	AliasNameValue
13.12.4.1.5	(c) Constraint:	Subtype = LLDP_PNIO_MRPPORTSTATUS
13.12.4.1.5.1	(m) Attribute:	PnioMRPPortStatus
13.12.4.1.5.1.1	(m) Attribute:	MRP_DomainUUID
13.12.4.1.5.1.2	(m) Attribute:	MRRT_PortStatus
13.12.4.1.6	(c) Constraint:	Subtype = LLDP_PNIO_MRPICPORTSTATUS
13.12.4.1.6.1	(m) Attribute:	PnioMRPICPortStatus
13.12.4.1.6.1.1	(m) Attribute:	MRPIC_DomainID
13.12.4.1.6.1.2	(m) Attribute:	MRPIC_Role
13.12.4.1.7	(c) Constraint:	Subtype = LLDP_PNIO_CHASSIS_MAC
13.12.4.1.7.1	(m) Attribute:	ChassisMacAddress
13.12.4.1.8	(c) Constraint:	Subtype = LLDP_PNIO_PTCPSTATUS
13.12.4.1.8.1	(m) Attribute:	PnioPTCPStatus
13.12.4.1.8.1.1	(m) Attribute:	PTCP_MasterSourceAddress
13.12.4.1.8.1.2	(m) Attribute:	PTCP_SubdomainUUID
13.12.4.1.8.1.3	(m) Attribute:	IRDataUUID
13.12.4.1.8.1.4	(m) Attribute:	LLDP_LengthOfPeriod
13.12.4.1.8.1.4.1	(m) Attribute:	Length
13.12.4.1.8.1.4.2	(m) Attribute:	Validity
13.12.4.1.8.1.5	(m) Attribute:	LLDP_RedPeriodBegin
13.12.4.1.8.1.6	(m) Attribute:	LLDP_GreenPeriodBegin
13.12.4.1.9	(c) Constraint:	Subtype = LLDP_PNIO_MAUTYPEEXTENSION
13.12.4.1.9.1	(m) Attribute:	PnioMAUTYPEEXTENSION
13.12.4.1.9.1.1	(m) Attribute:	MAUTYPEEXTENSION
13.12.4.1.10	(c) Constraint:	Subtype = LLDP_PNIO_NMEDOMAIN
13.12.4.1.10.1	(m) Attribute:	NME Domain UUID
13.12.4.1.11	(c) Constraint:	Subtype = LLDP_PNIO_NMEMANAGEMENT
13.12.4.1.11.1	(m) Attribute:	NME Management Addr

SERVICES:

- 1 (m) OpsService: Remote Systems Data Change

6.3.13.2.2 Attributes**Implicit**

The key attribute Implicit indicates that the object is implicitly addressed by the service.

Multiple Interface Mode

This attribute consists of the following attributes:

Name Of Device

This attribute controls the behavior of the IEEE Std 802.1AB ASE regarding Chassis and Port ID.

The value FALSE indicates that the attribute Chassis ID contains the Name Of Station and the attribute Port ID contains the Name of Port.

The value TRUE indicates that the attribute Chassis ID is defined by local means and the attribute Port ID contains the Name Of Port + "." + the Name Of Station.

Attribute type: Boolean

Default value: FALSE

Chassis ID

This non-volatile attribute contains the Chassis ID which shall be used as locally assigned Chassis ID subtype, in compliance with IEEE Std 802.1AB. This field shall contain a VisibleString indicating the specific identifier for the particular chassis in this system.

The value of the attribute is dependent on the attribute Multiple Interface Mode.

If the attribute Name Of Device is set to FALSE this attribute contains the Name Of Station as defined in the Discovery and basic configuration ASE.

If the attribute Name Of Device is set to TRUE the content of this attribute is defined by local means.

Attribute type: VisibleString[240]

Port ID

This attribute contains the name of the local port which shall be used as locally assigned Port ID subtype, in compliance with IEEE Std 802.1AB.

The value of the attribute is dependent on the attribute Multiple Interface Mode.

If the attribute Name Of Device is set to FALSE, the attribute contains the Name of Port in the form “port-xyz” or “port-xyz-rstuv” where x, y, z is in the range “0”-“9” from 001 up to 255 and r, s, t, u, v is in the range “0”-“9” from 00 000 up to 65 535. The values “port-001” or “port-001-00000” shall be used for the first port submodule for an interface within slot 0. The values x, y, z shall be used to identify the port number. The values r, s, t, u, v shall be used to identify the slot.

If the attribute Name Of Device is set to TRUE, the attribute contains the Name of Port (“port-xyz” or “port-xyz-rstuv”) + “.” + Name Of Station as defined in the Discovery and basic configuration ASE.

Attribute type: VisibleString[240]

NOTE 1 Within the context of LLDP protocol a DTE is referred to as port. It does not mean a port from the UDP context.

LLDP Time To Live

This attribute indicates the number of seconds that the recipient LLDP agent is to regard the information associated with this chassis and port identifier to be valid. It shall comply with IEEE Std 802.1AB.

Attribute type: Unsigned16

Allowed values: 20

Port Description

This attribute contains an alpha-numeric string that indicates the port description. It shall comply with IEEE Std 802.1AB.

If IETF RFC 2863 is implemented, the use of the ifDescr object is recommended for this field.

System Name

This attribute contains an alpha-numeric string that indicates the system’s administratively-assigned name. It shall comply with IEEE Std 802.1AB.

This should be the system’s fully-qualified domain name.

If implementations support IETF RFC 3418, the use of the sysName object is recommended for this field.

System Description

This attribute contains an alpha-numeric string that is the textual description of the network entity. It shall comply with IEEE Std 802.1AB.

This value should include the full name and version identification of the system's hardware type, software operating system, and networking software.

If implementations support IETF RFC 3418, the use of the sysDescr object is recommended for this field.

System Capabilities

This attribute contains a bit-map of the capabilities that define the primary function(s) of the system. The bit positions for each function and the associated MIB or standard that are likely, but not guaranteed, to be supported are listed in Table 79. A binary one in the associated bit indicates the existence of that capability. It shall comply with IEEE Std 802.1AB.

Individual systems can indicate more than one implemented functional capability (for example, both a bridge and router capability).

Table 79 – System capabilities

Position	Meaning
Bit 0	Other
Bit 1	Repeater
Bit 2	Bridge
Bit 3	WLAN Access Point
Bit 4	Router
Bit 5	Telephone
Bit 6	DOC SIS cable device
Bit 7	Station Only

Management Address

This attribute contains an OctetString indicating the particular management address. It shall comply with IEEE Std 802.1AB.

The returned address should be the most appropriate for management use, typically a layer-3 address such as the IPv4 address, '192.168.254.10'.

Object Identifier

This attribute identifies the type of hardware component or protocol entity associated with the indicated management address. If no object identifier is available, this field shall not be provided. It shall comply with IEEE Std 802.1AB.

NOTE 2 The interface number and object identifier are included to assist NMS discovery by indicating Enterprise-specific or other starting points for the search, such as the Interface (see IETF RFC 2863) or Entity MIB (see IETF RFC 2737).

List of Organizationally-specific extensions

This attribute list contains the following attributes:

Organizationally Unique Identifier

This attribute contains an OUI that is provided to allow different organizations, such as IEEE Std 802, IETF, as well as individual software and equipment vendors, to define Type Length Values (TLV) that advertise information to remote entities.

List of IEEE Std 802.1 Subtypes

This attribute list contains the following attributes:

Subtype

This attribute shall comply with IEEE Std 802.1AB.

Allowed values: PORT_VLAN_ID, PORT_AND_PROTOCOL_VLAN_ID, VLAN_NAME, PROTOCOL_IDENTITY

Port VLAN Identifier

This attribute contains the VLAN ID for the bridge port as defined in IEEE Std 802.1Q. A value of zero shall be used if the system either does not know the port VLAN identifier or does not support port-based VLAN operation.

Flags

This attribute contains a bit map indicating the port and protocol VLAN capability and status.

Allowed values: PPVID_SUPPORTED, PPVID_ENABLED

PPVID Reference Number

This attribute contains the port and protocol VLAN ID reference number for this IEEE Std 802.3 LAN station.

If the port is not capable of supporting port and protocol VLANs and/or the port is not enabled with any port protocol VLAN, the PPVID number should be zero.

VLAN ID

This attribute contains the VID number associated with the VLAN name.

VLAN Name

This attribute contains the VLAN's name.

Attribute type: OctetString[32]

If implementations support IETF RFC 2674, the use of the dot1QVLANStaticName object is recommended for this field.

List of Protocol Identities

This attribute list contains the following attributes:

Protocol Identity

This attribute contains the first *n* octets of the protocol after the layer-2 addresses (i.e., starting with the length/type field) that the sender would like to advertise. The value of *n* is determined by the need for the protocol to disambiguate itself. The protocol information string shall include enough octets to allow the receiver to correctly identify the protocol and its version.

NOTE 3 Spanning tree protocols, for example, would need to include five octets: LLC address (two octets), Protocol ID (two octets), plus the protocol version (one octet).

List of IEEE Std 802.3 Subtypes

This attribute list contains the following attributes:

Subtype

This attribute shall comply with IEEE Std 802.1AB.

Allowed values: MAC_PHY_CONFIGURATION_STATUS, POWER_VIA_MDI, MAXIMUM_FRAME_SIZE, ADDITIONAL_ETHERNET_CAPABILITIES

Auto Negotiation Support And Status

This attribute contains a bit map that identifies the auto-negotiation support and current status of the local IEEE Std 802.3 LAN station as defined in Table 80. If auto-negotiation support bit (bit-0) is one and the auto-negotiation status bit (bit-1) is zero, the IEEE Std 802.3 physical media dependent sublayer operating mode will be determined the default configuration field value rather than by auto-negotiation.

Table 80 – Auto negotiation support and status

Position	Meaning
Bit 0	Auto Negotiation Support (0 – not supported, 1 – supported)
Bit 1	Auto Negotiation Status (0 – disabled, 1 – enabled)

NOTE 4 This attribute can be written via Write PD Port Data Adjust.

Advertised Capability

This attribute contains an integer value as defined by the ifMauAutoNegCapAdvertisedBits object in IETF RFC 4836.

Operational MAU type

This attribute is an integer value indicating the operational MAU type of the sending device. This value is derived from the list position of the corresponding dot3MauType as listed in IETF RFC 4836 (or subsequent revisions) and is equal to the last number in the respective dot3MauType. For MAU types not listed in IETF RFC 4836 (or subsequent revisions), the value of this field shall be set to zero.

MDI Power Support

This attribute contains a bit-map of the MDI power capabilities and status as defined in Table 81.

Table 81 – MDI Power Support

Position	Meaning
Bit 0	Port Class (0 – Power Sourcing Equipment, 1 – Powered Device)
Bit 1	MDI Power Support (0 – not supported, 1 – supported)
Bit 2	MDI Power State (0 – disabled, 1 – enabled)
Bit 3	Pairs Control Ability (0 – pair selection cannot be controlled, 1 – pair selection can be controlled)

Power Pair

This attribute contains an integer value as defined by the pethPsePortPowerPairs object in IETF RFC 3621.

Power Class

This attribute contains an integer value as defined by the pethPsePortPowerClassification object in IETF RFC 3621.

Maximum Frame Size

This optional attribute contains an integer value indicating the maximum supported frame size in octets.

Attribute type: Unsigned16

Allowed values:

1 522 for Q-tagged frames

2 000 for envelope frames

Preemption Capability Support

This attribute is true if the preemption capability is supported.

Attribute type: Boolean

Preemption Capability Status

This attribute is true if the preemption capability is enabled.

Attribute type: Boolean

Preemption Capability Active

This attribute is true if the preemption capability is active.

Attribute type: Boolean

Additional Fragment Size

This attribute indicates the minimum number of octets over 64 octets required in non-final fragments by the receiver. This value is expressed in units of 64 octets.

Attribute type: Unsigned8

Allowed values: 0, 1, 2, 3

List of PNIO Subtypes

This attribute list contains the following attributes:

Subtype

This attribute contains the following values.

Allowed values: LLDP_PNIO_DELAY, LLDP_PNIO_PORTSTATUS, LLDP_PNIO_ALIAS, LLDP_PNIO_MRP_PORT_STATUS, LLDP_PNIO_INTERFACE_MAC_ADDRESS, LLDP_PNIO_PTCP_STATUS, LLDP_PNIO_MAUTypeExtension, LLDP_PNIO_NMEDOMAIN, LLDP_PNIO_NMEManagement

PnioDelay

This attribute consists of the following attributes:

PTCP_PortRxDelayLocal

This attribute contains the local receiving delay of the port in nanoseconds.

Attribute type: Unsigned32

Allowed values: UNKNOWN (0x00000000), 0x00000001 to 0x00000FFF

PTCP_PortRxDelayRemote

This attribute contains the local receiving delay of the peer port in nanoseconds.

Attribute type: Unsigned32

Allowed values: UNKNOWN (0x00000000), 0x00000001 to 0x00000FFF

PTCP_PortTxDelayLocal

This attribute contains the local transmission delay of the port in nanoseconds.

Attribute type: Unsigned32

Allowed values: UNKNOWN (0x00000000), 0x00000001 to 0x00000FFF

PTCP_PortTxDelayRemote

This attribute contains the local transmission delay of the peer port in nanoseconds.

Attribute type: Unsigned32

Allowed values: UNKNOWN (0x00000000), 0x00000001 to 0x00000FFF

CableDelayLocal

This attribute contains the local cable delay in nanoseconds.

Attribute type: Unsigned32

Allowed values: UNKNOWN (0x00000000), 0x00000001 to 0x000FFFFF

PnioPortStatus

This attribute consists of the following attributes:

RTClass2_PortStatus

This attribute contains the following attributes.

Status

This attribute contains the port status for RT_CLASS_2.

Allowed values: OFF, RTCLASS2_RUN

RTClass3_PortStatus

This attribute contains the following attributes.

Status

This attribute contains the port status for RT_CLASS_3.

Allowed values: OFF, RTCLASS3_UP, RTCLASS3_RUN

Fragmentation

This attribute contains the fragmentation mode of this port.

Allowed values: OFF, ON

PreambleLength

This attribute contains the preamble length setting of this port.

Allowed values: SEVEN, ONE

Optimized

This attribute contains the port mode for RT_CLASS_3.

Allowed values: OFF, ON

AliasNameValue

This attribute contains the following VisibleString:

“Value of attribute Port ID” + “.” + “Value of Chassis ID”

Attribute type: VisibleString

PnioMRPPortStatus

This attribute shall consist of the following attributes.

MRP_DomainUUID

This attribute contains the MRP domain UUID.

Attribute type: UUID

MRRT_PortStatus

This attribute contains the MRRT port status (will never be implemented).

Attribute type: Unsigned8

Allowed values: OFF

PnioMRPICPortStatus

This attribute shall consist of the following attributes.

MRPIC_DomainID

This attribute contains the MRPIC domain ID.

Attribute type: Unsigned16

Allowed values: 0x0000 (no MRP interconnection domain assigned), 0x0001 to 0xFFFF

MRPIC_Role

This attribute contains the MRP interconnection role.

Attribute type: Unsigned16

Allowed values: NO_ROLE_ASSIGNED, MIM (MRP interconnection manager), MIC (MRP interconnection client)

ChassisMacAddress

This attribute contains the IEEE Std 802 MAC address.

Attribute type: OctetString[6]

PnioPTCPStatus

This attribute shall consist of the following attributes.

PTCP_MasterSourceAddress

This attribute contains the IEEE Std 802 MAC address of the PTCP master.

Attribute type: OctetString[6]

PTCP_SubdomainUUID

This attribute contains the UUID of the PTCP subdomain.

Attribute type: UUID

IRDataUUID

This attribute contains the UUID of the Isochronous Relay (IR) data.

Attribute type: UUID

LLDP_LengthOfPeriod

This attribute shall consist of the following attributes.

Length

This attribute contains the value for the duration of the cycle in nanoseconds. The value shall be a multiple of 31 250 ns.

Attribute type: Unsigned32

Allowed values: 0x00007A12 to 0x003D0900 if valid, 0 if invalid

Validity

This attribute contains the validity of the length.

Allowed values: INVALID, VALID

LLDP_RedPeriodBegin

This attribute shall consist of the following attributes.

Offset

This attribute contains the value for the offset related to the start of the cycle in nanoseconds.

Attribute type: Unsigned32

Allowed values: 0x00000000 to 0x003D08FF if valid, 0 if invalid

Validity

This attribute contains the validity of the offset.

Allowed values: INVALID, VALID

LLDP_GreenPeriodBegin

This attribute shall consist of the following attributes.

Offset

This attribute contains the value for the offset related to the start of the cycle in nanoseconds.

Attribute type: Unsigned32

Allowed values: 0x00000000 to 0x003D08FF if valid, 0 if invalid

Validity

This attribute contains the validity of the offset.

Allowed values: INVALID, VALID

PnioMAUTypeExtension

This optional attribute shall consist of the following attributes.

MAUTypeExtension

This document defines, in extension to the IEEE Std 802.3, additional MAUTypes. This MAUTypeExtension indicates an extension of the attribute OperationalMAUType.

The value 0x0 indicates that the OperationalMAUType is not extended.

Attribute type: Unsigned16

NME Domain UUID

This optional attribute contains the NME Domain UUID. This attribute shall exist when the device supports time-aware system. NIL indicates a non-parameterized device. The value of the corresponding DCP attribute shall be used.

Attribute type: UUID

NME Management Addr

This optional attribute contains the address of the active NME. This field shall comply with IEEE Std 802.1AB Management Address TLV. The returned address should be the most appropriate for management use, typically a layer-3 IP address or a layer-2 MAC address.

Attribute type: OctetString

List of Remote Systems Data

This attribute list contains the same attributes as specified for Real List of Ports including all subsequent attributes until Maximum Frame Size. Furthermore, the following additional attributes are included.

Port ID

This attribute has the same definition as Own Port ID.

Chassis ID

This attribute has the same definition as Interface Name.

MAC Address

This attribute contains the devices physical address according to IEEE Std 802.3 MAC address.

Attribute type: OctetString[6]

Line Delay

This attribute contains the measured line delay. The time base shall be 1 ns.

Attribute type: Unsigned32

6.3.13.3 IEEE Std 802.1AB service specification

The protocol according to IEEE Std 802.1AB shall be used to send and receive the attribute values of the ASE. IEEE Std 802.1AB uses the services of the LMPM to transmit and receive information to and from other LLDP agents.

6.3.13.3.1 Remote systems data change

This local service shall be used to indicate a change of certain Remote Systems Data. Table 82 shows the parameters of the service.

Table 82 – Remote systems data change

Parameter name	ind
Argument	M
Local Port ID	M
List of Neighbors	U
Remote Chassis ID	U
Remote Port ID	U
Remote Cable Delay	U
Remote RT_CLASS_3 Port Status	U
Remote PTCP Status	U
Remote Line Delay	U
Auto Negotiation Support And Status	U
Advertised Capability	U
Operational MAU type	U

Argument

The argument shall convey the service specific parameters of the service indication.

Local Port ID

This parameter is the local identifier.

List of Neighbors

This parameter list consists of the following parameters:

Remote Chassis ID

This parameter contains the value of the attribute of the ASE.

Remote Port ID

This parameter contains the value of the attribute of the ASE.

Remote Cable Delay

This parameter contains the value of the attribute of the ASE.

Remote RT_CLASS_3 Port Status

This parameter contains the value of the attribute of the ASE.

Remote PTCP Status

This parameter contains the value of the attribute of the ASE.

Remote Line Delay

This parameter contains the value of the sum of the following attributes of the ASE:

CableDelayLocal

PortRxDelayLocal

PortTxDelayRemote

Auto Negotiation Support And Status

This parameter contains the value of the attribute of the ASE.

Advertised Capability

This parameter contains the value of the attribute of the ASE.

Operational MAU type

This parameter contains the value of the attribute of the ASE.

6.3.13.3.2 Placeholder

This is an empty subclause to be in line with ISO/IEC Directives, Part 2 and the structure of service specifications.

6.3.13.4 Invocation of the IEEE Std 802.1AB object

There is one IEEE Std 802.1AB object for the device.

6.3.14 Media redundancy ASE**6.3.14.1 Overview**

For media redundancy, IEC 62439-2 applies. The support of the MRP Management Information Base (MIB) is optional.

The MRP consists of a service and a protocol entity. Both are described by IEC 62439-2.

6.3.14.2 Media redundancy class specification**6.3.14.2.1 General**

The Media redundancy ASE defines one object type.

6.3.14.2.2 Template

A Media redundancy object is described by the following template:

ASE:	Media redundancy ASE
CLASS:	Media redundancy
CLASS ID:	not used
PARENT CLASS:	IEEE Std 802.3, MAC Bridges ASE, IEEE Std 802.1 AB
ATTRIBUTES:	
1	(m) Key Attribute: Implicit
2	(m) Attribute: List of MRP Instances
2.1	(m) Attribute: MRP Instance
2.2	(m) Attribute: MRP Domain UUID
2.3	(m) Attribute: MRP Domain Name
2.4	(m) Attribute: MRP Version
2.5	(m) Attribute: Administrative MRP Role
2.6	(m) Attribute: Operational MRP Role

2.7	(c) Constraint:	Operational MRP Role = MANAGER or MANAGER_AUTO
2.7.1	(m) Attribute:	MRP Prio
2.7.2	(m) Attribute:	MRP TOPchgT
2.7.3	(m) Attribute:	MRP TOPNRmax
2.7.4	(m) Attribute:	MRP TSTshortT
2.7.5	(m) Attribute:	MRP TSTdefaultT
2.7.6	(m) Attribute:	MRP TSTNRmax
2.7.7	(m) Attribute:	MRP Ring State
2.7	(c) Constraint:	Operational MRP Role = CLIENT
2.7.1	(m) Attribute:	MRP LNKdownT
2.7.2	(m) Attribute:	MRP LNKupT
2.7.3	(m) Attribute:	MRP LNKNRmax
2.8	(m) Attribute:	MRP Data Check
2.8.1	(m) Attribute:	MRP Domain UUID
2.8.2	(m) Attribute:	MRP Check
2.8.2.1	(m) Attribute:	Media Redundancy Manager Check
2.8.2.2	(m) Attribute:	Domain UUID Check
2.9	(m) Attribute:	Ringport 1 ID
2.10	(m) Attribute:	Ringport 2 ID
3	(m) Attribute:	List of MRPIC Ports
3.1	(m) Attribute:	MRPIC Port ID
3.2	(m) Attribute:	MRPIC Domain ID
3.3	(m) Attribute:	MRPIC Role
3.4	(m) Attribute:	MRPIC Domain Name
3.5	(c) Attribute:	MRPIC MIM Params
3.5.1	(m) Attribute:	MRPIC TOPchgT
3.5.2	(m) Attribute:	MRPIC TOPNRmax
3.5.3	(m) Attribute:	MRPIC LinkStatusChangeT
3.5.4	(m) Attribute:	MRPIC LinkStatusNRmax
3.5.5	(m) Attribute:	MRPIC LinkStatusStartDelay
3.6	(c) Attribute:	MRPIC State Data
3.7	(c) Attribute:	MRPIC MIC Params
3.7.1	(m) Attribute:	MRPIC LNKdownT
3.7.2	(m) Attribute:	MRPIC LNKupT
3.7.3	(m) Attribute:	MRPIC LNKNRmax
3.7.4	(m) Attribute:	MRPIC LinkStatusStartDelay
3.7.5	(m) Attribute:	MRPIC MICPosition

SERVICES:

None.

See also the Media Redundancy ASE in IEC 62439-2.

6.3.14.2.3 Attributes

List of MRP Instances

This attribute contains the MRP instances of this node. A list element consists of the following attributes:

MRP Instance

This attribute defines the internal reference number of the MRP instance.

Attribute type: Unsigned8

Allowed values: 0 to 126

MRP Domain UUID

This attribute defines the redundancy domain representing the ring the Media redundancy object belongs to. It is set to default domain ID or provided as unique ID by engineering.

Attribute type: UUID

MRP Domain Name

This attribute defines the redundancy domain representing the ring the Media redundancy object belongs to. It is set to default domain name or provided as unique ID by engineering.

Attribute type: VisibleString[240]

MRP Version

This attribute specifies the version of the Media redundancy object in the redundancy domain referenced by the value of the attribute Domain ID.

Attribute type: Unsigned16

Allowed values: 1

Administrative MRP Role

This attribute specifies the administrative role of the Media redundancy object in the redundancy domain referenced by the value of the attribute Domain ID.

Attribute type: Unsigned16

Allowed values: DISABLED, MANAGER, CLIENT, MANAGER_AUTO

Operational MRP Role

This attribute specifies the operational role of the Media redundancy object in the redundancy domain referenced by the value of the attribute Domain ID.

Attribute type: Unsigned16

Allowed values: DISABLED, MANAGER, CLIENT, MANAGER_AUTO

MRP Prio

This conditional attribute is present when the value of the operational MRP role attribute is "MANAGER" or "MANAGER_AUTO". It contains the manager's priority. A lower value indicates a higher priority.

Attribute type: Unsigned16

Allowed values: see IEC 62439-2

MRP TOPchgT

This conditional attribute is present when the value of the operational MRP role attribute is "MANAGER" or "MANAGER_AUTO". It contains the interval for sending topology change frames.

Attribute type: Unsigned16

MRP TOPNRmax

This conditional attribute is present when the value of the operational MRP role attribute is "MANAGER" or "MANAGER_AUTO". It contains the interval count which controls repeated transmission of topology change frames.

Attribute type: Unsigned16

MRP TSTshortT

This conditional attribute is present when the value of the operational MRP role attribute is “MANAGER” or “MANAGER_AUTO”. It contains the short interval for sending test frames on ringports after link changes in the ring.

Attribute type: Unsigned16

MRP TSTdefaultT

This conditional attribute is present when the value of the operational MRP role attribute is “MANAGER” or “MANAGER_AUTO”. It contains the default interval for sending test frames on ringports.

Attribute type: Unsigned16

MRP TSTNRmax

This conditional attribute is present when the value of the operational MRP role attribute is “MANAGER” or “MANAGER_AUTO”. It contains the interval count for monitoring the reception of test frames.

Attribute type: Unsigned16

MRP Ring State Data

This conditional attribute is present when the value of the operational MRP role attribute is “MANAGER” or “MANAGER_AUTO”. It contains the real ring state of the Media redundancy object in the redundancy domain. Note that only the node acting as MRM knows the current state of the ring (open or closed).

Attribute type: Unsigned16

Allowed values:

OPEN (Ring is open due to link or device failure in ring),

CLOSED (Ring is closed (normal operation, no error)),

UNDEFINED (node is in operational role CLIENT or DISABLED)

MRP LNKdownT

This conditional attribute is present when the value of the operational MRP role attribute is “CLIENT”. It contains the interval for sending link down Link Change frames on ringports.

Attribute type: Unsigned16

MRP LNKupT

This conditional attribute is present when the value of the operational MRP role attribute is “CLIENT”. It contains the interval for sending link up Link Change frames on ringports.

Attribute type: Unsigned16

MRP LKNRmax

This conditional attribute is present when the value of the operational MRP role attribute is “CLIENT”. It contains the Link Change frame count which controls repeated transmission of Link up or link down frames.

Attribute type: Unsigned16

MRP Data Check

This parameter contains the checking rules. It consists of the following attributes:

MRP Domain UUID

This parameter contains the MRP Domain UUID to check against, if the Domain UUID Check attribute is set to TRUE.

Attribute type: UUID

MRP Check

This attribute consists of the following elements:

Media Redundancy Manager Check

This attribute contains the value TRUE to enable diagnosis with channel error type MEDIA_REDUNDANCY_MISMATCH to be added to the diagnosis ASE. Otherwise it shall be set to FALSE.

Attribute type: Boolean

Domain UUID Check

This attribute contains the value TRUE to enable the continued evaluation of MRP Domain UUID with each Remote System Data Change indication as specified within the Neighborhood Check state machine. Otherwise it shall be set to FALSE.

Attribute type: Boolean

Ringport 1 ID

This attribute specifies one port of a bridge which is assigned as Ringport 1 in the redundancy domain referenced by the value of the attribute Domain ID. One port shall only belong to a single redundancy domain.

Attribute type: Unsigned16

Ringport 2 ID

This attribute specifies another port of a bridge different from Ringport 1 ID which is assigned as Ringport 2 in the redundancy domain referenced by the value of the attribute Domain ID.

Attribute type: Unsigned16

List of MRPIC Ports

This attribute contains the ports of this node used for MRP interconnection. A list element consists of the following attributes:

MRPIC Port ID

This attribute specifies one port of a bridge which is assigned as MRP interconnection port in the interconnection domain referenced by the value of the attribute Domain ID. One port shall only belong to a single interconnection domain.

Attribute type: Unsigned16

MRPIC Domain ID

This attribute contains the MRPIC domain ID.

Attribute type: Unsigned16

Allowed values: 0x0000 (no MRP interconnection domain assigned), 0x0001 to 0xFFFF

MRPIC Role

This attribute contains the MRP interconnection role.

Attribute type: Unsigned16

Allowed values: NO_ROLE_ASSIGNED, MIM (MRP interconnection manager), MIC (MRP interconnection client)

MRP Domain Name

This attribute defines the domain name. It is set to default domain name or provided as unique ID by engineering.

Attribute type: VisibleString[240]

MRPIC MIM Params

This conditional attribute specifies the parameters for the MRP interconnection manager. It is present only when the value of MRPIC role is “MIM”.

MRPIC TOPchgT

This attribute contains the interval for sending repetition of interconnection topology change frames for the MIM.

Attribute type: Unsigned16

Time base: 10 ms

MRP TOPNRmax

This attribute contains the interval count which controls repeated transmission of interconnection topology change frames for the MIM.

Attribute type: Unsigned16

MRP LinkStatusChangeT

This attribute contains the interconnection Link Status poll time interval for the MIM.

Attribute type: Unsigned16

Time base: 1 ms

MRPIC LinkStatusNRmax

This attribute contains the maximum outstanding response to Link Status poll frame count for the MIM. A higher value causes an interconnection failure.

Attribute type: Unsigned16

MRPIC LinkStatusStartDelay

This attribute contains the startup delay for the MIM.

Attribute type: Unsigned16

Time base: 100 ms

MRPIC State Data

This conditional attribute contains the state of the MRP interconnection. It is present only when the value of MRPIC role is “MIM”.

Attribute type: Unsigned16

Allowed values:

OPEN (MRP interconnection is open due to link or device failure in interconnection),

CLOSED (MRP interconnection is closed (normal operation, no error))

MRPIC MIC Params

This conditional attribute specifies the parameters for the MRP interconnection client. It is present only when the value of MRPIC role is “MIC”.

MRPIC LNKdownT

This attribute contains the interval for sending link down Interconnection Link Change frames on ring ports and interconnection ports for the MIC.

Attribute type: Unsigned16

Time base: 1 ms

MRPIC LNKupT

This attribute contains the interval for sending link up Interconnection Link Change frames on ringports and interconnection ports for the MIC.

Attribute type: Unsigned16

Time base: 1 ms

MRPIC LKNRmax

This attribute contains the Interconnection Link Change frame count which controls repeated transmission of Interconnection Link up or Link down frames for the MIC.

Attribute type: Unsigned16

MRPIC LinkStatusStartDelay

This attribute contains the startup delay for the MIC.

Attribute type: Unsigned16

Time base: 100 ms

MRPIC MICPosition

This attribute describes the MRP Interconnection Client position in the interconnection setup.

Allowed values: PRIMARY, SECONDARY

6.3.14.3 Media redundancy service specification

The media redundancy service specification is defined in IEC 62439-2.

6.3.14.4 Media redundancy behavior**6.3.14.4.1 General**

Media redundancy events shall cause diagnosis events and alarm notifications if an application relationship is established and the attribute Check Media Redundancy has the value TRUE.

6.3.14.4.2 Media redundancy diagnosis dependencies

Figure 11 shows the dependencies of media redundancy diagnosis:

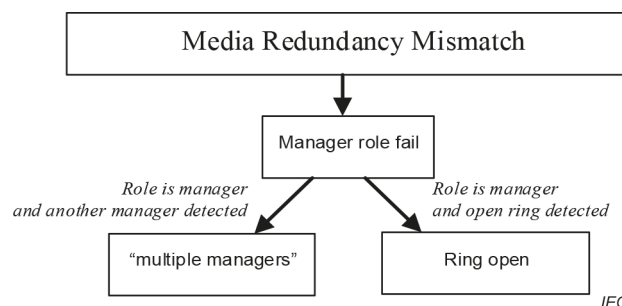


Figure 11 – Media redundancy diagnosis dependencies

If a node in a media redundancy domain is in operational role **MANAGER** or **MANAGER_AUTO** and another node with operational role **MANAGER** or **MANAGER_AUTO** is detected, the “multiple managers” diagnosis shall be added to the diagnosis ASE.

If a node in a media redundancy domain is in operational role **MANAGER** or **MANAGER_AUTO** and an open ring is detected, the “ring open” diagnosis shall be added to the diagnosis ASE.

These events are indicated by means of the State Change service.

In addition, media redundancy handles the following event for both ringports of a redundancy domain by means of the Neighborhood Change service:

If the attribute Check Ringport Neighborhood is **TRUE** and the attribute Ringport Domain State is **BAD** or **UNDEFINED**, the “Peer Domain ID mismatch” event shall be signaled.

6.3.14.5 Invocation of the MRP object

There is one MRP object for the end station component.

6.3.15 Precision time control ASE

6.3.15.1 Concepts

The “Precision Transparent Clock Protocol” (PTCP) represents a uniform method of distributing a time. In particular, this means that a PTCP master synchronizes an amount of PTCP slaves in the sub-microsecond-range. It supports a PTCP best master model for one domain. The transport protocol PTCP is data link layer based.

A PTCP domain shall be used for **WORKING_CLOCK**, which is a local time to synchronize the network access (in particular the cyclic communication) for all devices participating in the particular PTCP domain.

Additionally PTCP supports the measurement of the line delay between two corresponding ports. Figure 12 shows the context of the precision time control ASE.

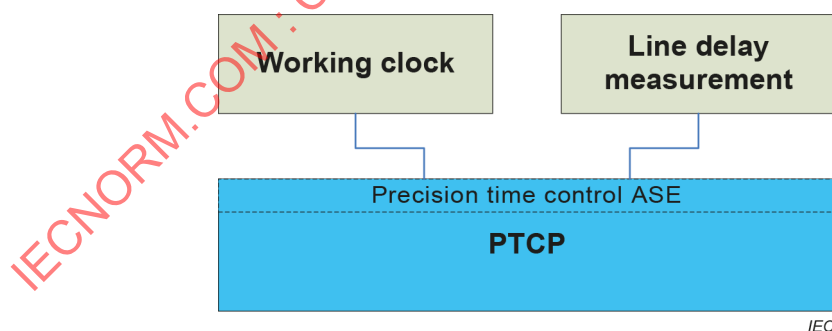


Figure 12 – PTCP applications

6.3.15.2 PTCP class specification

6.3.15.2.1 Template

ASE: PTCP ASE

CLASS: PTCP

CLASS ID: not used

PARENT CLASS: TOP

ATTRIBUTES:

1	(m)	Key Attribute:	Sync ID
2	(m)	Attribute:	Domain
2.1	(m)	Attribute:	Domain UUID
2.2	(m)	Attribute:	Sequence ID
2.3	(m)	Attribute:	Sync Send Factor
2.4	(m)	Attribute:	PTCP Takeover Timeout
2.5	(m)	Attribute:	PTCP Timeout
2.6	(m)	Attribute:	Role (MASTER, SLAVE)
2.7	(c)	Constraint:	Role = MASTER
2.7.1	(m)	Attribute:	Priority
2.7.2	(m)	Attribute:	Accuracy
2.7.3	(m)	Attribute:	Variance
2.7.4	(m)	Attribute:	PTCP Master Startup Time
2.8	(c)	Constraint:	Sync ID = WORKING CLOCK
2.8.1	(m)	Attribute:	PTCP Time
2.8.1.1	(m)	Attribute:	Epoch Number
2.8.1.2	(m)	Attribute:	Seconds
2.8.1.3	(m)	Attribute:	Nano Seconds
2.8.1.4	(m)	Attribute:	Current UTC Offset
2.8.2	(m)	Attribute:	Local Time
2.9	(m)	Attribute:	PLL Window
2.10	(m)	Attribute:	Sync State Info
2.10.1	(m)	Attribute:	Jitter out of Boundary
2.10.2	(m)	Attribute:	No Sync Message Received
2.10.3	(m)	Attribute:	Wrong PTCP Domain UUID
2.11	(m)	Attribute:	Rate Compensation Factor
2.12	(m)	Attribute:	List of Ports
2.12.1	(m)	Attribute:	Port ID
2.12.2	(m)	Attribute:	Borderline
2.12.2.1	(m)	Attribute:	Ingress
2.12.2.2	(m)	Attribute:	Egress
2.12.3	(m)	Attribute:	Line Delay
2.12.4	(m)	Attribute:	Rate Compensation Factor Peer
2.13	(o)	Attribute:	List of OUIs
2.13.1	(m)	Attribute:	OUI
2.13.2	(s)	Attribute:	Subtype
2.13.3	(s)	Attribute:	Data Block

SERVICES:

1	(m)	OpsService:	Start Bridge
2	(m)	OpsService:	Start Slave
3	(o)	OpsService:	Start Master
4	(m)	OpsService:	Stop Bridge
5	(m)	OpsService:	Stop Slave
6	(o)	OpsService:	Stop Master
7	(m)	OpsService:	Sync State Change

6.3.15.2.2 Attributes

Sync ID

This key attribute identifies the instance of the protocol machine to which the data belong. The value WORKING_CLOCK shall be used for cycle synchronization.

Attribute type: Unsigned8

Allowed values: WORKING_CLOCK

Domain

This attribute consists of the following elements:

Domain UUID

This attribute contains the UUID of the domain for synchronization which is provided by the engineering system and issued by a master. The UUID is used for a logical grouping of PTCP clocks that synchronize each other using the PTCP protocol. Clocks in another PTCP domains shall not be synchronized.

Attribute type: UUID

Sequence ID

This attribute contains the sequence number of the sync message. It shall be incremented with every new sync messages. By means of the Sequence ID the receiver detects duplications.

Attribute type: Unsigned16

Sync Send Factor

This attribute contains the send interval for sync messages.

Attribute type: Unsigned16

Allowed values: 0 to 64 000

PTCP Takeover Timeout

This attribute contains a timeout value for detection the loss of sync messages from the current sync master. The sync slave shall try to find a new sync master. The PTCP takeover timeout value shall be in the range from 32 ms to 16 352 ms.

Attribute type: Unsigned32

Default value: 96 ms

PTCP Timeout

This attribute contains a timeout value for detection the loss of any sync messages. The PTCP timeout value shall be in the range from 32 ms to 16 352 ms.

Attribute type: Unsigned32

Default value: 192 ms

Role

This attribute contains the role to time synchronization.

Attribute type: Unsigned16

Allowed values: MASTER, SLAVE

Priority

This attribute shall be the priority of master issuing sync messages.

Attribute type: Unsigned8

Allowed values: PRIMARY, SECONDARY

Accuracy

This attribute shall be the accuracy of master time in comparison with the precision of the local clock.

Attribute type: Unsigned8

Allowed values: 25 ns, 100 ns, 250 ns, 1 µs, 2,5 µs, 10 µs, 25 µs, 100 µs, 250 µs, 1 ms, UNKNOWN

Default value: UNKNOWN

Variance

This attribute shall be the value for the quality of the clock. Each master clock shall maintain an estimation of its inherit precision. The PTCP variance is based on the theory of Allan deviation. The Allan deviation $\sigma_y(\tau)$ is estimated as follows:

$$\sigma_y(\tau) = \left[\frac{1}{2(N-2)\tau^2} \times \sum_{k=1}^{N-2} (x_{k+2} - 2x_{k+1} + x_k)^2 \right]^{\frac{1}{2}} \quad (16)$$

where

$\sigma_y(\tau)$

is the Allan deviation;

x_k, x_{k+1} and x_{k+2}

are time residual measurements, made at times $t_k, t_k + \tau$ and $t_k + 2\tau$, between the time provided by the measured clock and a local reference clock;

N

is the number of data samples.

The PTCP variance is defined by:

$$\sigma_{PTCP}^2 = \tau^2 \times \frac{1}{3} \sigma_y^2 \quad (17)$$

where

σ_{PTCP}^2

is PTCP variance;

σ_y

is the Allan deviation;

τ

is the quantity.

An unbiased estimate of the PTCP variance shall be computed as follows:

$$\sigma_{PTCP}^2 = \frac{1}{3} \left[\frac{1}{2(N-2)} \times \sum_{k=1}^{N-2} (x_{k+2} - 2x_{k+1} + x_k)^2 \right] \quad (18)$$

where

σ_{PTCP}^2

is the unbiased estimate of the PTCP variance;

x_k, x_{k+1} and x_{k+2}

are time residual measurement, made at times $t_k, t_k + \tau$ and $t_k + 2\tau$, between the time provided by the measured clock and a local reference clock;

N

is the number of data samples.

For PTCP variance the quantity τ , the sample period, shall be the value defined as sync interval.

PTCP variances shall be represented as follows:

An estimate of the variance, σ_{PTCP}^2 , is computed in units of seconds squared.

The logarithm to the base 2 of this estimate is computed. The computation of the logarithm need not be more precise than the precision of the estimate of the variance.

The logarithm is multiplied by 28 to produce a scaled value.

The value is represented as a 2's complement Integer16. The value 0x8000 is added to the reported value represented in this form and any overflow is ignored. The result, i.e., the offset scaled reported value, is cast as an Unsigned16.

This offset scaled value, represented as Unsigned16, shall be the value of the log variances.

The largest possible positive number, 0xFFFF, for the offset scaled log variance attribute shall indicate that the variance is either too large to be represented, or has not been computed. The variance values are used in the selection of the best master clock.

Attribute type: Unsigned16

NOTE 1 For example, suppose the PTCP variance value is $1\,414 \times 2^{-73} = 1\,497 \times 10^{-22} \text{ s}^2$. Then, $\log_2(1\,414 \times 2^{-73}) = -73 + 0,5 = -72,5$. If this were expressed as an Integer16, it would truncate to -72. To retain some precision the value is scaled by 2^8 to yield a scaledLogVariance of -18 560, 0xB780, which retains 8 bits more precision. To this is added 0x8000 to yield the offset scaled reported value 0x3780.

NOTE 2 The smallest variance that can be represented is 2^{-128} or $\sim 3 \times 10^{-39} \text{ s}^2$, which results in an offset scaled log variance of 0x0000. The maximum variance that can be represented is $\sim 2^{+127,99609}$, which results in an offset scaled log variance of 0xFFFF.

PTCP Master Startup Time

This attribute shall be the duration of the startup phase of the sync master. During this time the sync master shall check if there is a sync master with a higher clock quality in the sync domain.

Attribute type: Unsigned16

Allowed values: 0 s to 300 s

Default value: 10 s

WORKING_CLOCK

This attribute consists of the following elements for the time representation:

PTCP Time

This attribute consists of the following elements for the PTCP time representation.

Epoch Number

This attribute shall be the current number of times the 32-bit Seconds clock has rolled over since start of PTCP time. The meaning is the “upper” part of the seconds to achieve a 48 bit value.

Attribute type: Unsigned16

Seconds

This attribute contains the current number of seconds since start of the current PTCP epoch number. The meaning is the “lower” part of the seconds to achieve a 48 bit value.

Attribute type: Unsigned32

Nano Seconds

This attribute contains the current number of nanoseconds.

Attribute type: Unsigned32

Allowed values: 0 to 999 999 999

Current UTC Offset

This attribute contains in the context of the WORKING_CLOCK the value zero.

Attribute type: Integer16

Allowed values: 0

Local Time

This attribute consists of a local time value in nanoseconds. This value shall be used for PTCP clock synchronization and shall be the basis for the cycle counter.

Attribute type: Unsigned64

PLL Window

This attribute shall characterize the synchronization accuracy. The deviation between the local time and the reference time issued by a master shall not exceed the value of the PLL Window.

Attribute type: Unsigned32

Sync State Info

This element consists of the following error attributes. The synchronization achieved the state synchronous if there is no error.

Jitter out of Boundary

This attribute identifies whether the necessary synchronization accuracy (inside or outside PLL Window) is achieved or not.

Attribute type: Boolean

No Sync Message Received

This attribute identifies whether synchronization messages have been received or not.

Attribute type: Boolean

Wrong PTCP Domain UUID

If synchronization messages with wrong Domain UUID have been received, this attribute will be set.

Attribute type: Boolean

Rate Compensation Factor

This attribute shall be used to adjust the bridging time from sync and delay messages.

Attribute type: Unsigned32

List of Ports

This attribute consists of the following elements:

Port ID

This attribute identifies one Port of a bridge.

Attribute type: Unsigned8

Borderline

Both subsequent attributes shall contain the value ON for end-ports of a PTCP Domain. The value of the Ingress attribute shall be ON and the value for the Egress attribute shall be OFF for a port coupling two PTCP segments, for the hierarchical higher segment. The value of the Ingress attribute shall be OFF and the value for the Egress attribute shall be ON for a port coupling two PTCP segments, for the hierarchical lower segment.

NOTE 3 It is intended to avoid transmission from PTCP sync and PTCP announce messages from a hierarchical lower segment to a higher segment within a PTCP domain

This attribute consists of the following elements:

Ingress

This attribute identifies the end-ports of a PTCP Domain.

Attribute type: Unsigned8

Allowed values: ON, OFF

Egress

This attribute identifies the end-ports of a PTCP Domain or a level / segment borderline.

Attribute type: Unsigned8

Allowed values: ON, OFF

Line Delay

This attribute contains the transmit latency from this port to the connected port.

Attribute type: Unsigned32

Rate Compensation Factor Peer

This attribute contains the ratio between local and remote crystal frequency of the device at the connected port.

Attribute type: Float64

List of OUIs

This attribute consists of the following elements:

OUI

This attribute is an Organizationally Unique Identifier as defined by IANA.

Attribute type: Octet[3]

Subtype

This attribute is an organizationally specific parameter valid in the context of the attribute OUI.

Attribute type: Unsigned8

Data Block

This attribute is an organizationally specific parameter valid in the context of the attributes OUI and Subtype.

Attribute type: UUID

6.3.15.3 PTCP service specification

6.3.15.3.1 Start bridge

The start bridge service creates an instance of the PTCP protocol machine. Table 83 shows the parameters of the service.

Table 83 – Start bridge

Parameter name	req	cnf
Argument	M	
Sync ID	M	
List of Port Parameter	U	
Port ID	M	
Borderline	M	
Result(+)		S
Sync ID		M
Result(-)		S
Sync ID		M
Error code		M

Argument

The argument shall convey the service specific parameters of the service request.

Sync ID

This is the key attribute to identify the instance of the protocol machine.

List of Port Parameter

This optional list of parameter consists of the following parameters:

Port ID

This parameter contains the ID of the port which issues the delay request message

Borderline

This parameter contains the end-ports of a clock-domain

Result(+)

This parameter indicates that the service request succeeded.

Sync ID

This is the key attribute to identify the instance of the protocol machine.

Result(-)

This parameter indicates that the service request failed.

Sync ID

This is the key attribute to identify the instance of the protocol machine.

Error code

The parameter Error code contains the error code of the specific error.

Attribute type: Unsigned16

Allowed values: ENTRY_NOT_POSSIBLE, SYNC_ID_EXISTS

6.3.15.3.2 Start slave

The start slave service adds synchronization properties to the PTCP protocol machine with. Table 84 shows the parameters of the service.

Table 84 – Start slave

Parameter name	req	cnf
Argument	M	
SyncID	M	
Subdomain UUID	M	
Sync Send Factor	M	
PTCP Timeout Factor	M	
PLL Window	M	
Result(+)		S
Sync ID		M
Result(-)		S
Sync ID		M
Error code		M

Argument

The argument shall convey the service specific parameters of the service request.

Sync ID

This is the key attribute to identify the instance of the protocol machine.

Subdomain UUID

This parameter contains the UUID of the synchronization subdomain. The UUID is used for a logical grouping of PTCP clocks that synchronize each other using the PTCP protocol.

Sync Send Factor

This parameter contains the reception interval of sync messages.

PTCP Timeout Factor

This parameter contains a timeout value to detect the loss of sync messages.

PLL Window

This parameter contains the required synchronization accuracy. The deviation between the local time and the reference time issued by a grandmaster shall not exceed the value of the PLLWindow.

Result(+)

This parameter indicates that the service request succeeded.

Sync ID

This is the key attribute to identify the instance of the protocol machine.

Result(-)

This parameter indicates that the service request failed.

Sync ID

This is the key attribute to identify the instance of the protocol machine.

Error code

The parameter Error code contains the error code of the specific error.

Attribute type: Unsigned16

Allowed values: SLAVE_NOT_POSSIBLE, SLAVE_EXISTS

6.3.15.3.3 Start master

The start master service adds synchronization properties with the qualification to become synchronization master to the PTCP protocol machine. Table 85 shows the parameters of the service.

Table 85 – Start master

Parameter name	req	cnf
Argument	M	
Sync ID	M	
Subdomain UUID	M	
Sync Send Factor	M	
Sync Class	M	
Clock Stratum	M	
Current UTC Offset	M	
Epoch Number	M	
Result(+)		S
Sync ID		M
Result(-)		S
Sync ID		M
Error code		M

Argument

The argument shall convey the service specific parameters of the service request.

Sync ID

This is the key attribute to identify the instance of the protocol machine.

Subdomain UUID

This parameter contains the UUID of the synchronization subdomain. The UUID is used for a logical grouping of PTCP clocks that synchronize each other using the PTCP protocol.

Sync Send Factor

This parameter contains the send interval of sync messages.

Sync Class

This parameter contains the recommended role (primary, secondary) as a master.

Clock Stratum

This parameter contains the quality of the own time.

Current UTC Offset

This parameter contains the current offset to the UTC.

Epoch Number

This parameter contains the current number of times the 32-bit Seconds clock has rolled over since the begin of the PTCP epoch. The PTCP epoch began at 0 hours on 1. January 1970.

Result(+)

This parameter indicates that the service request succeeded.

Sync ID

This is the key attribute to identify the instance of the protocol machine.

Result(-)

This parameter indicates that the service request failed.

Sync ID

This is the key attribute to identify the instance of the protocol machine.

Error code

The parameter Error code contains the error code of the specific error.

Attribute type: Unsigned16

Allowed values: MASTER_NOT_POSSIBLE, MASTER_EXISTS, MASTER_NOT_EXISTS

6.3.15.3.4 Stop bridge

This service shall be used to stop the PTCP protocol machine. Table 86 shows the parameters of the service.

Table 86 – Stop bridge

Parameter name	req	cnf
Argument	M	
Sync ID	M	
Result(+)		S
Sync ID		M
Result(-)		S
Sync ID		M
Error code		M

Argument

The argument shall convey the service specific parameters of the service request.

Sync ID

This is the key attribute to identify the instance of the protocol machine.

Result(+)

This parameter indicates that the service request succeeded.

Sync ID

This is the key attribute to identify the instance of the protocol machine.

Result(-)

This parameter indicates that the service request failed.

Sync ID

This is the key attribute to identify the instance of the protocol machine.

Error code

The parameter ErrCode contains the error code of the specific error.

Attribute type: Unsigned16

Allowed values: SYNC_ID_NOT_EXISTS

6.3.15.3.5 Stop slave

This service shall be used to stop the PTCP protocol machine. Synchronization will be stopped and bridge functionality remains. Table 87 shows the parameters of the service.

Table 87 – Stop slave

Parameter name	req	cnf
Argument	M	
Sync ID	M	
Result(+)		S
Sync ID		M
Result(-)		S
Sync ID		M
Error code		M

Argument

The argument shall convey the service specific parameters of the service request.

Sync ID

This is the key attribute to identify the instance of the protocol machine.

Result(+)

This parameter indicates that the service request succeeded.

Sync ID

This is the key attribute to identify the instance of the protocol machine.

Result(-)

This parameter indicates that the service request failed.

SyncID

This is the key attribute to identify the instance of the protocol machine.

Error code

The parameter Error code contains the error code of the specific error.

Attribute type: Unsigned16

Allowed values: SLAVE_NOT_EXISTS

6.3.15.3.6 Stop master

This service shall be used to reduce the properties of the PTCP protocol machine. Master functionality will be removed and the protocol machine is forced to takeover slave role. Table 88 shows the parameters of the service.

Table 88 – Stop master

Parameter name	req	cnf
Argument	M	
Sync ID	M	
Result(+)		S
Sync ID		M
Result(-)		S
Sync ID		M
Error code		M

Argument

The argument shall convey the service specific parameters of the service request.

Sync ID

This is the key attribute to identify the instance of the protocol machine.

Result(+)

This parameter indicates that the service request succeeded.

Sync ID

This is the key attribute to identify the instance of the protocol machine.

Result(-)

This parameter indicates that the service request failed.

Sync ID

This is the key attribute to identify the instance of the protocol machine.

Error code

The parameter Error code contains the error code of the specific error.

Attribute type: Unsigned16

Allowed values: MASTER_NOT_EXISTS

6.3.15.3.7 Sync state change

This service shall be used to indicate a change of the synchronization state (i.e. synchronized or out of synchronization) and/or a change in the synchronization quality (i.e. jitter out of boundary, no sync message received). A change can only appear for a synchronization slave. Table 89 shows the parameters of the service.

Table 89 – Sync state change

Parameter name	ind
Argument	M
Sync ID	M
Sync State	M
Reason List	C

Argument

The argument shall convey the service specific parameters of the service request.

Sync ID

This is the key attribute to identify the instance of the protocol machine.

Sync State

This is the attribute shall contain the value SYNCHRONIZED or NOT_SYNCHRONIZED.

Reason List

This conditional attribute consists of the following elements:

ErrorType

This attribute identifies a synchronization error.

Attribute type: Unsigned16

Allowed values: JITTER_OUT_OF_BOUNDARY, NO_SYNC_MESSAGE_RECEIVED, WRONG_PTCP_DOMAIN

Appear

This attribute identifies whether the error appears or disappears.

Attribute type: Boolean

Allowed values: TRUE, FALSE

6.3.15.3.8 Line Delay change

This local service shall be used to indicate a change of certain Local Systems Data. Table 90 shows the parameters of the service.

Table 90 – Line Delay change

Parameter name	ind
Argument	M
Local Port ID	M
Local Line Delay	M

Argument

The argument shall convey the service specific parameters of the service indication.

Local Port ID

This parameter is the value of the corresponding attribute of the ASE object.

Local Line Delay

This parameter is the value of the corresponding attribute of the ASE object.

6.3.15.3.9 PTCP behavior**6.3.15.3.9.1 Synchronization**

The synchronization is done with a sync- and an optional follow up-frame. The follow up-frame is necessary, if the hardware isn't able to add bridge and line delays on the fly.

The clock issuing the sync frames in a PTCP subdomain is called PTCP master.

Clocks which receive sync frames and adjust their time to the PTCP master are called PTCP slaves. Their synchronization accuracy depends on the accuracy of the time stamping units from each bridge which measures the line and bridge delays.

A bridge with the following enhancements is called a PTCP transparent clock:

- Line Delay measurement
- Bridge Delay measurement
- Rate compensation for line and bridge delays
- Support media redundancy mechanism for PTCP

6.3.15.3.9.2 Rate control compensation

The rate control compensation equalizes the clock rate of a PTCP transparent clock to the PTCP master. Due to this the accumulated bridge and line delays, received by the PTCP slave to achieve higher synchronization accuracy, are measured with the clock rate of the PTCP master.

A PTCP transparent clock uses sync frames to measure the clock rate relating to the PTCP master. For details, see IEC 61158-6-10 “Precision transparent clock protocol”.

6.3.15.3.9.3 Best master algorithm

The Best Master Algorithm (BMA) specifies an algorithm how a clock determines the preferred clock issuing sync messages. The algorithm runs independently on each clock (master/slave) in a PTCP system. Each clock makes its own decision for the best master.

In computing the best master, a clock shall:

- Consider the quality of the most recent sync messages received.
- Include the results of the previous best master computing. However, if there are more recent qualified sync messages, the values from those messages shall be considered.

For analyzing the quality of sync message, a clock shall consider:

- The master issuing the sync message belongs to the own subdomain.
- Receiving the sync messages periodically.
- The stratum of the master clock.
- The variance which describes the characteristic of the master clock.

If stratum and variance of different masters are equal the BMA use the Source-MAC-Address to decide for the preferred clock (smallest one wins).

6.3.15.4 Media Redundancy support for synchronization with PTCP

To improve the reliability of a peer-to-peer network redundant communication paths are necessary. PTCP sync messages use the redundant communication paths to be independent from the reconfiguration of redundant networks.

The forwarding algorithm for PTCP takes care that on each communication path only one sync message will be transmitted. The first received sync message shall be used for synchronization.

6.3.15.5 Invocation of the PTCP object

There is one PTCP object for the end station component.

6.3.16 IEEE Std 802.1AS ASE

6.3.16.1 Overview

The concepts according to IEEE Std 802.1AS shall be applied. This document defines the utilization of the IEEE Std 802.1AS.

The formal model of the IEEE Std 802.1AS ASE is presented by the IEEE Std 802.1AS class specification, containing a description of its attributes and services.

Up to four IEEE Std 802.1AS synchronization domains for time-aware systems are utilized.

6.3.16.2 IEEE Std 802.1AS class specification

6.3.16.2.1 Template

An IEEE Std 802.1AS object is described by the following template:

ASE:	IEEE Std 802.1AS ASE
CLASS:	IEEE Std 802.1AS
CLASS ID:	not used
PARENT CLASS:	TOP
ATTRIBUTES:	
1	(m) Key Attribute: Implicit
2	(m) Attribute: Universal Time – time-aware system
2.1	(m) Attribute: Universal Time
2.2	(m) Attribute: List of Domains
2.2.1	(m) Attribute: Domain ID
2.2.2	(m) Attribute: Role
2.2.3	(m) Attribute: List of Ports
2.2.3.1	(m) Attribute: Port ID
2.2.3.2	(m) Attribute: Port Role
2.2.3.3	(m) Attribute: Path Delay Boundary
3	(m) Attribute: Working Clock – time-aware system
3.1	(m) Attribute: Working Clock
3.2	(m) Attribute: List of Domains
3.2.1	(m) Attribute: Domain ID
3.2.2	(m) Attribute: Role
3.2.3	(m) Attribute: List of Ports
3.2.3.1	(m) Attribute: Port ID
3.2.3.2	(m) Attribute: Port Role
3.2.3.3	(m) Attribute: Path Delay Boundary
4	(m) Attribute: List of Ports
4.1	(m) Attribute: Port ID
4.2	(m) Attribute: Path Delay
SERVICES:	
1	(m) OpsService: Local Get Time
2	(m) OpsService: Local Time State Info

6.3.16.2.2 Attributes

Implicit

The key attribute Implicit indicates that the object is implicitly addressed by the service.

Universal Time – time-aware system

This attribute contains all attributes of the Universal Time.

Universal Time

This attribute holds the universal time.

Attribute type: TimeStamp

List of Domains

This attribute list consists of the following elements:

Domain ID

This attribute holds the identification of this synchronization domain. For details refer to IEEE Std 802.1AS.

Attribute type: Unsigned8

Role

This attribute holds the role.

Attribute type: Unsigned8

Allowed values: USED, REDUNDANCY, HOT_STANDBY

List of Ports

This attribute list consists of the following elements:

Port ID

This attribute identifies one port of an end station or bridge component.

Attribute type: Unsigned8

Port Role

This attribute identifies the expected role of the port regarding synchronization.

Attribute type: Unsigned8

Allowed values: OFF, SLAVE, MASTER

Path Delay Boundary

This attribute shall contain the value ON for end-ports of a IEEE Std 802.1AS domain.

Attribute type: Unsigned8

Allowed values: ON, OFF

Working Clock – time-aware system

This attribute contains all attributes of the Working Clock.

Working Clock

This attribute contains the working clock value in nanoseconds.

Attribute type: Unsigned64

Time base: 1 ns

List of Ports

This attribute list consists of the following elements:

Port ID

This attribute identifies one port of an end station or bridge component.

Attribute type: Unsigned8

Path Delay

This attribute holds the measured propagation delay of this port in nanoseconds.

Attribute type: Unsigned64

6.3.16.3 IEEE Std 802.1AS service specification

6.3.16.3.1 Local Get Time

This local service is used to get the local time. Table 91 shows the parameters of the service.

Table 91 – Local Get Time

Parameter name	req	cnf
Argument	M	
Domain ID	M	M(=)
Result(+)		S
Time		M
Result(-)		S
Error code		M

Argument

The argument shall convey the service specific parameters of the service request.

Domain ID

This attribute identifies the synchronization domain

Result(+)

This parameter indicates that the service request succeeded.

Time

This parameter contains the synchronized value of the synchronization domain.

Result(-)

This parameter indicates that the service request failed.

6.3.16.3.2 Local time state info

This local service shall be used to indicate a change of the local time state. This event will be initiated whenever the time is set to a new value or if the time stamp's state information has changed.

If the time is set to a new value, at least one of the fields SecondsHigh, SecondsLow or Nanoseconds will differ between OldTime and NewTime. If only the Status field differs, merely the status has changed (e.g. from "TimeStamp related to the global synchronized time" to "TimeStamp related to the local time"). Note also that both status and value fields of the time stamps can change (e.g. when changing from "TimeStamp related to the local time (arbitrary time scale)" to "TimeStamp related to the global synchronized time"; e.g. when proceeding to sync after power on).

Table 92 shows the parameters of the service.

Table 92 – Local time state info

Parameter name	ind
Argument	M
Grandmaster	M
Time Domain Number	M
OldTime	M
NewTime	M

Argument

The argument shall convey the service specific parameters of the service indication.

Grandmaster

This parameter indicates which Grandmaster is used as time source.

Attribute type: OctetString

Domain ID

This parameter indicates which synchronization domain is used.

Attribute type: Unsigned8

OldTime

This parameter indicates the point of time in the former timescale, when the new time has been set or the time stamp's status has changed.

Attribute type: TimeStamp

NewTime

This parameter indicates the value of the time to which the time has been set or when the time stamp's status has changed.

Attribute type: TimeStamp

6.3.16.4 Invocation of the IEEE Std 802.1AS object

There is one IEEE Std 802.1AS object for the device.

6.3.17 IEEE Std 802.1Q ASE**6.3.17.1 Overview**

The concepts according to IEEE Std 802.1Q shall be applied. This document defines the utilization of the IEEE Std 802.1Q, including TSN features. It defines additionally extensions for RT_CLASS_3.

Application processes contain data that is transmitted in different priorities according to IEEE Std 802.1Q. Furthermore, the usage of these priorities shall be extended in different time intervals according to this specification, when using scheduled traffic according to IEEE Std 802.1Q or RT_CLASS_3 according to this specification. The IEEE Std 802.1Q ASE defines attributes to determine the timing behavior for the transmission selection.

6.3.17.2 Traffic classes

Table 93 shows the used traffic class mode according to IEEE Std 802.1Q and according to IEC 61158-6-10 for convenience. These traffic classes are mapped to the Tx Queues number and Priority (TCI.PCP) according to time-aware or non-time-aware and according to end stations, bridges or bridged end stations.

Table 93 – Traffic classes

Abbreviation	Traffic class name
HIGH	Stream, time-aware, class HIGH
LOW	Stream, time-aware, class LOW
RT	Stream, class RT
NW	Network control
EV	Events and alarms
CO	Connection management
BEH	Best effort high
BEL	Best effort low

6.3.17.3 IEEE Std 802.1Q class specification

6.3.17.3.1 Template

An IEEE Std 802.1Q object is described by the following template:

ASE: IEEE Std 802.1Q ASE

CLASS: IEEE Std 802.1Q

CLASS ID: not used

PARENT CLASS: TOP

ATTRIBUTES:

1	(m) Key Attribute:	Implicit
2	(m) Attribute:	Bridge Mode
3	(m) Attribute:	Working Clock
4	(o) Attribute:	List of Filtering Data Base
4.1	(m) Attribute:	VLAN ID
4.2	(m) Attribute:	Stream Class
4.3	(m) Attribute:	Learning
4.4	(m) Attribute:	Forwarding
4.4	(m) Attribute:	List of Forwarding Information
4.4.1	(m) Attribute:	MAC Address
4.4.2	(m) Attribute:	VLAN Assignment And Stripping
4.4.3	(m) Attribute:	List of Tx Port
4.4.3.1	(m) Attribute:	Port ID
5	(m) Attribute:	Priority to Traffic Class Mapping
6	(c) Constraint:	Bridge Mode = RT_CLASS_3
6.1	(m) Attribute:	Red Guard
7	(m) Attribute:	List of Ports
7.1	(m) Attribute:	Port
7.1.1	(m) Attribute:	Port ID
7.1.2	(m) Attribute:	List of Port State
7.1.3	(c) Attribute:	Frame Preemption Status Table
7.1.3.1	(m) Attribute:	List of Frame Preemption Status Entry
7.1.3.1.1	(m) Attribute:	Traffic Class
7.1.3.1.2	(m) Attribute:	Admin Status
7.1.4	(c) Attribute:	Gate Control List
7.1.4.1	(m) Attribute:	List of Gate Control Entry
7.1.4.1.1	(m) Attribute:	Time Interval
7.1.4.1.2	(m) Attribute:	Gate State
7.1.5	(c) Constraint:	Bridge Mode = RT_CLASS_3
7.1.5.1	(m) Attribute:	RT_CLASS_3 Port State
7.1.5.2	(m) Attribute:	Begin End Assignments
7.1.6	(c) Constraint:	Bridge Mode = 802.1Q
7.1.6.1	(m) Attribute:	Boundary State
7.1.7	(m) Attribute:	Tx Queues
7.1.7.1	(m) Attribute:	Traffic Class #7 Tx Queue
7.1.7.2	(m) Attribute:	Traffic Class #6 Tx Queue
7.1.7.3	(m) Attribute:	Traffic Class #5 Tx Queue
7.1.7.4	(m) Attribute:	Traffic Class #4 Tx Queue
7.1.7.5	(m) Attribute:	Traffic Class #3 Tx Queue
7.1.7.6	(m) Attribute:	Traffic Class #2 Tx Queue
7.1.7.7	(m) Attribute:	Traffic Class #1 Tx Queue
7.1.7.8	(m) Attribute:	Traffic Class #0 Tx Queue
7.1.7.9	(c) Constraint:	Bridge Mode = RT_CLASS_3

- 7.1.7.9.1 (m) Attribute: Traffic Class #RED Tx Queue
 7.1.8 (m) Attribute: Port VLAN Assignment And Stripping

SERVICES:

- 1 (m) OpsService: Port State Change
 2 (o) OpsService: Set Port State
 3 (o) OpsService: Flush filtering data base
 4 (o) OpsService: Add FDB entry
 5 (o) OpsService: Remove FDB entry
 6 (o) OpsService: Config Port

6.3.17.3.2 Attributes

Implicit

The key attribute Implicit indicates that the MAC Bridge object is implicitly addressed by the service.

Bridge Mode

This attribute contains the principal behavior of this IEEE Std 802.1Q bridge.

The value 802.1Q indicates the usage of the bridge according to IEEE Std 802.1Q.

The value RT_CLASS_3 indicates the usage of the bridge according to IEEE Std 802.1Q including the extensions for RT_CLASS_3.

Attribute type: Unsigned8

Allowed values: 802.1Q, RT_CLASS_3

Working Clock

This attribute contains the working clock value in nanoseconds.

The working clock can be synchronized to a global working clock using IEEE Std 802.1AS or PTP or is a “free running” value.

Attribute type: Unsigned64

Time base: 1 ns

List of Filtering Data Base

This attribute represents the filtering data bases of the IEEE Std 802.1Q bridge. For details, see IEEE Std 802.1Q-2018, 8.8.

There are multiple instances of filtering data bases identified by the VLAN ID.

There is at least one entry for the topology used for communication not assigned to TSN streams, made loop-free by protocol (such as MSTP, MRP) or by design (line, comb, tree topology).

These filtering data bases have learning enabled and will flood not already learned packets.

Up to four entries are used for TSN streams.

Their topology is equal to the physical topology of the NME domain, i.e. it can contain loops as to support seamless redundancy. These entries have learning disabled and discard by default. The entries in these filtering data bases are established by explicitly adding entries (or removing). So there is no need for a loop breaking protocol.

One dedicated RT_CLASS_3 filtering data base (if used).

This topology is equal to the physical topology of the RT_CLASS_3 domain, i.e. it can contain loops as to support seamless redundancy. This filtering data bases have learning disabled and discard by default. The entries in this filtering data bases are established by explicitly adding entries.

Network control is not influenced by a filtering data base.

VLAN ID

This attribute contains the virtual local area network identifier. For details refer to IEEE Std 802.1Q.

Attribute type: Unsigned16

Allowed values: 0 – 4095

Stream Class

This attribute holds information about the traffic class of the filtering data base. For details refer to IEEE Std 802.1Q.

Attribute type: Unsigned8

Allowed values: DEFAULT, STREAM_LOW, STREAM_LOW_REDUNDANT, STREAM_HIGH, STREAM_HIGH_REDUNDANT, LLC, RED_RELAY

Learning

This attribute holds information about the learning mode of the filtering data base. For details refer to IEEE Std 802.1Q.

Attribute type: Unsigned8

Allowed values: DISABLED, ENABLED

Forwarding

This attribute holds information about the forwarding mode of the filtering data base. For details refer to IEEE Std 802.1Q.

Attribute type: Unsigned8

Allowed values: FLOODING, DROPPING

List of Forwarding Information

This attribute list holds the address information about the VLAN forwarding process. For details refer to IEEE Std 802.1Q.

MAC Address

This attribute identifies the DestinationAddress.

Attribute type: OctetString[6]

VLAN Assignment And Stripping

This attribute holds information about the filtering data base. For details refer to IEEE Std 802.1Q.

Attribute type: Unsigned32

List of Tx Port

This attribute holds forwarding information about the ethernet frames according to VLAN ID and MAC Address. For details refer to IEEE Std 802.1Q.

Port ID

This attribute identifies one Port of a bridge.

Attribute type: Unsigned8

Priority to Traffic Class Mapping

This attribute represents the mapping of the TCI.PCP field in a DLPDU's VLAN tag to the appropriate traffic class #0 to #7. For details, see IEEE Std 802.1Q-2018, 8.6.6.

If the Bridge Mode is "RT_CLASS_3", DLPDUs of type RT_CLASS_3 (detected by Ethertype == 0x8892 and Frame ID in Frame ID range 3 (see IEC 61158-6-10)) are mapped to Traffic Class #RED.

Red Guard

This conditional attribute is present only when the value of the Bridge Mode attribute is "RT_CLASS_3".

This attribute controls the behavior of the receiving ports on Realtime Class 3 Port State Machine (RTC3PSM) being in state "Run", i.e. the Rx port is in mode RED.

It contains the PD IR Begin End Data related to the red guard (see 7.3.3.3.6.3).

The Red Guard prevents wrong frames of entering the traffic class #RED as a first filtering layer. All frames with a frame ID below Start of Red Frame ID or above End of Red Frame ID are discarded during the RED period.

The second filtering layer is provided by the IR Frame Data Elements. Only a frame crossing both filters is forwarded.

List of Ports

This attribute shall consist of the following elements:

Port

This attribute consists of the following elements:

Port ID

This attribute identifies one Port of a bridge.

Attribute type: Unsigned8

MAC Enabled

This attribute indicates whether the port is allowed to be used by configuration.

Attribute type: Boolean

Default: TRUE

MAC Operational

This attribute indicates whether the port is operational according to IEEE Std 802.1AC.

Attribute type: Boolean

List of Port State

This bit map attribute contains for each topology resp. topology used for streams the state of the port with respect to the topology (see attribute list of filtering data bases above).

Attribute type: Unsigned8

Allowed values: disabled, listening, learning, forwarding, blocking

Frame Preemption Status Table

The conditional attribute is only present, if the port supports preemption. It defines the behavior of the port according to frame preemption.

List of Frame Preemption Admin Status Entry

The status table contains for each of the traffic classes (0 to 7) an entry in the table. It holds the configuration for the usage of preemption at this port.

If all traffic classes have Frame Preemption Admin Status set to EXPRESS, preemption will not be enabled at this port.

If at least one traffic class has Frame Preemption Admin Status set to PREEMPTABLE, preemption for this traffic class will be enabled at this port.

Traffic Class

This attribute contains the number of the traffic class.

Attribute type: Unsigned8

Allowed values: 0 to 7

Frame Preemption Admin Status

This attribute contains the admin status for the traffic class.

Attribute type: Unsigned8

Allowed values: EXPRESS, PREEMPTABLE

Default value: EXPRESS

Gate Control List

This conditional attribute is present only if the port supports TAS. It defines the behavior of the port according to TAS.

Number of Gate Control Entries

This attribute states the number of gate control entries in the following list.

Attribute type: Unsigned8

Default value: 0 (meaning all gates are always open)

List of Gate Control Entry

This list is executed cyclically. This list consists of the following attributes.

Time Interval

This attribute contains the time interval in nanoseconds for which the gates shall be set to Gate State. After this time interval fetch the next entry from the list. If the list is finished, start over with the first element of the list.

Attribute type: Unsigned32

Time base: 1 ns

Default value: 0

Gate State

The GateState parameter indicates a value, open or closed, for each of the Port's queues (Traffic class #0 Tx queue up to Traffic class #7 Tx queue). The gates are immediately set to the states indicated in the GateState parameter. After Time Interval nanoseconds have elapsed since the completion of the previous gate operation in the gate control list, control passes to the next gate operation.

This list is executed cyclically based on the gate cycle.

The traffic class is selected over the bit position, bit position 0 defines the Gate State for traffic class #0, bit 1 for traffic class #1 and so on.

The value 0 for a traffic class (i.e. bit position) means closed, the value 1 open.

The value 0xFF means for example that all gates are open, and 0x00 that all gates are closed.

Attribute type: Unsigned8

RT_CLASS_3 Port State

This conditional attribute is present only when the value of the Bridge Mode attribute is "RT_CLASS_3".

The value OFF means that the port is not used, not configured for RT_CLASS_3 or that the preconditions for RT_CLASS_3 operation could not be reached so far.

The value UP means that the port allows the reception of RT_CLASS_3 frames.

The value RUN means that the port allows the transmission and reception of RT_CLASS_3 frames.

For the conditions of the port state, see the RTC3PSM in IEC 61158-6-10.

Attribute type: Unsigned8

Allowed values: OFF, UP, RUN

Default: OFF

Begin End Assignments

This conditional attribute is present only when the value of the Bridge Mode attribute is "RT_CLASS_3".

It contains the PD IR Begin End Data related to this port (see 7.3.3.3.6.3).

Boundary State

This conditional attribute is present only when the value of the Bridge Mode attribute is "802.1Q". It presents the operational state of the QPMS.

Allowed values: TRUNK, SPLIT, BOUNDARY_TSN, BOUNDARY_NON_TSN, BOUNDARY_8021Q

Traffic classes

This attribute consists of the following attributes:

Traffic Class #7 Tx Queue

This attribute contains the list of TCI.PCPs for IEEE Std 802.1Q traffic class #7.

Attribute type: Unsigned8

Traffic Class #6 Tx Queue

This attribute contains the list of TCI.PCPs for IEEE Std 802.1Q traffic class #6.

Attribute type: Unsigned8

Traffic Class #5 Tx Queue

This attribute contains the list of TCI.PCPs for IEEE Std 802.1Q traffic class #5.

Attribute type: Unsigned8

Traffic Class #4 Tx Queue

This attribute contains the list of TCI.PCPs for IEEE Std 802.1Q traffic class #4.

Attribute type: Unsigned8

Traffic Class #3 Tx Queue

This attribute contains the list of TCI.PCPs for IEEE Std 802.1Q traffic class #3.

Attribute type: Unsigned8

Traffic Class #2 Tx Queue

This attribute contains the list of TCI.PCPs for IEEE Std 802.1Q traffic class #2.

Attribute type: Unsigned8

Traffic Class #1 Tx Queue

This attribute contains the list of TCI.PCPs for IEEE Std 802.1Q traffic class #1.

Attribute type: Unsigned8

Traffic Class #0 Tx Queue

This attribute contains the list of TCI.PCPs for IEEE Std 802.1Q traffic class #0.

Attribute type: Unsigned8

Red Tx Queue

This conditional attribute is present only when the value of the Usage attribute is "RT_CLASS_3".

Port VLAN Assignment And Stripping

This attribute holds information about the filtering data base. For details refer to IEEE Std 802.1Q.

Attribute type: Unsigned64

6.3.17.4 IEEE Std 802.1Q service specification

6.3.17.4.1 Port state change

This local service shall be used to indicate a change of certain Local Systems Data. Table 94 shows the parameters of the service.

Table 94 – Port state change

Parameter name	ind
Argument	M
Local Port ID	M
Local Port State	U
Local RTClass 3 Port State	U
Local Boundary State	U

Argument

The argument shall convey the service specific parameters of the service indication.

Local Port ID

This parameter is the value of the corresponding attribute of the ASE object.

Local Port State

This parameter is the value of the corresponding attribute of the ASE object.

Local RTClass 3 Port State

This parameter is the value of the corresponding attribute of the ASE object.

Local Boundary State

This parameter is the value of the corresponding attribute of the ASE object.

6.3.17.4.2 Set port state

This local service shall be used to set a certain Local Systems Data. Table 95 shows the parameters of the service.

Table 95 – Set port state

Parameter name	req
Argument	M
Local Port ID	M
Local Port State	U
Local RTClass 3 Port State	U
Local Boundary State	U

Argument

The argument shall convey the service specific parameters of the service request.

Local Port ID

This parameter is the value of the corresponding attribute of the ASE object.

Local Port State

This parameter is the value of the corresponding attribute of the ASE object.

Local RTClass 3 Port State

This parameter is the value of the corresponding attribute of the ASE object.

Local Boundary State

This parameter is the value of the corresponding attribute of the ASE object.

6.3.17.4.3 Flush filtering data base

This local service shall be used to flush the local filtering data base. Table 96 shows the parameters of the service.

Table 96 – Flush filtering data base

Parameter name	req
Argument	M
Filtering Data Base	M

Argument

The argument shall convey the service specific parameters of the service request.

Filtering Data Base

This parameter identifies the corresponding attribute of the ASE object.

6.3.17.4.4 Add FDB entry

This local service shall be used to add a new entry to the filtering data base. Table 97 shows the parameters of the service.

Table 97 – Add FDB entry

Parameter name	req
Argument	M
Filtering Data Base	M
VLAN ID	M
MAC Address	M
VLAN Assignment And Stripping	M
Port Map	M

Argument

The argument shall convey the service specific parameters of the service request.

Filtering Data Base

This parameter identifies the corresponding attribute of the ASE object.

VLAN ID

This parameter is the value of the corresponding attribute of the ASE object.

MAC Address

This parameter is the value of the corresponding attribute of the ASE object.

VLAN Assignment And Stripping

This parameter is the value of the corresponding attribute of the ASE object.

Port Map

This parameter is the value of the corresponding attribute of the ASE object.

6.3.17.4.5 Remove FDB entry

This local service shall be used to remove an entry from the filtering data base. Table 98 shows the parameters of the service.

Table 98 – Remove FDB entry

Parameter name	Req
Argument	M
Filtering Data Base	M
VLAN ID	M
MAC Address	M

Argument

The argument shall convey the service specific parameters of the service request.

Filtering Data Base

This parameter identifies the corresponding attribute of the ASE object.

VLAN ID

This parameter is the value of the corresponding attribute of the ASE object.

MAC address

This parameter is the value of the corresponding attribute of the ASE object.

6.3.17.4.6 Config Port

This local service shall be used to configure a single port. Table 99 shows the parameters of the service.

Table 99 – Config Port

Parameter name	Req
Argument	M
Port ID	M
Admin Data	M

Argument

The argument shall convey the service specific parameters of the service request.

Port ID

This parameter identifies the corresponding list entry of the ASE object.

Admin Data

This parameter is used to configure the addressed port of the ASE object.

6.3.17.5 Behavior

6.3.17.5.1 General

A bridge follows according to its configuration exactly one of the following general behavior patterns, expressed with the attribute Bridge Mode:

- 802.1Q
- RT_CLASS_3

Bridge Mode 802.1Q uses the TSN extensions as defined by IEEE Std 802.1Q; for details, see below. Also known as time-aware bridges.

802.1Q bridges, which do not use the TSN extensions (non-time-aware bridges), may use the bridge mode RT_CLASS_3 extensions as defined within this specification.

A bridge can implement all bridge modes, but from a certain time the bridge shall decide for one. The combination of the modes is not supported.

6.3.17.5.2 802.1Q

6.3.17.5.2.1 General

A bridge in Bridge Mode 802.1Q offers “normal” IEEE Std 802.1Q features and if supported time-aware features.

The IEEE Std 802.1Q extensions for time sensitive networking (TSN) allows to prioritize traffic classes. TSN offer two mechanisms of interest for this specification

- Scheduled Traffic (also known as Time Aware Shaper, abbreviated as TAS)
- Preemption

A bridge in Bridge Mode RT_CLASS_3 shall not use the TSN extensions.

6.3.17.5.2.2 Scheduled Traffic

Scheduled Traffic allows (like RT_CLASS_3) based on the gate control list to open and close gates located at the queue drains of each Traffic Class #x Tx Queue for a time interval in a cyclic manner.

As a sample, assume that the gate control list contains the following:

- open Traffic Class #7 Tx queue gate at cycle start, close all other queues for a time interval of 250 μ s,
- then open all Traffic Class Tx queue gates for a time interval of 250 μ s.

In this sample, frames assigned to traffic class #7 (e.g. having TCI.PCP set to 6 and assigned over the priority to class mapping attribute to traffic class #7) will have a reserved window for this queue without interference from other queues.

Now assume that multiple bridges being topologically adjacent to each other have the same configuration as stated in our sample. Now a frame can be forwarded over multiple bridges within this reserved window.

The timing of the gate control list shall be controlled by the working clock. This working clock shall be synchronized over the network using IEEE Std 802.1AS. The accuracy is determined by conformance classes.

Strict priority transmission selection selects as next frame to transmit the frame in the queue with the highest traffic class number (i.e. Traffic Class #7 Tx Queue before Traffic Class #6 Tx Queue and so on), where the gate is open. The gate control list rules, which queue is open resp. closed at which time. A closed gate “hides” the frames in the queue from the strict priority transmission selection.

The gate list control defines implicitly a guard band. Within the guard band, DLPDUs from all queues with gate open and where the gate will be closed with the next gate control shall be transmitted according to their priorities if the transmission of the frame ends within this period.

If the calculated transmission time for a frame exceeds the period, the first frame with lesser priority can be tested optionally.

If now the next gate control entry is applied at its scheduled time, only DLPDUs assigned to traffic classes, where the gate will still be open can be in transmission.

The sum of the time intervals in the gate control list, defines the length of the gating cycle. In our sample above the length of the gating cycle is 500 μ s.

Note that IEEE Std 802.1AS and IEEE Std 802.1Q define the reference plane for the timing at the boundary between media dependent interface (i.e. the PHY) and the wire.

In contrary RT_CLASS_3 defines the reference plane for the timing at the media independent interface (i.e. the SHIM).

6.3.17.5.2.3 Preemption

To use Preemption, at least one traffic class shall be configured as EXPRESS and at least one traffic class as PREEMPTABLE.

The result of this configuration is that a traffic class associated to EXPRESS can preempt any frame at the Tx port which belongs to a traffic class associated to PREEMPTABLE (like fragmentation stated within this specification).

As a sample, assume that the preemption status table contains the following:

- mark Traffic Class #7 Tx queue as EXPRESS,
- mark all other queues as PREEMPTABLE.

In this sample, frames assigned to traffic class #7 (e.g. having TCI.PCP set to 6 and assigned over the priority to class mapping attribute to traffic class #7) can preempt frames assigned to other traffic classes and thereby reducing the interference for itself caused by the other traffic classes.

Now assume that multiple bridges being topologically adjacent to each other have the same configuration as stated in our sample. Now this frame in traffic class #7 should be forwarded over multiple bridges without any interference from the other traffic classes.

6.3.17.5.3 RT_CLASS_3

A bridge in Bridge Mode RT_CLASS_3 is configured to use RT_CLASS_3 at least one port. In this case the bridge offers “normal” IEEE Std 802.1Q features and RT_CLASS_3 features. No port of the bridge shall use TSN features.

RT_CLASS_3 uses a mechanism like Scheduled Traffic (see above). Here the “gate control list” is called PD IR Begin End Data and is applied to two set of Tx queues:

- Traffic Class #RED, using the Traffic Class #3 Tx Queue
- Traffic Class #GREEN, using the Traffic Class #0, #1, #2, #4, #5, #6, #7 Tx Queues.

The Traffic Class #RED Tx Queue contains the list of DLPDUs for RT_CLASS_3 which were planned within an IR Data record and received in time as stated in the PDIR Frame Data.

NOTE The application layer for distributed I/O defines a list of IR Frame Data elements to determine the sequence and exact sending time of frames.

As shown in Figure 13, the sending of frames is divided into different periods at the local port. Each phase is defined by $T_{\text{Sendclock}}$ which is between 31,25 μs and 4 ms. The number of frames of each period depends on the scheduled frames for the current phase and can be also zero.

During the RED period, the #RED queue is open, the other queues are closed; DLPDUs shall be transmitted according to their exact sending time as stated in the PDIR Frame Data.

During the GREEN period, #RED queue is closed, the other queues are open.

Within the GREEN period, for the local scheduling (= injection) the following rules shall be applied:

- The local queuing process shall drop all RT_CLASS_1 frames from the previous phase if at the beginning of a new GREEN period the Traffic Class #6 Tx Queue is not empty. Each drop shall be signaled to the local application.
- In average, not more than 90 percent of bandwidth shall be used to avoid overload of the network.

During the YELLOW period, #RED queue is closed, the other queues are open; DLPDUs shall be transmitted according to their priorities if the transmission of the frame ends within this period. If the calculated transmission time for a frame exceeds the period, the first frame with lesser priority can be tested optionally. This is a mechanism like the implicit guard band as defined for scheduled traffic.

The sequence of periods shall be RED, GREEN, and YELLOW. The RED period may be omitted. The YELLOW period shall exist if RED exists and shall be omitted otherwise.

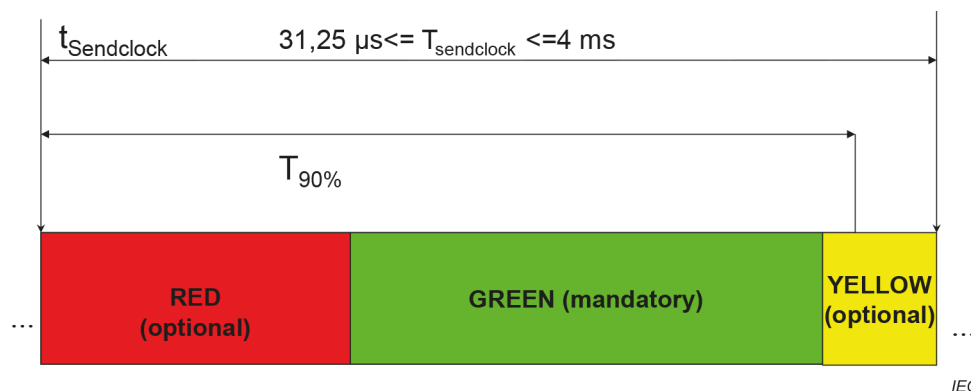


Figure 13 – Example of periods at a local port

The first and the last invocation of the RED period shall be synchronized between the local and the neighborhood port by means of Remote Systems Data Change (Remote RT_CLASS_3 Port Status).

The attribute RT_CLASS_3 Port State controls the behavior of the reception. While being in OFF the port remains in the GREEN period, both RED and YELLOW are omitted. In UP and RUN, RED, GREEN and YELLOW apply at ports where configured.

The transmission period shall be controlled by a local working clock. This working clock shall be synchronized over the network using PTCP. The duration of all periods shall not exceed the time value calculated by means of the attribute Send Clock Factor, which shall be defined by another ASE. The accuracy is determined by conformance classes.

Within the RED period, only in time RT_CLASS_3 DLPDUs shall be forwarded according to RED Relay rules. All other received DLPDUs shall be handled by the MAC Relay (C-VLAN bridge component) according to the forwarding rules of IEEE Std 802.1Q.

Learning shall be disabled for RT_CLASS_3 frames.

6.3.17.5.4 Network control

As stated in IEEE Std 802.1Q Annex I, network control frames shall also be sorted appropriately into the traffic class queues. Only such, the measures for prioritization take effect.

Note that we have two types of network control frames, one with high priority (used for synchronization) and one with low priority (used for the bulk of network management protocols, such as LLDP, line delay measurement, MRP and others).

6.3.17.5.5 Port state

6.3.17.5.5.1 General

As stated in IEEE Std 802.1Q there is a separate port state for each MSTP instance.

The port state does not apply to Network Control; see IEEE Std 802.1Q. This means that network control DLPDUs are received or transmitted if the port is operational (see attribute MAC Operational).

6.3.17.5.5.2 Bridge Mode == 802.1Q

In Bridge Mode 802.1Q there are topologies used for communication not assigned to streams. These topologies are made loop free by some protocol (such as MSTP, MRP) or by design (line, comb, tree topology). The port state indicates the result of this protocol by willingly blocking some ports in the topology to break loops.

The topologies used for time-aware streams will never set a port state willingly to blocking, as loops are used for alternate paths. Instead the filtering data base for those time-aware streams is set to learning disabled. This means that an instance shall enter the appropriate forwarding entries in the filtering data base to allow stream communication.

Thus, seamless redundancy is supported for DLPDUs assigned to streams; these are cyclic and isochronous frames.

The rules for the port state as stated in IEEE Std 802.1Q apply.

6.3.17.5.5.3 Bridge Mode == RT_CLASS_3

In Bridge Mode RT_CLASS_3 there is one filtering data base and thus one port state. This port state applies to all communication, except network control (see above) and DLPDUs assigned to RT_CLASS_3. In Bridge Mode RT_CLASS_3 only isochronous frames support seamless redundancy.

6.3.17.5.6 Domain boundary support

6.3.17.5.6.1 Priority remapping

To protect the NME domain each node shall support “Priority remapping” and “VLAN assignment and stripping”.

Both shall work with line speed and should not increase the bridge delay.

Priority remapping adds, updates or strips a TCI.PCP tag of an ingress or egress packet.

6.3.17.5.6.2 VLAN assignment and stripping

To protect the NME domain each node shall support “Priority remapping” and “VLAN assignment and stripping”.

Both shall work with line speed and should not increase the bridge delay.

VLAN assignment and stripping adds, updates or strips a VLAN tag of an ingress or egress packet.

6.3.17.5.6.3 Ingress Rate Limiter

6.3.17.5.6.3.1 External bridge component ports

Each boundary port shall support rate limiting for ingress traffic.

- Group one
 - Limiter for Unicast
 - Limiter for Multicast
 - Limiter for Broadcast

- Group two
 - Limiter for RTA_CLASS_X
 - Limiter for RT_CLASS_X.

All limiters are independently parameterized.

Working principle:

- Limiting the bandwidth to the committed information rate
- Limit the burst size to the committed burst size
- Share overflow bandwidth within a group following the hierarchy of ingress limiters.

These ingress rate limiters support protection of switching and application resources of devices inside the NME domain. No “Denial of Service” protection intended.

6.3.17.5.6.3.2 End station component port

Each node shall support rate limiting for transmitted traffic from the node into the network, e.g. 25 % (of the link speed) @ 1 ms.

Network control (e.g. IEEE Std 802.1AS or IEC 62439-2) should not be affected by rate limiting.

This node behavior helps to protect the bridge resources of the connected bridge component and works as a burst breaker.

Working principle:

- Limiting the bandwidth for non-Streams traffic to 25 % of the link speed:
 - Limiting the bandwidth to the committed information rate overall and for each queue
 - Limit the burst size to the committed burst size for each queue
 - Share overflow bandwidth within a group following the hierarchy of queues.

EXAMPLE 1 25 % (100 Mbps) @ 1 ms is equal to 3,125 Kbyte/ms.

EXAMPLE 2 25 % (1 Gbps) @ 1 ms is equal to 31,25 Kbyte/ms.

NOTE In theory, each device could use always wired speed for sending frames. Such behavior applied over a certain amount of time would bring the system out of operation. Therefore, a configuration mechanism to restrict the sending performance of a device is provided.

6.3.17.5.7 Working clock and phase

The working clock value (synchronized or not synchronized) is used to determine the start of the gating cycle and the phase.

The Send Clock Factor defines the basic duration of a cycle (see 6.3.17.5.3). The Reduction Ratio defines a further reduction of the timing constraints. The phase defines the number of the SendClocks within one Reduction Ratio cycle during which the cyclic frames are sent. These attributes are taken from the AR ASE.

6.3.17.6 Invocation of the IEEE Std 802.1Q object

There is one IEEE Std 802.1Q bridge object for each end station or bridge component.

6.3.18 IEEE Std 802.1CB ASE

6.3.18.1 Overview

The concepts according to IEEE Std 802.1CB shall be applied. This document defines the utilization of the IEEE Std 802.1CB.

For Rx direction, the (passive) Null Stream identification is utilized for trunk ports, and the active Destination MAC and VLAN Stream identification is utilized for boundary ports.

For Tx direction, the service Stream Send is utilized for boundary ports.

6.3.18.2 IEEE Std 802.1CB class specification

6.3.18.2.1 Template

ASE: IEEE Std 802.1CB ASE

CLASS: IEEE Std 802.1CB

CLASS ID: not used

PARENT CLASS: TOP

ATTRIBUTES:

1	(m) Key Attribute:	Implicit
2	(m) Attribute:	List of Streams
2.1	(m) Attribute:	Stream ID
2.2	(m) Attribute:	Identification Type
2.3	(o) Attribute:	In Port List
2.4	(o) Attribute:	Out Port List
2.5	(m) Attribute:	Identify Data
2.5.1	(m) Attribute:	Destination MAC
2.5.2	(o) Attribute:	VLAN ID
2.5.3	(o) Attribute:	Priority
2.5.4	(m) Attribute:	Tagged
2.6	(m) Attribute:	Replace Data
2.6.1	(m) Attribute:	Destination MAC
2.6.2	(o) Attribute:	VLAN ID
2.6.3	(o) Attribute:	Priority
2.6.4	(m) Attribute:	Tagged

SERVICES:

1	(m) OpsService:	Stream ID Add
2	(m) OpsService:	Stream ID Remove
3	(m) OpsService:	Stream Identification
4	(m) OpsService:	Stream Active Identification
5	(m) OpsService:	Stream Send

6.3.18.2.2 Attributes

List of Streams

This list contains the configured Stream IDs of this instance. A list element consists of the following attributes:

Stream ID

This attribute is the local identification of a stream.

Identification Type

This attribute contains the stream identification type according to IEEE Std 802.1CB.

Allowed values:

NULL_STREAM_IDENTIFICATION, ACTIVE_STREAM_IDENTIFICATION

In Port List

This optional attribute contains a list of ports for receiving packets according to IEEE Std 802.1CB.

This In Port List shall exist if a port of this list is to be used by the Stream Identification or Stream Active Identification service.

Out Port List

This optional attribute contains a list of ports for sending packets according to IEEE Std 802.1CB.

This Out Port List shall exist if a port of this list is to be used by the Stream Send service.

Identify Data

This attribute consists of the following elements:

Destination MAC

This attribute contains the MAC address associated with this Stream ID.

Attribute type: OctetString[6]

VLAN ID

This optional attribute contains the VLAN ID associated with this Stream ID.

Depending on the given Tagged value, a VLAN ID value shall exist.

Attribute type: Unsigned16

Priority

This optional attribute contains the priority of the frame according to IEEE Std 802.1Q.

Depending on the given Tagged value, a Priority value shall exist.

Attribute type: Unsigned8

Allowed Value: 0 to 7

Tagged

This attribute controls the behavior according to the Tag Control Information and contains the values according to IEEE Std 802.1CB.

Allowed values: TAGGED, PRIORITY, ADD

Replace Data

After a stream has been identified with ACTIVE_STREAM_IDENTIFICATION, the following attributes are replaced:

Destination MAC

This attribute contains the translated MAC address associated with this Stream ID.

Attribute type: OctetString[6]

VLAN ID

This optional attribute contains the translated VLAN ID associated with this Stream ID.

Depending on the given Tagged value, a VLAN ID value shall exist.

Attribute type: Unsigned16

Priority

This optional attribute contains the translated priority of the frame according to IEEE Std 802.1Q.

Depending on the given Tagged value, a Priority value shall exist.

Attribute type: Unsigned8

Allowed Value: 0 to 7

Tagged

This attribute controls the behavior according to the translated Tag Control Information and contains the values according to IEEE Std 802.1CB.

Allowed values: TAGGED, PRIORITY, ADD

6.3.18.3 IEEE Std 802.1CB service specification

6.3.18.3.1 Stream ID Add

This local service is used to add a Stream ID to the ASE. Table 100 shows the parameters of the service.

Table 100 – Stream ID Add

Parameter name	req	cnf
Argument	M	
Stream ID	M	
Identification type	M	
In Port List	O	
Out Port List	O	
Identify Data	M	
Destination MAC	M	
VLAN ID	O	
Priority	O	
Tagged	M	
Replace Data	O	
Destination MAC	M	
VLAN ID	O	
Priority	O	
Tagged	M	
Result(+)		S
Stream ID		M

Argument

The argument shall convey the service specific parameters of the service indication.

Stream ID

This parameter is the value of the corresponding attribute of the ASE object.

Identification Type

This parameter is the value of the corresponding attribute of the ASE object.

In Port List

This optional parameter is the value of the corresponding attribute of the ASE object.

If this parameter is not present, the Out Port List shall present.

Out Port List

This optional parameter is the value of the corresponding attribute of the ASE object.

If this parameter is not present, the In Port List shall present.

Identify Data

This parameter consists of the following parameters:

Destination MAC

This parameter is the value of the corresponding attribute of the ASE object.

VLAN ID

This parameter is the value of the corresponding attribute of the ASE object.

Priority

This parameter is the value of the corresponding attribute of the ASE object.

Tagged

This parameter is the value of the corresponding attribute of the ASE object.

Replace Data

This parameter consists of the following parameters:

Destination MAC

This parameter is the value of the corresponding attribute of the ASE object.

VLAN ID

This parameter is the value of the corresponding attribute of the ASE object.

Priority

This parameter is the value of the corresponding attribute of the ASE object.

Tagged

This parameter is the value of the corresponding attribute of the ASE object.

6.3.18.3.2 Stream ID Remove

This local service is used to remove a Stream ID from the ASE. Table 101 shows the parameters of the service.

Table 101 – Stream ID Remove

Parameter name	req	cnf
Argument	M	
Stream ID	M	
Result(+)		M

Argument

The argument shall convey the service specific parameters of the service indication.

Stream ID

This parameter is the value of the corresponding attribute of the ASE object.

Result(+)

This parameter indicates that the service request succeeded.

6.3.18.3.3 Stream Identification

This local service shall be used to assign a received packet to a stream. If an assignment is found, the assigned Stream ID will be returned. Table 102 shows the parameters of the service.

Table 102 – Stream Identification

Parameter name	req	cnf
Argument	M	
Local In Port	M	
DMAC	M	
VLAN ID	O	
Priority	O	
Result(+)		S
Stream ID		M
Result(-)		S
NIL Stream ID		M

Argument

The argument shall convey the service specific parameters of the service indication.

Local In Port

This parameter is the value of the corresponding attribute of the ASE object.

DMAC

This parameter is the value of the corresponding attribute of the ASE object.

VLAN ID

This parameter is the value of the corresponding attribute of the ASE object.

Priority

This parameter is the value of the corresponding attribute of the ASE object.

Result(+)

This parameter indicates that the service request succeeded.

Stream ID

This parameter identifies the found stream within the ASE and assigned to the packet.

Result(-)

This parameter indicates that the service request failed.

NIL Stream ID

This NIL parameter indicates that not assignment occurred.

6.3.18.3.4 Stream Active Identification

This local service shall be used to assign a received packet to a stream. If an assignment is found, the assigned Stream ID and the optional replaced arguments are returned. Otherwise this packet is not assigned to a stream. Table 103 shows the parameters of the service.

Table 103 – Stream Active Identification

Parameter name	req	cnf
Argument	M	
Local In Port	M	
DMAC	M	
VLAN ID	O	
Priority	O	
Result(+)		S
Stream ID		M
DMAC		M
VLAN ID		M
Priority		M
Result(-)		S
NIL Stream ID		M

Argument

The argument shall convey the service specific parameters of the service indication.

Local In Port

This parameter is the value of the corresponding attribute of the ASE object.

DMAC

This parameter is the value of the corresponding attribute of the ASE object.

VLAN ID

This optional parameter is the value of the corresponding attribute of the ASE object.

Priority

This optional parameter is the value of the corresponding attribute of the ASE object.

Result(+)

This parameter indicates that the service request succeeded.

Stream ID

This parameter identifies the found stream within the ASE and assigned to the packet.

DMAC

This parameter indicates the replaced input parameter according to the identified Stream ID.

VLAN ID

This parameter indicates the replaced input parameter according to the identified Stream ID.

Priority

This parameter indicates the replaced input parameter according to the identified Stream ID.

Result(-)

This parameter indicates that the service request failed.

NIL Stream ID

This NIL parameter indicates that not assignment occurred.

6.3.18.3.5 Stream Send

This local service shall be used to replace the stream related data within the packet to send, if the packet is assigned to a stream. Table 104 shows the parameters of the service.

Table 104 – Stream Send

Parameter name	req	cnf
Argument	M	
Stream ID	M	
Local Out Port	M	
Result(+)		M
Stream ID		M
DMAC		M
VLAN ID		O
Priority		O

Argument

The argument shall convey the service specific parameters of the service indication.

Stream ID

This parameter identifies the stream within the ASE. A packet with an associated NIL Stream ID is pass through unchanged.

Local Out Port

This parameter is the value of the corresponding attribute of the ASE object.

Result(+)

This parameter indicates that the service request succeeded.

Stream ID

This parameter identifies the stream within the ASE.

DMAC

This output parameter indicates the replaced packet parameter according to the given Stream ID.

VLAN ID

This optional output parameter indicates the replaced packet parameter according to the given Stream ID.

Priority

This optional output parameter indicates the replaced packet parameter according to the given Stream ID.

6.3.18.4 Invocation of the IEEE Std 802.1CB object

There is one IEEE Std 802.1CB object for each end station and bridge component.

6.3.19 Fragmentation ASE

6.3.19.1 Overview

The length of a transmission period is limited on the lower end by the maximum size of an Ethernet frame. The fragmentation reduces, with a peer to peer approach, the conveyed size of an Ethernet frame and allows to use a LengthOfPeriod ($T_{Sendclock}$) down to 31,25 μ s.

The fragmentation ASE hides the issue fragmentation from the upper layers by acting as an intermediate application service entity and providing the same service interface as the IEEE Std 802.3 ASE.

For this the Fragmentation ASE is derived from the IEEE Std 802.3 ASE and overwrites the operational service M_UNITDATA to hide the fragmentation specific details from the upper layers.

Frames to be transmitted which are subject for fragmentation will get fragmented by the operational service and transmitted in fragments by using the basic M_UNITDATA service of the IEEE Std 802.3 ASE. Fragmented frames are received by the IEEE Std 802.3 ASE, collected together to restore the original frame and then indicated by the M_UNITDATA indication to the upper layers.

The frames related to the protocols PTCP, MRP, RTC (RT_CLASS_1, RT_CLASS_2 and RT_CLASS_3) and IEEE Std 802.1AS are never fragmented.

The fragmentation ASE is optional; it shall be supported, if the remaining time of the transmission period for NRT frames drops below 125 µs and the Bridge Mode is RT_CLASS_3.

6.3.19.2 Fragmentation class specification

6.3.19.2.1 General

The Fragmentation ASE defines one Fragmentation object type.

6.3.19.2.2 Template

A Fragmentation object is described by the following template:

ASE: Fragmentation ASE
CLASS: Fragmentation
CLASS ID: not used
PARENT CLASS: IEEE Std 802.3 ASE
ATTRIBUTES:
 1 (m) Key Attribute: Implicit
SERVICES:
 1 (m) OpsService: M_UNITDATA

6.3.19.2.3 Attributes

Implicit

The key attribute Implicit indicates that the Fragmentation object is implicitly addressed by the service.

6.3.19.3 Fragmentation service specification

6.3.19.3.1 M_UNITDATA

For the definition of this service, see IEEE Std 802.3.

This local service shall be used to transmit (M_UNITDATA.req) or receive (M_UNITDATA.ind) a PDU.

6.3.19.4 Invocation of the Fragmentation object

There is at most one Fragmentation object for each end station and bridge component. The Fragmentation object shall exist only if the IEEE Std 802.1Q bridge is in Bridge Mode RT_CLASS_3.

6.3.20 IEEE Std 802.3 ASE

6.3.20.1 Overview

The IEEE Std 802.3 ASE controls the medium access.

The concepts according to IEEE Std 802.3 (Carrier sense multiple access with collision detection (CSMA/CD) access method and physical layer specifications) shall be applied. Subclause 6.3.20 defines the utilization of the IEEE Std 802.3.

The concepts according to IEEE Std 802.3 (Specification and management parameters for interspersing express traffic) shall be applied. This capability is also known as preemption.

6.3.20.2 IEEE Std 802.3 class specification

6.3.20.2.1 General

The IEEE Std 802.3 ASE defines one IEEE Std 802.3 object type.

6.3.20.2.2 Template

An IEEE Std 802.3 object is described by the following template:

ASE:	IEEE Std 802.3 ASE
CLASS:	IEEE Std 802.3
CLASS ID:	not used
PARENT CLASS:	top
ATTRIBUTES:	
1	(m) Key Attribute: Implicit
2	(m) Attribute: List of Ports
2.1	(m) Attribute: Port
2.1.1	(m) Attribute: Port ID
2.1.2	(m) Attribute: MAU Type
2.1.3	(o) Attribute: MAU Type Extension
2.1.4	(m) Attribute: Autonegotiation State
2.1.5	(m) Attribute: Link State
2.1.6	(m) Attribute: Preemption
2.1.6.1	(m) Attribute: PreemptSupported
2.1.6.2	(m) Attribute: PreemptEnabled
2.1.6.3	(m) Attribute: PreemptActive
2.1.6.4	(m) Attribute: LocAddFragSize
SERVICES:	
1	(m) OpsService: M_UNITDATA
2	(m) OpsService: MAU Type Change
3	(m) OpsService: Set MAU Type

6.3.20.2.3 Attributes

Implicit

The key attribute Implicit indicates that the IEEE Std 802.3 object is implicitly addressed by the service.

List of Ports

This attribute shall consist of the following elements:

Port

This attribute consists of the following elements:

Port ID

This attribute contains the local identification of the port.

Attribute type: Unsigned8

MAU Type

This attribute contains the value of the real MAU type according to IETF RFC 4836. If the value of the attribute Link State is DOWN or OFF, the MAU type shall be zero.

Attribute type: Unsigned16

MAU Type Extension

This optional attribute defines an extension to the real IEEE Std 802.3 MAUType. The extension is used to specify additional physics not covered by IEEE Std 802.3. The information derived from the IEEE Std 802.3 MAU Type (duplexity, speed, and media) shall however still be valid. If the value of the attribute Link State is DOWN or OFF, the MAU Type Extension shall be zero.

The absence of the attribute resp. its presence with value 0x0 indicates that the MAU Type is not extended.

Attribute type: Unsigned16

Autonegotiation State

This attribute contains the value of the real autonegotiation setting.

Attribute type: Unsigned8

Allowed values: ENABLE, DISABLE

Link State

This attribute contains the value of the real port status setting. It shall be OFF, if the media attachment unit is disabled. It shall be DOWN, if the media attachment unit is enabled but no Link is detected. It shall be UP, if the media attachment unit is enabled and a Link is detected.

Attribute type: Unsigned8

Allowed values: see IEC 61158-6-10

Preemption

This attribute consists of the following elements

PreemptSupported

This attribute indicates whether the given port supports the preemption capability.

Attribute type: Boolean

PreemptEnabled

This attribute indicates whether the preemption capability is enabled on the given port.

The value of this attribute is derived from the attribute Frame Preemption Admin Status in the IEEE Std 802.1Q ASE.

If all traffic classes have Frame Preemption Admin Status set to EXPRESS, the attribute is set to FALSE.

If at least one traffic class has Frame Preemption Admin Status set to PREEMPTABLE the attribute is set to TRUE.

Attribute type: Boolean

PreemptActive

This attribute indicates whether the preemption capability is active on the given port.

The value TRUE means that preemption is used at the port. The value is derived from the attribute PreemptEnabled and the verification, whether the neighboring port supports the preemption capability.

Attribute type: Boolean

LocAddFragSize

A 2-bit integer value used to indicate the minimum size of non-final fragments supported by the receiver on the given port. This value is expressed in units of 64 octets of additional fragment length. The minimum non-final fragment size is $(\text{LocAddFragSize} + 1) \times 64$ octets

Attribute type: Unsigned16

6.3.20.3 IEEE Std 802.3 service specification

6.3.20.3.1 M_UNITDATA

For the definition of this service, see IEEE Std 802.3.

This local service shall be used to transmit (M_UNITDATA.req) or receive (M_UNITDATA.ind) a PDU.

6.3.20.3.2 MAU Type Change

This local service shall be used to indicate a change of certain Local Systems Data. Table 105 shows the parameters of the service.

Table 105 – MAU Type change

Parameter name	ind
Argument	M
Local Port ID	M
Local MAU Type	U
Local Autonegotiation State	U
Local Link State	U

Argument

The argument shall convey the service specific parameters of the service indication.

Local Port ID

This parameter is the value of the corresponding attribute of the ASE object.

Local MAU Type

This parameter is the value of the corresponding attribute of the ASE object.

Local Autonegotiation State

This parameter is the value of the corresponding attribute of the ASE object.

Local Link State

This parameter is the value of the corresponding attribute of the ASE object.

6.3.20.3.3 Set MAU Type

This local service shall be used to indicate a change of certain Remote Systems Data. Table 106 shows the parameters of the service.

Table 106 – Set MAU Type

Parameter name	ind
Argument	M
Local Port ID	M
Local MAU Type	U
Local Autonegotiation State	U
Local Link State	U

Argument

The argument shall convey the service specific parameters of the service indication.

Local Port ID

This parameter is the value of the corresponding attribute of the ASE object.

Local MAU Type

This parameter is the value of the corresponding attribute of the ASE object.

Local Autonegotiation State

This parameter is the value of the corresponding attribute of the ASE object.

Local Link State

This parameter is the value of the corresponding attribute of the ASE object.

6.3.20.4 Behavior

The behavior of the IEEE Std 802.3 ASE is described in IEEE Std 802.3.

The combination of Fragmentation (see 6.3.19) and Preemption is not supported.

6.3.20.5 Invocation of the IEEE Std 802.3 object

There is one IEEE Std 802.3 object for each port of an end station or bridge component.

6.3.21 Void

Intentionally left blank.

6.3.22 Common DL mapping ASE**6.3.22.1 Overview**

This ASE provides a common interface for DL mapping.

6.3.22.2 DL Mapping class specification**6.3.22.2.1 General**

The DL Mapping ASE defines one DL Mapping object type:

6.3.22.2.2 Template

A DL Mapping object is described by the following template:

ASE: DL Mapping ASE

CLASS: DL Mapping

CLASS ID: not used

PARENT CLASS: top

ATTRIBUTES:

1 (m) Key Attribute: Implicit

SERVICES:

1 (m) OpsService: P Data

2 (m) OpsService: N Data

3 (m) OpsService: A Data

4 (m) OpsService: C Data

5 (m) OpsService: R Data

6.3.22.2.3 Attributes

Implicit

The key attribute Implicit indicates that the DL Mapping object is implicitly addressed by the service.

6.3.22.3 DL Mapping service specification

6.3.22.3.1 P Data

This service is used to transfer time stamped data from the IO device to the IO controller and vice versa. Table 107 shows the parameters of the service.

Table 107 – P Data

Parameter name	req	ind	cnf
Argument	M	M(=)	
CREP	M	M(=)	
D Port	M	M(=)	
T Stamp		M	
DA	M	M(=)	
SA	M	M(=)	
VLAN Prio	M	M(=)	
VLAN ID	M	M(=)	
LT	M	M(=)	
N SDU	M	M(=)	
Result(+)			S
AREP			M
Result(-)			S
AREP			M
Status			M

Argument

The argument shall convey the service specific parameters of the service request.

CREP

This parameter is the local identifier for the desired CR.

D Port

This parameter contains the desired Port ID.

T Stamp

This parameter contains the time stamp.

DA

This parameter contains the destination address according to IEEE Std 802.3.

SA

This parameter contains the source address according to IEEE Std 802.3.

VLAN Prio

This parameter contains the priority according to IEEE Std 802.1Q.

VLAN ID

This parameter contains the VLAN ID according to IEEE Std 802.1Q.

LT

This parameter contains the Length/Type field according to IEEE Std 802.3.

N SDU

This parameter contains the APDU.

Result(+)

This parameter indicates that the service request succeeded.

Result(-)

This parameter indicates that the service request failed.

Status

This parameter contains the reason of the error.

6.3.22.3.2 N Data

This service is used to transfer non RTA and RTC data from the IO device to the IO controller and vice versa. Table 108 shows the parameters of the service.

Table 108 – N Data

Parameter name	req	ind	cnf
Argument	M	M(=)	
CREP	M	M(=)	
D Port	M	M(=)	
DA	M	M(=)	
SA	M	M(=)	
VLAN Prio	M	M(=)	
VLAN ID	M	M(=)	
LT	M	M(=)	
N SDU	M	M(=)	
Result(+)			S
AREP			M
Result(-)			S
AREP			M
Status			M

Argument

The argument shall convey the service specific parameters of the service request.

CREP

This parameter is the local identifier for the desired CR.

D Port

This parameter contains the desired Port ID.

DA

This parameter contains the destination address according to IEEE Std 802.3.

SA

This parameter contains the source address according to IEEE Std 802.3.

VLAN Prio

This parameter contains the priority according to IEEE Std 802.1Q.

VLAN ID

This parameter contains the VLAN ID according to IEEE Std 802.1Q.

LT

This parameter contains the Length/Type field according to IEEE Std 802.3.

N SDU

This parameter contains the APDU.

Result(+)

This parameter indicates that the service request succeeded.

Result(-)

This parameter indicates that the service request failed.

Status

This parameter contains the reason of the error.

6.3.22.3.3 A Data

This service is used to transfer RTA data from the IO device to the IO controller and vice versa. Table 109 shows the parameters of the service.

Table 109 – A Data

Parameter name	req	ind	cnf
Argument	M	M(=)	
CREP	M	M(=)	
D Port	M	M(=)	
DA	M	M(=)	
SA	M	M(=)	
VLAN Prio	M	M(=)	
VLAN ID	M	M(=)	
LT	M	M(=)	
A SDU	M	M(=)	
Result(+)			S
AREP			M
Result(-)			S
AREP			M
Status			M

Argument

The argument shall convey the service specific parameters of the service request.

CREP

This parameter is the local identifier for the desired CR.

D Port

This parameter contains the desired Port ID.

DA

This parameter contains the destination address according to IEEE Std 802.3.

SA

This parameter contains the source address according to IEEE Std 802.3.

VLAN Prio

This parameter contains the priority according to IEEE Std 802.1Q.

VLAN ID

This parameter contains the VLAN ID according to IEEE Std 802.1Q.

LT

This parameter contains the Length/Type field according to IEEE Std 802.3.

A SDU

This parameter contains the APDU.

Result(+)

This parameter indicates that the service request succeeded.

Result(-)

This parameter indicates that the service request failed.

Status

This parameter contains the reason of the error.

6.3.22.3.4 C Data

This service is used to transfer RTC data from the IO device to the IO controller and vice versa. Table 110 shows the parameters of the service.

Table 110 – C Data

Parameter name	req	ind	cnf
Argument	M	M(=)	
CREP	M	M(=)	
D Port	M	M(=)	
DA	M	M(=)	
SA	M	M(=)	
VLAN Prio	M	M(=)	
VLAN ID	M	M(=)	
LT	M	M(=)	
N SDU	M	M(=)	
APDU Status	M	M(=)	
Result(+)			S
AREP			M
Result(-)			S
AREP			M
Status			M

Argument

The argument shall convey the service specific parameters of the service request.

CREP

This parameter is the local Identifier for the desired CR.

D Port

This parameter contains the desired Port ID.

DA

This parameter contains the destination address according to IEEE Std 802.3.

SA

This parameter contains the source address according to IEEE Std 802.3.

VLAN Prio

This parameter contains the priority according to IEEE Std 802.1Q.

VLAN ID

This parameter contains the VLAN field according to IEEE Std 802.1Q.

LT

This parameter contains the Length/Type field according to IEEE Std 802.3.

C SDU

This parameter contains the APDU.

APDU Status

This parameter contains the field APDU Status.

Result(+)

This parameter indicates that the service request succeeded.

Result(-)

This parameter indicates that the service request failed.

Status

This parameter contains the reason of the error.

6.3.22.3.5 R Data

This service is used to transfer RSI data from the IO device to the IO controller and vice versa. Table 111 shows the parameters of the service.

Table 111 – R Data

Parameter name	req	ind	cnf
Argument	M	M(=)	
CREP	M	M(=)	
DA	M	M(=)	
SA	M	M(=)	
VLAN Prio	M	M(=)	
VLAN ID	M	M(=)	
LT	M	M(=)	
R SDU	M	M(=)	
Result(+)			S
CREP			M
Result(-)			S
CREP			M
Status			M

Argument

The argument shall convey the service specific parameters of the service request.

CREP

This parameter is the local identifier for the desired CR.

DA

This parameter contains the destination address according to IEEE Std 802.3.

SA

This parameter contains the source address according to IEEE Std 802.3.

VLAN Prio

This parameter contains the priority according to IEEE Std 802.1Q.

VLAN ID

This parameter contains the VLAN ID according to IEEE Std 802.1Q.

LT

This parameter contains the Length/Type field according to IEEE Std 802.3.

R SDU

This parameter contains the APDU.

Result(+)

This parameter indicates that the service request succeeded.

Result(-)

This parameter indicates that the service request failed.

Status

This parameter contains the reason of the error.

6.4 Additional information

Annex A, Annex B, Annex C, Annex D, Annex E and Annex F give additional information.

7 Communication model for distributed I/O**7.1 Concepts****7.1.1 User requirements**

The typical automation system consists of one or several programmable controllers connected with IO-systems to the machine/process. Today, an IO-system is mostly implemented as a hierarchical decentralized system or a set of single point connections with a well-defined electrical interface such as 24 V digital signals or 4 mA to 20 mA analogue signals.

This communication model defines a decentralized system, and the connection is based on IEEE Std 802.3 information and telecommunication technology. The defined object model is an enhancement of the IEC 61158-5-3 object model.

7.1.2 Features

The following advantages are achieved:

- Changes in the plant cause only small changes in wiring.
- Critical signals can be transferred over short distances to the remote field device (sensor/actuator) and to/from the programmable controller over long distances with high accuracy.
- Parameterization and diagnosis can be done without additional wiring.
- Commissioning of subparts without additional installations.

Table 112 gives an overview of the requirements and features of the system.

Table 112 – Requirements and features


Requirement	Feature
Short reaction time	Cyclic exchange of more than 1 000 inputs and outputs with 32 field devices in less than 1 ms
Automation system consists of one or several programmable controller	Mono-controller or Multi-controller operation, more than one IO controller can be associated to one IO device
Simple field device	Simple protocol, low cost communication interface
Adaptation of application model of IEC 61158-5-3 / IEC 61158-6-3	Similar application process object model with compatibility modus
Unified protocols	Use of the same real-time transport protocol mechanism for different application models
Excellent diagnosis	Diagnosis and alarm object model for IO devices
Smart field devices	Acyclic communication which provides a flexible and enhanced addressing scheme of data within IO devices. The possibility to transfer an alarm from the IO device to the IO controller and vice versa with an explicit acknowledgement.
Efficient communication between IO devices and between IO controller	Provider/Consumer mechanism
Synchronization of applications	Isochronous mode, jitter less than 1 μ s, signaling to the application
Synchronization of clocks	High precision time synchronization
System redundancy	IO device and IO controller redundancy, support for media redundancy
Interoperability	Precise and complete definitions including the definition of the system behavior
Modification during operation	Dynamic reconfiguration

7.1.3 Associations

The communication model supports three types of associations which are characterized by device types involved in the association.

Additional associations e.g. for upload or download are possible but are not part of the communication model.

The communication model supports the communication of field devices with one or more controlling devices (e.g. programmable controller or distributed control system) via associations (see Figure 14). It includes cyclic data exchange of IO data and transmission of alarms, transmission of parameter data, configuration data, identification data, LogBook data, diagnosis data, and record data.

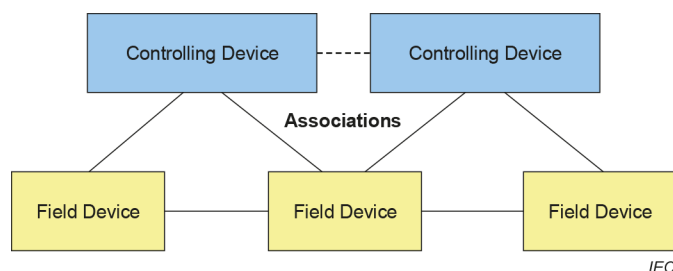

IEC

Figure 14 – Example of communication between controlling devices and field devices

Furthermore, the communication between an engineering device and several controlling or field devices is also supported (see Figure 15). The association between engineering and field devices includes transmission of parameter data, configuration data, identification data, LogBook data, diagnosis data, and record data via connectionless RPC protocol.

NOTE The association between engineering and controlling device includes transmission of controller diagnosis, domains and commands for device activation via connectionless RPC protocol (for further studies).

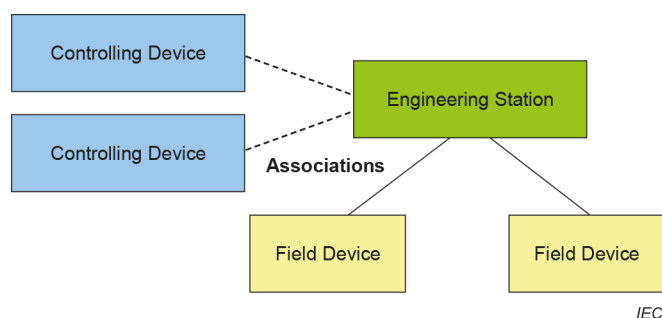


Figure 15 – Example of communication between an engineering station and several controlling and field devices

In addition to these communication models, it also supports the communication between a server station and field devices (see Figure 16). The association between a server station and field device includes transmission of record data via connectionless RPC protocol.

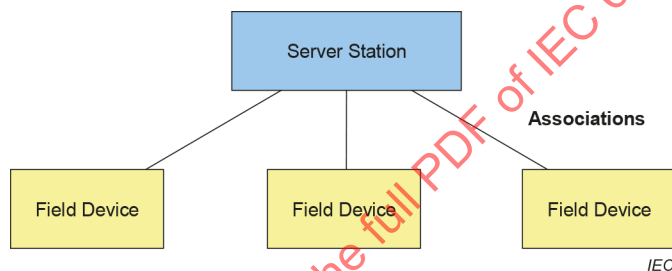


Figure 16 – Example of communication between field devices and a server station

In addition to these communication models, it also supports the communication between field devices (see Figure 17). This communication model includes a controlling device to setup and control the association between the field devices.

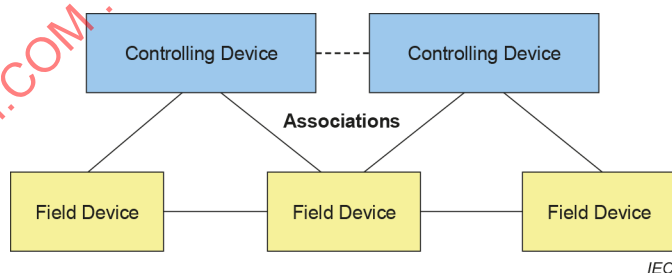


Figure 17 – Example of communication between field devices

The association between controlling devices can include for example the transmission of IO data, diagnosis, alarms and parameter.

7.1.4 Device types

7.1.4.1 General

A physical automation device can host one or more of the same or different device types with appropriate associations.

7.1.4.2 Addressing schema

7.1.4.2.1 Interfaces, components, and ports

Figure 18 shows interfaces, components, and ports of all device types.

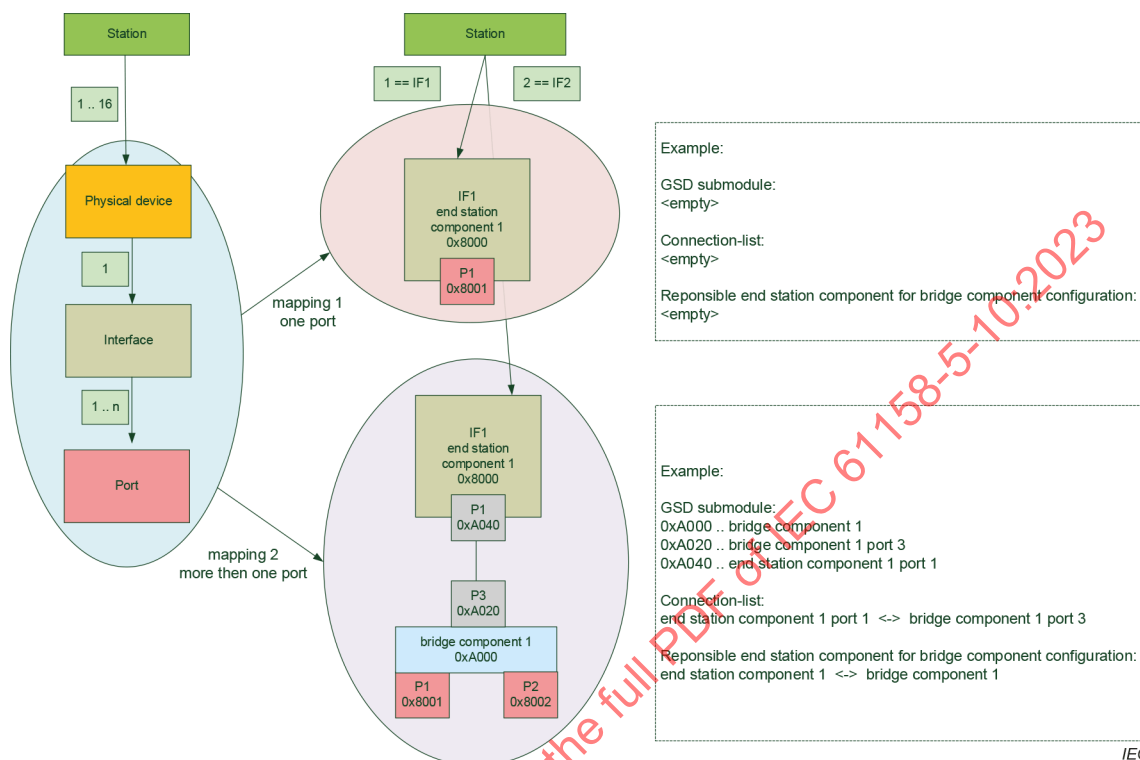


Figure 18 – Interfaces, components and ports

The physical device, identical to one chassis (IEEE Std 802.1AB) / one station (IEEE Std 802.1Q), consists of interfaces, end station components, bridge components and ports.

Each of these objects is addressed as a submodule plugged into a well defined subslot.

The 0x8ipp / 0x9ipp template describes the general format for interfaces (i) and external visible ports (pp).

The 0xA000 – 0xA0FF template describes the general format for bridge components, internal bridge component ports and internal end station component ports as shown in Table 113 and Table 114.


Table 113 – Internal components and ports in the interface mounted left or up into the rack

Value	Meaning
0xA000 – 0xA00F	Used for addressing bridge components. Template used: 0xA00i
0xA010 – 0xA01F	Reserved
0xA020 – 0xA02F	Used for addressing bridge component ports. Template used: 0xA02i
0xA030 – 0xA03F	Reserved
0xA040 – 0xA04F	Used for addressing end station component ports. Template used: 0xA04i
0xA050 – 0xA07F	Reserved

Table 114 – Internal components and ports mounted interface mounted right or down into the rack

Value	Meaning
0xA080 – 0xA08F	Used for addressing bridge components. Template used: 0xA08i
0xA090 – 0xA09F	Reserved
0xA0A0 – 0xA0AF	Used for addressing bridge component ports. Template used: 0xA0Ai
0xA0B0 – 0xA0BF	Reserved
0xA0C0 – 0xA0CF	Used for addressing end station component ports. Template used: 0xA0Ci
0xA0D0 – 0xA0FF	Reserved

Figure 19 shows an example with two end station components using one bridge component. End station component 1 is responsible for bridge component 1 configuration. Thus, it integrates this bridge component 1 into its CIM. If only end station component 2 is used, then the bridge component 1 can be integrated into its CIM. Only one CIM at a time can configure bridge component 1.

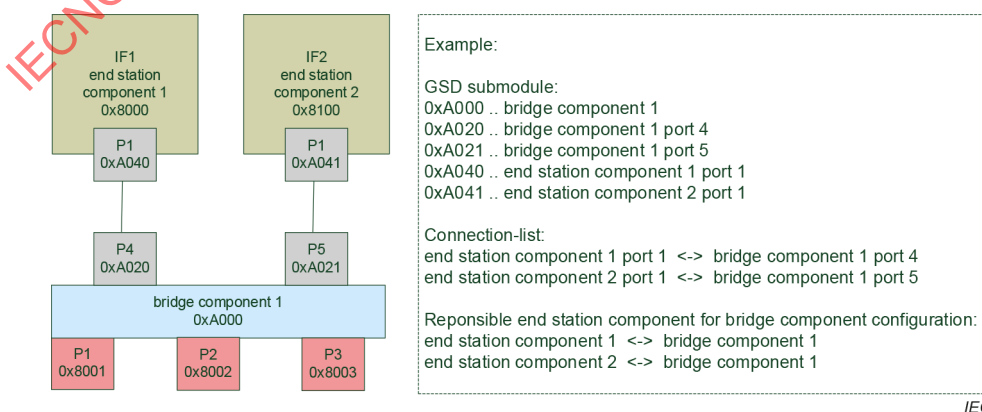

IEC

Figure 19 – Multiple interfaces, components and ports

Figure 20 shows an example for an industrial edge hardware platform.

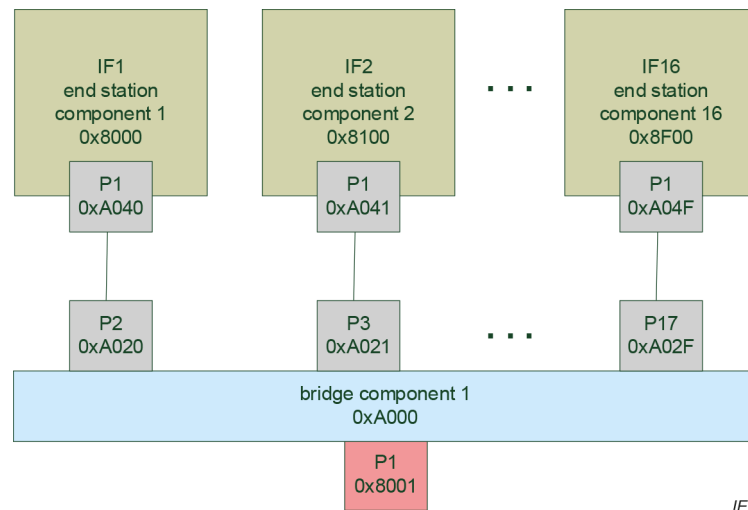


Figure 20 – Multiple interfaces, one bridge component with one external port

Figure 21 shows an example with two end station components and one bridge components.

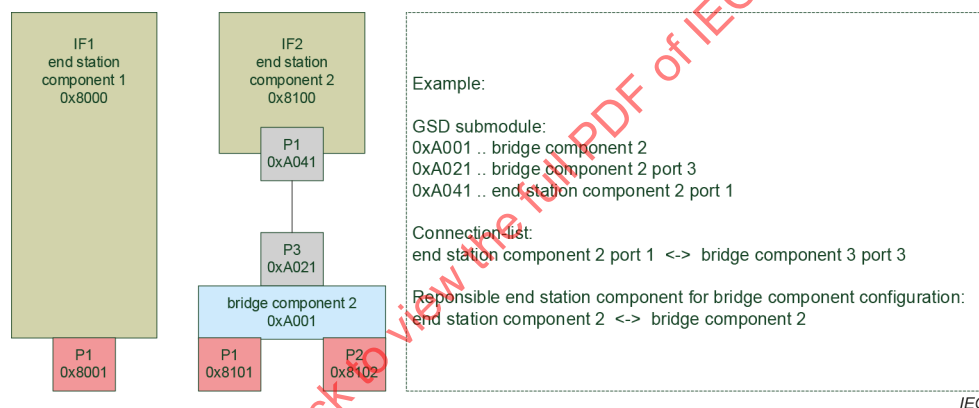


Figure 21 – Multiple interfaces, multiple bridge components

7.1.4.2.2 Instance and instance number

The application layer uses instances of device types identified via instance number to reflect the structuring of functions or components (e.g. hardware modules, logical units). An instance shall have one or more application processes which represent the further level to structure the data.

Each instance shall be addressed by an instance number.

7.1.4.3 IO controller

The IO controller is a controlling device which is associated with one or more IO devices (field devices). The IO controller performs one or more of the following functionalities:

- Cyclic functionalities
 - exchange of IO data with related IO devices
- Acyclic functionalities
 - read diagnosis from IO devices
 - configuration of IO devices
 - writes parameter data to IO devices (startup or application parameter)

- treatment of configuration and diagnosis requests of an engineering device
- establish context to IO devices by means of context management
- acyclic access to record data of IO devices
- treatment of alarms from IO devices
- sending of alarms to IO devices

c) General functionalities

- system redundancy
- dynamic reconfiguration
- isochronous operation
- provider/consumer communication between IO devices and IO controllers
- clock synchronization
- uses one of the transport protocols offered by the IO device conformance classes

7.1.4.4 IO supervisor

The IO supervisor is an engineering device which manages provision of configuration data (parameter sets) and collection of diagnosis data for/from IO controllers and/or IO devices.

7.1.4.5 IO parameter server

The IO parameter server is a server station which serves to store and to load application configuration data (record data objects) from IO devices (client).

7.1.4.6 IO device

7.1.4.6.1 General

The IO device is a field device and performs the following activities depending on the functionality.

7.1.4.6.2 Functionalities

The functionalities are:

a) Cyclic functionalities

- exchange of IO data with one or more assigned IO controller
- exchange of IO data with related IO devices

b) Acyclic functionalities

- provisions for diagnosis data supply
- treatment of configuration requests of an IO controller
- provision of acyclic access to record data for an IO controller
- provision of alarms to the assigned IO controller
- treatment of parameters (startup or application parameter)
- treatment of configuration and diagnosis requests of an engineering device
- treatment of alarms from IO controllers
- sending of alarms to IO controllers

c) General functionalities

- provider/consumer communication between IO devices and IO controllers
- system redundancy
- dynamic reconfiguration

- isochronous operation
- clock synchronization

IO device conformance classes are defined to support common functions.

7.1.4.6.3 Hierarchical composition

7.1.4.6.3.1 General

In general, an IO device is hierarchically composed using the following elements:

- the IO device itself, which contains
- one or more modules, which contain
- one or more submodules, which contain
- one or more channels

The IO device is composed of different structural units which reflect hardware components or virtual functional units of the field device. These structural units are referred to as modules, submodules, and channels which can reflect physical units, sub-units, and single connections to the process.

The address hierarchy uses the following attributes:

- one or more IO device instances (see Annex A), which contain
 - one or more application processes referenced by its identifier API, which contain
 - one or more slots, which contain
 - one or more subslots, which contain
 - one or more channel numbers

The elements of the IO device are addressed by means of Object UUID (addressing the device instance), API Number, Slot Number, Subslot Number, and Channel Number.

7.1.4.6.3.2 Application process

The application layer application processes are identified via identifier API. An application process shall have one or more modules which represent the further level to structure the data.

Each application process shall be addressed by an API.

The default AP (identified over API = 0) shall provide device related information. Other APs are uniquely assigned to device profiles and further standardized use

7.1.4.6.3.3 Modules and slots

The application layer uses modules plugged in slots to reflect the structuring of functions or components (e.g. hardware modules, logical units) inside an IO device. A module shall have one or more submodules which represent the further level to structure the data.

Each module shall be addressed by a slot number 0 to 0x7FFF. The actual use of the slot number is manufacturer specific. Numbering may contain gaps.

The slot model is an abstract address model via numeric references. Real hardware modules or virtual functional units may even occupy more than one slot. The device characteristics concerning use of slots are defined in a general station description for configuration purpose.

Furthermore, each module owns identification data. Within the connection establishment phase the requested identification shall be compared with the real identification data. If a slot is not occupied with a physical or virtual module then it is not part of the real identification.

In modular IO devices modules plugged in slots determine the real identification. The number of slots and thus the maximum number of pluggable modules is fixed according to the device specification.

A compact IO device is a special case of a modular IO device with one or more fixed real identifications.

7.1.4.6.3.4 Submodules and subslots

The application layer uses submodules plugged into subslots to reflect the structuring of functions or further components (e.g. hardware units, logical units) inside a module. A submodule shall have one or more channels which represent the further level to structure the data.

Each submodule shall be addressed by a subslot number 0 to 0x9FFF. The actual use of the subslot number is manufacturer specific. Numbering may contain gaps.

If `ARProperties.PullModuleAlarmAllowed` is not used, subslot number zero is used in conjunction with `AlarmType "Pull"` to address a certain module within the IO device. In this case, subslot number zero is not usable to plug a submodule.

If `ARProperties.PullModuleAlarmAllowed` is used, subslot number zero acts as a real subslot.

A submodule provides the following objects:

- Record Data (e.g. parameter)
- Identification and maintenance data
- IO Data (as a summary of the channels)
- Alarms

7.1.4.6.3.5 Channel and channel numbers

The application layer uses channels assigned to a submodule for structuring of functions or further components (e.g. hardware units, logical units) inside a submodule.

These channels are visible in parameterization, IO data and diagnosis.

Figure 22 shows the affiliation of data objects and diagnosis data to the submodule. All diagnosis data is assigned to a channel.

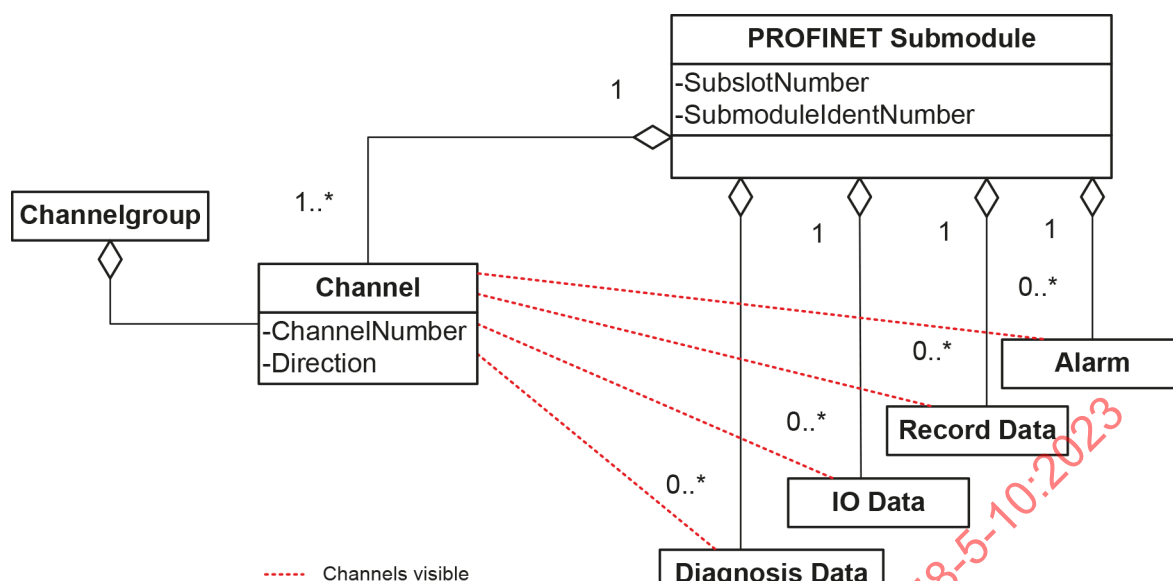


Figure 22 – Data Objects and Diagnosis Data Model

A submodule according to this document consists of one or more channels.

A particular channel is uniquely identified by its ChannelNumber and Direction.

Each channel shall be addressed by a channel number 0 to 0x7FFF. The manufacturer decides whether the channel numbers are counted independently for in and out direction, or have a common numbering. The actual use of the channel number and direction is manufacturer specific. Numbering may contain gaps.

The special channel number 0x8000 means “the whole submodule”.

Channel group is a vendor specific aggregation of multiple channels for diagnosis purposes.

NOTE A sample for the usage of channel groups: A submodule offers eight digital input channels, numbered 0 to 7 with direction IN. Power is supplied separately for channel 0 to 3 and for channel 4 to 7. A power fail in the first group results in diagnosis related to channel group represented by channel 0, in the second group by channel 4.

For diagnosis purposes, a channel is equivalent to a monitored entity. The monitoring can be realized by the submodule itself (e.g. short circuit, wire breakage or over temperature) or else by the attached sensor or actor (e.g. sensor fault).

Diagnosis related to actor, sensor, or its connection (e.g. wire break) is stated with the channel number and direction as assigned by the vendor.

Diagnosis related to the channel group (e.g. power supply failure of the channel group) is stated with the lowest channel number of the channel group (i.e. the representative).

The special channel with channel number 0x8000 and direction “manufacturer specific” is representing the “whole submodule”. Diagnosis related to the submodule itself (e.g. submodule is defective) is stated with this special channel number.

Submodules without IO data (e.g. interface and port submodules) have one channel only; the special channel “whole submodule”.

Submodules with IO data (e.g. digital input submodules) have more than one channel: one or more channels representing actors/sensors, and in addition the special channel “whole submodule”.

For the relation between IO data and channels refer to 7.3.1.4.6.1.6.

For the relation between record data and channels refer to 7.3.1.7.1.

The manufacturer is responsible for modeling the channels of a submodule. Examples are illustrated in Figure 23.

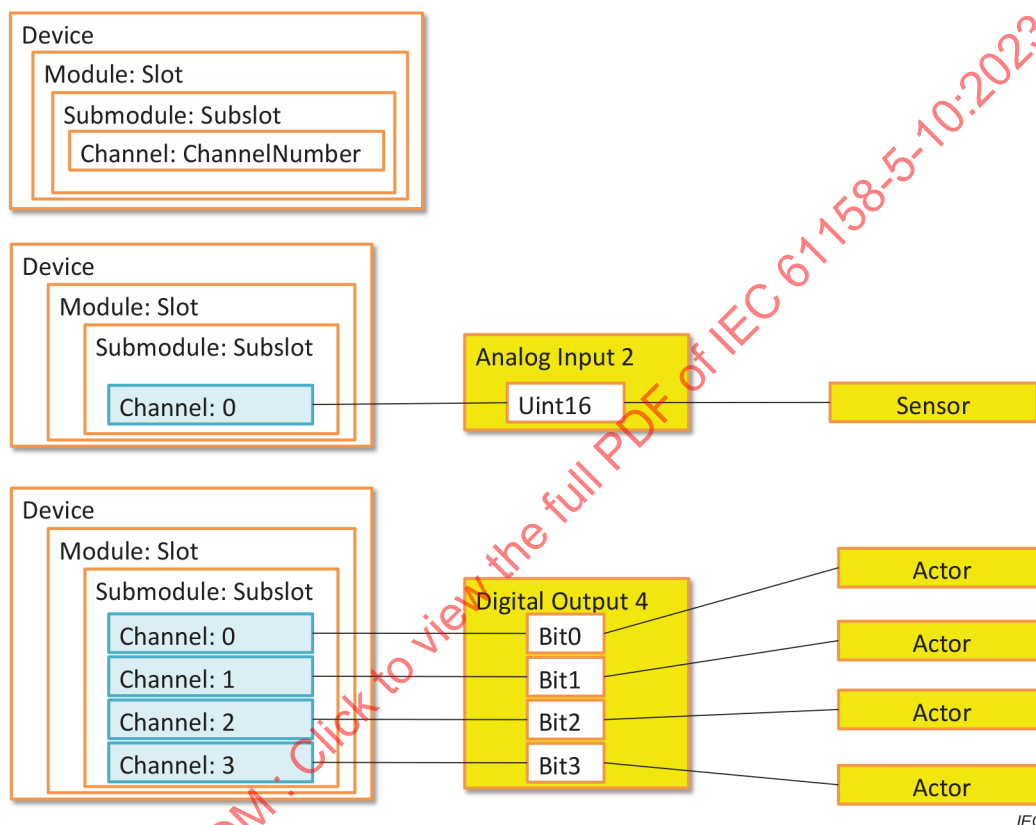


Figure 23 – Example for channel modelling

Figure 24 shows an example of mapping. Both “real peripherals” and “virtual subcomponent” can exist and fit to the device model according to this document.

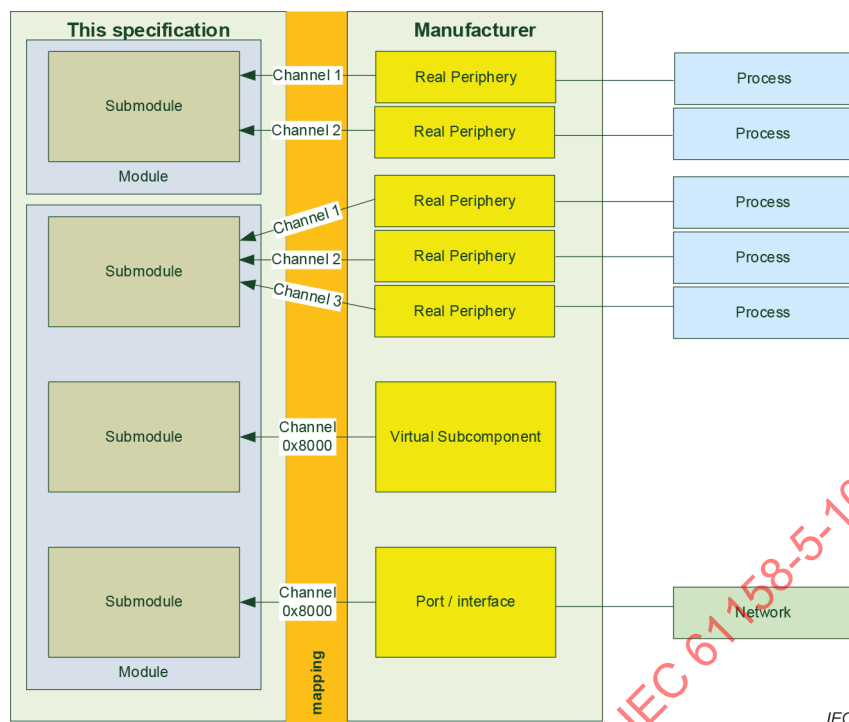


Figure 24 – Mapping to device model

7.1.4.6.4 Identification hierarchy

The following identification hierarchy is defined for the application layer elements:

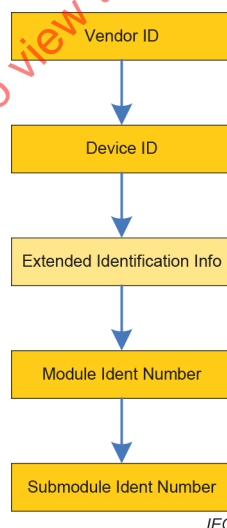


Figure 25 – Identification hierarchy

A particular IO device is identified over Vendor ID and Device ID. The Vendor ID is a globally organizational administered number identifying a particular vendor; the Device ID is uniquely assigned to the device type by the vendor of the device. See also 7.4.1.

The Extended Identification Info allows extending the identification rules. The Extended Identification Info is provided as an AR Vendor Block during the Application Relationship class's service Connect. If no extended identification info is provided, no additional identification rules apply.

The Module Ident Number shall uniquely designate all modules which appear in a specific device. If a module can be placed in different devices, the ModuleIdentNumber shall be assigned uniquely across all these devices.

The Submodule Ident Number shall uniquely designate all submodules which appear in a specific module. Beyond identifying the submodule's hardware, it identifies the representation of the submodule's input and/or output data regarding its length and data type, its diagnosis and its parameterization. If a submodule can be placed in different modules, the SubmoduleIdentNumber shall be assigned uniquely across all these modules.

If the same hardware submodule has different representations of input and/or output data, the submodule shall have different Submodule Ident Numbers for each of those representations. Note that each of these Submodule Ident Numbers shall still be able to identify the specific submodule, so each of these ident numbers shall be different from the ident numbers of other submodule hardware on the same module.

So, while the Vendor ID, Device ID and Module Ident Number shall be one-to-one, i.e. there is exactly one ident number for a particular hardware type, a submodule may have several unique SubmoduleIdentNumbers.

The identification numbers are stored in the hardware and can be read out, e.g. via the RPC Object-UUID (Vendor ID and Device ID), via I&M functions (Vendor ID and Order ID [as a synonym for Device ID]), via AR Data (Extended Identification Info) and via Real Identification Data (Module Ident Number and Submodule Ident Number).

7.1.4.7 NME

The NME is a controlling device associated with a set of devices. The set is specified by the NME domain name, which shall be preassigned to each device. The NME performs one or more of the following functionalities:

- a) Acyclic functionalities
 - configuration of devices according to network management
 - read network diagnosis from devices
- b) General functionalities
 - system redundancy
 - isochronous operation
 - clock synchronization
 - uses one of the transport protocols offered by the device conformance classes

7.1.5 Instance model and device addresses

The design and construction of physical automation devices is beyond the scope of this specification and therefore vendor-specific. However, Annex A provides a model for physical devices to host one or more IO controller or IO devices.

7.1.6 Application process

7.1.6.1 Application process objects

An application process object (APO) is a network representation of a specific aspect of an application process (AP). Each APO represents a set of information and processing capabilities of an AP that are accessible through services of the application layer. APOs are used to represent these capabilities to other APs in a system.

In order to permit an AP to communicate with an AP of another device, APOs have to be available. Application process objects (virtual objects) represent existing process objects (real objects), that an application process has made visible and accessible to the communication (see Figure 26).

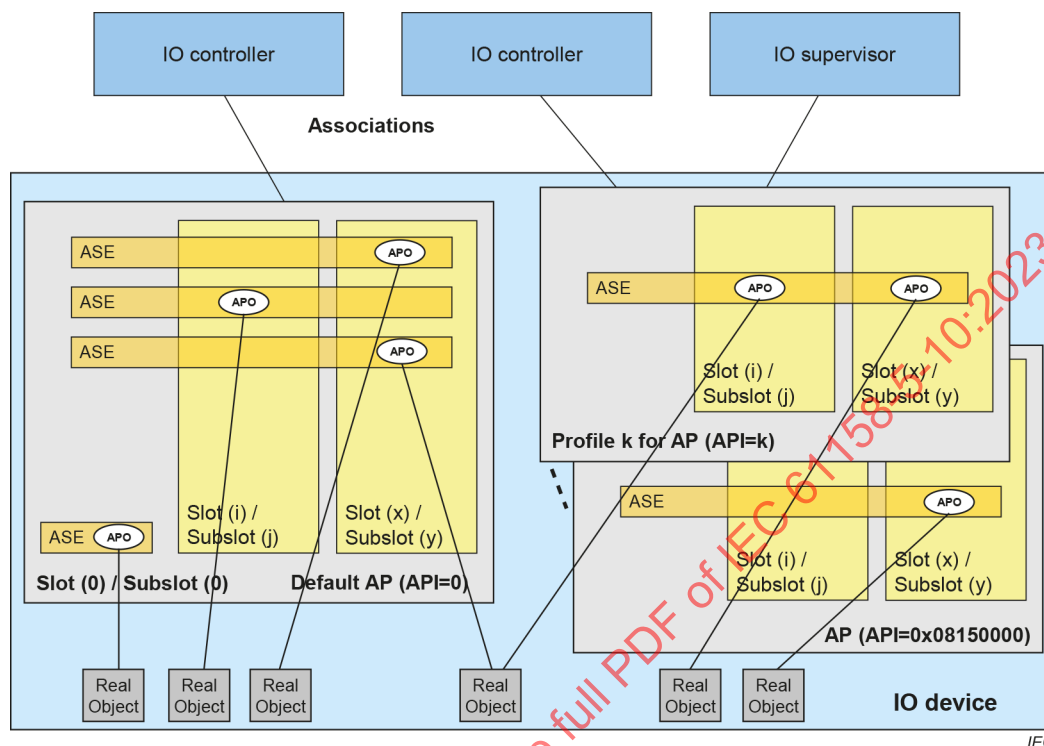


Figure 26 – Application Process with application process objects (APOs)

In Figure 27, a remote AP acting as Client accesses the real object by sending requests through the APO that represents the real object. Local aspects of the AP convert between the network view (the APO) of the real object and the internal AP view of the real object.

Within the AP an APO is identified by slot, subslot and index. The address space which is defined by slot, subslot and index can be used by several APs.

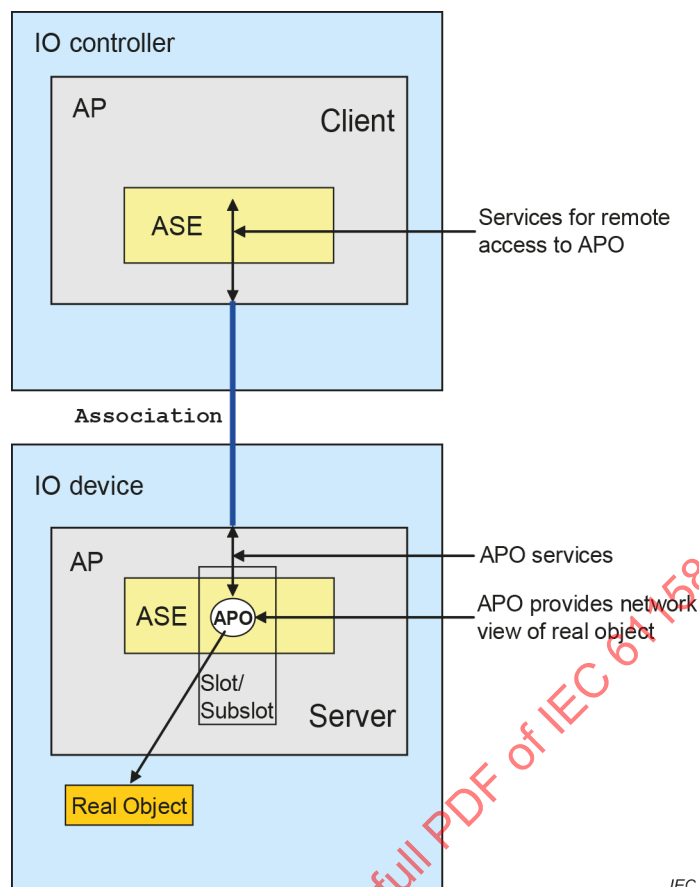


Figure 27 – Access to a remote APO

In Figure 28, a Client/Server and a Provider/Consumer association is shown. The Client accesses the real object by sending requests through the APO that represents the real object. The Consumer can subscribe to the whole or to a part of the remote APO. The Provider/Consumer association is always related to the Communication Relationship class of AR ASE. Local aspects of the AP convert between the network view (the APO) of the real object and the internal AP view of the real object.

The mapping of real data to network visible APOs is a local matter. However, the device vendor shall provide local means to avoid conflicts with overlapping outputs and writable variables.

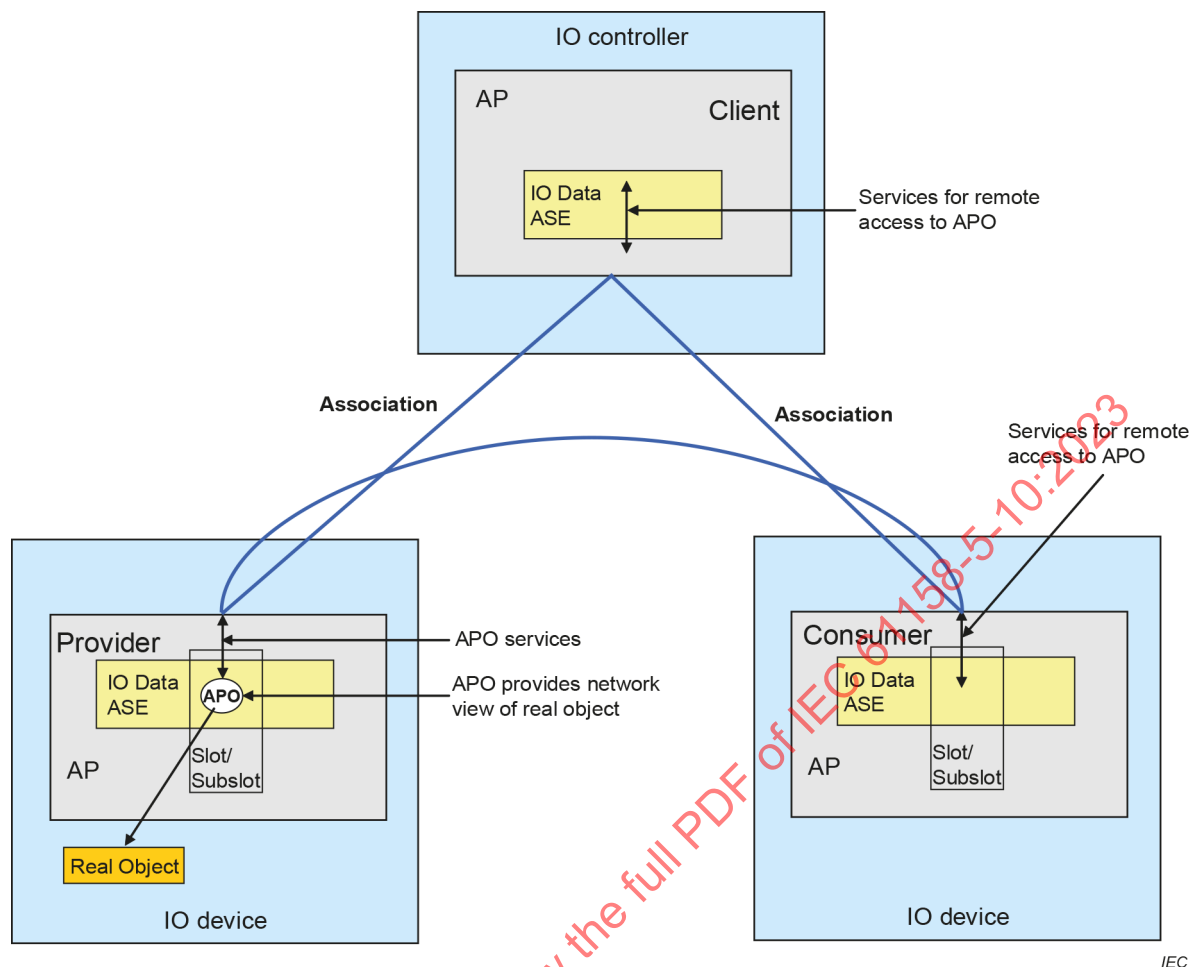


Figure 28 – Access to a remote APO for provider/consumer association

7.1.6.2 Application process rules

In the application process environment, an application can be partitioned and distributed to a number of devices on the network. Each of these partitions is referred to as an AP. A device can have several APs as shown in Figure 29. In this case each individual AP is uniquely identified by an API.

Each IO device shall support a Default AP with API = 0.

The Default APs shall provide device related information. Other APs are reserved to be uniquely assigned to device profiles and further standardized use.

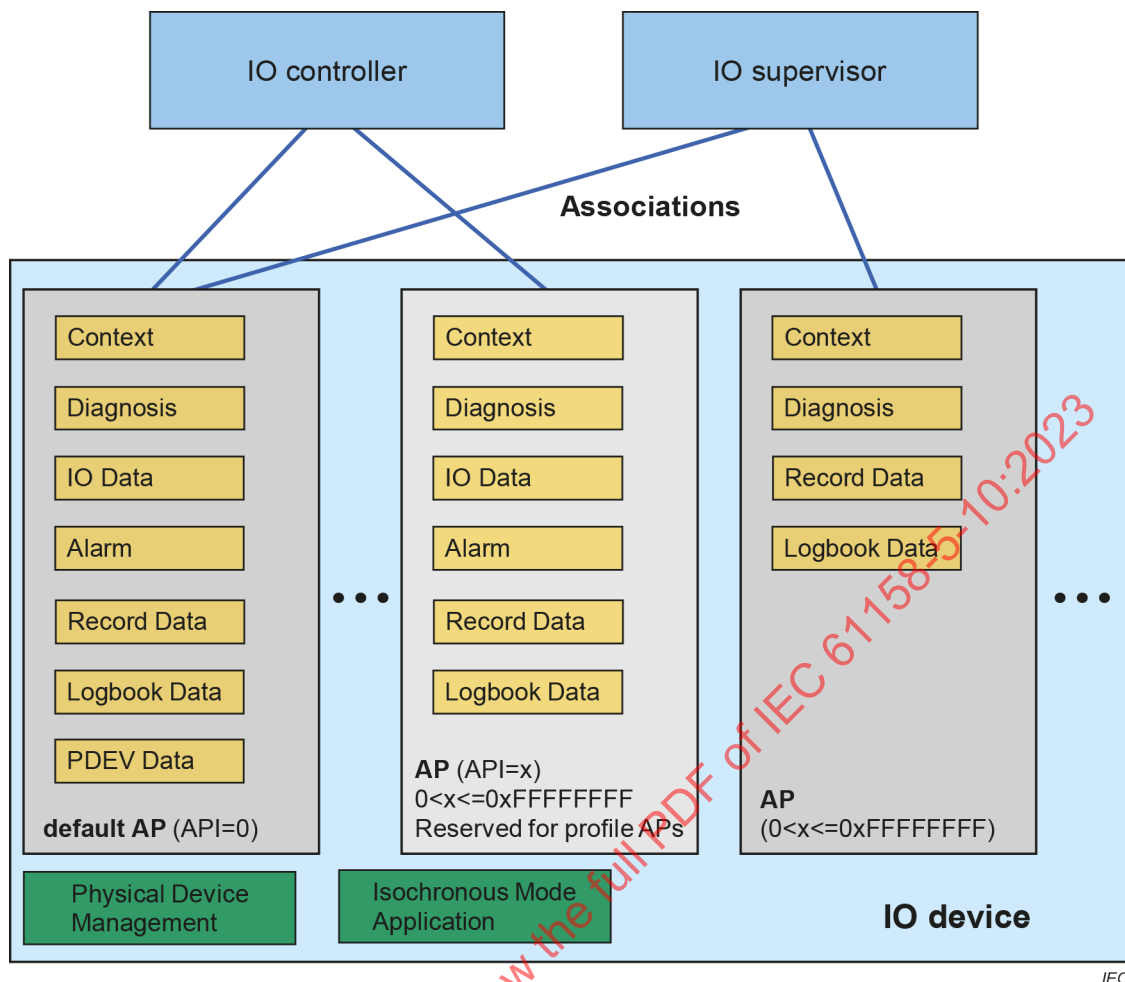


Figure 29 – Overview of application processes

An AP can be distributed to several slots and subslots. Figure 30 shows the relationship between the APs, the data elements, the slots, and subslots of an IO device.

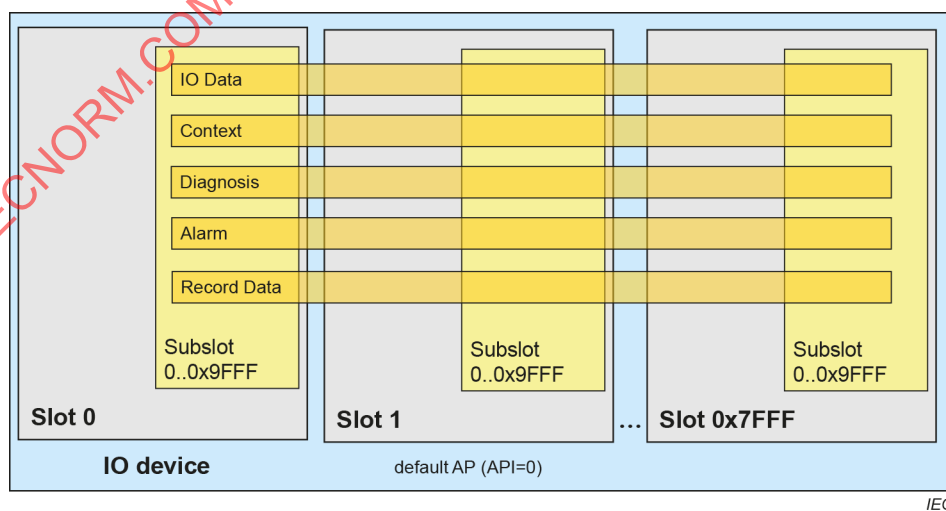


Figure 30 – IO device with APs, slots and subslots

NOTE 1 The mapping of a real object to the addressing model is a local matter. It means that one real object can be mapped or grouped in different APs and subslots. However, from the network perspective, all address information API/slot/subslot are unique. Each API/slot/subslot can provide a different but consistent view on network visible objects. However, the IO device avoids conflicts concerning multiple use of output data referred to as overlapping outputs. An application association from a supervisor is always able to take control over output data and the controller device is informed about this by means of a special alarm.

The following rules shall be applied for the AP:

- Device instance identification data as part of the Real Identification ASE shall always be identical regardless of the addressed AP
- API 0x00000000 addresses the application process
- API 0x00000001 to 0x0000FFFF is used for profiles fitting to the definition of IM Profile ID.
- API 0x00010000 to 0x0001FFFF is used for Vendor ID specific profiles.
- API 0x00020000 to 0xFFFFFFFF is reserved for IO profiles which shall be unique.

Besides the vendor and profile specific use of the address model the following rules shall be applied for the Slot:

- The slots 0 to 0x7FFF are freely usable within the scope of the addressed AP. For API 0 slots are vendor specific. For other APs further definitions specified in the related profile shall be applied.
- The slots 0x8000 to 0xFFFF are reserved for future use and shall not be used regardless of the AP.

Besides the vendor and profile specific use of the address model the following rules shall be applied for the Subslot:

- Subslot 0x0000 is freely usable within the scope of the addressed AP, If ARProperties.PullModuleAlarmAllowed is used.
Subslot 0x0000 is used to address the module within the scope of the Pull Alarm to signal pulling of a module, if ARProperties.PullModuleAlarmAllowed is not used.
- The subslots 0x0001 to 0x7FFF are freely usable within the scope of the addressed AP. For API 0 subslots are vendor specific. For other APIs further definitions specified in the related profile shall be applied.
- The subslots 0x8000 to 0x8FFF shall be used to address interface and port submodules. If used by system redundancy, the interface is mounted left or up into the rack.
They shall only be used in the default API (zero).
- The subslots 0x9000 to 0x9FFF shall be used by system redundancy (R1/R2) only for interface and port submodules within a redundant interface mounted right or down into the rack.
They shall only be used in the default API (zero).
- The subslots 0xA000 to 0xA0FF shall be used to address non-external visible bridge components, bridge component ports, and end station component ports. They shall be used for configuration purpose only.
They shall only be used in the default API (zero).
- The subslots 0xA100 to 0xFFFF are reserved for future use and shall not be used regardless of the AP.

Besides the vendor and profile specific use of the address model the following rules shall be applied for the Index:

- The indices 0 to 0x7FFF shall be used by the device manufacturer for user specific Record Data objects within the scope of the addressed AP. For API 0 indices are vendor specific. For other APs further definitions specified in the related profile shall be applied.

NOTE 2 Index 0-0xFF can be used for migration of IEC 61784-1-3, CP3/1 conform devices to access the same Process Data Objects with same index.

- The indices 0x8000 to 0xAFFF are reserved for IEC 61158-6-10 use. The scope of the Record Data object is a particular subslot within the scope of the addressed AP.
- The indices 0xB000 to 0xBFFF are reserved for profile use. The scope of the Record Data object is a particular subslot within the scope of the addressed AP.
- The indices 0xC000 to 0xCFFF are reserved for IEC 61158-6-10 use. The scope of the Record Data object is a particular slot within the scope of the addressed AP.
- The indices 0xD000 to 0xDFFF are reserved for profile use. The scope of the Record Data object is a particular slot within the scope of the addressed AP.
- The indices 0xE000 to 0xEBFF are reserved for IEC 61158-6-10 use. The scope of the Record Data object is a particular application relation.
- The indices 0xEC00 to 0xEFFF are reserved for profile use. The scope of the Record Data object is a particular application relation.
- The indices 0xF000 to 0xF3FF are reserved for IEC 61158-6-10 use. The scope of the Record Data object is a particular AP.
- The indices 0xF400 to 0xF7FF are reserved for profile use. The scope of the Record Data object is a particular AP.
- The indices 0xF800 to 0xFBFF are reserved for IEC 61158-6-10 use. The scope of the Record Data object is the device.
- The indices 0xFC00 to 0xFFFF are reserved for profile use. The scope of the Record Data object is the device.

7.1.6.3 Additional rules for interfaces and ports

An IO device shall contain at least one interface with ports.

Therefore, at least one module (e.g. plugged in Slot Number 0), shall contain up to 16 further special submodules plugged to subslots from 0x8000 (Interface 1), 0x8100 (Interface 2), to 0x8F00 (Interface 16) referred to as Interface submodules.

Furthermore, each interface submodule shall have at least one and up to 255 assigned port submodules, representing one of the interface's ports.

These port submodules are plugged to subslots from 0x8i01 (Port 1) to 0x8iFF (Port 255) referred to as Port submodules.

Figure 31 depicts an example with several ports on the same slot belonging to one interface. The values "port-001" to "port-255" shall be used for naming the port submodules if all port submodules belonging to this interface are located in the same slot as the interface submodule.

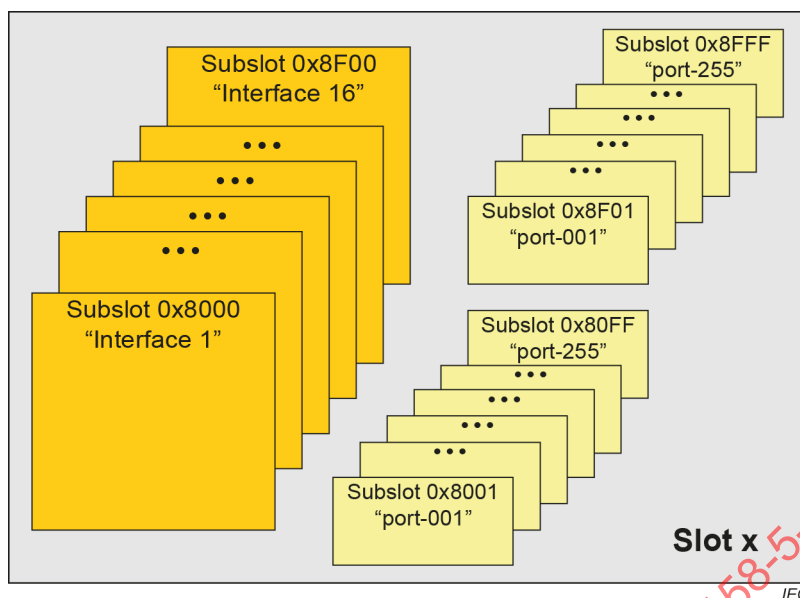


Figure 31 – Example 1 structural units for interfaces and ports within API 0

Figure 32 depicts an example where several port submodules belonging to an interface are plugged to several slots. The values “port-001-xxxx” to “port-255-zzzz” shall then be used for naming the port submodules, whereas “xxxx” denoted the slot number with leading “0” (e.g. port-002-00005”).

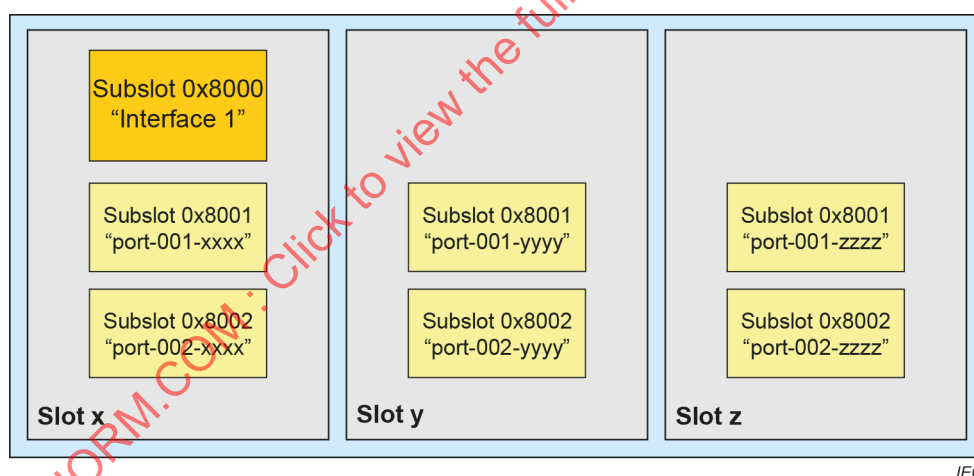


Figure 32 – Example 2 structural units for interfaces and ports within API 0

7.1.6.4 Additional rules for system redundancy

In the special case system redundancy with redundant interface modules the subslot numbering scheme for interfaces and ports is extended. For this special case applies:

- Subslot number 0x8000 to 0x8FFF indicates an interface or port submodule in the interface mounted left or up into the rack.
- Subslot number 0x9000 to 0x9FFF indicates an interface or port submodule in the interface mounted right or down into the rack.

For the subslot number range 0x9000 to 0x9FFF the same rules apply as for range 0x8000 to 0x8FFF; i.e. 0x9i00 for an interface submodule with “i” in the range from 0 to 15, denominating the number of the interface; 0x9ipp for a port submodule with “pp” in the range from 1 to 255, denominating the number of the port.

7.1.6.5 Additional rules for RT class 3

In the special case RT class 3 only a structure of the device shall be used, where interface and ports are located on one slot as shown in Figure 31.

7.1.7 Application service element

7.1.7.1 General

An application service element (ASE), as defined in ISO/IEC 9545, is a set of application functions that provide a capability for the interworking of application processes for a specific purpose. ASEs provide a set of services for conveying requests and responses to and from application processes and their objects.

7.1.7.2 FAL ASEs

Figure 33 shows the distributed I/O FAL ASEs according to their OSI layer, including the common services FAL ASEs.

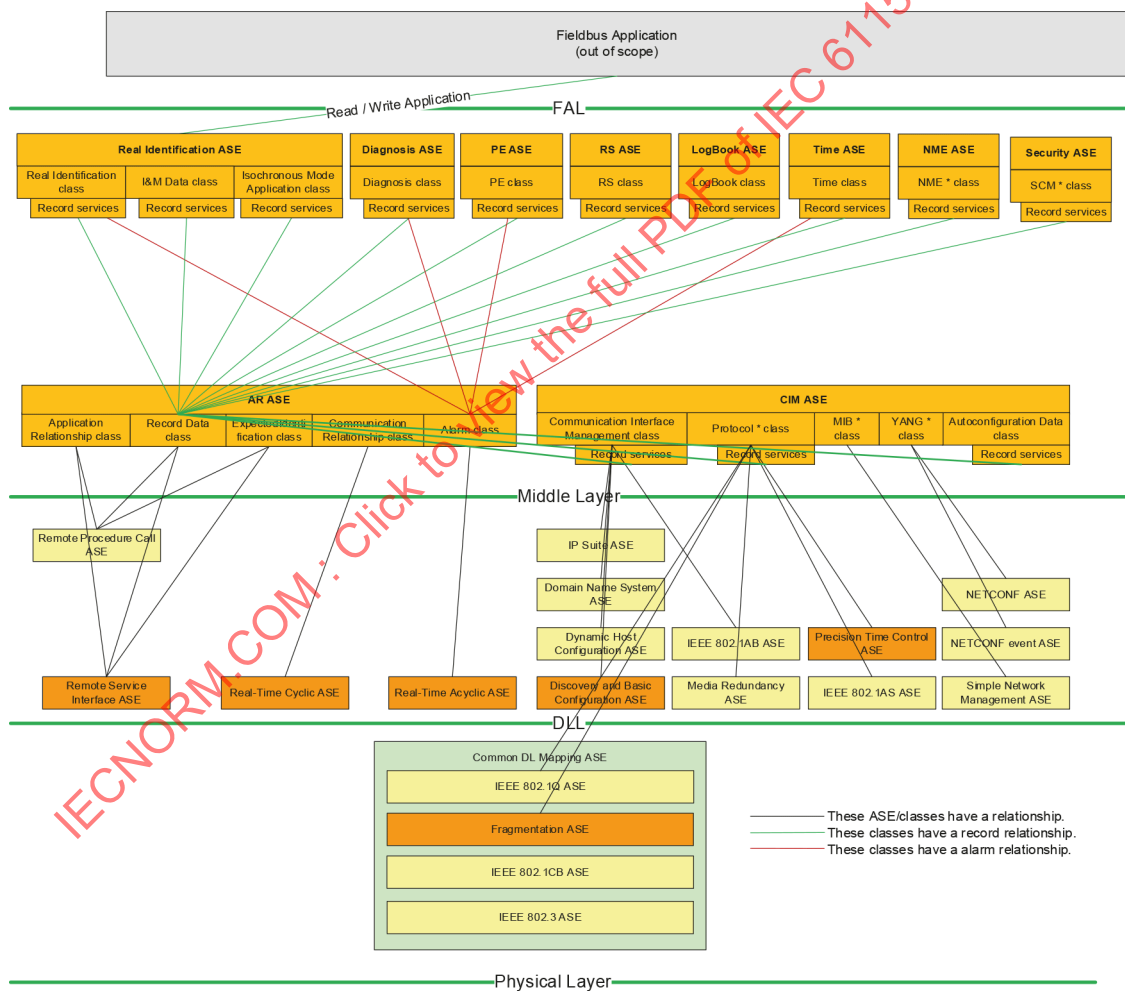


Figure 33 – FAL ASEs communication architecture

The architecture has 3 layers. The upper layer is the FAL with the ASEs and their classes defined within 7.3. Furthermore, there are the related information's bases.

The middle layer shows all protocols that are specified in the common services as described in Clause 6.

The lower layer is the DLL as access point for sending and receiving frames.

ASEs specifically defined within this communication system are marked in orange, ASEs defined elsewhere but used here are marked in yellow.

Data of the middle layer is mapped – depending on the common service – either to the AR ASE or to the Communication Interface Management ASE. The mapping is shown in Figure 33 by black lines.

There are two places where IO data exist: In the Communication Relationship class the IO data are stored in the Expected Identification Format. At the APO (in the Real Identification ASE), the IO data are stored in the Real Identification Format. The Read Input/Output services access the IO data via the APO.

The Diagnosis ASE, PE ASE and RS ASE are dependent on the RI ASE, entries are only available in relation with submodule entries in RI ASE. For example, a plug of submodule creates an entry; a pull of submodule removes an entry.

All profiles and applications only use the services of the FAL interface. This prevents that every profile redefines the general behavior.

7.1.7.3 ASEs in application layer

The application layer offers the following ASEs:

AR ASE

The Application Relationship ASE (AR ASE) provides description models for the separate AR types. This includes their transfer characteristics as well as their current communication states.

CIM ASE

The Communication Interface Management ASE (CIM ASE) provides a set of services to manage the physical device. It includes the assignment of a Station Name and further IP address parameter.

NOTE The term physical device implies that there is only one instance of this ASE for a “real” automation device regardless of the number of instances of device types within the automation device. Anyway, it will be only one instance for most devices.

Real Identification ASE

The Real Identification ASE (RI ASE) provides a description model for the current device configuration (real identification data), i. e. plugged modules / submodules, their properties and status.

Isochronous Mode Application ASE

The Isochronous Mode Application ASE provides a set of services to parameterize and synchronize isochronous application processes.

Diagnosis ASE

The Diagnosis ASE provides services for the IO controller or IO supervisor to read Diagnosis information from an IO device.

PE ASE

The PE ASE is a data base located at the device used for the energy saving functionality.

RS ASE

The reporting system ASE (RS ASE) offers services for collecting event items and transport them to an IO controller.

LogBook ASE

The LogBook ASE provides a set of services to read LogBook data. The application of the IO controller or IO supervisor requests each transmission individually. The LogBook ASE can be related to all APs of an IO device.

Time ASE

The Time ASE provides local time for other ASEs.

NME ASE

The Network Management Engine (NME) ASE provides a client server model and a set of services to parameterize end station and bridges.

Security ASE

Reserved for security.

7.1.8 Application relationship

7.1.8.1 General

An Application Relationship (AR) is a co-operative relationship between two or more APs for the purpose of exchange of information and coordination of their joint operation (see Figure 34). This relationship is activated by the exchange of Application Protocol Data Units (APDU). The application layer uses different types of ARs which distinguish in their conveyance characteristic.

7.1.8.2 Application relationship endpoint

An AP has access to the communication using application relationship endpoints (AREP, see ISO/IEC 7498-1). One or more AREPs are fixed and uniquely assigned to an AP. These endpoints are addressed by the AP through an identifier (AREP ID). These identifiers are device specific and not defined by the communication itself. ARs are defined as a set of co-operating AREPs. Between two APs one or more ARs may exist, each one having unique AREPs. Figure 34 shows an example of one AR with two AREPs.

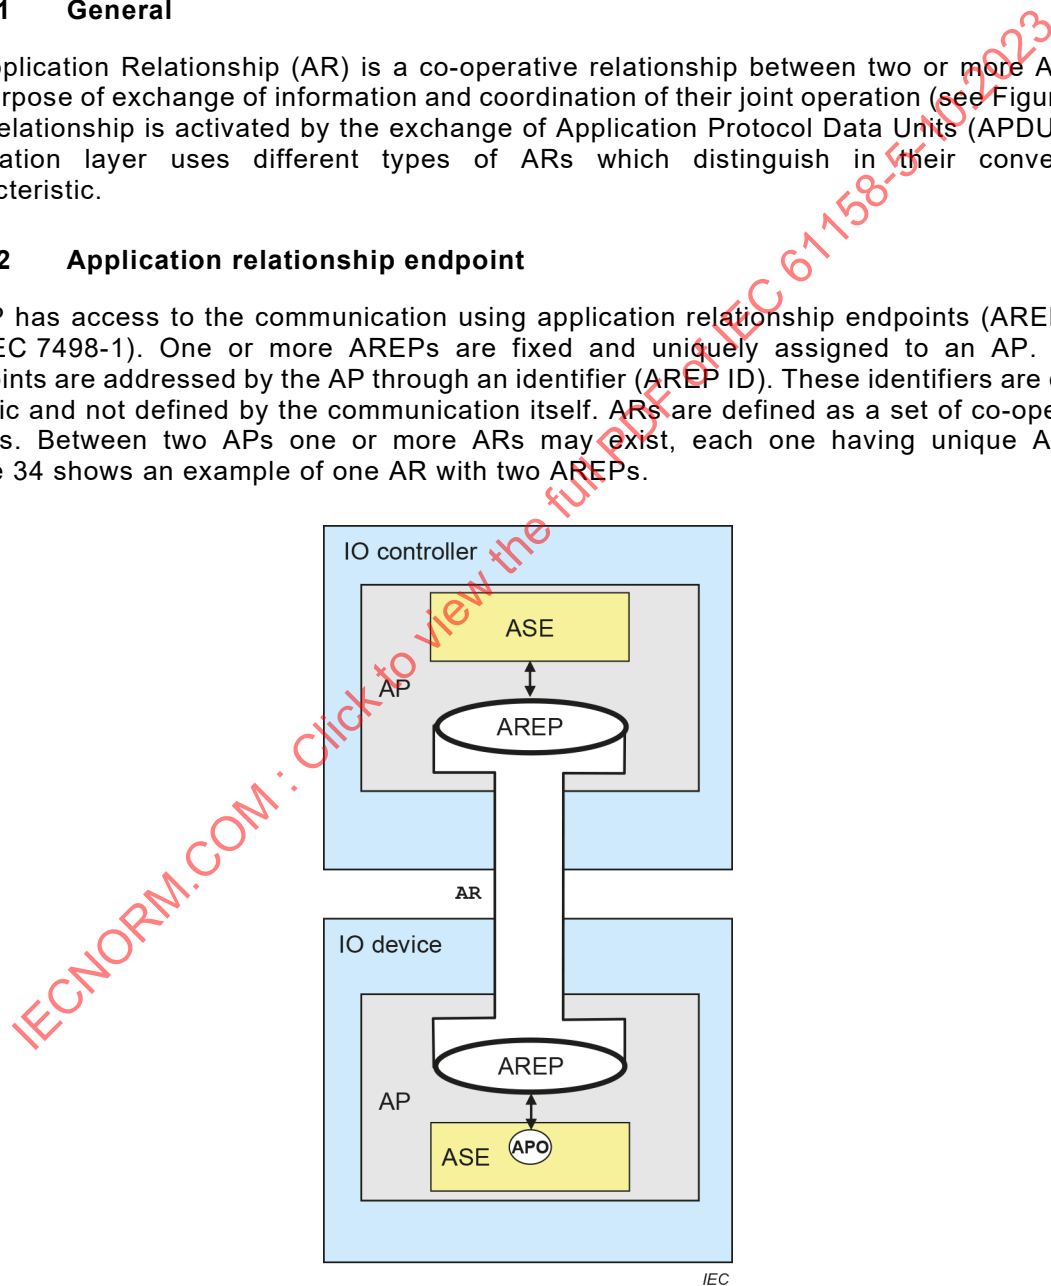


Figure 34 – Example of one AR with two AREPs

7.2 ASE data types

The data types defined in Clause 5 are supported.

7.3 ASEs

7.3.1 AR ASE

7.3.1.1 Overview

The AR ASE is the remote access point. It is the end point for the protocols CL RPC, RSI, RTC and RTA. It handles the communication relationships to the remote partners.

The AR ASE is split into different classes:

- Application Relationship class: managing the application relations.
- Expected Identification class: managing the requested configuration of the ARs, managing the Module Diff Block in comparison to the Real Identification.
- Record Data class: The Record Data class is a central distributor for record data sets. Some known record data sets are mapped to their corresponding information base (class), others are assigned to the APO via Real Identification ASE (green lines in Figure 33).
- Communication Relationship class: managing the communication relations and the transportation of IO data with IOPS, IOCS, APDU Status.
- Alarm class: The Alarm class is a central distributor for alarms. It manages the alarms and the alarm queues. Alarms are assigned to the corresponding information base or the APO (via Real Identification ASE) according to their Alarm type (red lines in Figure 33).

The AR ASE is one of the two locations for IO data (the other one is the Real Identification ASE). In the Communication Relationship class the IO data are stored in the Expected Identification Format. IO data are conditioned for the APO and can differ from the Real Identification Format. Values of IO data can be substituted or reduced here by the application.

The AR ASE provides a set of services to establish application relationships, parameterize and configure the APO in the IO device and the submodules containing IO data.

A particular APO of an IO device may need a parameter (e.g. the range of an analogue signal) from the assigned IO controller to provide the data from the Input Data object and/or for the Output Data object according to the requirements of the IO controller's AP. The values for the attributes of these objects will be provided by the IO controller and assigned after validation from the AP of the IO device. After PowerOn the attributes of the APO of an IO device have manufacturer specific default values. If values are assigned by an IO controller, these are valid until PowerOff of the IO device or reassignment by this or another IO controller.

The functionality of an IO device application implies the necessary parameterization objects (specific Record Data objects) which have to be conveyed at the start-up phase of the system from the IO controller to the assigned IO devices via the IO AR. The application of the IO device shall check the parameterization data sent by the IO controller.

This ASE specifies the structure of the ARs including the necessary DL parameters for the specific CRs. The AR ASE in each device manages an end point of the AR and all related CRs, and maintains their local context. The AR endpoint is related to a dedicated list of application processes, which is addressed during the connection establishment phase, and all further services are within this context.

Furthermore, the application layer defines an implicit AR. It is used for read access to APOs without establishing a dedicated AR. Write access is not permitted over the implicit AR. This AR is locally addressed by an implicit AREP.

Each IO device shall provide one implicit AR that allows processing at least one outstanding service all the time. It can be able to process more services in parallel according to local resources.

Each IO device shall provide resources for at least one explicit AR, regardless of the transport protocol used. An IO device can be able to provide more ARs in parallel according to local resources.

7.3.1.2 Relations

The AR ASE is related to the following ASEs specified in the common services (see 6.3):

- Remote procedure call ASE
- Remote service interface ASE
- Real time cyclic ASE
- Real time acyclic ASE

7.3.1.3 Application Relationship class

7.3.1.3.1 Overview

7.3.1.3.1.1 General

The application layer offers the following application relationships:

- IO application relationship
- Supervisor application relationship
- Device access application relationship
- Implicit application relationship

7.3.1.3.1.2 IO application relationship

The IO AR reflects the application relationship (see Figure 35) between the application processes of one IO controller and one AP of an IO device or more IO devices in case input data are published. Furthermore, the IO AR model supports redundancy and dynamic reconfiguration by means of using primary and backup IO ARs.

The IO AR provides the application relationship for the following purposes:

- cyclic exchange of input data with the IO controller using
 - mandatory at least one BBUU CR to transmit input data with its provider status IOPS from the IO device to the IO controller and/or to transmit consumer status IOCS for output data from the IO device to the IO controller
 - and optionally one BBUU-OM CR to transmit input data with its provider status IOPS from the IO device to several IO controller and/or IO devices.
- cyclic exchange of output data with the IO controller using
 - mandatory at least one BBUU CR to transmit output data with its provider status IOPS from the IO controller to the IO device and/or to transmit consumer status IOCS for input data from the IO controller to the IO device
 - and optionally one BBUU-OM CR to transmit output data with its provider status IOPS from the IO controller to several IO controller and/or IO devices.
- mandatory acyclic data transfer to read and write record data for e.g. parameterization, configuration and diagnosis (QQCB-CO CR)
- mandatory transmission of alarm data from IO device to IO controller by means of Alarm CR (QQCB-CO CR).

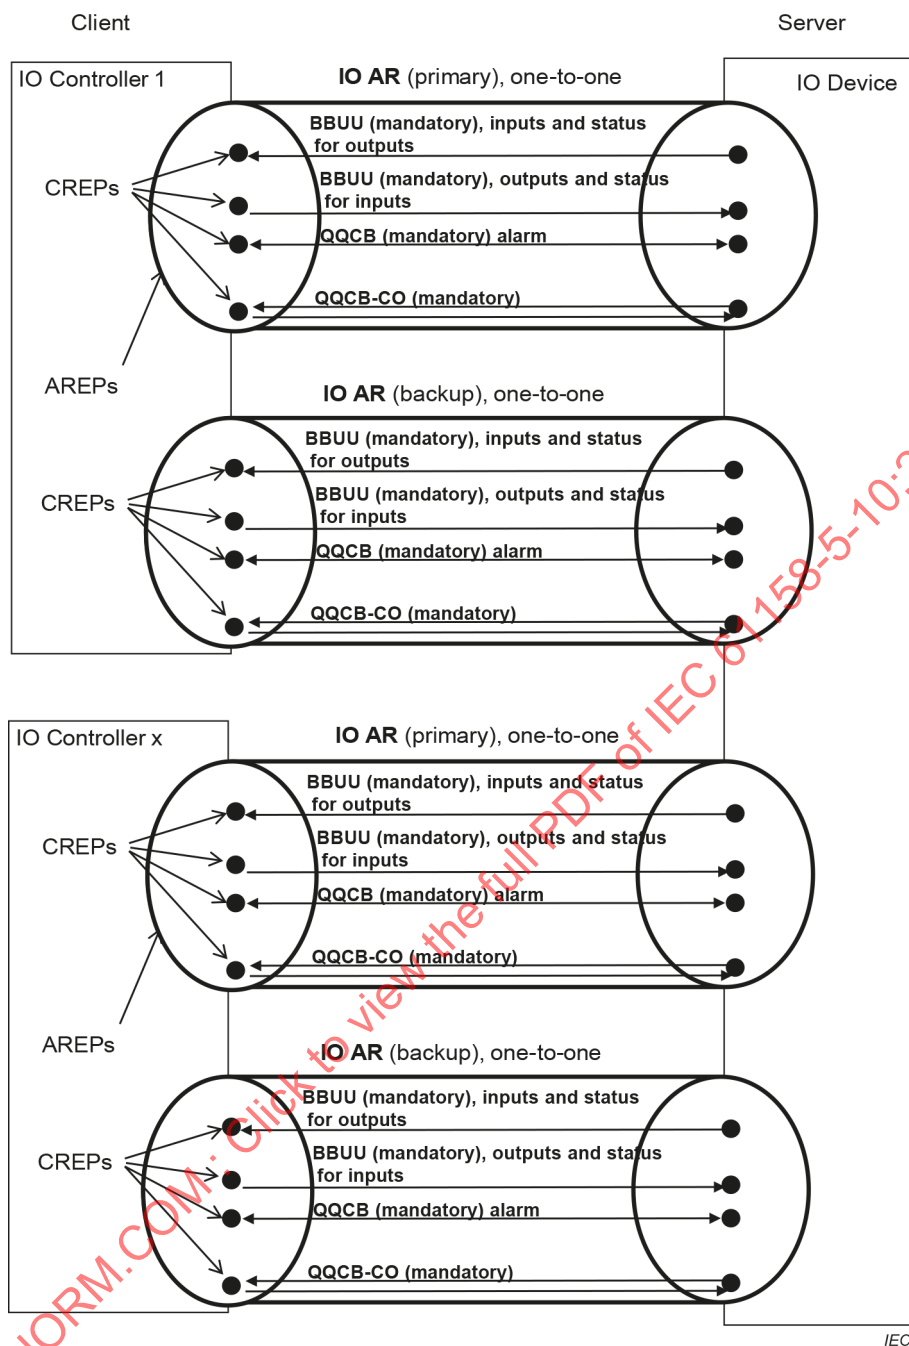


Figure 35 – Example IO application relationship (one-to-one)

Figure 36 illustrates the IO AR with one M CR for one to many uses.

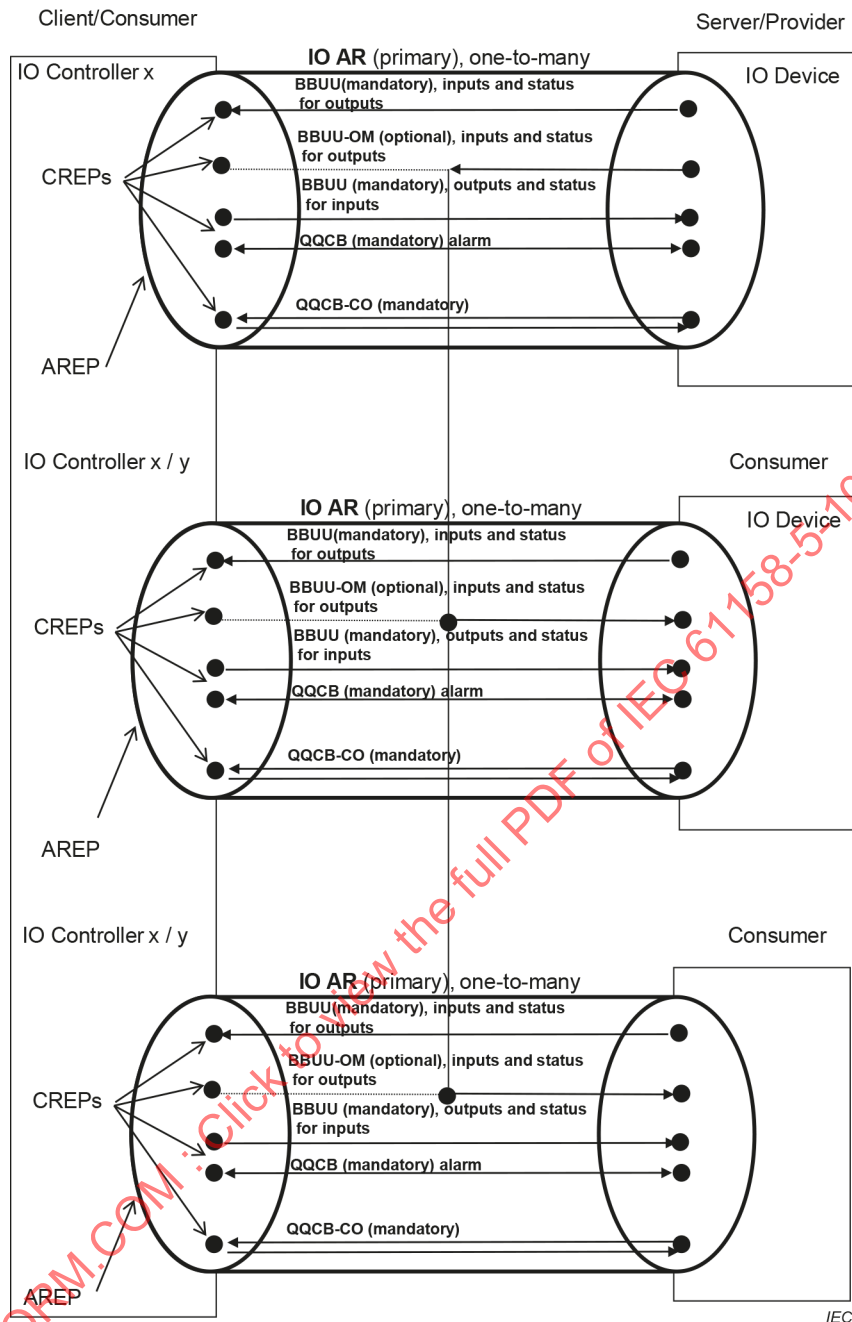


Figure 36 – Example IO application relationship one-to-many

The IO AR has two facets in relation to the startup behavior:

- Normal mode
- Fast startup mode, to shorten the time for connection establishment.

The IO device shall support the advanced startup mode and may support the legacy startup mode.

7.3.1.3.1.3 Supervisor application relationship

The supervisor AR is a specialized IO AR. This kind of AR allows to takeover a submodule from an IO AR; an IO AR may prevent this supervisor takeover with the attribute Takeover Allowed set to NOT_ALLOWED.

A supervisor AR allows parameterization and commissioning of submodules (including setting and getting IO data cyclically); e.g. for testing of wires. Additionally it allows to take over the submodules from an IO AR; e.g. to set input values manually.

7.3.1.3.1.4 Device access application relationship

The device access AR is an application relationship between the application processes of an IO supervisor and an IO device, for the following purposes:

- acyclic data transfer to read and write record data for e.g. parameterization, configuration and diagnosis (QQCB-CO CR).

The device access AR is an application relationship between the network management entity and devices, both assigned to the same NME domain, for the following purposes:

- acyclic data transfer to read and write record data for e.g. parameterization, configuration and diagnosis (QQCB-CO CR).

A device access AR allows read access to all record data. Furthermore the IO device application (the APO) decides whether write access of a DA AR is allowed, e.g. for parameterization of APOs.

7.3.1.3.1.5 Implicit application relationship

The implicit AR is an application relationship between the application processes of an IO supervisor and an IO device for the following purposes:

- acyclic data transfer to read record data for e.g. diagnosis (QQCB-CL CR).

An implicit AR allows read access to record data of submodules only. Write access is only allowed via explicit established IO AR, supervisor AR, or (if granted) device access AR.

Each IO device shall provide one implicit AR that allows processing at least one outstanding service all the time. It can be able to process more services in parallel according to local resources.

The endpoints AREP and CREP are unique and implicit addressed by local means. The AR UUID of the implicit AR shall be zero.

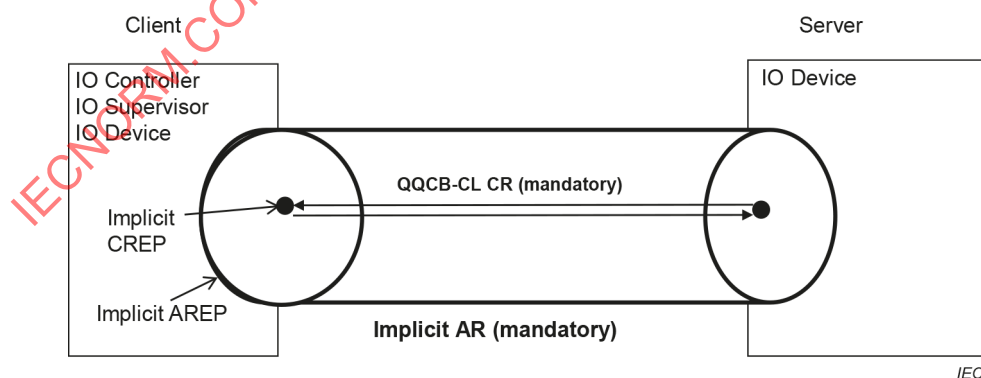


Figure 37 – Implicit application relationship

7.3.1.3.2 Relations

The services are bound to other services as shown in Table 115:

Table 115 – Binding application relationship services

Service	Binding	Usage
Connect (Device Access)	RPC::Connect RSI::Call(Connect)	Used by IO controller or IO supervisor
Release	RPC::Release RSI::Abort(Release)	Used by IO controller or IO supervisor
Prm Begin	RPC::Control RSI::Call(Control)	Used by IO controller or IO supervisor
Prm End	RPC::Control RSI::Call(Control)	Used by IO controller or IO supervisor
Application Ready	RPC::Control RSI::Notification	Used by IO device
Abort	AR::Alarm:Alarm Notification RSI::Abort(Abort)	Used by AR class
Local AR Abort	Local	Used by FAL
Local Set AR State	Local	Used by FAL
Local AR In Data	Local	Used by FAL
Read AR Data	RPC::Read RSI::Call(Read)	Used by IO controller or IO supervisor
Read Module Diff Block for one AR	RPC::Read RSI::Call(Read)	Used by IO controller or IO supervisor
Read Expected Fast Startup Data	RPC::Read RSI::Call(Read)	Used by IO controller or IO supervisor
Write Expected Fast Startup Data	RPC::Write RSI::Call(Write)	Used by IO controller or IO supervisor

7.3.1.3.3 Template

The Application Relationship object is described by the following template:

ASE: AR ASE
CLASS: Application Relationship
CLASS ID: not used
PARENT CLASS: TOP
ATTRIBUTES:

- 1 (m) Key Attribute: Implicit
- 2 (m) Attribute: List of ARs
- 2.1 (m) Attribute: AREP
- 2.2 (m) Attribute: ARType
- 2.3 (m) Attribute: AR UUID
- 2.4 (m) Attribute: Session Key
- 2.5 (m) Attribute: CM Initiator MAC Add
- 2.6 (m) Attribute: CM Responder MAC Add
- 2.7 (m) Attribute: CM Initiator Object UUID
- 2.8 (m) Attribute: AR Properties
- 2.8.1 (m) Attribute: State
- 2.8.1 (m) Attribute: Supervisor Takeover Allowed
- 2.8.2 (m) Attribute: Parameterization Server
- 2.8.3 (m) Attribute: Reject DCP setRequests

2.8.4	(m) Attribute:	Device Access
2.8.5	(m) Attribute:	Companion AR
2.8.6	(m) Attribute:	Acknowledge Companion AR
2.8.7	(m) Attribute:	Time Aware System
2.8.8	(m) Attribute:	Combined Object Container
2.8.9	(m) Attribute:	Startup Mode
2.8.10	(o) Attribute:	Pull Module Alarm Allowed
2.9	(m) Attribute:	CM Initiator Activity Timeout Factor
2.10	(m) Attribute:	Remote Application Ready Timeout
2.11	(m) Attribute:	Initiator UDP RT Port
2.12	(m) Attribute:	Responder UDP RT Port
2.13	(m) Attribute:	CM Initiator Station Name
2.14	(o) Attribute:	Prm Server Block
2.14.1	(m) Attribute:	Parameter Server Object UUID
2.14.2	(m) Attribute:	Parameter Server Properties
2.14.3	(m) Attribute:	CM Initiator Activity Timeout Factor
2.14.4	(m) Attribute:	Parameter Server Station Name
2.15	(m) Attribute:	AR RPC Server Block
2.15.1	(m) Attribute:	Initiator RPC Server Port
2.15.2	(m) Attribute:	Responder RPC Server Port
2.16	(o) Attribute:	IR Info Block
2.16.1	(m) Attribute:	IR Data UUID
2.16.2	(m) Attribute:	Number of IO CRs
2.16.3	(o) Attribute:	List of DFP IO CRs
2.16.3.1	(m) Attribute:	IO CR Reference
2.16.3.2	(m) Attribute:	Subframe Offset
2.16.3.3	(m) Attribute:	Subframe Data
2.16.3.3.1	(m) Attribute:	Subframe Position
2.16.3.3.2	(m) Attribute:	Subframe Data Length
2.17	(o) Attribute:	SR Info Block
2.17.1	(m) Attribute:	Redundancy Data Hold Factor
2.17.2	(m) Attribute:	SR Properties
2.17.2.1	(m) Attribute:	Input Valid on Backup AR
2.17.2.2	(m) Attribute:	Mode
2.18	(o) Attribute:	Redundancy Info
2.18.1	(m) Attribute:	End Point 1
2.18.2	(m) Attribute:	End Point 2
2.19	(o) Attribute:	List of AR Vendor Blocks
2.19.1	(m) Attribute:	AP Structure Identifier
2.19.2	(m) Attribute:	API
2.19.3	(m) Attribute:	Data Request
2.19.4	(m) Attribute:	Data Response
2.20	(o) Attribute:	RS Info Block
2.20.1	(m) Attribute:	RS Alarm Transport Mode
2.21	(o) Attribute:	Fast Startup Data
2.21.1	(o) Attribute:	FS Parameter Block
2.21.1.1	(m) Attribute:	FS Parameter Mode
2.21.1.2	(m) Attribute:	FS Parameter UUID
2.21.2	(o) Attribute:	Manufacturer Specific Fast Startup Data
2.22	(m) Attribute:	AR State
2.23	(m) Attribute:	Sync State
2.24	(o) Attribute:	Security Info Block

SERVICES:

1	(m) OpsService: Connect
2	(m) OpsService: Connect Device Access
3	(m) OpsService: Release
4	(o) OpsService: Prm Begin
5	(m) OpsService: Prm End
6	(m) OpsService: Application Ready
7	(m) OpsService: Abort
8	(m) OpsService: Local AR Abort
9	(m) OpsService: Local Set AR State
10	(m) OpsService: Local AR In Data
11	(m) OpsService: Read AR Data for one API
12	(m) OpsService: Read AR Data for device
13	(o) OpsService: Read Expected Fast Startup Data
14	(o) OpsService: Write Expected Fast Startup Data

7.3.1.3.4 Attributes

Implicit

The key attribute Implicit indicates that the AR object is implicitly addressed by the service.

List of ARs

This attribute list contains the following attributes:

AREP

This attribute is the local identifier for the AR. The attribute is used to uniquely identify a particular AR. It is also used for cross-referencing (e.g. communication relationships).

ARType

This attribute defines the type of the AR entry.

The ARType indicates the intended usage of the IO device.

- The usage by an IO controller in the context non-system-redundant and non-RT_CLASS_3 is indicated by IOCARSsingle.
- The usage by an IO controller in the context of RT_Class_3 is indicated by IOCARSsingle using RT_CLASS_3.
- The usage by an IO controller in the context of system redundancy or dynamic reconfiguration is indicated by IOCARSR.
- The usage by an IO supervisor is indicated using IOSAR.

Attribute type: Unsigned16

Allowed values: IOCARSsingle, IOCARSsingle using RT_CLASS_3, IOCARSR, IOSAR

AR UUID

This attribute defines the UUID of the AR entry which is provided by the engineering system or the CM Initiator.

Special Case: For an AR entry used in the context of ARType IOCAR_SR, several ARs build an AR set. In this case a part of the UUID indicates the positional number of the AR within the AR-Set and the number of AR resources to allocate at this communication endpoint. A further part of the AR UUID contains a signature over the configuration data records. The last part of the AR UUID contains a signature over the IO device's name of station.

For coding of the AR UUID see IEC 61158-6-10.

Attribute type: UUID

Session Key

This attribute shall be increased by one for each connect service by the CM Initiator and stored within the whole session. The CM Responder shall use this value for each subsequent response within this session.

NOTE The Session Key allows the CM Initiator to detect sequence errors during the establishment and release phase of an AR.

Attribute type: Unsigned16

CM Initiator MAC Add

This attribute contains the value of the IEEE Std 802.3 MAC address of the initiator (IO controller or IO supervisor).

Attribute type: OctetString[6]

CM Responder MAC Add

This attribute contains the value of the IEEE Std 802.3 MAC address of the IO device.

Attribute type: OctetString[6]

CM Initiator Object UUID

This attribute defines the UUID of the CM Initiator.

Attribute type: UUID

AR Properties

This attribute contains the following attributes:

State

This attribute contains the initial state of the AR.

Allowed values: ACTIVE

Supervisor Takeover Allowed

This attribute determines whether a supervisor takeover is allowed or disallowed for all submodules used by the AR.

Allowed values: ALLOWED, NOT_ALLOWED

Parameterization Server

This attribute contains the source for parameter data.

Allowed values: EXTERNAL_PRM_SERVER, CM_INITIATOR

Reject DCP setRequests

This attribute controls the DCP set request behavior. If one existing AR contains the value REJECTED, the set request confirms with the error Invalid state.

Allowed values: ACCEPTED, REJECTED

Device Access

This attribute contains the value for the access policy to record data objects.

Allowed values shall be according to Table 116.

Table 116 – Device Access

Value	Meaning
AR_CONTEXT	Only the submodules from the ExpectedSubmoduleBlock are accessible
DEVICE_CONTEXT	Submodule access over an IOSAR is controlled by IO device application

Companion AR

This attribute contains the value to identify companion ARs.

Allowed values shall be according to Table 117.

Table 117 – Companion AR

Value	Meaning
SINGLE_AR	RT_CLASS_1, RT_CLASS_2, RT_CLASS_3, or RT_CLASS_UDP connection establishment
FIRST_COMPANION_AR	For future use
SECOND_COMPANION_AR	For future use

Acknowledge Companion AR

This attribute contains whether acknowledge for companion ARs is needed.

Allowed values shall be according to Table 118.

Table 118 – Acknowledge Companion AR

Value	Meaning
UNACKNOWLEDGED	RT_CLASS_1, RT_CLASS_2, RT_CLASS_3, or RT_CLASS_UDP connection establishment
ACKNOWLEDGED	For future use.

Time Aware System

This attribute indicates the usage of the RT_CLASS_STREAM connection establishment.

Allowed values shall be according to Table 119.

Table 119 – Time Aware System

Value	Meaning	Constraint
NonTimeAware	RT_CLASS_1, RT_CLASS_2, RT_CLASS_3 or RT_CLASS_UDP connection establishment	–
TimeAware	RT_CLASS_STREAM connection establishment.	Startup Mode shall be Advanced. Combined Object Container shall be used

Combined Object Container

This attribute indicates the usage of the Combined Object Container, dependent from Startup Mode.

For allowed values and their meaning, see IEC 61158-6-10.

Startup Mode

This attribute indicates the startup mode of the application relation.

Allowed values shall be according to Table 120.

Table 120 – Startup Mode

Value	Meaning
Legacy	Recommended Compatibility mode for legacy nodes. RT_CLASS_3: The two provider mode for the RT_CLASS_3 startup is required. Compatibility mode for legacy nodes.
Advanced	Mandatory for this document. RT_CLASS_3: The one provider mode for the RT_CLASS_3 startup is required.

Pull Module Alarm Allowed

This optional attribute contains whether issuing the pull module alarm is allowed for the IO device.

Allowed values shall be according to Table 121.

Table 121 – Pull Module Alarm Allowed

Value	Meaning
NOT_ALLOWED	The AlarmType(=Pull) shall signal pulling of submodule and module. The subslot number zero shall code pulling of module in conjunction with AlarmType(=Pull).
ALLOWED	The AlarmType(=Pull) shall signal pulling of submodule. The Alarm-Type(=Pull module) shall signal pulling of module. The subslot number 0 to 0x9FFF shall code pulling of submodule in conjunction with AlarmType(=Pull).

The attribute shall not be set to ALLOWED on IO devices not supporting the feature “Pull Module Alarm”. Whether an IO device supports the feature is indicated by GSD.

CM Initiator Activity Timeout Factor

This attribute defines the CM Initiator Activity Timeout Factor for the connection establishment phase. It defines the timeout value for monitoring the time period between sending the Connection response service primitive and receiving a new service request from the IO controller. The IO device application stops this monitoring when the IO CRs start their operation. Further monitoring is done by the IO CR with the values based on the CR attributes Data Hold Factor.

Attribute type: Unsigned16

Allowed values: 100 to 1 000 using startup mode “Advanced”, 1 to 1 000 using startup mode “Legacy”

Time Base: 100 ms

Remote Application Ready Timeout

This attribute defines the time the IO controller uses to monitor the time between receiving the Prm End confirmation and Application Ready indication.

Attribute type: Unsigned16

Allowed value: 300

Time Base: 1 s

Initiator UDP RT Port

This attribute defines the UDP Port which is used for RT_CLASS_UDP communication.

If RT_CLASS_UDP is not used, the value shall be set to 0x8892, otherwise it is recommended to set the value to 0x8892.

Attribute type: Unsigned16

Allowed value: 0x0000 to 0xFFFF

Responder UDP RT Port

This attribute defines the UDP Port which is used for RT_CLASS_UDP communication.

If RT_CLASS_UDP is not used, the value shall be set to 0x8892, otherwise it is recommended to set the value to 0x8892.

Attribute type: Unsigned16

Allowed value: 0x0000 to 0xFFFF

CM Initiator Station Name

This attribute defines the name of the CM Initiator. The encoding shall be according to IEC 61158-6-10 (encoding of NameOfStationValue).

Attribute type: VisibleString[240]

Prm Server Block

This optional attribute contains the following attributes:

Parameter Server Object UUID

This attribute defines the UUID of the Parameter Server.

Attribute type: UUID

Parameter Server Properties

This attribute defines properties of the Parameter Server.

Attribute type: Unsigned32

Allowed value: 0 (reserved for future use)

CM Initiator Activity Timeout Factor

This attribute defines the CM Initiator Activity Timeout Factor for the connection establishment phase between the IO device and the Parameter Server.

Attribute type: Unsigned16

Allowed value: 1 to 1 000

Time Base: 100 ms

Parameter Server Station Name

This attribute defines the name of the Parameter Server.

The syntax of the attribute CM Initiator Station Name shall be applied.

Attribute type: VisibleString[240]

AR RPC Server Block

This attribute is used to allow direct access to the RPC servers and contains the following attributes:

Initiator RPC Server Port

This attribute defines the UDP Port which is used for CM Initiator RPC server. According to IANA, it is recommended to use a range from 0xC000 to 0xFFFF.

Attribute type: Unsigned16

Allowed value: 0x0000 to 0x03FF (optional), 0x0400 to 0xBFFF (usable), 0xC000 to 0xFFFF (recommended)

Responder RPC Server Port

This attribute defines the UDP Port which is used for CM Responder RPC server. According to IANA, it is recommended to use a range from 0xC000 to 0xFFFF.

Attribute type: Unsigned16

Allowed value: 0x0000 to 0x03FF (optional), 0x0400 to 0xBFFF (usable), 0xC000 to 0xFFFF (recommended)

IR Info Block

This optional attribute shall be used by the IO device to indicate whether the application relation uses DFP. The parameter is mandatory when using RT_CLASS_3 with advanced startup mode.

This attribute consists of the following attributes:

IR Data UUID

This attribute contains the unique identifier of the isochronous realtime project which is configured by the engineering system.

Attribute type: UUID

Number of IO CRs

This parameter contains the number of IO CRs related to DFP. The parameter shall be set to "0" if no DFP is used; otherwise to the number of IO CRs related to DFP. DFP is supported for one input CR and one output CR.

Attribute type: Unsigned16

Allowed value: 0, 2

List of DFP IO CRs

This list consists of the following attributes:

IO CR Reference

This parameter contains the reference to the related DFP IO CR.

Attribute type: Unsigned16

Subframe Offset

This parameter contains the Number of octets from the begin of the frame C_SDU to the begin of the own subframe C_SDU.

Attribute type: Unsigned16

Allowed values: 0x0000 to 0x059B

Subframe Data

This parameter consists of the following attributes:

Subframe Position

This attribute defines the position number of the own subframe.

Attribute type: Unsigned8

Allowed values: 0x01 to 0x7F

Subframe Data Length

This attribute defines the length of the own subframe.

Attribute type: Unsigned8

Allowed values: 0x01 to 0xFF

SR Info Block

This optional attribute defines the system redundancy parameters of the desired AR. This attribute is present only if the startup mode of the AR is set to “Advanced”.

It consists of the following attributes:

Redundancy Data Hold Factor

This attribute contains the time which shall be used to hold the outputs after loss of the primary application relation while waiting for an application relation to become primary.

Attribute type: Unsigned16

Time base: 1 ms

Allowed value: 0x0001 to 0x00C8 (optional), 0x00C9 to 0xFFFF (mandatory)

SR Properties

This attribute is used to define system redundancy behavior. It consists of the following attributes:

Input Valid on Backup AR

This attribute defines whether the IO controller awaits valid input data also on a backup AR.

Allowed values shall be according to Table 122.

Table 122 – Input Valid on Backup AR

Value	Meaning
NOT_VALID	Using Mode 0, the IO controller shall not evaluate the input data in a backup AR. Using Mode 1, the IO device shall mark the data as invalid using APDU_Status.DataStatus.DataValid == Invalid.
VALID	The device shall deliver valid input data in a backup AR

Mode

This attribute defines whether the IO controller supports the use of APDU_Status.DataStatus.DataValid for marking invalid data.

Allowed values shall be according to Table 123.

Table 123 – Mode

Value	Meaning
0	The IO controller does not support APDU_Status.DataStatus.DataValid == Invalid if input data is request as not valid.
1	The IO device shall use APDU_Status.DataStatus.DataValid == Invalid if input data is request as not valid.

Redundancy Info

This optional attribute indicates which of the two redundant interface modules hosts the primary AR. This attribute is present only if the startup mode of the AR is set to “advanced”. It consists of the following attributes:

End Point 1

This attribute contains the network interface, where the AR is hosted.

Allowed values: NEITHER_LEFT_NOR_ABOVE, LEFT_OR_ABOVE

End Point 2

This attribute contains the network interface, where the AR is hosted.

Allowed values: NEITHER_RIGHT_NOR_BELOW, RIGHT_OR_BELOW

List of AR Vendor Blocks

This optional attribute defines the vendor block info of the desired AR. This attribute is present only if the startup mode of the AR is set to “advanced”. The AR Vendor Block allows to transport additional information related to the AR. The definition allows (in spite of its name) to transport information specified within this specification (e.g. for common profiles), profile specific information and vendor specific information.

The key is the combination of API and APStructureIdentifier. Any possible combination may exist only once in this list.

It consists of the following attributes:

AP Structure Identifier

This attribute defines the structure of the attributes Data Request and Data Response.

Attribute type: Unsigned32

Allowed values shall be according to Table 124 and Table 125.

Table 124 – APStructureIdentifier with API := 0

Value (hexadecimal)	Meaning
0 – 0x7FFF	Vendor specific This key defines in combination with the key API the structure of Data in ARVendorBlockReq and ARVendorBlockRes.
0x8000	Extended identification rules
0x8001 – 0xFFFF	Administrative number This key defines in combination with the key API the structure of Data in ARVendorBlockReq and ARVendorBlockRes.

Table 125 – APStructureIdentifier with API != 0

Value (hexadecimal)	Meaning
0 – 0xFFFF	Administrative number for application profiles This key defines in combination with the key API the structure of Data in ARVendorBlockReq and ARVendorBlockRes.

API

This attribute defines to which application process the AR Vendor Block belongs to.

Attribute type: Unsigned32

Allowed values: 0 to 0xFFFFFFFF

Data Request

This attribute contains the vendor block request data

Attribute type: OctetString[512]

Data Response

This attribute contains the vendor block response data

Attribute type: OctetString[512]

RS Info Block

This optional attribute defines the reporting system parameters of the desired AR.

It consists of the following attributes:

RS Alarm Transport Mode

This attribute describes the way how RS events are transported from the IO device to the IO controller.

Allowed values: see Table 126

Table 126 – RS Alarm Transport Mode

Value	Meaning
0	Reporting system events need to be read by record
1	Reporting system events shall be forwarded to the IO controller using the alarm transport

Fast Startup Data

This optional attribute allows adjusting the fast startup behavior per individual application relation

It consists of the following attributes:

FS Parameter Block

This optional attribute contains the Fast Startup Parameter Data for the AR. It is composed of the following attributes:

FS Parameter Mode

This attribute contains the currently active Parameter Mode of the AR.

Attribute type: Unsigned32

Allowed values: ON, OFF

FS Parameter UUID

This attribute contains a UUID given by an engineering system to indicate unchanged parameter sets.

Attribute type: UUID

Manufacturer Specific Fast Startup Data

This optional attribute shall contain manufacturer specific fast startup data.

Attribute type: OctetString

AR State

This attribute defines the state of the AR.

This attribute influences the Write service behavior of the data record ASE (see 7.3.1.7.3 item a). If the attribute is set to BACKUP the Write service is ignored with Error code 1 set to “backup”.

It shall be set to PRIMARY, if it is the primary AR of an AR set or if it is a “standalone”.

For the first application relation having ARType IOCARSR and belonging to a new AR Set this attribute shall be set to FIRST up to ApplicationReady. After ApplicationReady the AR State of an AR having ARType IOCARSR is set similar to the state (i.e. to PRIMARY or BACKUP) as intended by the IO controller.

For ARs not having ARType IOCARSR the attribute is set to PRIMARY always.

Attribute type: Unsigned16

Allowed values: FIRST, BACKUP, PRIMARY

Default value: PRIMARY

SYNC State

This attribute is the local synchronization status for the desired AR. It shall only be present if synchronization is used.

Attribute type: Unsigned16

Allowed values: SYNCHRONIZED, SYNC_NOT_AVAILABLE

Security Info Block

This optional attribute is reserved for security.

7.3.1.3.5 Services**7.3.1.3.5.1 Connect****7.3.1.3.5.1.1 General**

Two types of connect service are supported:

- The Connect service (see 7.3.1.3.5.1.2) to establish an application relation for the use of an IO controller or an IO supervisor with status and control functions.
- The Connect Device Access service (see 7.3.1.3.5.1.3) to establish an application relation for the use of an IO supervisor without status and control functions.

Implicit AR does not require a Connect service.

7.3.1.3.5.1.2 Connect

The Connect service is used to establish an IO AR or Supervisor AR. The application process shall check the service parameter of the request/indication with the local parameter in its ASE objects (Real Identification attributes). In case of a service parameter mismatch (e.g. submodules are already used by other IO ARs) with the object attributes, the application process shall respond the mismatching modules within response. The client shall take the appropriate actions. If the establishment phase was successfully the service parameter are stored as attribute values in the Expected Identification class and the Communication Relationship class. The Connect service returns successfully even if there is a total mismatch of expected and real configuration.

Table 127 shows the parameters of the service.

In case of CLRPC, the service parameters IP Address and Object UUID are necessary to address the destination device. In case of RSI, the service parameters MAC address and Vendor ID, Device ID and Instance ID are necessary to address the destination device. The underlying model assumes that this information is provided by the AR information, which was loaded before on behalf of the client application. On the server side this information is also handled inside the application layer and does not appear as an explicit service parameter. The same model applies to Read services over the implicit AR.

Local implementation passes this service parameter to the application process.

The application of the server receiving the Connect indication service primitive shall check the service parameter. Especially, the parameter Module Ident Number, Submodule Ident Number and Submodule Data Length shall only be checked by the user application.

The “PDU checking rules” of IEC 61158-6-10 shall be applied. Application profiles like “dynamic configuration” or “high availability” should define additional PDU checking rules.

The resources for an application relation are allocated with the Connect of the application relation. This includes the resources for the application relation itself and the resources of all necessary CRs (IOCR, Alarm-CR, M-CR, DR-CR). The resources are freed when the application relation is terminated.

For the first application relation having ARType IOCARSR and belonging to a new AR Set (as indicated by the ARUUID; for details, see IEC 61158-6-10), the resources of the complete AR Set are allocated; i.e. for all ARs of the complete AR Set. The resources of an application relation belonging to the same AR Set established at some later point are assigned from this allocated memory. The resources of the AR Set are freed when the last application relation of the AR Set is terminated.

In case of a RT_Class_3 AR with Startup Mode Advanced, the IR Info Block is mandatory. In case of a SR AR, the SR Info Block is mandatory.

If the application relation cannot be established due to scarce resources, the Connect is rejected with an “out of AR/ARset resources” error.

If an application relation contains PDev submodules which are already owned by another application relation, the Connect should be rejected with an “PDev already owned” or, in conjunction with Time Aware System, an “PDev ownership discrepancy” error.

The send clock factors of all application relations established in parallel to a particular IO device shall be the same. Thus the send clock factor of the IO device is determined by the application relation first established. The Connect of a succeeding application relation having a different send clock factor is rejected with an error for the corresponding block / parameter.

Table 127 – Connect

Parameter name	req	ind	rsp	cnf
Argument	M	M(=)		
AREP	M	M(=)		
AR Parameter Block	M	M(=)		
ARType	M	M(=)		
AR UUID	M	M(=)		
Session Key	M	M(=)		
CM Initiator Mac Add	M	M(=)		
CM Initiator Object UUID	M	M(=)		
AR Properties	M	M(=)		
CM Initiator Activity Timeout Factor	M	M(=)		
Initiator UDP RT Port	M	M(=)		
CM Initiator Station Name	M	M(=)		
List of IO CR Parameter Blocks	M	M(=)		
IO CR type	M	M(=)		
IO CR Reference	M	M(=)		
LT Field	M	M(=)		
IO CR Properties	M	M(=)		
C_SDU Length	M	M(=)		
Frame ID	M	M(=)		
Send Clock Factor	M	M(=)		
Reduction Ratio	M	M(=)		
Phase	M	M(=)		
Sequence	M	M(=)		
Frame Send Offset	M	M(=)		
Data Hold Factor	M	M(=)		
IO CR Tag Header	M	M(=)		
IO CR Multicast MAC Add	M	M(=)		
List Of APIs	M	M(=)		
API	M	M(=)		
List of Related IO Data Objects	M	M(=)		
Slot Number	M	M(=)		
Subslot Number	M	M(=)		
IO Data Object Frame Offset	M	M(=)		
List of Related IOCS	M	M(=)		
Slot Number	M	M(=)		
Subslot Number	M	M(=)		
IOCS Frame Offset	M	M(=)		
Alarm CR Parameter Block	M	M(=)		
LT Field	M	M(=)		
Alarm CR Properties	M	M(=)		
RTA Timeout Factor	M	M(=)		
RTA Retries	M	M(=)		
Local Alarm Reference	M	M(=)		
Max Alarm Data Length	M	M(=)		

Parameter name	req	ind	rsp	cnf
Alarm CR Tag Header High	M	M(=)		
Alarm CR Tag Header Low	M	M(=)		
List of Expected Submodule Blocks	U	U(=)		
List of Related APIs	M	M(=)		
API	M	M(=)		
Slot Number	M	M(=)		
Module Ident Number	M	M(=)		
Module Properties	M	M(=)		
List of Submodules	M	M(=)		
Subslot Number	M	M(=)		
Submodule Ident Number	M	M(=)		
Submodule Properties	M	M(=)		
List of Data Descriptions	M	M(=)		
Data Description	M	M(=)		
Submodule Data Length	M	M(=)		
Length IOPS	M	M(=)		
Length IOCS	M	M(=)		
Prm Server Block	U	U(=)		
Parameter Server Object UUID	M	M(=)		
Parameter Server Properties	M	M(=)		
CM Initiator Activity Timeout Factor	M	M(=)		
Parameter Server Station Name	M	M(=)		
List of Multicast CR Blocks	U	U(=)		
IO CR Reference	M	M(=)		
Address Resolution Properties	M	M(=)		
MCI Timeout Factor	M	M(=)		
Provider Station Name	M	M(=)		
AR RPC Server Block	U	U(=)		
Initiator RPC Server Port	M	M(=)		
IR Info Block	U	U(=)		
IR Data UUID	M	M(=)		
Number of IO CRs	M	M(=)		
List of Subframe Data	U	U(=)		
IO CR Reference	M	M(=)		
Subframe Offset	M	M(=)		
Subframe Data	M	M(=)		
SR Info Block	U	U(=)		
Redundancy Data Hold Factor	M	M(=)		
SR Properties	M	M(=)		
Input Valid on Backup AR	M	M(=)		
Mode	M	M(=)		
AR Server Block	U	U(=)		
CM Initiator Station Name	M	M(=)		
List of AR Vendor Block Requests	U	U(=)		
AP Structure Identifier	M	M(=)		

Parameter name	req	ind	rsp	cnf
API	M	M(=)		
Data Request	M	M(=)		
RS Info Block	U	U(=)		
RS Alarm Transport Mode	M	M(=)		
AR FSU Block	U	U(=)		
FS Parameter Block	U	U(=)		
FS Parameter Mode	M	M(=)		
FS Parameter UUID	M	M(=)		
Manufacturer Specific Fast Startup Data	U	U(=)		
Security Info Block	U	U(=)		
Result(+)			S	S(=)
AREP			M	M(=)
AR Response Block			M	M(=)
ARType			M	M(=)
AR UUID			M	M(=)
Session Key			M	M(=)
CM Responder MAC Add			M	M(=)
Responder UDP RT Port			M	M(=)
List of IO CR Response Blocks			M	M(=)
IO CR type			M	M(=)
IO CR Reference			M	M(=)
Frame ID			M	M(=)
Alarm CR Response Block			M	M(=)
Local Alarm Reference			M	M(=)
Max Alarm Data Length			M	M(=)
Module Diff Block			C	C(=)
List of APIs			M	M(=)
API			M	M(=)
List of Modules			M	M(=)
Slot Number			M	M(=)
Module Ident Number			M	M(=)
Module State			M	M(=)
List of Submodules			M	M(=)
Subslot Number			M	M(=)
Submodule Ident Number			M	M(=)
Submodule State			M	M(=)
AR RPC Server Block			C	C(=)
Responder RPC Server Port			M	M(=)
List of AR Vendor Block Responses			C	C(=)
AP Structure Identifier			M	M(=)
API			M	M(=)
Data Response			M	M(=)
Result(-)			S	S(=)

Parameter name	req	ind	rsp	cnf
AREP			M	M(=)
PNIO Status			M	M(=)
Add Data 1			M	M(=)
Add Data 2			M	M(=)

Argument

The argument shall convey the service specific parameters of the service request.

AREP

This parameter is the local identifier for the desired AR.

AR Parameter Block

The parameter contains the attributes as in Table 127 (parameter description in 7.3.1.3.4).

List of IO CR Parameter Blocks

The parameter list contains the attributes as in Table 127 (parameter description in 7.3.1.4.4).

Alarm CR Parameter Block

The parameter contains the attributes as in Table 127 (parameter description in 7.3.1.6.4).

List of Expected Submodule Blocks

The parameter list contains the attributes as in Table 127 (parameter description in 7.3.1.5.4).

NOTE The list includes only “existing” submodules but does not include “empty” subslots.

Prm Server Block

The parameter contains the attributes as in Table 127 (parameter description in 7.3.1.3.4).

List of Multicast CR Block

The list contains the attributes as in Table 127 (parameter description in 7.3.1.4.4).

AR RPC Server Block

The parameter contains the attributes as in Table 127 (parameter description in 7.3.1.3.4).

IR Info Block

The parameter contains the attributes as in Table 127 (parameter description in 7.3.1.3.4).

SR Info Block

The parameter contains the attributes as in Table 127 (parameter description in 7.3.1.3.4).

AR Server Block

This optional attribute shall be present only if the startup mode of the AR is advanced. It allows to check, whether the device responding to the connect service is the expected one by checking its name. It consists of the following attributes:

CM Responder Station Name

This parameter contains the name of the CM responder.

The motivation for this block is the phase between a DCP::Identify(name) and the subsequent connect to the IP address of the device. If in-between the name of the device has been modified e.g. by DCP::Set, the connect would not detect this situation. With this block the IO controller is able to check for name == CM responder station name. If unequal, the IO controller shall then abort the connect.

List of AR Vendor Block Requests

The parameter contains the attributes as in Table 127 (parameter description in 7.3.1.3.4).

RS Info Block

The parameter contains the attributes as in Table 127 (parameter description in 7.3.1.3.4).

AR FSU Block

The parameter contains the attributes as in Table 127 (parameter description in 7.3.1.3.4).

Security Info Block

The optional parameter is reserved for security.

Result(+)

This parameter indicates that the service request succeeded. It shall only contain IO Data Response Block parameter for entries that differ from the requested parameter values.

AR Response Block

The parameter contains the attributes as in Table 127 (parameter description in 7.3.1.3.4).

List of IO CR Response Blocks

The parameter list contains the attributes as in Table 127 (parameter description in 7.3.1.4.4).

Alarm CR Response Block

The parameter contains the attributes as in Table 127 (parameter description in 7.3.1.6.4).

Module Diff Block

The parameter contains the Module Diff Block; see 7.3.1.5.6.2 for details.

AR RPC Server Block

The parameter contains the attributes as in Table 127 (parameter description in 7.3.1.3.4).

List of AR Vendor Block Response

The parameter contains the attributes as in Table 127 (parameter description in 7.3.1.3.4).

Result(-)

This parameter indicates that the service request failed.

PNIO Status

This parameter shall contain the actual error code according to the protocol definition.

Attribute type: Unsigned32

Add Data 1

The parameter Add Data is API specific (profile). The value 0 shall be transmitted if no additional data 1 is defined.

Attribute type: Unsigned16

Add Data 1 can be used by profile specifications to transmit specific error messages.

Add Data 2

The parameter Add Data is user specific. The value 0 shall be transmitted if no additional data 2 is defined.

Attribute type: Unsigned16

Add Data 2 can be used by device vendors to transmit specific error messages.

7.3.1.3.5.1.3 Connect Device Access

The Connect service is used to establish a Device Access AR.

Table 128 shows the parameters of the service.

In case of CLRPC, the service parameters IP Address and Object UUID are necessary to address the destination device. In case of RSI, the service parameters MAC address and Vendor ID, Device ID and Instance ID are necessary to address the destination device. The underlying model assumes that this information is provided by the AR information, which was loaded before on behalf of the client application. On server side this information is also handled inside the application layer and does not appear as an explicit service parameter. Local implementation passes this service parameter to the application process. The same model applies to Read services over the implicit AR.

The application of the server receiving the Connect indication service primitive shall check the service parameter.

Table 128 – Connect Device Access

Parameter name	req	ind	rsp	cnf
Argument	M	M(=)		
AREP	M	M(=)		
AR Parameter Block	M	M(=)		
ARType	M	M(=)		
AR UUID	M	M(=)		
Session Key	M	M(=)		
CM Initiator MAC Add	M	M(=)		
CM Initiator Object UUID	M	M(=)		
AR Properties	M	M(=)		
CM Initiator Activity Timeout Factor	M	M(=)		
Initiator UDP RT Port	M	M(=)		
CM Initiator Station Name	M	M(=)		
Security Info Block	U	U(=)		
Result(+)			S	S(=)
AREP			M	M(=)
AR Response Block			M	M(=)
ARType			M	M(=)
AR UUID			M	M(=)
Session Key			M	M(=)
CM Responder MAC Add			M	M(=)
Responder UDP RT Port			M	M(=)
Result(-)			S	S(=)
AREP			M	M(=)
PNIO Status			M	M(=)
Add Data 1			M	M(=)
Add Data 2			M	M(=)

Argument

The argument shall convey the service specific parameters of the service request.

AREP

This parameter is the local identifier for the desired AR.

AR Parameter Block

The parameter contains the attributes as in Table 128 (parameter description in 7.3.1.3.4).

Security Info Block

The optional parameter is reserved for security.

Result(+)

This parameter indicates that the service request succeeded. It shall only contain IO Data Response Block parameter for entries that differ from the requested parameter values.

AR Response Block

The parameter contains the attributes as in Table 128 (parameter description in 7.3.1.3.4)

Result(-)

This parameter indicates that the service request failed.

PNIO Status

This parameter shall contain the actual error code according to the protocol definition.

Attribute type: Unsigned32

Add Data 1

The parameter Add Data is API specific (profile). The value 0 shall be transmitted if no additional data 1 is defined.

Attribute type: Unsigned 16

Add Data 1 can be used by profile specifications to transmit specific error messages.

Add Data 2

The parameter Add Data is user specific. The value 0 shall be transmitted if no additional data 2 is defined.

Attribute type: Unsigned 16

Add Data 2 can be used by device vendors to transmit specific error messages.

7.3.1.3.5.1.4 Secure Connect

This service is reserved for security.

7.3.1.3.5.2 Release

This service shall be used by an IO controller or IO supervisor to close an IO AR or Supervisor AR.

Table 129 shows the parameters of the service.

Table 129 – Release

Parameter name	req	ind	rsp	cnf
Argument	M	M(=)		
AREP	M	M(=)		
Session Key	M	M(=)		
Result(+)			S	S(=)
AREP			M	M(=)
Session Key			M	M(=)
Result(-)			S	S(=)
AREP			M	M(=)
PNIO Status			M	M(=)
Add Data 1			M	M(=)
Add Data 2			M	M(=)

Argument

The argument shall convey the service specific parameters of the service request.

AREP

This parameter is the local identifier for the desired AR.

Session Key

The parameter is described in 7.3.1.3.4.

Result(+)

This parameter indicates that the service request succeeded.

Result(-)

This parameter indicates that the service request failed.

PNIO Status

This parameter shall contain the actual error code according to the protocol definition.

Attribute type: Unsigned32

Add Data 1

The parameter Add Data is API specific (profile). The value 0 shall be transmitted if no additional data 1 is defined.

Attribute type: Unsigned 16

Add Data 1 can be used by profile specifications to transmit specific error messages.

Add Data 2

The parameter Add Data is user specific. The value 0 shall be transmitted if no additional data 2 is defined.

Attribute type: Unsigned 16

Add Data 2 can be used by device vendors to transmit specific error messages.

7.3.1.3.5.3 Prm Begin

This Service allows an acknowledged parameterization in the context of an established AR.

The service Prm Begin is oriented one-to-one and onto an application relation indicated via the parameter AREP. Issuing the service Prm Begin is allowed at any time after the IN-DATA notification for the desired AR (after the Application Ready.rsp). The service Prm Begin allows starting an acknowledged re-parameterization sequence for the submodules indicated via the List of Submodules.

All submodules indicated are parameterized within the parameterization sequence; during the parameterization sequence the IO controller delivers a consistent set of parameters by issuing IODWrite.req or IODWriteMultiple.req services. The IO controller completes parameter delivery by issuing the Prm End service. The absence of parameters for a submodule to be parameterized means that the submodule shall use the default parameters.

The parameterization sequence is finished by the IO device issuing Application Ready to the IO controller, again narrowed onto the submodules contained in the parameterization sequence and containing a Module Diff Block oriented to the submodules indicated in the Prm Begin Request. After this Application Ready the submodules are again usable for the IO controller.

For the IOxS of the affected submodules the rules for the “normal” startup parameterization sequence apply: They are set to “Good” by the IO device as soon as the parameterization of the appropriate submodule is finished and the submodule is able to deliver or receive data according to the new parameters.

The list of submodules shall list the affected submodules:

- Variant a: Prm Begin request contains all submodules of the expected identification
- Variant b: Prm Begin request contains only one submodule of the expected identification (in case of CoC only the access point)

If the list of submodules contains submodules which are not contained in the expected submodule list of the AR-Connect, or the list of submodules does not match variant a or variant b, the device rejects the service related to the PDU checking rules (see IEC 61158-6-10).

After a device receives a Prm Begin request, an affected submodule shall not issue an alarm until the corresponding Application Ready.rsp; it shall store those alarms and issue them after the corresponding Application Ready.

Already issued Alarms except Plug and Release shall be acknowledged by the IO controller. To get into a consistent state the IO device waits with its Application Ready until all outstanding alarms are acknowledged.

Plug and Release shall be stored by the IO controller. They shall be processed and acknowledged after the Application Ready.

If a device does not support the service Prm Begin, then it shall acknowledge with protocol error and abort the AR.

Table 130 shows the parameters of the service.

Table 130 – Prm Begin

Parameter name	req	ind	rsp	cnf
Argument	M	M(=)		
AREP	M	M(=)		
Session Key	M	M(=)		
List of Submodules	U	U(=)		
API	M	M(=)		
Slot Number	M	M(=)		
Subslot Number	M	M(=)		
Result(+)			S	S(=)
AREP			M	M(=)
Session Key			M	M(=)
Module Diff Block			C	C(=)
List of APIs			M	M(=)
API			M	M(=)
List of Modules			M	M(=)
Slot Number			M	M(=)
Module Ident Number			M	M(=)
Module State			M	M(=)
List of Submodules			M	M(=)
Subslot Number			M	M(=)
Submodule Ident Number			M	M(=)
Submodule State			M	M(=)
Result(-)			S	S(=)
AREP			M	M(=)
PNIO Status			M	M(=)
Add Data 1			M	M(=)
Add Data 2			M	M(=)

Argument

The argument shall convey the service specific parameters of the service request.

AREP

This parameter is the local identifier for the desired AR.

Session Key

The parameter is described in 7.3.1.3.4.

List of Submodules

The parameter list contains the attributes as in Table 130 (parameter description in 7.3.1.3.5.3).

Result(+)

This parameter indicates that the service request succeeded.

Module Diff Block

The parameter contains the Module Diff Block; see 7.3.1.5.6.2 for details.

Result(-)

This parameter indicates that the service request failed.

PNIO Status

This parameter shall contain the actual error code according to the protocol definition.

Attribute type: Unsigned32

Add Data 1

The parameter Add Data is API specific (profile). The value 0 shall be transmitted if no additional data 1 is defined.

Attribute type: Unsigned 16

Add Data 1 can be used by profile specifications to transmit specific error messages.

Add Data 2

The parameter Add Data is user specific. The value 0 shall be transmitted if no additional data 2 is defined.

Attribute type: Unsigned 16

Add Data 2 can be used by device vendors to transmit specific error messages.

7.3.1.3.5.4 Prm End

This service shall be used by the client (IO controller or IO Parameter server) to inform the IO device that all parameters are written by means of the Write service of the Record Data Class in AR ASE.

There is a special case if the AR State is set to BACKUP, for details, see 7.3.1.5.6.4.

Table 131 shows the parameters of the service.

Table 131 – Prm End

Parameter name	req	ind	rsp	cnf
Argument	M	M(=)		
AREP	M	M(=)		
Session Key	M	M(=)		
Alarm Sequence Number	U	U(=)		
Result(+)			S	S(=)
AREP			M	M(=)
Session Key			M	M(=)
Alarm Sequence Number			C	C(=)
Result(-)			S	S(=)
AREP			M	M(=)
PNIO Status			M	M(=)
Add Data 1			M	M(=)
Add Data 2			M	M(=)

Argument

The argument shall convey the service specific parameters of the service request.

AREP

This parameter is the local identifier for the desired AR.

Session Key

The parameter is described in 7.3.1.3.4.

Alarm Sequence Number

This parameter shall only be used in conjunction with a plug or pull alarm. The value shall be taken from the Alarm Notification (see Sequence Number as defined in 7.3.1.6.4).

Result(+)

This parameter indicates that the service request succeeded. It has the same parameter as the request.

Result(-)

This parameter indicates that the service request failed.

PNIO Status

This parameter shall contain the actual error code according to the protocol definition.

Attribute type: Unsigned32

Add Data 1

The parameter Add Data is API specific (profile). The value 0 shall be transmitted if no additional data 1 is defined.

Attribute type: Unsigned 16

Add Data 1 can be used by profile specifications to transmit specific error messages.

Add Data 2

The parameter Add Data is user specific. The value 0 shall be transmitted if no additional data 2 is defined.

Attribute type: Unsigned 16

Add Data 2 can be used by device vendors to transmit specific error messages.

7.3.1.3.5.5 Application Ready

By this service the user of an IO device indicates to the IO controller that the parameterization is applied to the APOs.

This service is used in the context of

- Parameterization driven by application relation establishment (Connect, Prm End Sequence),
- Parameterization driven by a plug/released of a submodule (Plug, Prm End) (Released, Prm End), and
- Parameterization driven by a Prm Begin / Prm End sequence.

Table 132 shows the parameters of the service.

Table 132 – Application Ready

Parameter name	req	ind	rsp	cnf
Argument	M	M(=)		
AREP	M	M(=)		
Session Key	M	M(=)		
Alarm Sequence Number	U	U(=)		
Module Diff Block	U	U(=)		
List of APIs	M	M(=)		
API	M	M(=)		
List of Modules	M	M(=)		
Slot Number	M	M(=)		
Module Ident Number	M	M(=)		
Module State	M	M(=)		
List of Submodules	M	M(=)		
Subslot Number	M	M(=)		
Submodule Ident Number	M	M(=)		
Submodule State	M	M(=)		
Result(+)			S	S(=)
AREP			M	M(=)
Session Key			M	M(=)
Alarm Sequence Number			C	C(=)
Result(-)			S	S(=)
AREP			M	M(=)
PNIO Status			M	M(=)
Add Data 1			M	M(=)
Add Data 2			M	M(=)

Argument

The argument shall convey the service specific parameters of the service request.

AREP

This parameter is the local identifier for the desired AR.

Session Key

The parameter is described in 7.3.1.3.4.

Alarm Sequence Number

This parameter shall only be used in conjunction with parameterization driven by a plug/release of a submodule. The value shall be taken from the Plug/Released Alarm Notification (see Sequence Number as defined in 7.3.1.6.4).

Module Diff Block

The parameter contains the Module Diff Block; see 7.3.1.5.6.2 for details.

Result(+)

This parameter indicates that the service request succeeded.

Result(-)

This parameter indicates that the service request failed.

PNIO Status

This parameter shall contain the actual error code according to the protocol definition.

Attribute type: Unsigned32

Add Data 1

The parameter Add Data is API specific (profile). The value 0 shall be transmitted if no additional data 1 is defined.

Attribute type: Unsigned 16

Add Data 1 can be used by profile specifications to transmit specific error messages.

Add Data 2

The parameter Add Data is user specific. The value 0 shall be transmitted if no additional data 2 is defined.

Attribute type: Unsigned 16

Add Data 2 can be used by device vendors to transmit specific error messages.

7.3.1.3.5.6 Abort

This service shall be used by an IO device to close an IO or Supervisor AR in case of a serious error when operation is no longer possible. Table 133 shows the parameters of the service.

Table 133 – Abort

Parameter name	req
Argument	M
AREP	M

Argument

The argument shall convey the service specific parameters of the service request.

AREP

This parameter is the local identifier for the desired AR.

7.3.1.3.5.7 Local AR Abort

This service shall be used by an IO device or an IO or Supervisor AR to indicate a local abort of an existing AR. Table 134 shows the parameters of the service.

Table 134 – Local AR Abort

Parameter name	req	ind	cnf
Argument	M(=)	M(=)	M(=)
AREP	M(=)	M(=)	M(=)
Session Key	M(=)	M(=)	M(=)

Argument

The argument shall convey the service specific parameters of the service request.

AREP

This parameter is the local identifier for the desired AR.

Session Key

The parameter is described in 7.3.1.3.4.

7.3.1.3.5.8 Local Set AR State

This service shall be used to set the state of the addressed AR. Table 135 shows the parameters of the service.

Table 135 – Local Set AR State

Parameter name	req	cnf
Argument	M	M(=)
AREP	M	M(=)
AR State	M	

Argument

The argument shall convey the service specific parameters of the service request.

AREP

This parameter is the local identifier for the desired AR.

AR State

This parameter contains the value of the corresponding attribute of the ASE object.

7.3.1.3.5.9 Local AR In Data

This service indicated that the AR is in state “IN DATA”. The next New Data_ind () after the “Local AR In Data.ind” contains the first valid data from the IO controller.

Table 136 shows the parameters of the service.

Table 136 – Local AR In Data

Parameter name	ind
Argument	M(=)
AREP	M(=)

Argument

The argument shall convey the service specific parameters of the service request.

AREP

This parameter is the local identifier for the desired AR.

7.3.1.3.5.10 Read AR Data

7.3.1.3.5.10.1 General

All services to read the AR Data object have the same parameter layout. To ease the description the parameter is thus described once upfront to the services. The services themselves act as a filter for the information from the AR ASE.

The parameter structure and the meaning of the parameters is the same as described in the read service (see 7.3.1.7.6.1.1); for the error code hierarchy, of the record data object 7.3.1.7.7.1 applies.

The parameter Data has a service specific structure and meaning. Table 137 shows the specific elements of Data for this service. Note that dependent on the particular service described below only parts of the information are returned.

Table 137 – Data elements of Read AR Data

Parameter name	Service specific elements	rsp	cnf
Data	List of ARs	M	M(=)
	AR UUID	M	M(=)
	CM Initiator Object UUID	M	M(=)
	Parameter Server Object UUID	M	M(=)
	AR Properties	M	M(=)
	ARType	M	M(=)
	Local Alarm Reference	M	M(=)
	Remote Alarm Reference	M	M(=)
	Initiator UDP RT Port	M	M(=)
	Responder UDP RT Port	M	M(=)
	CM Initiator Station Name Length	M	M(=)
	CM Initiator Station Name	M	M(=)
	Parameter Server Station Name Length	M	M(=)
	Parameter Server Station Name	C	C(=)
	Number of IOCRs	M	M(=)
	List of IOCRs	M	M(=)
	IO CR Properties	M	M(=)
	IO CR type	M	M(=)
	Frame ID	M	M(=)
	APDU Status	M	M(=)
	Number of APIs	M	M(=)
	List of APIs	M	M(=)
	API	M	M(=)
	IR Info Block	C	C(=)
	IR Data UUID	M	M(=)
	Number of IO CRs	M	M(=)
	List of Subframe Data	C	C(=)
	Frame ID	M	M(=)
	Subframe Offset	M	M(=)
	Subframe Data	M	M(=)
	SR Info Block	C	C(=)
	Redundancy Data Hold Factor	M	M(=)
	SR Properties	M	M(=)
	Input Valid on Backup AR	M	M(=)
	Mode	M	M(=)
	List of AR Vendor Block Requests	C	C(=)
	AP Structure Identifier	M	M(=)
	API	M	M(=)
	Data Request	M	M(=)
	List of AR Vendor Block Responses	C	C(=)
	AP Structure Identifier	M	M(=)
	API	M	M(=)
	Data Response	M	M(=)
	AR FSU Block	C	C(=)

Parameter name	Service specific elements	rsp	cnf
	FS Parameter Block	C	CU(=)
	Mode	M	M(=)
	FS Parameter UUID	M	M(=)
	Fast Startup Block	C	C(=)
	Data	M	M(=)
	SRL Data	C	C(=)
	Redundancy Info	M	M(=)
	End Point 1	M	M(=)
	End Point 2	M	M(=)

Data

This parameter contains the values of the object which has been read.

List of ARs

The parameter contains the attributes as in Table 137.

7.3.1.3.5.10.2 Read AR Data for one API

This service allows reading AR Data using a record data object with API scope (see 7.3.1.7.1).

The filter API filters the ARs contained in the response, i.e. having at least one submodule belonging to this API in their expected identification. However, the response contains the unmodified ARData, e.g. the List of APIs contains all APIs requested by this application relationship. If there are only device access ARs or no AR at all, an empty record data object with length 0 is returned.

The parameter structure and the meaning of the parameters is the same as described in the read service (see 7.3.1.7.6.1.1); for the error code hierarchy, 7.3.1.7.7.1 applies. The parameter Data has a service specific structure and meaning; see Table 137 for its structure.

The AR context is of no meaning for this service; see 7.3.1.7.7.4 for details.

7.3.1.3.5.10.3 Read AR Data for device

This service allows reading AR Data using a record data object with device scope (see 7.3.1.7.1).

The parameter structure and the meaning of the parameters is the same as described in the read service (see 7.3.1.7.6.1.1); for the error code hierarchy, 7.3.1.7.7.1 applies. The parameter Data has a service specific structure and meaning; see Table 137 for its structure.

If there are no AR at all, an empty record data object with length 0 is returned.

The AR context is of no meaning for this service; see 7.3.1.7.7.4 for details.

7.3.1.3.5.11 Read Expected Fast Startup Data

This service allows reading Expected Fast Startup Data using a record data object with AR scope (see 7.3.1.7.1).

This service is only supported for ARs in legacy startup mode; the service is substituted for ARs in advanced startup mode by the AR FSU Block within the connect service.

The parameter structure and the meaning of the parameters is the same as described in the read service (see 7.3.1.7.6.1.1); for the error code hierarchy, 7.3.1.7.7.1 applies. The parameter Data has a service specific structure and meaning; see Table 138 for its structure.

The AR context is needed for this service; see 7.3.1.7.7.4 for details.

Table 138 – Data elements of Expected Fast Startup Data

Parameter name	Service specific elements	rsp	cnf
Data	Expected Fast Startup Data	M	M(=)
	FS Parameter Block	C	C(=)
	FS Parameter Mode	M	M(=)
	FS Parameter UUID	M	M(=)
	Manufacturer Specific Fast Startup Data	C	C(=)

Data

The parameter contains the attributes as in Table 138 (parameter description in 7.3.1.3.4).

7.3.1.3.5.12 Write Expected Fast Startup Data

This service allows writing Expected Fast Startup Data using a record data object with AR scope (see 7.3.1.7.1).

This service is only supported for ARs in legacy startup mode; the service is substituted for ARs in advanced startup mode by the AR FSU Block within the connect service.

The parameter structure and the meaning of the parameters is the same as described in the write service (see 7.3.1.7.6.2.1); for the error code hierarchy, 7.3.1.7.7.1 applies. The parameter Data has a service specific structure and meaning; see Table 138 for its structure.

The AR context is needed for this service; see 7.3.1.7.7.4 for details.

Data

See Read Expected Fast Startup Data in 7.3.1.3.5.11.

7.3.1.3.6 Behavior

7.3.1.3.6.1 General

If the attribute AR State of the desired AR is set to BACKUP, all data records are ignored during the parameterization sequence (see 7.3.1.7.7.3 item b)).

AR State influences also the behavior of the Application Relationship class's service Application Ready (see 7.3.1.3.5.5). Note that the Application Ready service confirms a parameterization sequence due to application relation establishment, plug/release of a submodule, or Prm Begin.

For details of the Module Diff Block, see 7.3.1.5.6.2.

7.3.1.3.6.2 IO device during startup

7.3.1.3.6.2.1 General

This subclause describes the application behavior of an IO device during startup of the user application.

7.3.1.3.6.2.2 Primitive definitions

7.3.1.3.6.2.2.1 Primitives exchanged between remote machines

The service primitives including their associated parameters issued or received by an IO device during startup state machine DEVSM are described in the service definition and shown in Table 139.

Table 139 – Remote primitives issued or received by DEVSM

Primitive	Source	Destination	Associated parameters	Functions
Alarm.cnf (+)	FAL	DEVSM	see 7.3.1.6.5	—
Application Ready.cnf (+)	FAL	DEVSM	see 7.3.1.3.5.5	—
Connect.ind	FAL	DEVSM	see 7.3.1.3.5.1.2	—
Prm End.ind	FAL	DEVSM	see 7.3.1.3.5.4	—
Read Input Data.ind	FAL	DEVSM	see 7.3.2.2.5.9	—
Read Output Data.ind	FAL	DEVSM	see 7.3.2.2.5.10	—
Write.ind	FAL	DEVSM	see 7.3.1.7.6.2.1	—
Alarm.req	DEVSM	FAL	see 7.3.1.6.5	—
Application Ready.req	DEVSM	FAL	see 7.3.1.3.5.5	—
Connect.rsp (+)	DEVSM	FAL	see 7.3.1.3.5.1.2	—
Prm End.rsp (+)	DEVSM	FAL	see 7.3.1.3.5.4	—
Read Input Data.rsp (-)	DEVSM	FAL	see 7.3.2.2.5.9	—
Read Input Data.rsp (+)	DEVSM	FAL	see 7.3.2.2.5.9	—
Read Output Data.rsp (-)	DEVSM	FAL	see 7.3.2.2.5.10	—
Read Output Data.rsp (+)	DEVSM	FAL	see 7.3.2.2.5.10	—
Write.rsp (-)	DEVSM	FAL	see 7.3.1.7.6.2.1	—
Write.rsp (+)	DEVSM	FAL	see 7.3.1.7.6.2.1	—

7.3.1.3.6.2.2.2 Primitives exchanged between local machines

The local service primitives including their associated parameters issued or received by DEVSM are described in the service definition and shown in Table 140.

Table 140 – Local primitives issued or received by DEVSM

Primitive	Source	Destination	Associated parameters	Functions
Local Get Output_cnf (+)	FAL	DEVSM	see 7.3.1.4.5.8	—
Local Get Output_req	DEVSM	FAL	see 7.3.1.4.5.8	—
Local New Output_ind	FAL	DEVSM	see 7.3.1.4.5.10	—
Local Set Input_cnf (+)	FAL	DEVSM	see 7.3.1.4.5.1	—
Local Set Input_req	DEVSM	FAL	see 7.3.1.4.5.1	—
Local Set Output IOCS_cnf (+)	FAL	DEVSM	see 7.3.1.4.5.7	—
Local Set Output IOCS_req	DEVSM	FAL	see 7.3.1.4.5.7	—

7.3.1.3.6.2.3 State transition diagram

Figure 38 shows the state transition diagram DEVSM.

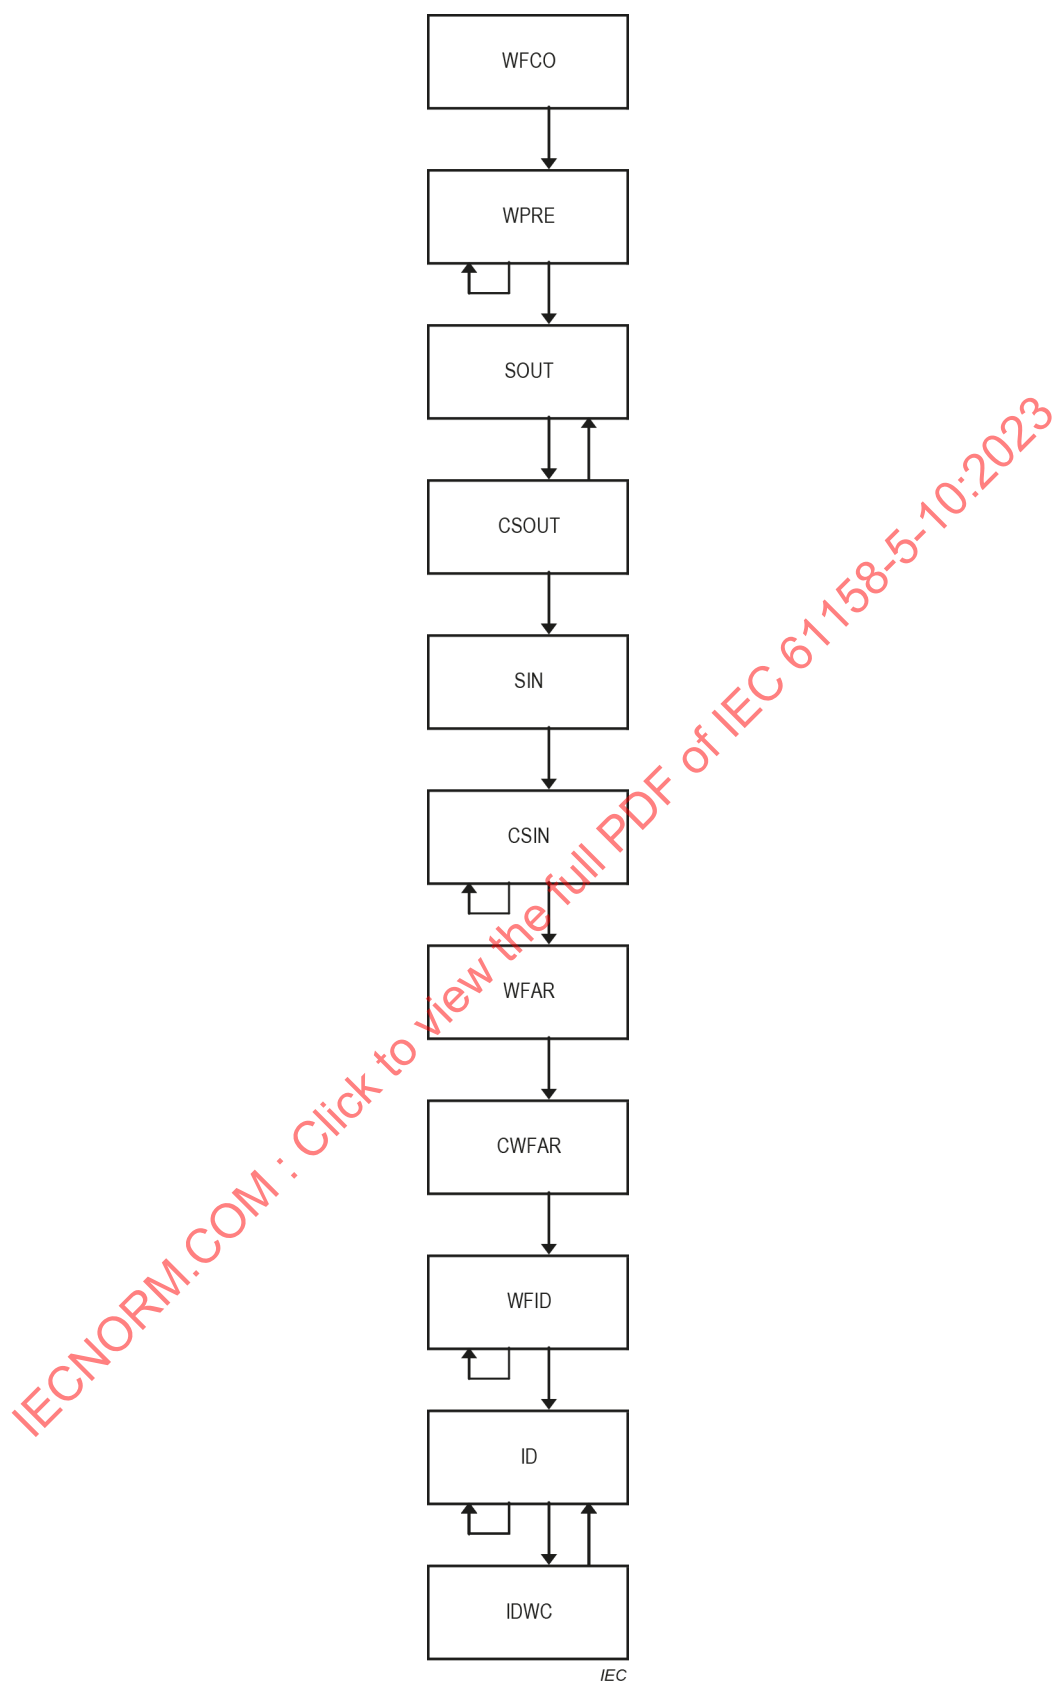


Figure 38 – State transition diagram DEVSM

States of the DEVSM

WFCO	Wait for a Connect indication
WPRE	Wait for a Prm End indication
SOUT	Initialize output according parameterization
CSOUT	Wait for output initialization
SIN	Initialize input buffer according to the real inputs
CSIN	Wait for input buffer initialization
WFAR	Wait for user application ready
CWFAR	Wait for Application Ready response
WFID	Wait for IN Data
ID	Working state IN Data
IDWC	Wait for input buffer or output update

7.3.1.3.6.2.4 State machine description

This state machine describes the application behavior of an IO device during startup of the user application.

7.3.1.3.6.2.5 State table

Table 141 defines the state table DEVSM.

Table 141 – State table DEVSM

#	Current State	Event /Condition =>Action	Next State
1	WFCO	Connect.ind () /CheckExpectedCnf()==OK => SetConnectResponseData("Zero") StoredSessionKey:=AR Parameter Block.SessionKey MCR_IOPS_BAD := FALSE Connect.rsp (+)	WPRE
2	WFCO	Connect.ind () /CheckExpectedCnf()!=Ok => DeltaConfiguration=AdaptConfiguration() StoredSessionKey:=AR Parameter Block.SessionKey SetConnectResponseData(DeltaConfiguration) MCR_IOPS_BAD := FALSE Connect.rsp (+)	WPRE
3	WPRE	Write.ind () /CheckParameter()==Ok => StoreParameter() Write.rsp (+)	WPRE
4	WPRE	Write.ind () /CheckParameter()!=Ok => SetWrErrorResponseData("ErrorCode=PNIORW", OTHER=UserSpecific) Write.rsp (-)	WPRE
5	WPRE	Prm End.ind () => Prm End.rsp (+)	SOUT

#	Current State	Event /Condition =>Action	Next State
6	SOUT	=> For all involved slot/subslots do: Slot.Subslot.IOPS := BAD_BY_DEVICE Slot.Subslot.IOCS:=GOOD if Submodule Properties.Safe State Behavior == REPLACEMENT_VALUE: Output Data object subelement value:=Slot.Subslot.Safe State Value if Submodule Properties.Safe State Behavior == LAST_VALUE: Output Data object subelement value:="local initial value" if Submodule Properties.Safe State Behavior == ZERO: Output Data object subelement value:=ZERO For all involved slot/subslots do: Local Set Output IOCS_req ()	CSOUT
7	CSOUT	Local Set Output IOCS_cnf (+) /not last one => ignore	SOUT
8	CSOUT	Local Set Output IOCS_cnf (+) /last one => ignore	SIN
9	SIN	=> For all involved slot/subslots with submodul status GOOD do: Slot := Slot Number; Subslot := Subslot Number IOPS := GOOD Subslot Input Data:=Input Data object subelement value local IOCS:=GOOD For all involved slot/subslots with submodul status BAD do: Slot := Slot Number; Subslot := Subslot Number IOPS := BAD_BY_DEVICE local IOCS:=BAD_BY_DEVICE For all involved slot/subslots do: Local Set Input_req ()	CSIN
10	CSIN	Local Set Input_cnf (+) /not last one => ignore	CSIN
11	CSIN	Local Set Input_cnf (+) /last one => ignore	WFAR
12	WFAR	UserApplReady () => SessionKey:=StoredSessionKey MCR_IOPS_BAD := FALSE Application Ready.req ()	CWFAR
13	CWFAR	Application Ready.cnf (+) => ignore	WFID
14	WFID	Local New Output_ind () /not last one => ignore	WFID
15	WFID	Local New Output_ind () /last one (exclude CREPs with Multicast Communication) => SumARinData ()	ID
16	ID	Local New Output_ind () => Local Get Output_req ()	IDWC

#	Current State	Event /Condition =>Action	Next State
17	ID	Local New Output_ind () => "real output values are not modified, possible actions are local matter or for future use with redundancy"	ID
18	ID	Local New Output_ind () /(CREP with Multicast Communication) && (CHECK_IOPS(CREP) == FALSE) && (MCR_IOPS_BAD == TRUE) => ignore	ID
19	ID	Local New Output_ind () /(CREP with Multicast Communication) && (CHECK_IOPS(CREP) == FALSE) && (MCR_IOPS_BAD == FALSE) => MCR_IOPS_BAD := TRUE Alarm Type:=Multicast Communication Mismatch Alarm User Structure Identifier := 0x8002 ChannelNumber := 0x8000 ChannelProperties.Specifier := Appears ChannelErrorType := Multicast Provider Status Mismatch ExtChannelErrorType := Provider state changed to value bad Alarm.req ()	ID
20	ID	Local New Output_ind () /(CREP with Multicast Communication) && (CHECK_IOPS(CREP) == TRUE) && (MCR_IOPS_BAD == TRUE) => MCR_IOPS_BAD := FALSE Alarm Type:=Multicast Communication Mismatch Alarm User Structure Identifier := 0x8000 ChannelNumber := 0x8000 ChannelProperties.Specifier := Disappears ChannelErrorType := Multicast Provider Status Mismatch Alarm.req ()	ID
21	ID	Local New Output_ind () /(CREP with Multicast Communication) && (CHECK_IOPS(CREP) == TRUE) && (MCR_IOPS_BAD == FALSE) => Local_Get Output.req ()	IDWC
22	IDWC	Local_Get Output_cnf (+) /IOPS==GOOD => Slot.Subslot.IOPS := GOOD Output Data object subelement value:=Subslot Output Data	ID
23	IDWC	Local_Get Output_cnf (+) /IOPS==BAD_BY_CONTROLLER & Submodule Properties.Safe State Behavior == REPLACEMENT_VALUE => Slot.Subslot.IOPS := BAD_BY_CONTROLLER Output Data object subelement value:=Slot.Subslot.Safe State Value	ID
24	IDWC	Local_Get Output_cnf (+) /IOPS==BAD_BY_CONTROLLER & Submodule Properties.Safe State Behavior == LAST_VALUE => Slot.Subslot.IOPS := BAD_BY_CONTROLLER	ID
25	IDWC	Local_Get Output_cnf (+) /IOPS==BAD_BY_CONTROLLER & Submodule Properties.Safe State Behavior == ZERO => Slot.Subslot.IOPS := BAD_BY_CONTROLLER Output Data object subelement value:=ZERO	ID

#	Current State	Event /Condition =>Action	Next State
26	IDWC	Local Get Output_cnf (+) /IOPS==BAD_BY_PROVIDER & Submodule Properties.Safe State Behavior == REPLACEMENT_VALUE/LAST_VALUE/ZERO => Slot.Subslot.IOPS := BAD_BY_PROVIDER Output Data object subelement value:=REPLACEMENT_VALUE/LAST_VALUE/ZERO MCR_IOPS_BAD := TRUE Alarm Type:=Multicast Communication Mismatch Alarm User Structure Identifier := 0x8002 ChannelNumber := 0x8000 ChannelProperties.Specifier := Appears ChannelErrorType := Multicast Provider Status Mismatch ExtChannelErrorType := Provider state changed to value bad Alarm.req ()	ID
27	IDWC	Local Get Output_cnf (+) /IOPS==GOOD && MCR_IOPS_BAD == TRUE => Slot.Subslot.IOPS := GOOD Output Data object subelement value:=Output Data MCR_IOPS_BAD := FALSE Alarm Type:=Multicast Communication Mismatch Alarm User Structure Identifier := 0x8000 ChannelNumber := 0x8000 ChannelProperties.Specifier := Disappears ChannelErrorType := Multicast Provider Status Mismatch Alarm.req ()	ID
28	ID	Alarm.cnf () => ignore	ID
29	ID	Read Output Data.ind () /ARUUIID==AREP.ARUUIID&& Slot==AREP.Slot Number&& Subslot==AREP.Subslot Number&& ((Length Output Data+Length IOPS+Length IOCS) <=Length) => AREP:=local AR reference Length:=Slot.Subslot.Length Data+ Slot.Subslot.Length IOCS+Slot.Subslot.Length IOPS Length Data:=Slot.Subslot.Length Data Length IOCS:=Slot.Subslot.Length IOCS Length IOPS:=Slot.Subslot.Length IOPS IOCS:=Slot.Subslot.IOCS IOPS:=Slot.Subslot.IOPS Subslot Output Data:=Output Data object subelement value Read Output Data.rsp (+)	ID
30	ID	Read Output Data.ind () /!(ARUUIID==AREP.ARUUIID&& Slot==AREP.Slot Number&& Subslot==AREP.Subslot Number&& ((Length Output Data+Length IOPS+Length IOCS) <=Length)) => AREP:=local AR reference Error Decode:=PNIORW Error Code 1:="parameter error" Error Code 2:=vendor specific or 0 Add Data 1:=profile specific or 0 Add Data 2:=vendor specific or 0 Read Output Data.rsp (-)	ID

#	Current State	Event /Condition =>Action	Next State
31	ID	Tick_ind /input value changed => For all involved slot/subslots do: Slot := Slot Number; Subslot := Subslot Number IOPS := GOOD Subslot Input Data:=Input Data object subelement value For all involved slot/subslots do: Local Set Input_req ()	IDWC
32	ID	Read Input Data.ind () /ARUID==AREP.ARUID&& Slot==AREP.Slot Number&& Subslot==AREP.Subslot Number&& ((Length Input Data+Length IOPS+Length IOCS) <=Length) => AREP:=local AR reference Length:=Slot.Subslot.Length Data+ Slot.Subslot.Length IOCS+Slot.Subslot.Length IOPS Length Data:=Slot.Subslot.Length Data Length IOCS:=Slot.Subslot.Length IOCS Length IOPS:=Slot.Subslot.Length IOPS IOCS:=Slot.Subslot.IOCS IOPS:=Slot.Subslot.IOPS Subslot Input Data:=Input Data object subelement value Read Input Data.rsp (+)	ID
33	ID	Read Input Data.ind () /(ARUID==AREP.ARUID&& Slot==AREP.Slot Number&& Subslot==AREP.Subslot Number&& ((Length Input Data+Length IOPS+Length IOCS) <=Length)) => AREP:=local AR reference Error Decode:=PNIORW Error Code 1:="parameter error" Error Code 2:=vendor specific or 0 Add Data 1:=profile specific or 0 Add Data 2:=vendor specific or 0 Read Input Data.rsp (-)	ID

7.3.1.3.6.2.6 Functions, Macros, Timers and Variables

Table 142 contains the functions, macros, timers and variables used by DEVSM and their arguments and descriptions.

Table 142 – Functions, Macros, Timers and Variables by DEVSM

Name	Type	Function/Meaning
CHECK_IOPS(CREP)	Function	All IO data objects of CREP dispose of IOPS==GOOD
UserApplicationReady	Function	This local function is issued from the user after all parameterization is done and input data is updated
SumARinData	Function	This local function is issued from DEVSM if all consumer reaches the state Data
DeltaConfiguration	Variable	Is the difference between the expected and real configuration
StoredSessionKey	Variable	This local variable stores the session key from the connect service
SetConnectResponseData	Function	This local function configures the module difference block for the connect response using the delta configuration
AdaptConfiguration	Function	This local function adapts the IO data layout of real configuration to the expected configuration
StoreParameter	Function	This local function stores the parameters with respect to the persistent flag
SetWrErrorResponseData	Function	This local function configures the response negative PDU
MCR_IOPS_BAD	Variable	This variable is used for the delta alarm generation of the multicast communication relation diagnosis
Tick_ind	Function	This local function is issued every send clock cycle.

RecordDataObject are stored by the IO device. When receiving the Prm End.ind a “full” RecordDataObjects check (locally defined rules) is done by the application. If the RecordDataObjects suit, they are stored by the application. This can already be done by Prm End.rsp or even later. From an “outside” view the takeover of the RecordDataObjects shall be done with ApplicationReady.req.

7.3.1.3.6.3 IO controller during startup

7.3.1.3.6.3.1 General

This subclause describes the client application behavior of an IO controller during startup CTLSM of the user application as an example.

Note that this subclause provides selected behavior only and is thus not a comprehensive definition of the client behavior.

In the startup phase data records shall be written in the following transfer sequence:

- AR related data records shall be transferred first in ascending order according to their index (index is between 0xE000 and 0xEBFF).

NOTE The only writeable AR related data record is ARFSUDDataAdjust having index 0xE050. This data record is supported only if the startup mode of the AR is legacy.

- Within the IO device, all APIs are processed in ascending order.
- Within each API, all slots carrying a module are processed in ascending order.
- Within each module, all subslots carrying a submodule are processed in ascending order.
- Within each submodule,
 - data records defined by IEC 61158-6-10 (index is between 0x8000 and 0xAFFF) will always be transferred first in ascending order according to their index.
 - manufacturer and profile specific data records (index is between 0x0000 and 0x7FFF resp. between 0xB000 and 0xBFFF) will follow afterwards
 - according to their attribute @TransferSequence as given in the device's GSD,

- or if the attribute @TransferSequence is not stated, in ascending order according to their index.

Data records having an index between 0xC000 and 0xDFFF or between 0xECFF and 0xFFFF are always read-only. Therefore they do not appear within the transfer sequence.

If a data record contains indexable elements, these should be sorted in ascending order (order criteria: Block Type, API, Slot Number, Subslot Number).

7.3.1.3.6.3.2 Primitive definitions

7.3.1.3.6.3.2.1 Primitives exchanged between remote machines

The service primitives including their associated parameters issued or received by CTLSM are described in the service definition and shown in Table 143.

Table 143 – Remote primitives issued or received by CTLSM

Primitive	Source	Destination	Associated parameters	Functions
ApplicationReady.ind	FAL	CTLSM	see 7.3.1.3.5.5	—
Connect.cnf (+)	FAL	CTLSM	see 7.3.1.3.5.1.2	—
Prm End.cnf	FAL	CTLSM	see 7.3.1.3.5.4	—
Write.cnf	FAL	CTLSM	see 7.3.1.7.6.2.1	—
ApplicationReady.rsp ()	CTLSM	FAL	see 7.3.1.3.5.5	—
Connect.req	CTLSM	FAL	see 7.3.1.3.5.1.2	—
Prm End.req	CTLSM	FAL	see 7.3.1.3.5.4	—
Write.req	CTLSM	FAL	see 7.3.1.7.6.2.1	—

7.3.1.3.6.3.2.2 Primitives exchanged between local machines


The local service primitives including their associated parameters issued or received by CTLSM are described in the service definition and shown in Table 144.

Table 144 – Local primitives issued or received by CTLSM

Primitive	Source	Destination	Associated parameters	Functions
Local Set Input IOCS_cnf (+)	FAL	CTLSM	see 7.3.1.4.5.2	—
Local Set Output_cnf (+)	FAL	CTLSM	see 7.3.1.4.5.6	—
Local Set Input IOCS_req	CTLSM	FAL	see 7.3.1.4.5.2	—
Local Set Output_req	CTLSM	FAL	see 7.3.1.4.5.6	—
Local New Input_ind	FAL	CTLSM	see 7.3.1.4.5.5	—

7.3.1.3.6.3.3 State transition diagram

Figure 39 shows the State transition diagram for the startup.

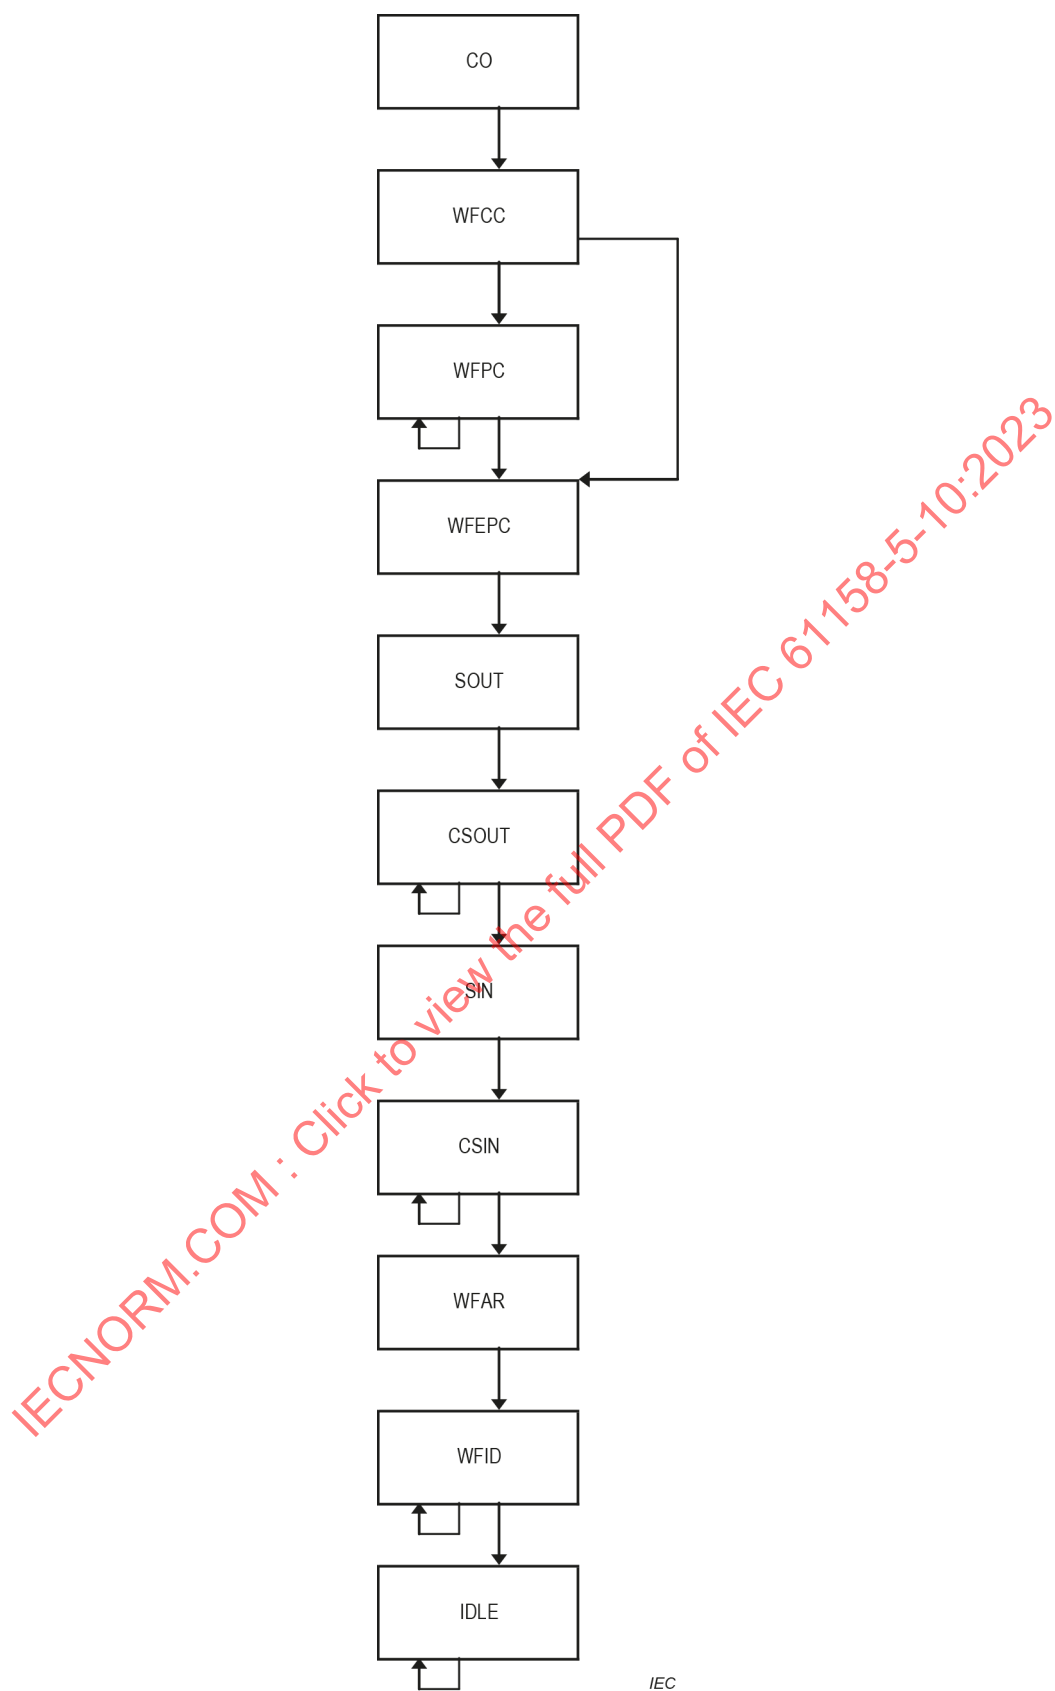

IEC

Figure 39 – State transition diagram CTLSM

States of CTLSM

CO	Initiate the connect request
WFCC	Wait for a connect response
WFPC	Wait for a write confirmation
WFEPc	Wait for Prm End confirmation
SOUT	Initialize output according parameterization
CSOUT	Wait for output initialization
SIN	Initialize input buffer according to the real inputs
CSIN	Wait for input buffer initialization
WFAR	Wait for ApplicationReady indication
WFID	Wait for IN Data
IDLE	Working state IN Data

7.3.1.3.6.3.4 State machine description

This state machine describes the application behavior of an IO controller during the startup of a particular application relation to an IO device.

7.3.1.3.6.3.5 State table

Table 145 defines the state table for the IO controller during startup.

Table 145 – State table CTLSM

#	Current State	Event /Condition =>Action	Next State
1	CO	=> SetConnectRequestData("ExpectedConfiguration") AR Parameter Block.SessionKey:=StoredSessionKey+1 StoredSessionKey:=StoredSessionKey+1 Connect.req ()	WFCC
2	WFCC	Connect.cnf (+) /CheckResponseBlocks()=Ok && ParameterToSend()=Ok => PrepareWritePDU () Write.req ()	WFPC
3	WFCC	Connect.cnf (+) /CheckResponseBlocks()=Ok && ParameterToSend()!=Ok => Prm End.req ()	WFEPc
4	WFCC	Connect.cnf (+) /CheckResponseBlocks()!=Ok && ParameterToSend()=Ok => AdaptConfiguration() Write.req ()	WFPC
5	WFCC	Connect.cnf (+) /CheckResponseBlocks()!=Ok && ParameterToSend()!=Ok => AdaptConfiguration() Prm End.req ()	WFEPc

#	Current State	Event /Condition =>Action	Next State
6	WFPC	Write.cnf () /ParameterToSend()=Ok => Session Key=StoredSessionKey PrepareWritePDU () Write.req ()	WFPC
7	WFPC	Write.cnf () /ParameterToSend()!=Ok => Session Key=StoredSessionKey Prm End.req ()	WFEP
8	WFEP	Prm End.cnf () =>	SOUT
9	SOUT	=> For all involved slot/subslots do: Slot.Subslot.IOCS := GOOD Subslot Output Data:=Slot.Subslot.Initial Value For all involved slot/subslots do: Local Set Output_req ()	CSOUT
10	CSOUT	Local Set Output_cnf (+) /not last one =>	CSOUT
11	CSOUT	Local Set Output_cnf (+) /last one =>	SIN
12	SIN	=> For all involved slot/subslots match expected configuration do: Slot := Slot Number; Subslot := Subslot Number IOCS := GOOD For all involved slot/subslots does not match expected configuration do: Slot := Slot Number; Subslot := Subslot Number IOCS := BAD_BY_CONTROLLER For all involved slot/subslots do: Local Set Input IOCS_req ()	CSIN
13	CSIN	Local Set Input IOCS_cnf (+) /not last one =>	CSIN
14	CSIN	Local Set Input IOCS_cnf (+) /last one =>	WFAR
15	WFAR	ApplicationReady.ind () /Session Key=StoredSessionKey => ApplicationReady.rsp ()	WFID
16	WFID	Local New Input_ind () /not last one =>	WFID
17	WFID	Local New Input_ind () /last one => SumARinData ()	IDLE
18	IDLE	=> ignore	IDLE

7.3.1.3.6.3.6 Functions, Macros, Timers and Variables

Table 146 contains the functions, macros, timers and variables used by CTLSM and their arguments and descriptions.

Table 146 – Functions, Macros, Timers and Variables used by CTLSM

Name	Type	Function/Meaning
CheckResponseBlocks	Function	This local function checks whether the syntax and the semantics of the response is correct
ParameterToSend	Function	This local function indicates the existence of any parameter record
AdaptConfiguration	Function	This local function adapts the list of parameter records according to the connect response
SumARinData	Function	This local function is issued from DEVSM if all consumer reaches the state Data
StoredSessionKey	Variable	This local variable stores the session key from the connect service
SetConnectRequestData	Function	This local function configures the connect request
PrepareWritePDU	Function	This local function fetches the parameter from the local data base and constructs the write multiple PDU

7.3.1.4 Communication Relationship class

7.3.1.4.1 Overview

7.3.1.4.1.1 General

An AR is mapped to one or more communication relationships (CRs). A CR carries out the exchange of information based on a set of rules.

7.3.1.4.1.2 Communication relationship types

The application layer uses the following types of communication relationships:

BBUU (Buffer Buffer Unconfirmed Unidirectional)

This type of communication relationship is characterized by the following role attributes:

- one to one
- connection-oriented
- cyclic
- buffer to buffer
- unconfirmed
- unidirectional
- Producer/Consumer

BBUU-OM (Buffer Buffer Unconfirmed Unidirectional – One to Many)

This type of communication relationship is characterized by the following role attributes:

- one to many
- connection-oriented
- cyclic
- buffer to buffer
- unconfirmed
- unidirectional
- Producer/Consumer

QQCB-CO (Queue Queue Confirmed Bi-directional – Connection-Oriented)

This type of communication relationship is characterized by the following role attributes:

- one to one
- connection-oriented
- acyclic
- queue to queue
- confirmed
- bi-directional
- Client/Server

QQCB-CL (Queue Queue Confirmed Bi-directional – Connectionless)

This type of communication relationship is characterized by the following role attributes:

- one to one
- connectionless
- acyclic
- queue to queue
- confirmed
- bi-directional
- Client/Server

7.3.1.4.1.3 Communication Relationship endpoint

CRs are defined as a set of co-operating Communication Relationship End Points (CREPs). The local context of a CR endpoint is used to control the conveyance of APDUs on the CR. Figure 40 illustrates the Assignment of Communication Relationship to Application Relationship.

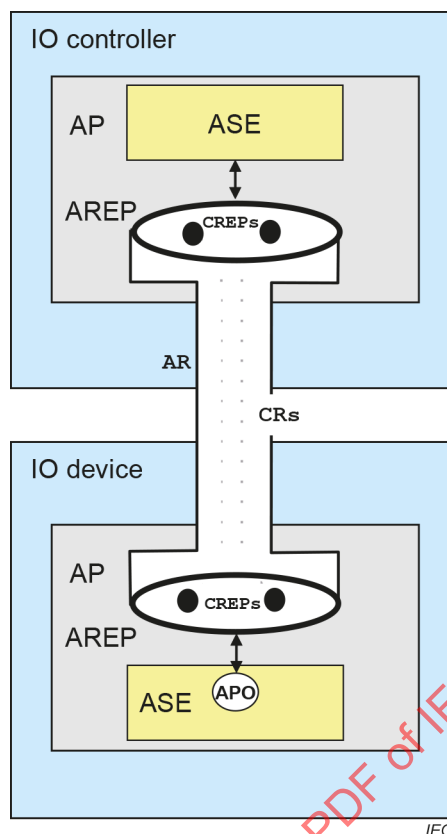


Figure 40 – Assignment of Communication Relationship to Application Relationship

A communication relationship is characterized by all of the following basic roles of the CREP used:

CR cardinality

one-to-one:

In a one-to-one communication relationship, a CREP communicates with exactly one remote CREP.

one-to-many:

In a one-to-many relationship one CREP communicates simultaneously with the CREPs of a group of devices. A one-to-many communication relationship does not permit confirmation of the execution of a request.

Connection mode

connection-oriented

In a connection-oriented application relationship a logical connection is established between application processes. Three different phases are identified in connection-oriented ARs:

- connection establishment phase
- data transfer phase and
- connection release phase

Exchanging data on a connection shall only be possible after a successful connection establishment. In the connection establishment phase a request to establish the connection is announced at the remote application process (e.g. Connect service). The request to establish the connection-oriented AR contains the information about the context to be used in the data transfer phase. The remote application informs the requesting application process about the acceptance of the context. If the context is accepted both application processes are in the data transfer phase and are able to communicate with each other according to the agreed context. Connection-oriented AR can be monitored. A connection-oriented AR is dissolved by its release (e.g. Release service).

connectionless

Connectionless application relationships have neither a connection establishment nor a connection release. They are always in the data transfer phase.

Transmission types**cyclic**

The transmission type “cyclic” means that after an initial request by the application process the application relationship is established and afterwards the data transfer is executed periodically.

acyclic

The transmission type “acyclic” means that a single transfer is executed after each request by the application process.

Transmission characteristics**Buffer to Buffer**

The transmission is characterized by a buffer to buffer transfer.

Queue to Queue

The transmission is characterized by a queue to queue transfer.

Service types**Confirmed**

Only confirmed services are allowed.

Unconfirmed

Only unconfirmed services are allowed.

Transmission directions:**Bi-directional**

APDUs are transmitted in both directions.

Unidirectional

APDUs are transmitted only in one direction.

Service relations**Client-Server communication**

The services are used according to the Client/Server model.

Producer-Consumer communication

The services are used according to the Producer/Consumer model.

7.3.1.4.1.4 Buffer and queues

CREPs can be modeled as a queue or as a buffer.

Each application data transferred over a queued CREP is delivered in the order received for conveyance. Reading the application data from the queue removes the element from the queue.

Application data transferred over a buffered CREP is different. In this case, application data is placed in an application layer buffer for transfer. If the CREP receives another conveyance request, it replaces the previous contents of the buffer. The contents of the buffer are preserved until the next request updates it. The application shall convey application data, such that the data of a particular submodule is consistently replaced.

The application data is transferred between the transferring and receiving CREP using the real time cyclic ASE. The transport is cyclical and thus asynchronous to the access of the application.

Thus, the following behaviors are possible:

- Local set input/output requests are issued faster than the contents of the buffer are transported over the network. In this case, only the values provided with the latest service are conveyed over the network.
- Local set input/output requests are issued slower than the contents of the buffer are transported over the network. In this case the values provided with each service are conveyed more than once over the network.
- Local set input/output requests are issued synchronous to the transport of the contents of the buffers over the network. In this case the values provided with each service are conveyed once over the network.

At the receiving end, the operation is similar. The receiving application layer places the received application data into a buffer for access by the different ASEs. When subsequent application data are received, it overwrites the previous application data in the buffer. Reading the application data from the buffer is not destructive it does not destroy or change the contents of the buffer, allowing the contents to be read from the buffer one or more times.

7.3.1.4.1.5 IO data

Submodules plugged into subslots provide input and output data that is cyclically conveyed over the network using BBUU (Buffer Buffer Unconfirmed Unidirectional) and/or BBUU-OM (Buffer Buffer Unconfirmed Unidirectional – One to Many).

Input and output data is located in two classes:

- The real identification ASE provides input and output data according to the **real identification** of the submodule; i.e. structured as provided by the APOP itself. There is one instance of data per real submodule.
- The communication relationship class provides input and output data according to the **expected identification** of the submodule; i.e. structured according to the expected identification of a particular application relationship. There is one instance of data per expected identification of a submodule; in other words possible multiple instances of data for a particular submodule (if being used in multiple application relationship; e.g. as shared input) or even no instance of data (if not being used in an application relationship).

The communication relationship provides the data structured according to the expected identification. If the real identification is a proper substitute for the expected identification the structure of the data is adapted to match the expected identification (e.g. if a DI16 as real submodule is a DI8 substitute by converting Unsigned16 to Unsigned8).

The usage of reduce input or output submodule data length (see 7.3.1.5.4) adapts the real submodule's data by omitting all data.

The usage of discard IOXS (see 7.3.1.5.4) adapts the real submodule's data by omitting IOXS.

Input Data objects are partitioned in Input Data Elements which represent the structure of input data of the submodule. Output Data objects are partitioned in Output Data Elements which represent the structure of output data of the submodule.

The Communication Relationship class uses the Client/Server and Provider/Consumer access model.

The client application conveys the value for the Output Data object to the Server's buffer. The Server application fetches this value by a Get Output service. The receipt of a new value is indicated by the New Output service.

The Server application conveys the value of its Input Data object via the Set Input service to the Server's buffer as soon as one of the real object values changes. The Client application gets this value by the Get Input service. The transmission of the Server buffer to the Client buffer and vice versa is done asynchronously to the Get Output and Set Input services.

The formal model of the Communication Relationship class is described next, followed by a description of its services. The relations between real IO data structure and conveyance of IO data via ARs are described within this class.

Figure 41 shows the IO service interactions for the IO controller and IO device.

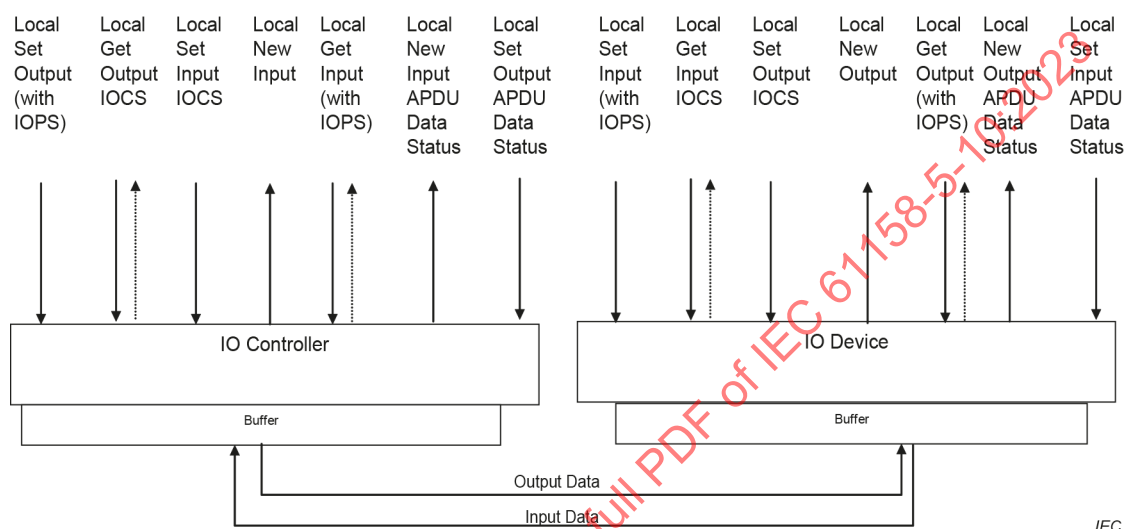


Figure 41 – Overview Communication Relationship Class service interactions

The services interact with local buffers maintained by this class and updated by the application using shown local services in Figure 41. This protocol provides mechanisms for cyclic exchange of buffers between the devices. Local services provide a means to get or set the values of IO data together with their status values. The status values are referred to as IOPS and IOCS.

The IO Data shall be transmitted consistent from the sending buffer to the receiving buffer completely. On the communication network, the whole frame data shall be consistent. For the application, consistency of each submodule data is required.

If Input Data are the source of a Multicast Provider CR then the associated Output Data of the Multicast Consumer CR shall have exactly the same data structure.

If Output Data are the sink of a Multicast Consumer CR then the associated Input Data of the Multicast Provider CR shall have exactly the same data structure.

Additional services are provided to read acyclically the values of the IO Data objects and to indicate new values for the Input Data object and the Output Data object. Furthermore, services are provided to indicate the presence and to get the content of new consumed Input Data.

7.3.1.4.2 Relations

The services are bound to other services as shown in Table 147:

Table 147 – Binding communication relationship services

Service	Binding	Usage
Local Set Input	RTC::PPM Set Prov Data	Used by FAL
Local Set Input IOCS	RTC::PPM Set Prov Data	Used by FAL
Local Get Input	RTC::CPM Get Cons Data	Used by FAL
Local Get Input IOCS	RTC::CPM Get Cons Data	Used by FAL
Local New Input	RTC::CPM New Data Indication	Used by FAL
Local Set Output	RTC::PPM Set Prov Data	Used by FAL
Local Set Output IOCS	RTC::PPM Set Prov Data	Used by FAL
Local Get Output	RTC::CPM Get Cons Data	Used by FAL
Local Get Output IOCS	RTC::CPM Get Cons Data	Used by FAL
Local New Output	RTC::CPM New Data Indication	Used by FAL
Local Set Provider State	RTC::PPM Set Prov Status	Used by FAL
Local Set Redundancy	RTC::PPM Set Prov Status	Used by FAL
Local Set State	RTC::PPM Set Prov Status	Used by FAL
Local Data State Changed	RTC::CPM New Data Indication	Used by FAL

7.3.1.4.3 Template

The Communication Relationship object is described by the following template:

ASE: AR ASE

CLASS: Communication Relationship

CLASS ID: not used

PARENT CLASS: TOP

ATTRIBUTES:

- 1 (m) Key Attribute: Implicit
- 2 (m) Attribute: List of CRs
- 2.1 (m) Attribute: AREP
- 2.2 (m) Attribute: CREP
- 2.3 (m) Attribute: IO CR Type
- 2.4 (m) Attribute: IO CR Reference
- 2.5 (m) Attribute: LT Field
- 2.6 (m) Attribute: IO CR Properties
- 2.6.1 (m) Attribute: RT Class
- 2.7 (m) Attribute: C_SDU Length
- 2.8 (m) Attribute: Frame ID
- 2.9 (m) Attribute: Send Clock Factor
- 2.10 (m) Attribute: Reduction Ratio
- 2.11 (m) Attribute: Phase
- 2.12 (m) Attribute: Sequence
- 2.13 (m) Attribute: Frame Send Offset
- 2.14 (m) Attribute: Data Hold Factor
- 2.15 (m) Attribute: IO CR Tag Header
- 2.15.1 (m) Attribute: Vlan ID
- 2.15.2 (m) Attribute: IO CR User Priority
- 2.16 (m) Attribute: IO CR Multicast MAC Add
- 2.17 (m) Attribute: List of IO Data Objects
- 2.17.1 (m) Attribute: API

2.17.2	(m) Attribute:	Slot Number
2.17.3	(m) Attribute:	Subslot Number
2.17.4	(m) Attribute:	IO Data Object Frame Offset
2.17.5	(m) Attribute:	IO Data Object Format
2.17.5.1	(m) Attribute:	Length Data
2.17.5.2	(m) Attribute:	Data Structure
2.17.5.3	(m) Attribute:	Length IOPS
2.17.5.4	(c) Attribute:	IOPS
2.18	(m) Attribute:	List of IOCS
2.18.1	(m) Attribute:	API
2.18.2	(m) Attribute:	Slot Number
2.18.3	(m) Attribute:	Subslot Number
2.18.4	(m) Attribute:	IOCS Frame Offset
2.18.5	(m) Attribute:	Length IOCS
2.18.6	(c) Attribute:	IOCS
2.19	(o) Attribute:	List of Subframe Data
2.19.1	(m) Attribute:	Subframe Position
2.19.2	(m) Attribute:	Subframe Length
2.20	(o) Attribute:	IR Frame Data
2.20.1	(m) Attribute:	IOCR Tx Ports
2.20.1.1	(m) Attribute:	Port
2.20.1.2	(m) Attribute:	Redundant Port
2.20.2	(m) Attribute:	Frame Send Offset
2.21	(o) Attribute:	Multicast Consumer Data
2.21.1	(m) Attribute:	Address Resolution Properties
2.21.2	(m) Attribute:	MCI Timeout Factor
2.21.3	(m) Attribute:	Provider Station Name
2.21.4	(m) Attribute:	Multicast Provider State

SERVICES:

1	(m) OpsService:	Local Set Input
2	(m) OpsService:	Local Set Input IOCS
3	(m) OpsService:	Local Get Input
4	(m) OpsService:	Local Get Input IOCS
5	(o) OpsService:	Local New Input
6	(m) OpsService:	Local Set Output
7	(m) OpsService:	Local Set Output IOCS
8	(m) OpsService:	Local Get Output
9	(m) OpsService:	Local Get Output IOCS
10	(o) OpsService:	Local New Output
11	(m) OpsService:	Local Set Provider State
12	(m) OpsService:	Local Set Redundancy
13	(m) OpsService:	Local Set State
14	(m) OpsService:	Local Data State Changed

7.3.1.4.4 Attributes**Implicit**

The key attribute Implicit indicates that the CRL object is implicitly addressed by the service.

List of CRs

This attribute is composed of the following list elements:

AREP

This attribute identifies the AR this CR belongs. It is a cross reference to the application relationship class.

CREP

This attribute contains the local identifier of this CR. The attribute is used to uniquely identify a particular CR. It is also used for cross-referencing. It is used for internal handling only.

IO CR type

This attribute indicates the type of this CR.

Attribute type: Unsigned16

Allowed values: INPUT_CR, OUTPUT_CR, MULTICAST_PROVIDER_CR, MULTICAST_CONSUMER_CR

IO CR Reference

This attribute contains the identifier for the CR. It is defined by the engineering system as a unique identifier for CR blocks within an AR.

Attribute type: Unsigned16

LT Field

This attribute contains the length type field of the Physical Layer Frame.

Attribute type: Unsigned16

Allowed values: 0x8892 = IEC_61158_TYPE_10, others reserved

IO CR Properties

This attribute consists of the following attributes:

RT Class

The value RT Class defines the Frame ID range (see Table 148) to be used for communication and in consequence a traffic class (RED or GREEN). The traffic class is used at the provider of the frame on its injection. The traffic class is used in the bridge for forwarding by selecting the used transport mechanism and the switching model (see 6.3.16, 6.3.17, and 6.3.17.5).

NOTE 1 This attribute is called RT Class for historic reasons. It does not address the RT Class used in other parts of this document.

Attribute type: Unsigned8

Allowed values: 0x01 (only to be used for legacy devices), 0x02, 0x03, 0x04 and 0x05

Table 148 – Traffic Classes versus RT Class

RT Class	Startup Mode	Frame ID Range	Traffic Class	Used for
0x01	Legacy	range 7	GREEN	RT_CLASS_1 (legacy)
0x02	Advanced, Legacy	range 6	GREEN	RT_CLASS_1, RT_CLASS_2 (legacy)
0x02	Advanced	range 6	RT	RT_CLASS_STREAM_RT
0x03	Advanced, Legacy	range 3 with Time Aware System = 0	RED	RT_CLASS_3
0x04	Advanced, Legacy	range 7	GREEN	RT_CLASS_UDP
0x05	Advanced	range 3 with Time Aware System = 1	HIGH LOW	RT_CLASS_STREAM_HIGH RT_CLASS_STREAM_LOW

For the values of the particular frame ID ranges, see IEC 61158-6-10. If the device supports security, the frame id range 3, 6 and 7 are divided into security and non-security.

In traffic class GREEN IEEE Std 802.3, IEEE Std 802.1Q, and IP-Suite (see 6.3.17.5) are applicable without any extension.

In traffic class RED IEEE Std 802.3 and IEEE Std 802.1Q are applicable with extensions specified in 6.3.16, 6.3.17, and 6.3.17.5.

C_SDU Length

This attribute contains the overall length of the transmitted data (CSDU or CSFSDU length). For a dynamically packed frame it indicates the length of **all** subframes contained in this frame.

Attribute type: Unsigned16

Allowed Values for RT_CLASS_1, RT_CLASS_2 and RT_CLASS_3: 40 to 1 440

NOTE 2 The lower bound of the C_SDU length is derived from the minimum frame size of an Ethernet frame (= 64 octets). On subtracting the size of the header (i.e. destination address, source address and type) and the size of the footer (i.e. FCS) 46 octets are left. On subtracting the size of the RT frame header (i.e. Frame ID) and footer (i.e. cycle counter, data status and transfer status) the minimum length of the C_SDU is 40 octets.

Allowed Values for RT_CLASS_UDP: 12 to 1 440

NOTE 3 The lower bound of the C_SDU length is derived from the minimum frame size of an Ethernet frame (= 64 octets). On subtracting the size of the header (i.e. destination address, source address and type) and the size of the footer (i.e. CRC) 46 octets are left. From these 46 octets the IP header (20 octets) and the UDP header (8 octets) are subtracted, leaving 18 octets. On subtracting the size of the RT frame header (i.e. Frame ID) and footer (i.e. cycle counter, data status and transfer status) the minimum length of the C_SDU is 12 octets.

Frame ID

This attribute contains the identifier of the data within the frame. The value of the frame ID is provided by either the consumer of the frame or else by the engineering system.

The frame ID shall be in the range as defined by the attribute RT Class.

Attribute type: Unsigned16

The allowed values according to the Frame ID range tables in IEC 61158-6-10 shall be used.

Send Clock Factor

This attribute contains the Send Clock Factor for the CR.

Attribute type: Unsigned16

Time Base: 31,25 µs

Allowed values: 1 to 128

Default Value: 32

Reduction Ratio

This attribute contains the reduction ratio for the CR. The actual send cycle of the CR is Reduction Ratio multiplied with the Send Clock Factor multiplied with the time base of the Send Clock Factor (31,25 µs).

Attribute type: Unsigned16

Allowed values: see IEC 61158-6-10

Phase

This attribute indicates in which particular send cycle the data shall be sent.

Attribute type: Unsigned16

Allowed values: 1 to selected Reduction Ratio.

NOTE 4 The parameter phase allows spreading the sending of the frames over the whole macro cycle and provides a means to manage distribution of the used bandwidth. The phases e.g. 1 to 4 are possible if the Reduction Ratio is set to 4.

Sequence

This attribute contains the position of the data frame in the sending queue. The value 0 shall be used to indicate an undefined sequence.

Allowed Values for RT_CLASS_1, RT_CLASS_2, RT_CLASS_STREAM and RT_CLASS_UDP: 0x0000 (mandatory), 0x0001 to 0xFFFF (optional)

Allowed Values for RT_CLASS_3: 0x0000

Attribute type: Unsigned16

Frame Send Offset

This attribute contains the relative send offset to the start of the related reduction ratio and phase. The time base is 1 ns. The value shall be less than the duration of one phase.

This Frame Send Offset is duplicated in the PDIRFrameData for the appropriate frame used to transport this CR. Use the value from PDIRFrameData.

Attribute type: Unsigned32

Allowed Values for RT_CLASS_1, RT_CLASS_2, RT_CLASS_STREAM and RT_CLASS_UDP: BEST_EFFORT (mandatory; as soon as possible)

Allowed Values for RT_CLASS_3: BEST_EFFORT (optional; as soon as possible), 0x00000000 – 0x003D08FF (mandatory; for optimized scheduling)

Data Hold Factor

This attribute contains a factor, which is used to calculate the Data Hold Time. This time is the time interval for holding last output data if no IO data have been received. The interval for the Data Hold Time is the product of the attribute values of Data Hold Factor, Send Clock Factor, Reduction Ratio and the time base of 31,25 µs related to the monitored consumer (Time Base: Send Clock Factor × 31,25 µs × Reduction Ratio). The Data Hold Time shall be equal to or less than 1,92 s if the value of the AR attribute RT Class is 0x01, 0x02 or 0x03 and equal to or less than 49,152 s if the value of the AR attribute RT Class is 0x04.

Attribute type: Unsigned16

Allowed values: 0x0001 to 0x1E00

IO CR Tag Header

This attribute consists of the following attributes:

Vlan ID

This attribute contains the IEEE Std 802.1Q VLAN ID. The default value is 0 and means the usage of the configured VID according to the requested RT Class.

E.g. for RT_CLASS_1 within a time-aware domain this means the “NonStream VLAN ID”

E.g. for RT_CLASS_1 within a non-time-aware domain this means that the tag header contains only priority information (VLAN ID = 0).

Allowed values: 0

IO CR User Priority

This attribute contains the IEEE Std 802.1Q VLAN ID meaning according to the RT Class and the Time Aware System.

Within the value TimeAware the values IOCR_PRIORITY_HIGH, IOCR_PRIORITY_LOW and IOCR_PRIORITY_RT are allowed.

Within the value NonTimeAware, only the value IOCR_PRIORITY_HIGH is allowed.

Allowed values: IOCR_PRIORITY_HIGH, IOCR_PRIORITY_LOW, IOCR_PRIORITY_RT

IO CR Multicast MAC Add

This attribute contains the multicast address according to IEC 61158-6-10 if the IO CR Type is MULTICAST_PROVIDER_CR or MULTICAST_CONSUMER_CR. The value shall be set to zero for all other IO CR Types.

Attribute type: OctetString[6]

List of IO Data Objects

This attribute contains the IO Data Objects that are placed in the CR.

This list describes where the IO Data Objects of the addressed submodules (indicated by API, Slot and Subslot Number) according to the expected identification are located in the CR.

For a CR having IOCR Type == INPUT_CR or MULTICAST_PROVIDER_CR the IO Data Objects of submodules with SubmoduleProperties.Type == NO_IO and INPUT, and the “input part” of submodules with SubmoduleProperties.Type == IO.

For a CR having IOCR Type == OUTPUT_CR or MULTICAST_CONSUMER_CR the IO Data Objects of submodules with SubmoduleProperties.Type == OUTPUT, and the “output part” of submodules with SubmoduleProperties.Type == IO.

SubmoduleProperties.Type is taken from the Expected Identification of the addressed submodules.

For a dynamically packed frame only the layout of the subframe related to this IO device is described.

A list element consists of the following attributes:

API

This attribute defines to which API the IO Data Object belongs.

Attribute type: Unsigned32

Allowed values: 0 to 0xFFFFFFFF

Slot Number

This attribute defines to which slot the IO Data Object belongs.

Attribute type: Unsigned16

Allowed values: 0 to 0x7FFF

Subslot Number

This attribute defines to which subslot the IO Data belongs.

Attribute type: Unsigned16

Allowed values: 0 to 0x9FFF

IO Data Object Frame Offset

This attribute defines the offset of the IO Data Object in the frame.

The attribute is set to 1 440 in the special case of a submodule with `SubmoduleProperties.Type == NO_IO` and `SubmoduleProperties.DiscardIOXS == TRUE` as stated in the Expected Identification.

Otherwise, the sum of IO Data Object Frame Offset, Length Data and Length IOPS shall not exceed the C_SDU Length.

Attribute type: Unsigned16

Allowed values: 0 to 1 439 and 1 440

IO Data Object Format

This attribute consists of the following attributes.

Length Data

This attribute defines the number of octets of the IO Data Object without the IOPS. It corresponds to the Submodule Data Length of the addressed submodule within the Expected Identification.

The attribute is 0 in the following cases: `SubmoduleProperties.ReduceInputSubmoduleDataLength == TRUE`, `SubmoduleProperties.ReduceOutputSubmoduleDataLength == TRUE`, or `SubmoduleProperties.Type == NO_IO` as stated for the addressed submodule in the Expected Identification.

Attribute type: Unsigned16

Allowed values: 0 to 1 439

Data Structure

This attribute contains a sequence of data types according to Clause 5.

The sequence is empty if Length Data is 0.

The data structure is derived by local means from the Submodule Ident Number of the addressed submodule within the Expected Identification.

The data structure is adapted from the real configuration's data structure in the following cases: if "Substitute", the application adapts the data structure according to the expected submodule, if "Reduce" was requested, no data is transmitted.

Length IOPS

The attribute Length IOPS defines the number of octets of the provider status.

The attribute is set to 0 in the special case of a submodule with `SubmoduleProperties.Type == NO_IO` and `SubmoduleProperties.DiscardIOXS == TRUE` as stated in the Expected Identification.

Attribute type: Unsigned8

Allowed values: 0, 1

IOPS

The attribute defines the provider status for the IO Data Object Element.

The attribute is missing if Length IOPS is 0.

Attribute type: Unsigned8

Allowed values:

GOOD – content of IO Data Object is valid,

BAD_BY_SUBSLOT – content of IO Data Object is invalid; it was detected by the submodule,

BAD_BY_SLOT – content of IO Data Object is invalid; it was detected by the module,

BAD_BY_DEVICE – content of IO Data Object is invalid; it was detected by the IO device,

Special case: BAD_BY_CONTROLLER – content of IO Data Object Element is invalid, only locally detected by the IO controller itself e.g. through a communication timeout. This value shall only be used with the service parameter IOPS together with the service Get Input at the IO controller. It shall never be applied with the Set Input service at the IO device.

List of IOCS

This list describes where the IOCS of the submodules (indicated by API, Slot and Subslot Number) according to the expected identification are located within the CR.

For a CR having IOCR Type == INPUT_CR the IOCS of submodules with SubmoduleProperties.Type == OUTPUT, and the IOCS related to the “output part” of submodules with SubmoduleProperties.Type == IO are listed.

For a CR having IOCR Type == OUTPUT_CR the IOCS of submodules with SubmoduleProperties.Type == NO_IO and INPUT, and the IOCS related to the “input part” of submodules with SubmoduleProperties.Type == IO are listed.

For a CR having IOCR Type == MULTICAST_PROVIDER_CR or MULTICAST_CONSUMER_CR the List of IOCS is empty, it is the relationship to the existing endpoints and not to an application relationship.

For a dynamically packed frame only the layout of the subframe related to this IO device is described.

A list element consists of the following attributes:

API

This attribute defines to which API the IOCS belongs.

Attribute type: Unsigned32

Allowed values: 0 to 0xFFFFFFFF

Slot Number

This attribute defines to which slot the IOCS belongs.

Attribute type: Unsigned16

Allowed values: 0 to 0x7FFF

Subslot Number

This attribute defines to which subslot the IOCS belongs.

Attribute type: Unsigned16

Allowed values: 0 to 0x9FFF

IOCS Frame Offset

This attribute defines the offset of the IOCS.

The attribute is set to 1440 in the special case of SubmoduleProperties.DiscardIOXS == TRUE as stated in the Expected Identification.

Otherwise, the sum of IOCS Frame Offset and Length IOCS shall not exceed the C_SDU Length.

Attribute type: Unsigned16

Allowed values: 0 to 1 439

Length IOCS

The attribute Length IOCS defines the number of octets of the IOCS.

The attribute is set to 0 in the special case of SubmoduleProperties.DiscardIOXS == TRUE as stated in the Expected Identification.

Attribute type: Unsigned8

Allowed values: 0, 1

IOCS

The attribute defines the consumer status for the IO Data object.

The attribute is missing if Length IOCS is 0.

Attribute type: Unsigned8

Allowed values:

GOOD – the IO Data Object could be successfully processed by the application process,

BAD_BY_CONTROLLER – the IO Data Object could not be successfully processed by the application of the IO controller e.g. in case of an error or as cause of the operation state ("stop") of the IO controller

Special case: BAD_BY_DEVICE – the IO device has locally detected problems to convey data. It shall never be applied with the Set Input IOCS service at the IO controller.

List of Subframe Data

This attribute shall be present if dynamic frame packing is used. The attribute describes the sub-structure of the frame. Dynamic frame packing is indicated by using a Frame ID within the DFP range (see the attribute Frame ID above).

The subframes described in the list are packed one after another without gap; thus the following equation holds:

$$SubframeOffset_n = 2 + \sum_{i=0}^{n-1} SubframeData_i . SubframeDataLength \quad (19)$$

where

<i>SubframeOffset</i>	is the subframe offset
<i>SubframeData</i>	the subframe data
<i>SubframeDataLength</i>	is the length of the subframe

All IO Data Objects and IOCS defined within the List of APIs shall be located within exactly one subframe. The following subframe local offsets shall not be used for IO Data Objects or IOCS to keep the subframe header and footer intact: 0, 1, 2, 3, Subframe Data Length – 2, Subframe Data Length – 1.

The own Subframe Position of a particular IO device is indicated in the IR Info Block delivered in the connect request (see 7.3.1.3.5.1.2).

A list element consists of the following attributes:

Subframe Position

This attribute defines the position number of the subframe. The position number shall be strictly increasing within the list of Subframe Data.

Attribute type: Unsigned8

Allowed values: 0x01 to 0x3F for packetizing and unpacking of subframes during transport and end to end; 0x40 to 0x7F for packetizing and unpacking of subframes end to end; 0x00 and 0x80 to 0xFF reserved

Subframe Length

This attribute defines the length of the subframe.

Attribute type: Unsigned8

Allowed values: 0x01 to 0xFF

IR Frame Data

This optional attribute shall be present, if the attribute RT Class is set to 0x03. Otherwise the attribute shall be omitted.

It consists of the following attributes:

IOCR Tx Ports

This attribute consists of

Port

This attribute indicates the port, where the frame shall be sent.

Attribute type: Unsigned8

Allowed values: 0x01 to 0xFF

Redundant Port

This attribute indicates the port, where the redundant frame shall be sent if the Media Redundancy with planned duplication is used.

This attribute shall be set to zero if not used, otherwise this attribute shall be set to the number of the port, where the redundant frame shall be sent

Attribute type: Unsigned8

Allowed values: 0x00 (mandatory), 0x01 to 0xFF (optional)

Frame Send Offset

This attribute contains the relative send offset to the start of the related reduction ratio and phase of the redundant frame. The time base is 1 ns. The value shall be less than the duration of one phase.

The value is only valid, if the Media Redundancy with planned duplication is used.

Attribute type: Unsigned32

Allowed values: BEST_EFFORT – (mandatory) as soon as possible, 0 – 0x003D08FF for optimized scheduling

Multicast Consumer Data

This attribute shall be present if the attribute IO CR type contains the value MULTICAST_CONSUMER_CR and consists of the following attributes:

Address Resolution Properties

This attribute defines the protocol and interval for address resolution of the multicast provider. It includes the waiting time between two subsequent address resolution cycles.

Protocol

Multicast consumer uses this protocol to resolve the multicast provider source MAC address.

Attribute type: Unsigned8

Allowed values: DNS, DCP

Resolution Factor

Multicast consumer uses this factor to determine the interval for resolving the multicast provider source MAC address.

Attribute type: Unsigned8

Allowed values for interval: 0x0001 to 0xFFFF

Time base: 1 s

MCI Timeout Factor

This attribute defines the monitoring interval for address resolution and in data state of the multicast provider. The application ready shall be delayed until the in data state is reached or the Multicast Initiator Timeout is reached.

Attribute type: Unsigned16

Allowed values: 0x0000 to 0x0064

Time base: 100 ms

Provider Station Name

This attribute defines the IP address or name of the Multicast Provider.

The syntax of the attribute CM Initiator Station Name shall be applied.

Attribute type: VisibleString[240]

Multicast Provider State

This parameter is the local status for the multicast consumer CR.

Attribute type: Unsigned16

Allowed values: UP_AND_RUNNING, MULTICAST_PROVIDER_NOT_AVAILABLE

7.3.1.4.5 Services**7.3.1.4.5.1 Local Set Input**

The Set Input service sets new input data of one submodule together with its IOPS for next transmission for all related application relationships. Input data and IOPS shall be set consistently. The value of IOPS shall only be "GOOD" if the input data is valid. In all other cases the value shall be set to "BAD_BY_xxx" and include the detecting instance e.g. subslot, slot or IO device. This service is used by the application process of the IO device to update the cyclic buffer. The actual transmission of the buffer is triggered in an own cycle defined with the related parameters in CR and is independent from application cycle.

The Set Input service sets the IOPS only if the submodule does not contain input data.

This service shall only be used in conjunction with the IO AR and Supervisor AR.

Table 149 shows the parameters of the service.

Table 149 – Local Set Input

Parameter name	req	cnf
Argument	M	
AREP	M	
CREP	M	
API	M	
Slot Number	M	
Subslot Number	M	
IOPS	M	
Subslot Input Data	U	
Result(+)		S
AREP		M
Result(-)		S
AREP		M

NOTE The Set Input service sets the input data for all established ARs that belong to the submodule. In this case multiple calls for shared inputs are not necessary. Therefore, the AR and CR service parameter are omitted.

Argument

The argument shall convey the service specific parameters of the service request.

AREP

This parameter is the local identifier for the desired AR.

CREP

This parameter is the local identifier for the desired CR.

API

This parameter contains the number of the application process.

Slot Number

This parameter contains the slot number.

Subslot Number

This parameter contains the subslot number.

IOPS

This parameter shall contain the values according to the attribute in the Communication Relationship class (see 7.3.1.4.4).

Subslot Input Data

This parameter contains the value of the Input Data object element.

Result(+)

This parameter indicates that the service request succeeded.

Result(-)

This parameter indicates that the service request failed.

7.3.1.4.5.2 Local Set Input IOCS

This service shall be used by a consumer (IO controller) of inputs to pass the value of changed IOCS to the application layer. The IOCS is conveyed back to the provider and provides a means to monitor the application. This service shall only be used in conjunction with the IO AR and Supervisor AR.

Table 150 shows the parameters of the service.

Table 150 – Local Set Input IOCS

Parameter name	req	cnf
Argument	M	
AREP	M	
CREP	M	
API	M	
Slot Number	M	
Subslot Number	M	
IOCS	M	
Result(+)		S
AREP		M
Result(-)		S
AREP		M

Argument

The argument shall convey the service specific parameters of the service request.

AREP

This parameter is the local identifier for the desired AR.

CREP

This parameter is the local identifier for the desired CR.

API

This parameter contains the number of the application process.

Slot Number

This parameter contains the slot number.

Subslot Number

This parameter contains the subslot number.

IOCS

This parameter shall contain the values GOOD or BAD_BY_CONTROLLER.

Result(+)

This parameter indicates that the service request succeeded.

Result(-)

This parameter indicates that the service request failed.

7.3.1.4.5.3 Local Get Input

This service shall only be used in conjunction with the IO AR and Supervisor AR. It is used by an IO controller to read the values of an input data subslot with the related IOPS. Table 151 shows the parameters of the service.

Table 151 – Local Get Input

Parameter name	req	cnf
Argument	M	
AREP	M	
CREP	M	
API	M	
Slot Number	M	
Subslot Number	M	
Result(+)		S
AREP		M
IOPS		M
Subslot Input Data		C
New Flag		M
IOCS		C
Result(-)		S
AREP		M

Argument

The argument shall convey the service specific parameters of the service request.

AREP

This parameter is the local identifier for the desired AR.

CREP

This parameter is the local identifier for the desired CR.

API

This parameter contains the number of the application process.

Slot Number

This parameter contains the slot number.

Subslot Number

This parameter contains the subslot number.

Result(+)

This parameter indicates that the service request succeeded.

IOPS

This parameter contains the value of the corresponding attribute of the Input Data object.

Subslot Input Data

This parameter contains the value of the Input Data object.

New Flag

This parameter contains the value TRUE if new Input data with IOPS have been received since last time calling the service. If the service was called more frequently the New Flag is set to FALSE by the protocol machines.

IOCS

This parameter contains the value of the IOCS in case there is corresponding Output Data object.

Result(-)

This parameter indicates that the service request failed.

7.3.1.4.5.4 Local Get Input IOCS

This service shall only be used in conjunction with the IO AR and Supervisor AR. It is used by a provider to get the IOCS of the IO controller. Table 152 shows the parameters of the service.

Table 152 – Local Get Input IOCS

Parameter name	req	cnf
Argument	M	
AREP	M	
CREP	M	
API	M	
Slot Number	M	
Subslot Number	M	
Result(+)		S
AREP		M
IOCS		M
Result(-)		S
AREP		M

Argument

The argument shall convey the service specific parameters of the service request.

AREP

This parameter is the local identifier for the desired AR.

CREP

This parameter is the local identifier for the desired CR.

API

This parameter contains the number of the application process.

Slot Number

This parameter contains the slot number.

Subslot Number

This parameter contains the subslot number.

Result(+)

This parameter indicates that the service request succeeded.

IOCS

This parameter contains the value of the IOCS.

Result(-)

This parameter indicates that the service request failed.

7.3.1.4.5.5 Local New Input

The New Input service signals to the application of the IO controller an update of the input buffer after reception of a valid APDU. Table 153 shows the parameters of the service.

Table 153 – Local New Input

Parameter name	ind
Argument	M
AREP	M
CREP	M
API	M
Slot Number	M
Subslot Number	M
InData Flag	C

Argument

The argument shall convey the service specific parameters of the service indication.

AREP

This parameter is the local identifier for the desired AR passed with the indication.

CREP

This parameter is the local identifier for the desired CR passed with the indication.

API

This parameter contains the number of the application process.

Slot Number

This parameter contains the slot number.

Subslot Number

This parameter contains the subslot number.

InData Flag

This parameter indicates that the received buffer is usable or not.

NOTE All consumer IOCRs of the AR have got data first time.

7.3.1.4.5.6 Local Set Output

The Set Output service sets new output data of one slot/subslot together with its IOPS for next transmission for all related application relationships. The IOPS shall be at any time consistent with delivered Output Data values. The value of IOPS shall only be “GOOD” for valid output data of the whole subslot. In all other cases the value shall be set to “BAD_BY_CONTROLLER”. This service is used by the application process of the IO controller to update the addressed part of the protocol internal cyclic buffer. The actual transmission of the buffer is time triggered.

The local implementation of the service interface can support access variants with other than subslot granularity e.g. for more than one subslot or only parts (variables) of the Output Data object element. However, the Output Data object element is always consistent with its IOPS.

This service shall only be used in conjunction with the IO AR or Supervisor AR.

Table 154 shows the parameters of the service.

Table 154 – Local Set Output

Parameter name	req	cnf
Argument	M	
AREP	M	
CREP	M	
API	M	
Slot Number	M	
Subslot Number	M	
IOPS	M	
Subslot Output Data	M	
Result(+)		S
AREP		M
Result(-)		S
AREP		M

Argument

The argument shall convey the service specific parameters of the service request.

AREP

This parameter is the local identifier for the desired AR.

CREP

This parameter is the local identifier for the desired CR.

API

This parameter contains the number of the application process.

Slot Number

This parameter contains the slot number.

Subslot Number

This parameter contains the subslot number.

IOPS

This parameter shall contain the values according to the attribute in the Communication Relationship class (see 7.3.1.4.4).

Subslot Output Data

This parameter contains the value of the Output Data object element.

Result(+)

This parameter indicates that the service request succeeded.

Result(-)

This parameter indicates that the service request failed.

7.3.1.4.5.7 Local Set Output IOCS

This service shall be used by a consumer (IO device) of outputs to pass the value of changed IOCS to the application layer. The IOCS is conveyed back to the provider and provides a means to monitor the application. This service shall only be used in conjunction with the IO AR and Supervisor AR.

Table 155 shows the parameters of the service.

Table 155 – Local Set Output IOCS

Parameter name	req	cnf
Argument	M	
AREP	M	
CREP	M	
API	M	
Slot Number	M	
Subslot Number	M	
IOCS	M	
Result(+)		S
AREP		M
Result(-)		S
AREP		M

Argument

The argument shall convey the service specific parameters of the service request.

AREP

This parameter is the local identifier for the desired AR.

CREP

This parameter is the local identifier for the desired CR.

API

This parameter contains the number of the application process.

Slot Number

This parameter contains the slot number.

Subslot Number

This parameter contains the subslot number.

IOCS

This parameter can contain the values GOOD, BAD_BY_DEVICE, BAD_BY_SLOT, or BAD_BY_SUBSLOT.

Result(+)

This parameter indicates that the service request succeeded.

Result(-)

This parameter indicates that the service request failed.

7.3.1.4.5.8 Local Get Output

This service shall be used by an IO device to read the value for one slot/subslot of an Output Data object element together with its IOPS from the application layer. This service shall only be used in conjunction with the IO AR or Supervisor AR.

The IO device shall only process the values of the Output Data object element if the IOPS contains the value GOOD. Table 156 shows the parameters of the service.

Table 156 – Local Get Output

Parameter name	req	cnf
Argument	M	
AREP	M	
CREP	M	
API	M	
Slot Number	M	
Subslot Number	M	
Result(+)		S
AREP		M
IOPS		M
Subslot Output Data		M
New Flag		M
IOCS		C
Result(-)		S
AREP		M

Argument

The argument shall convey the service specific parameters of the service request.

AREP

This parameter is the local identifier for the desired AR passed with the indication.

CREP

This parameter is the local identifier for the desired CR passed with the indication.

API

This parameter contains the number of the application process.

Slot Number

This parameter contains the slot number.

Subslot Number

This parameter contains the subslot number.

Result(+)

This parameter indicates that the service request succeeded.

IOPS

This parameter contains the value of the corresponding attribute of the Output Data object element.

Subslot Output Data

This parameter contains the value of the Output Data object.

New Flag

This parameter contains the value TRUE if new Output data with IOPS have been received since last time calling the service. If the service was called more frequently the New Flag is set to FALSE by the protocol machines.

IOCS

This parameter contains the value of the IOCS in case there is a corresponding Input Data object.

Result(-)

This parameter indicates that the service request failed.

7.3.1.4.5.9 Local Get Output IOCS

This service shall be used by an IO device to read the IOCS from the application layer. This service shall only be used in conjunction with the IO AR or Supervisor AR. Table 157 shows the parameters of the service.

Table 157 – Local Get Output IOCS

Parameter name	req	cnf
Argument	M	
AREP	M	
CREP	M	
API	M	
Slot Number	M	
Subslot Number	M	
Result(+)		S
AREP		M
IOCS		M
Result(-)		S
AREP		M

Argument

The argument shall convey the service specific parameters of the service request.

AREP

This parameter is the local identifier for the desired AR passed with the indication.

CREP

This parameter is the local identifier for the desired CR passed with the indication.

API

This parameter contains the number of the application process.

Slot Number

This parameter contains the slot number.

Subslot Number

This parameter contains the subslot number.

Result(+)

This parameter indicates that the service request succeeded.

IOCS

This parameter contains the value of the IOCS.

Result(-)

This parameter indicates that the service request failed.

7.3.1.4.5.10 Local New Output

The New Output service signals to the application of the IO device a update of the output buffer after reception of a valid APDU. Table 158 shows the parameters of the service.

Table 158 – Local New Output

Parameter name	ind
Argument	M
AREP	M
CREP	M
API	M
Slot Number	M
Subslot Number	M
InData Flag	M

Argument

The argument shall convey the service specific parameters of the service indication.

AREP

This parameter is the local identifier for the desired AR passed with the indication.

CREP

This parameter is the local identifier for the desired CR passed with the indication.

API

This parameter contains the number of the application process.

Slot Number

This parameter contains the slot number.

Subslot Number

This parameter contains the subslot number.

InData Flag

This parameter indicates that the received buffer is usable or not.

NOTE All consumer IOCRs of the AR have got data first time.

7.3.1.4.5.11 Local Set Provider State

This service shall be used by the IO controller to set the “Provider State Flag” in the field APDU Data Status of the next conveyed APDU. The flag “Provider State Flag” influences all established ARs of the IO device. Table 159 shows the parameters of the service.

Table 159 – Local Set Provider State

Parameter name	req	cnf
Argument	M	
AREP	U	
Provider State Flag	U	
Result(+)		S
AREP		M
Result(-)		S
AREP		M

Argument

The argument shall convey the service specific parameters of the service indication.

AREP

This parameter is the local identifier for the desired AR passed with the request. It is omitted if the service parameter Provider State Flag is used because this parameter influences all established ARs transmitting IO Data.

Provider State Flag

This parameter indicates if the application process is running by the value “run” or is stopped by the value “stop”. The validity of data is indicated by IOPS only and not by this flag.

NOTE This flag could be used to control a global indicator to visualize the global remote application status.

Result(+)

This parameter indicates that the service request succeeded.

Result(-)

This parameter indicates that the service request failed.

7.3.1.4.5.12 Local Set Redundancy

This service shall be used by the IO device to set the “Redundancy Flag” of the selected AR. Table 160 shows the parameters of the service.

Table 160 – Local Set Redundancy

Parameter name	req	cnf
Argument	M	
AREP	U	
Redundancy Flag	U	
Result(+)		S
AREP		M
Result(-)		S
AREP		M

Argument

The argument shall convey the service specific parameters of the service indication.

AREP

This parameter is the local identifier for the desired AR passed with the request. It is omitted if the service parameter Provider State Flag is used because this parameter influences all established ARs transmitting IO Data.

Redundancy Flag

This parameter indicates with the value “primary present” that one AR within the AR set is in state “primary”. The value “no primary present” indicates that none of the AR within the AR set is seen as “primary”.

Result(+)

This parameter indicates that the service request succeeded.

Result(-)

This parameter indicates that the service request failed.

7.3.1.4.5.13 Local Set State

This service shall be used by the IO device to set the “State Flag” of the selected AR. Table 161 shows the parameters of the service.

Table 161 – Local Set State

Parameter name	req	cnf
Argument	M	
AREP	U	
State Flag	U	
Result(+)		S
AREP		M
Result(-)		S
AREP		M

Argument

The argument shall convey the service specific parameters of the service indication.

AREP

This parameter is the local identifier for the desired AR passed with the request. It is omitted if the service parameter Provider State Flag is used because this parameter influences all established ARs transmitting IO Data.

State Flag

This parameter indicates if the AR is operating with the value “primary” or standby with the value “backup”. The default value is “primary”.

Result(+)

This parameter indicates that the service request succeeded.

Result(-)

This parameter indicates that the service request failed.

7.3.1.4.5.14 Local Data State Changed

The service signals a changed of the APDU Data Status value to the application of the IO controller or IO device. This service shall only be conveyed if the APDU Data Status value has been changed by the IO device or the IO controller and shall provide only the changed flags. Table 162 shows the parameters of the service.

Table 162 – Local Data State Changed

Parameter name	ind
Argument	M
AREP	M
CREP	M
Data Valid Flag	C
State Flag	C
Redundancy Flag	C
Provider State Flag	C
Problem Indicator Flag	C

Argument

The argument shall convey the service specific parameters of the service indication.

AREP

This parameter is the local identifier for the desired AR passed with the indication.

CREP

This parameter is the local identifier for the desired CR passed with the indication.

Data Valid Flag

This parameter indicates with the value “DataItem invalid” that all data (inclusive IOPS) of the AR are not valid and shall not be processed by the consumer.

The Data Valid Flag with “DataItem invalid” could be used if the application process of the IO device is not able to set Input Data and/or IOPS due to a fatal application error. However, it should be used only in such serious cases because the Data Hold Time times out at the consumer and terminates the connection. In all other cases the IOPS should be used to tell the consumer about the status of the input data.

The value “DataItem valid” indicate that the data values including the IOPS, IOCS are valid.

State Flag

This parameter indicates if the AR is operating with the value “primary” or standby with the value “backup”.

Redundancy Flag

This parameter indicates with the value “primary present” that one AR within the AR set is “primary”. The value “no primary present” indicates that none of the AR within the AR set is seen as “primary”.

Provider State Flag

This parameter indicates if the application process is running with the value “run” or stopped with the value “stop”. This value is only informative for the consumer application process, the actual validity of the data shall be according to IOPS.

NOTE 1 This flag could be used to control a global indicator to visualize the global remote application status.

Problem Indicator Flag

This parameter indicates if at least one diagnoses value is set within the Diagnosis ASE, which affects the related AR. It is indicated by the value “Problem detected”. It shall be set to “Regular operation” as long as no diagnosis entry exists.

NOTE 2 This flag could be used to trigger the reading of diagnosis data within the IO controller. This flag does not say anything about the validity of input data that is only indicated by IOPS.

A diagnosis entry could cause also to change the IOPS to “BAD” for local reasons by means of the Set Input service.

7.3.1.4.6 Behavior**7.3.1.4.6.1 Validity of process data****7.3.1.4.6.1.1 IOPS**

The IOPS (Input Output Provider Status) describes the validity of data source as being seen by the subscriber of the data.

It belongs to Output Data for an IO controller and to Input Data for an IO device. The IOPS is transmitted in the same IOCR as the submodule’s data itself (i.e. in the output CR for output data, in the input CR for input data).

NOTE 1 If a submodule does not contain any input or output data it is considered as an Input Data item with the length of Input Data attribute set to zero.

The detecting instance shall set the IOPS accordingly and immediately. The IOPS is set by local means; e.g. on configuration errors, on submodule or module pulled, on insufficient parameterization state of the submodule (application ready pending), on diagnosis...

The IOPS can be set by individual instances participating when transmitting the input data: by the submodule (including the sensor), by the module, by the IO device, and by the IO controller (locally, e.g. data hold timeout). It allows therefore identifying the first instance which detected the invalid content, with the help of the following values:

- GOOD – data is valid
- BAD_BY_SUBSLOT – data is invalid as detected by the submodule
- BAD_BY_SLOT – data is invalid as detected by the module
- BAD_BY_DEVICE – data is invalid as detected by the IO device
- BAD_BY_CONTROLLER – data is invalid as detected by the IO controller

The IOPS is set to GOOD if the submodule's data is valid.

The IOPS shall be set to BAD_BY_xxx

- if the submodule is not available at the AR (pulled, locked by supervisor, superordinated locked, application ready pending, and wrong submodule).
- if the application considers the data as not valid (e.g. power failure at the submodule, ...).

NOTE 2 For submodules without data, the IOPS is expected to be GOOD (preferred solution), even if ApplicationReadyPending is set.

The IOPS of output data informs the device about the validity of the data coming from the IO controller (set by the IO controller).

If output data has been set to invalid using IOPS = BAD_BY_CONTROLLER, the device application shall not process this data; it shall apply a substitute value instead, to ensure that the output reaches a safe state in regard to the user's application (e.g. applying "0", a fixed substitute value...).

The default for the substitute value is defined by the device application; this default may be overridden (if provided by the IO device) by parameterization (e.g. holding the last valid value instead). IEC 61158-6-10 provides the standard parameterization data record "Substitute value for one subslot" (index 0x801E); a device application can however use a manufacturer specific parameterization record instead.

The IOPS of input data informs the IO controller about the validity of the data coming from the IO device (set by the IO device).

If input data has been set to invalid by the IO device by using IOPS = BAD_BY_SUBSLOT, BAD_BY_SLOT, or BAD_BY_DEVICE, the user application in the IO controller's host shall not process this data. The behavior here is locally defined in the IO controller (such as raising an access error, use local defined substitute values...).

Note that having diagnosis information for a particular input submodule does not imply that its IOPS is set to BAD_BY_xxx. For example, the diagnosis "overtemperature" can still allow providing valid data (in this case set IOPS to GOOD), whereas the diagnosis "parameterization fault" does not allow providing valid data (in this case set IOPS to BAD_BY_xxx).

7.3.1.4.6.1.2 IOCS

The IOCS (Input Output Consumer Status) indicates whether the application (controller or device) is processing the value.

It belongs to Input Data for an IO controller and to Output Data for an IO device. The IOCS is transmitted in the accompanying IOCR to the submodule's data (i.e. in the input CR for output data, in the output CR for input data).

The IOCS is set by individual instances participating when transmitting the output data: by the submodule (including the actor), by the module, by the IO device, and by the IO controller (for an input module locally, e.g. data hold timeout; for an output module e.g. due to being in operating state Stop).

The detecting instance shall set the IOCS accordingly and immediately. The IOCS is set by local means; e.g. on configuration errors, on submodule or module pulled, on insufficient parameterization state of the submodule (application ready pending), on diagnosis...

The IOCS allows identifying the first instance which does no longer process the content, with the help of the following values:

- GOOD – data is processed by the application
- BAD_BY_SUBSLOT – data is not being processed by the application as detected by the submodule
- BAD_BY_SLOT – data is not being processed by the application as detected by the module
- BAD_BY_DEVICE – data is not being processed by the application as detected by the device
- BAD_BY_CONTROLLER – not being processed by the application as detected by the submodule.

The IOCS is set to GOOD if the data is processed by the application.

The IOCS is set to BAD_BY_XXX

- if the submodule is not available for the AR (pulled, locked by supervisor, superordinated locked, application ready pending, wrong submodule).
- if the device application does not process the data (e.g. hand operation).

The IOCS of input data informs the IO device whether its IO controller processes this input data.

The IOCS of output data informs the IO controller whether the IO device processes this output data.

Note that having diagnosis information for a particular output submodule does not imply that its IOCS is set to BAD_BY_XXX. For example, the diagnosis "overtemperature" can still allow to process the data (in this case set IOCS to GOOD), whereas the diagnosis "parameterization fault" does not allow to process the data (in this case set IOCS to BAD_BY_XXX).

7.3.1.4.6.1.3 Interdependencies between IOPS and corresponding IOCS

For an IO device applies: The IOCS shall be set independent of the corresponding IOPS; i.e. if the IOPS is set to BAD_BY_CONTROLLER but the IO device is still able to process the data, the IOCS shall be kept on GOOD.

For an IO controller applies: The IOCS can be set dependent or independent of the corresponding IOPS. The possible action of the IO controller is beyond the scope of this service definition.

NOTE The best practice pattern for the handling within the IO controller is: If IO device is not able to process the output data (indicated by setting the IOCS to "BAD_BY_SUBSLOT/SLOT/DEVICE"), the IO controller's application should set the corresponding IOPS to "BAD_BY_CONTROLLER". Thus allows the IO controller's application to apply initial values whenever the IO device is able to process the output data again; indicated by setting the IOCS to "GOOD" and sending a "return of submodule" alarm. During process of the alarm within the IO controller's application the initial value is applied to the output data and in consequence the IOPS is set to "GOOD" again.

The possible action of the IO device is beyond the scope of this service definition.

7.3.1.4.6.1.4 Behavior on Connect, Plug, Prm Begin and Application Ready

To simplify the further description BAD_BY_XXX is used to indicate BAD_BY_SUBSLOT, BAD_BY_SLOT, or BAD_BY_DEVICE.

If the AR Info responded in the Module Diff Block for a particular submodule states APPLICATION_READY_PENDING, the corresponding IOPS/IOCS shall be set to BAD_BY_XXX.

The IOPS/IOCS shall be set to GOOD earliest after finishing the submodule parameterization and if no further circumstances (e.g. application) hinder the validity of the data.

If the AR Info responded in the Module Diff Block for a particular submodule states SUPERORDINATED_LOCKED, LOCKED_BY_IO_CONTROLLER, or LOCKED_BY_IO_SUPERVISOR, the corresponding IOPS/IOCS shall be set to BAD_BY_XXX.

The IOPS/IOCS shall be set to GOOD earliest if the application relation gets the ownership and if no further circumstances (e.g. application) hinder the validity of the data.

If the Ident Info responded in the Module Diff Block for a particular submodule states WRONG or NO, the corresponding IOPS/IOCS shall be set to BAD_BY_XXX.

The IOPS/IOCS shall be set to GOOD earliest after plugging the right submodule, if the application relation gets the ownership, and if no further circumstances (e.g. application) hinder the validity of the data.

If the Module State responded in the Module Diff Block for a particular module states WRONG_MODULE or NO_MODULE, all corresponding IOPS/IOCS of that module's submodules shall be set to BAD_BY_XXX.

The IOPS/IOCS shall be set to GOOD earliest for a particular submodule after plugging the right module with that submodule, if the application relation gets the ownership, and if no further circumstances (e.g. application) hinder the validity of the data.

7.3.1.4.6.1.5 Behavior on transitions

If an IO device changes a particular IOPS/IOCS, it shall indicate a reason to the IO controller.

- On transition from GOOD to BAD_BY_XXX:
 - If the submodule's ownership changed to an IO supervisor or to the application (i.e. superordinated locked), the reason is indicated by a Controller by supervisor alarm.
 - If the submodule has been pulled, the reason is indicated by a Pull alarm.
 - If the application indicates the invalidity of the IO data, the reason is indicated e.g. by a coming diagnosis alarm, by setting ProviderState to "Stop"...
- On transition from BAD_BY_XXX to GOOD:
 - If the submodule's ownership changed back to the IO controller, the reason is indicated by Released alarm.
 - If the submodule has been plugged again, the reason is indicated by a Plug alarm.
 - If the application indicates the validity of the IO data, the reason is indicated e.g. by a going diagnosis alarm, by setting ProviderState to "Run"... Additionally a Return of Submodule alarm shall be indicated.

Note that having diagnosis information for a particular submodule does not imply that its IOPS or IOCS are set to BAD_BY_XXX.

7.3.1.4.6.1.6 Validity of channel data

The validity of submodule data is covered by the IOPS as described above. Since however submodules are sub-structured in channels, the validity of a channel is coverable by the IOPS only if the submodule contains exactly one channel. If the submodule contains more channels, we need additional information.

A device application handles the validity of a particular channel using the following approaches:

- by using “**safe**” **values** for a channel, if channel data is invalid (e.g. 0x7FFF for analogue data or FALSE for digital data)
- by providing **validity information** within the IO data describing the (in)validity of channel data.

The following well-known mechanisms to provide validity information are recommended:

- **qualifier**
A bit allows specifying BAD (0x0) or GOOD (0x1)
- **status**
Two bits allow specifying BAD (0x0), SIMULATION (0x1), UNCERTAIN (0x2), and GOOD (0x3)
- **process value status**
An octet allows defining multiple values to specify the validity; the interpretation of the octet is not specified by this specification

NOTE The following data types include validity information: OctetString2+Unsigned8 (see 5.3.1.6.4), Float32+Unsigned8 (see 5.3.1.6.5), Unsigned8+Unsigned8 (see 5.3.1.6.7), Unsigned16_S (see 5.3.1.6.8), Integer16_S (see 5.3.1.6.9), Unsigned8_S (see 5.3.1.6.10), and OctetString_S (see 5.3.2.2).

The validity information is transported along with the channel data using cyclic services (i.e. RTC). Channel data is a contiguous section of the IO data, the validity information related to this channel (if provided) is also part of the IO data (could be located adjacent to the data or at “some other place”).

If the IOPS is set to BAD_BY_XXX, all channel related validity information is BAD.

If channel data falls off or improves its quality, indicated by a change of the validity information, diagnosis information for this channel shall be added resp. removed. Therefore, the information within the diagnosis ASE (i.e. the channel error...) indicates the reason for the change of the quality.

Since transporting data (cyclic, buffered) and alarms (acyclic, queued) is not synchronized, information related to presence or absence of diagnosis within the validity information can stand in conflict to the actual known diagnosis state of the channel. Thus, do not use such information to derive diagnosis information; but use the diagnosis information delivered on the standard way (diagnosis ASE, alarm ASE).

7.3.1.4.6.1.7 Validity of process data

The definitions above define how to determine the validity of process data.

Process data of a particular channel is valid

- if the IOPS of the submodule is GOOD,
- **and** (if provided) the validity information related to this channel is GOOD.

If status or process value status are provided as validity information, the validity information provides beyond GOOD and BAD more values (e.g. UNCERTAIN or SIMULATION). It is left to the programmer, whether to accept a value with this validity information.

7.3.1.4.6.2 Rules for communication relationships

All IOCRs within a particular application relationship shall have

- the **same** SendClockFactor,
- the **same** frame ID range (called IOCRProperties.RTClass in the Connect request),
- and the **same** DataHoldFactor.

The frame ID range shall match the ARTYPE:

- If ARTYPE is set to IOCARSsingle using RT_CLASS_3 (0x0010) then IOCRProperties.RTClass shall be set to 0x03 (range 3).
- If ARTYPE is set to IOCARSsingle (0x0001), IOSAR (0x0006), or IOCARSR (0x0020) then IOCRProperties.RTClass shall be set to 0x01 (range 7, RTC1), 0x02 (range 6, RTC1 or RT stream), or 0x04 (range 7, RTC_UDP).
- If ARTYPE is set to IOCARSsingle, IOSAR, or IOCARSR and ARProperties.TimeAwareSystem is set to TimeAware then IOCRProperties.RTClass shall be set to 0x03 (range 3, time-aware TSN stream).

NOTE 1 Same SendClockFactor is enforced by IEC 61158-6-10; same frame ID range reduces complexity; same DataHoldFactor reduces user complexity.

IOCRs may therefore differ in the parameters ReductionRatio, Phase, Sequence, FrameSendOffset and Content.

An application relationship using DFP has exactly one input and one output CR (see IEC 61158-6-10 IRInfoBlock request checking rules). DFP limits due to its subframe definition the input/output data size for a particular pack group member to 255.

There exists at least one input and one output CR.

The number of input CRs and output CRs can differ (e.g. there are four input and two output CRs).

NOTE 2 This is needed to support the mutual surveillance.

Each IOCR is scheduled and monitored independently according to its parameters (SendClockFactor, RTClass, ReductionRatio, Phase, Sequence, FrameSendOffset, and DataHoldFactor).

IN_DATA on the IO controller is reached, when

- ApplicationReady.req has been received,
- AND**
- Data has been received on each input CR

If the loss of a particular IOCR is detected by the consumer, the application relationship is released / aborted regardless of whether other IOCRs belonging to the same application relationship are still in data.

The effective DataHoldTime is determined by using the smallest reduction ratio of all consumers, multiplied with the SendClockFactor and with the DataHoldFactor.

7.3.1.4.6.3 Rules for padding

To spare bandwidth and IO device resources the IO controller shall pack the CRs; i.e. data, IOPS and IOCS shall be located without padding.

Paddings are enforced as follows:

- If the CR's data has less than 40 octets when using RT_CLASS_1 or RT_CLASS_3, or less than 12 octets when using RT_CLASS_UDP, the C_SDU is filled up with padding octets to reach the minimum Ethernet packet size.
- If a particular device (IO device or IO controller) expects subframes on word alignment, a subframe having an uneven data length is padded up with one octet to achieve word alignment.

7.3.1.5 Expected Identification class

7.3.1.5.1 Overview

The Expected Identification Class identifies the expected identification of the submodules as requested by the IO controller.

7.3.1.5.2 Relations

The services are bound to other services as shown in Table 163:

Table 163 – Binding expected identification services

Service	Binding	Usage
Read Expected Identification Data for one subslot	RPC::Read RSI::Call(Read)	Used by IO controller or IO supervisor
Read Expected Identification Data for one slot	RPC::Read RSI::Call(Read)	Used by IO controller or IO supervisor
Read Expected Identification Data for one AR	RPC::Read RSI::Call(Read)	Used by IO controller or IO supervisor

7.3.1.5.3 Template

This class specifies the object for the parameter data that are related to the IO devices itself and/or to the modules/submodules of the IO device.

The IO device context object is described by the following template:

ASE: AR ASE

CLASS: Expected Identification

CLASS ID: not used

PARENT CLASS: TOP

ATTRIBUTES:

- 1 (m) Key Attribute: Implicit
- 2 (m) Attribute: List of ARs
- 2.1 (m) Attribute: AREP
- 2.2 (m) Attribute: List of Expected APIs
- 2.2.1 (m) Attribute: API
- 2.2.2 (m) Attribute: Slot Number
- 2.2.3 (m) Attribute: Module Ident Number
- 2.2.4 (m) Attribute: Module Properties
- 2.2.5 (m) Attribute: Module State
- 2.2.6 (m) Attribute: List of Expected Submodules
- 2.2.6.1 (m) Attribute: Subslot Number
- 2.2.6.4 (m) Attribute: Submodule Ident Number
- 2.2.6.5 (m) Attribute: Submodule Properties
- 2.2.6.5.1 (m) Attribute: Type

2.2.6.5.2	(m) Attribute:	Shared Input
2.2.6.5.3	(m) Attribute:	Reduce Input Submodule Data Length
2.2.6.5.4	(m) Attribute:	Reduce Output Submodule Data Length
2.2.6.5.5	(m) Attribute:	Discard IOXS
2.2.6.6	(m) Attribute:	List of Data Descriptions
2.2.6.6.1	(m) Attribute:	Data Direction
2.2.6.6.2	(m) Attribute:	Submodule Data Length
2.2.6.6.3	(m) Attribute:	Length IOPS
2.2.6.6.4	(m) Attribute:	Length IOCS
2.2.6.7	(m) Attribute:	Submodule State
2.2.6.7.1	(m) Attribute:	Add Info
2.2.6.7.2	(m) Attribute:	Qualifier Info
2.2.6.7.3	(m) Attribute:	Maintenance Required
2.2.6.7.4	(m) Attribute:	Maintenance Demanded
2.2.6.7.5	(m) Attribute:	Fault
2.2.6.7.6	(m) Attribute:	AR Info
2.2.6.7.7	(m) Attribute:	Ident Info

SERVICES:

1	(m) OpsService:	Read Expected Identification Data for one subslot
2	(m) OpsService:	Read Expected Identification Data for one slot
3	(m) OpsService:	Read Expected Identification Data for one AR
4	(m) OpsService:	Read Module Diff Block for one AR

7.3.1.5.4 Attributes**Implicit**

The key attribute Implicit indicates that the Expected Identification object is implicitly addressed by the services.

List of ARs

One AR is composed of the following list elements:

AREP

This attribute identifies the AR this Expected Identification belongs. It is a cross reference to the application relationship class.

List of Expected Submodules

This list contains the expected submodules as given by the IO controller / supervisor in the Connect request.

One Expected Submodule is composed of the following list elements:

API

This attribute defines the expected number of the application process the submodule is assigned to.

Attribute type: Unsigned32

Allowed values: 0 to 0xFFFFFFFF

Slot Number

This attribute defines the expected slot the submodule is assigned to.

Attribute type: Unsigned16

Allowed values: 0 to 0x7FFF

Module Ident Number

This attribute defines the expected identification of the module.

Attribute type: Unsigned32

Allowed values: 1 to 0xFFFFFFFF

NOTE 1 The attribute value is manufacturer specific. See 7.1.4.6.4 for details.

Module Properties

This attribute is reserved for further use.

Attribute type: Unsigned16

Allowed values: see IEC 61158-6-10

Module State

This attribute defines the deviation between expected module and the module in the real identification.

Attribute type: Unsigned16

Allowed values: Shall be set according to Table 164.

Table 164 – Module State

Value	Use
NO_MODULE	The slot exists and the module is not plugged.
WRONG_MODULE	The module ident number is wrong. This coding should be avoided; use “Substitute” for the module and “Wrong (WR)” for each submodule
PROPER_MODULE	The slot exists and the module is okay.
SUBSTITUTE	The slot exists and the module is not the same as requested – but compatible. The IO device was able to adapt by its own decision. This coding should be used in conjunction with “Wrong (WR)” for each submodule

List of Expected Submodules

This list contains the expected submodules as given by the IO controller / supervisor in the Connect request.

One Expected Submodule is composed of the following list elements:

Subslot Number

This attribute defines the expected subslot the submodule is assigned to.

Attribute type: Unsigned16

Allowed values: 0 to 0x9FFF

Submodule Ident Number

This attribute defines the expected identification of the submodule.

Attribute type: Unsigned32

Allowed values: 0x0, 0x1 to 0xFFFFFFFF

NOTE 2 The attribute value is manufacturer specific, whereby the value 0 should not be used. See 7.1.4.6.4 for details.

Submodule Properties

This attribute consists of the following attributes.

Type

This attribute defines the type of the submodule.

Attribute type: Unsigned16

Allowed values: NO_IO, INPUT, OUTPUT, IO

Shared Input

This attribute defines whether to use the input submodule data as “shared input”. The value SHARED_INPUT shall only be used if the attribute Submodule type contains the value INPUT or IO.

Attribute type: Unsigned8

Allowed values: SHARED_INPUT, NOT_SHARED_INPUT

Reduce Input Submodule Data Length

This attribute defines whether to use the expected input submodule data length for the input CR or to reduce the submodule data length to zero.

The value ZERO shall only be used if the attribute Submodule type contains the value INPUT or IO. This flag is used for the input CR, if the submodule is configured as multicast provider, the IO controller is interested in diagnosis/availability of the submodule and does not need access to IO data.

Attribute type: Unsigned8

Allowed values: EXPECTED, ZERO

Reduce Output Submodule Data Length

This attribute defines whether to use the expected output submodule data length for the output CR or to reduce the submodule data length to zero.

The value ZERO shall only be used if the attribute Submodule type contains the value OUTPUT or IO. This flag shall be used for the output CR, if the submodule is configured as multicast consumer, the submodule data is delivered by some multicast provider (other than the IO controller), and the IO controller is interested only in diagnosis/availability of the submodule and does not set the IO data.

Attribute type: Unsigned8

Allowed values: EXPECTED, ZERO

Discard IOXS

This attribute defines whether to transfer the expected IOXS for this submodule in the corresponding CRs or not. The value TRUE shall only be used if the attribute Submodule type contains the value NO_IO.

Attribute type: Unsigned8

Allowed values: FALSE, TRUE

List of Data Descriptions

The following rules apply for the data descriptions.

There shall be one data description with Data Direction = DIRECTION_INPUT for a submodule of Type NO_IO or INPUT.

There shall be one data description with Data Direction = DIRECTION_OUTPUT for a submodule of Type OUTPUT.

There shall be a data description with Data Direction = DIRECTION_INPUT and followed by a data description with Data Direction = DIRECTION_OUTPUT for a submodule of Type IO.

This attribute list consists of the following attributes.

Data Direction

The attribute defines the direction of the data description.

Attribute type: Unsigned16

Allowed values: DIRECTION_INPUT, DIRECTION_OUTPUT

Submodule Data Length

The attribute Submodule Data Length defines the number of octets of the Data Element **without** counting the IOPS.

Submodule Data Length is independent of the value of Reduce Input/Output Submodule Data Length.

Attribute type: Unsigned16

Allowed values: 0 to 1 439

Length IOPS

The attribute Length IOPS defines the number of octets of the IOPS.

Length IOPS is independent of the value of Discard IOXS.

Attribute type: Unsigned8

Allowed values: 1

Length IOCS

The attribute Length IOCS defines the number of octets of the IOCS. Length IOPS is independent of the value of Discard IOXS.

Attribute type: Unsigned8

Allowed values: 1

Submodule State

This attribute defines the deviation between expected submodule and the submodule in the real identification.

This attribute consists of the following attributes:

Add Info

This attribute contains additional information for the application relation.

For an application relation with ARType IOCAR or IOCAR_SR the value is always set to NO_ADD_INFO.

For an application relation with ARType IOSAR the value TAKEOVER_NOT_ALLOWED indicates that the submodule was configured with AR Properties "Supervisor Takeover allowed" set to "false" and thus the IO supervisor got no ownership for the submodule.

Allowed values: NO_ADD_INFO, TAKEOVER_NOT_ALLOWED

Advice

This attribute indicates whether advice is present in at least one channel of the submodule.

Advice is derived from the Diagnosis ASE; see 7.3.4.2.6.7 for details.

Allowed values: NO_ADVICE, ADVICE

NOTE 3 If Shared Input contains the value SHARED_INPUT, this field contains always the value NO_ADVICE (see 7.3.2.2.6.2.3.1 for details).

Maintenance Required

This attribute indicates whether maintenance required is present in at least one channel of the submodule.

Maintenance Required is derived from the Diagnosis ASE; see 7.3.4.2.6.5 for details.

Allowed values: NO_MAINTENANCE_REQUIRED,
MAINTENANCE_REQUIRED

NOTE 4 If Shared Input contains the value SHARED_INPUT, this field contains always the value NO_MAINTENANCE_REQUIRED (see 7.3.2.2.6.2.3.1 for details).

Maintenance Demanded

This attribute indicates whether maintenance demanded is present in at least one channel of the submodule.

Maintenance Demanded is derived from the Diagnosis ASE; see 7.3.4.2.6.6 for details.

Allowed values: NO_MAINTENANCE_DEMANDED,
MAINTENANCE_DEMANDED

NOTE 5 If Shared Input contains the value SHARED_INPUT, this field contains always the value NO_MAINTENANCE_DEMANDED (see 7.3.2.2.6.2.3.1 for details).

Fault

This attribute indicates whether diagnosis information is present in at least one channel of the submodule.

Fault is derived from the Diagnosis ASE; see 7.3.4.2.6.2 for details.

Allowed values: NO_FAULT, FAULT

NOTE 6 If Shared Input contains the value SHARED_INPUT, this field contains always the value NO_FAULT (see 7.3.2.2.6.2.3.1 for details).

AR Info

This attribute contains the submodule state in relation to the established AR.

AR Info is derived from the Ownership of the submodule; see 7.3.2.2.6.2.3 for details.

It shall be set according to Table 165.

Table 165 – AR Info

Value	Meaning
OWN	This AR is owner of the submodule
APPLICATION_READY_PENDING	This AR is owner of the submodule but the submodule is blocked by parameter checking pending; meaning that the execution of the parameterization is not ready yet. The submodule will issue a Return of Submodule alarm if parameterization succeeded, or a diagnosis alarm with channel error type “parameterization fault” of “parameter missing” if parameterization failed.
SUPERORDINATED_LOCKED	This AR is not owner of the submodule. It is blocked by superordinated means
LOCKED_BY_IO_CONTROLLER	This AR is not owner of the submodule. It is owned by another IOAR
LOCKED_BY_IO_SUPERVISOR	This AR is not owner of the submodule. It is owned by another IOSAR

NOTE 7 If Shared Input contains the value SHARED_INPUT, this field contains always the value OWN (see 7.3.2.2.6.2.3.1 for details).

Ident Info

This attribute contains the submodule state in respect to expected and real identification for an established AR.

Ident Info is derived from the Real submodule; see 7.3.2.2.6.2.2 for details.

It shall be set according to Table 166.

Table 166 – Ident Info

Value	Meaning	Usable in conjunction with Module State “WRONG MODULE”
OK	No difference	No
SUBSTITUTE	Different but compatible	No
WRONG	Incompatible	Yes
NO	Empty	Yes

The field Ident Info contains the value OK, if the real submodule is the expected one.

The value SUBSTITUTE is returned, if the real submodule is able to substitute the expected one; in this case the data length of the real submodule may differ from the expected data length (e.g. a digital input with 8 bits as a substitute for a digital input with 8 bits). Note that the data format of the submodule shall be according to the expected identification also in the substitute case.

The value WRONG is returned, if a real submodule is plugged, but doesn't match or is able to substitute the expected one according to the type (ModuleID, SubmoduleID).

The value NO is returned, if the subslot is empty, i.e. no real submodule is plugged.

Special case: If Shared Input contains the value SHARED_INPUT, this field contains always the value OK (see 7.3.2.2.6.2.3.1 for details). Note that an IO controller using the submodule as shared input will not get pull or plug alarms; the availability of the submodule is indicated for him only via the IOPS.

7.3.1.5.5 Services

7.3.1.5.5.1 General Data Definition for Identification Data

All services to read the identification data (expected or real) have the same parameter layout. To ease the description the parameter is thus described once upfront to the services.

The parameter structure and the meaning of the parameters is the same as described in the read service (see 7.3.1.7.6.1.1); for the error code hierarchy, of the record data object 7.3.1.7.7.1 applies.

The parameter Data has a service specific structure and meaning. Table 167 shows the specific elements of Data for this service.

Table 167 – General Data definition for identification services

Parameter name	Service specific elements	rsp	cnf
Data	List of APIs	M	M(=)
	API	M	M(=)
	List of Slots	M	M(=)
	Slot Number	M	M(=)
	Module Ident Number	M	M(=)
	List of Subslots	M	M(=)
	Subslot Number	M	M(=)
	Submodule Ident Number	M	M(=)

Data

This parameter contains the values of the object which has been read.

List of APIs

This parameter is composed of the following list elements:

API

This parameter contains the value of the corresponding attribute of the Expected Identification class.

List of Slots

This parameter is composed of the following list elements:

Slot Number

This parameter contains the value of the corresponding attribute of the Expected Identification class.

Module Ident Number

This parameter contains the value corresponding attribute of the Expected Identification class.

List of Subslots

This parameter is composed of the following list elements:

Subslot Number

This parameter contains the value of the corresponding attribute of the Expected Identification class.

Submodule Ident Number

This parameter contains the value of the corresponding attribute of the Expected Identification class.

7.3.1.5.5.2 Read Expected Identification Data for one subslot

The parameter structure and the meaning of the parameters is the same as described in the read service (see 7.3.1.7.6.1.1); for the error code hierarchy, 7.3.1.7.7.1 applies. The parameter Data has a service specific structure and meaning; see 7.3.1.5.5.1 for its general description.

The AR context is needed for this service; see 7.3.1.7.7.4 for details.

7.3.1.5.5.3 Read Expected Identification Data for one slot

This service allows reading the expected identification data using a record data object with slot scope (see 7.3.1.7.1).

The parameter structure and the meaning of the parameters is the same as described in the read service (see 7.3.1.7.6.1.1); for the error code hierarchy, 7.3.1.7.7.1 applies. The parameter Data has a service specific structure and meaning; see 7.3.1.5.5.1 for its general description.

The AR context is needed for this service; see 7.3.1.7.7.4 for details.

7.3.1.5.5.4 Read Expected Identification Data for one AR

This service allows reading the expected identification data using a record data object with AR scope (see 7.3.1.7.1).

The parameter structure and the meaning of the parameters is the same as described in the read service (see 7.3.1.7.6.1.1); for the error code hierarchy, 7.3.1.7.7.1 applies. The parameter Data has a service specific structure and meaning; see 7.3.1.5.5.1 for its general description.

The AR context is needed for this service; see 7.3.1.7.7.4 for details.

7.3.1.5.5.5 Read Module Diff Block for one AR

This service allows reading the actual state of the module diff block related to the expected configuration using a record data object with AR scope (see 7.3.1.7.1).

If no difference exists, the Read Module Diff Block service shall respond no data with Length zero.

If the AR state is set to BACKUP, then the Submodule State.AR Info of all submodules related to the AR is set to the submodule's state according to the AR with AR state set to PRIMARY or (if not existing) set to FIRST. The diagnostic status for these submodules is also set according to this AR.

The parameter structure and the meaning of the parameters is the same as described in the read service (see 7.3.1.7.6.1.1); for the error code hierarchy, 7.3.1.7.7.1 applies. The parameter Data has a service specific structure and meaning; see Table 168 for its structure.

The AR context is needed for this service; see 7.3.1.7.7.4 for details

Table 168 – Data elements of Read Module Diff Block

Parameter name	Service specific elements	rsp	cnf
Data	Module Diff Block	C	C(=)
	List of APIs	M	M(=)
	API	M	M(=)
	List of Slots	M	M(=)
	Slot Number	M	M(=)
	Module Ident Number	M	M(=)
	Module State	M	M(=)
	List of Subslots	M	M(=)
	Subslot Number	M	M(=)
	Submodule Ident Number	M	M(=)
	Submodule State	M	M(=)

Data

This parameter contains the values of the object which has been read.

Module Diff Block

The parameter contains the Module Diff Block; see 7.3.1.5.6.2 for details.

7.3.1.5.6 Behavior**7.3.1.5.6.1 General**

While the application relation is established to an IO controller or IO supervisor, changes in the real identification, ownership or diagnosis regarding the expected identification are indicated by the IO device using the appropriate alarm associated to the ownership (see 7.3.1.6.1.3) and diagnosis (see 7.3.1.6.1.2).

The services for accessing the real identification, the Module Diff Block and the diagnosis deliver up-to-date information.

7.3.1.5.6.2 Behavior of the Module Diff Block

The Module Diff Block contains submodules deviating from the expected identification. These are

- submodules not matching the expected identification (wrong, missing or substituted),
- submodules not owned by the application relation (superordinated locked, locked by IO controller or locked by supervisor),
- submodules which are not available due to e.g. parameter checking pending (Application Ready Pending),
- and submodules having diagnosis.

The Module Diff Block can be retrieved using the Read Module Diff Block for one AR service (see 7.3.1.5.5.5).

The Module Diff Block is part of Connect.rsp (see 7.3.1.3.5.1.2), Prm Begin.rsp (see 7.3.1.3.5.3) and Application Ready.req (see 7.3.1.3.5.5).

The content of the Module Diff Block depends on the context:

- Read Module Diff Block for one AR
The Module Diff Block is focused on submodules contained in the Expected Submodule Block of the application relationship's Connect.req.
- Connect.rsp / Application Ready.req sequence
The Module Diff Block is focused on submodules contained in the Expected Submodule Block of Connect.req.
- Prm Begin.rsp / Application Ready.req sequence
The Module Diff Block is focused on submodules contained in the Expected Submodule Block of the PrmBegin.req.
- Application Ready.req in the context of a plug/release sequence
The Module Diff Block is focused on the plugged/released submodule.

An empty Module Diff Block (meaning everything is perfect) shall be omitted.

The IO controller/supervisor may use the Module Diff Block returned by the services Connect and Prm Begin to optimize which submodules out of the expected identification to parameterize. These are those submodules, which match the expected identification (Submodule State.Ident Info is OK or SUBSTITUTE) and where ownership was granted (Submodule State.AR Info == OWN).

To allow an IO controller/supervisor to fulfill the startup parameterization correctly,

- any improvement of the ownership from “not granted” (i.e. Submodule State.AR Info is SUPERORDINATED_LOCKED, LOCKED_BY_IO_CONTROLLER, or LOCKED_BY_IO_SUPERVISOR) to “granted” (i.e. Submodule State.AR Info is OWN or APPLICATION_READY_PENDING),
- and any improvement of matching the expected identification from “not matching” (i.e. Submodule State.Ident Info is WRONG or NO) to “matching” (i.e. Submodule State.Ident Info is OK or SUBSTITUTE) in the phase between Connect/Prm Begin and Application Ready

shall be indicated by the IO device after the Application Ready.rsp using the appropriate alarm (i.e. “Release” or “Plug”).

Any degradation of ownership from “granted” to “not granted” or expected identification from OK or SUBSTITUTE to WRONG or MISSING is possible even during the startup parameterization phase.

In this case appropriate errors (e.g. “access / invalid subslot”) will be returned when writing the parameterization records. The Module Diff Block delivered with the Application Ready will contain the degraded status of the submodule.

The IO controller/supervisor uses the Module Diff Block delivered with the service Application Ready.req (see 7.3.1.3.5.5) to determine initial state of the expected identification regarding the availability of the submodule for its application (Submodule State.Ident Info is OK or SUBSTITUTE and Submodule State.AR Info == OWN) and the initial state for the diagnosis of the submodule.

Any further change of the submodules contained in the expected identification is indicated by the IO device using alarms (“Controlled By Supervisor”, “Released”, “Pull”, “Plug”, “Plug Wrong Submodule”, and all kinds of diagnosis related alarms). The alarms are issued earliest after the Application Ready.rsp. The device shall indicate all changes after sending the Module Diff Block with the Application Ready.req; meaning it shall hold alarm requests locally in the alarm queue until the Application Ready.rsp was received. Due to race conditions, it is possible to receive an alarm whose diagnosis status was already indicated by the Module Diff Block.

Special case “shared input”: Since no alarms are allowed on an association beside the Return Of Submodule alarm, an associate has only information about the availability of the input data. Other information like the submodule’s presence (pull, plug, plug wrong), its parameterization state (application ready pending) or its diagnosis of the submodule is not available, since it will not be actualized via some alarm. Thus the Submodule State shall contain in any Module Diff Block for a shared input submodule

- for the Ident Info (indicating its presence) the value OK,
- for Advice (indicating its advice information) the value NO_ADVICE,
- for Maintenance Required (indicating its maintenance required information) the value NO_MAINTENANCE_REQUIRED,
- for Maintenance Demanded (indicating its maintenance demanded information) the value NO_MAINTENANCE_DEMANDED,
- for Fault (indicating its diagnosis information) the value NO_FAULT,
- for AR Info (indicating ownership problems) the value OWN,

independently of the submodule’s state. In other words, this information is only available for the application having the ownership on the submodule. The rules for setting the IOPS to BAD e.g. in case of a pulled or a wrongly plugged submodule (see 7.3.1.4.5) will take care that the submodule’s input data is not useable in such a case.

7.3.1.5.6.3 Behavior of the Module Diff Block regarding diagnosis

If for a particular submodule the Submodule State.AR Info is set to application ready pending the submodule needs further time to finish the parameterization. Depending on the application this can take some time (e.g. compressed air brake, to fill the compressed air reservoir). The IOxS of the submodule is set to BAD in this case. If the submodule afterwards finishes the parameterization without error, it will set its IOxS to GOOD and issue a return of submodule alarm. If the submodule was not able to finish the parameterization without error, it will issue a diagnosis alarm indicating the error. Two standard ChannelErrorTypes are provided for that, ParameterMissing (0x000F) and ParameterizationFault (0x0010).

If the parameterization failed before issuing the ApplicationReady.req, the error is reported using the Submodule State.Fault.

The initial diagnosis state for the submodule is delivered with the Module Diff Block contained in the ApplicationReady.req to the IO controller. For this the Module Diff Block contains Submodule State.Advice, .MaintenanceRequired, .MaintenanceDemanded and .Fault.

Set Submodule State.Advice to true, if at least one diagnosis item exists on this submodule with a severity in the range from Qualifier_3 to Qualifier_6.

Set Submodule State.MaintenanceRequired to true, if at least one diagnosis item exists on this submodule with a severity in the range from Qualifier_7 to Qualifier_16, or MaintenanceRequired.

Set Submodule State.MaintenanceDemanded to true, if at least one diagnosis item exists on this submodule with a severity in the range from Qualifier_17 to Qualifier_26, or MaintenanceDemanded.

Set Submodule State.Fault to true, if at least one diagnosis item exists on this submodule with a severity in the range from Qualifier_27 to Qualifier_31, or Fault.

7.3.1.5.6.4 Behavior of the Module Diff Block regarding dynamic reconfiguration

The Module Diff Block returned by the services Connect and Prm Begin should look as described in 7.3.1.5.6.2.

If the attribute AR State of the desired AR is set to BACKUP, all data records are ignored during the parameterization sequence (see 7.3.1.7.7.3 item b)).

AR State influences also the behavior of the Application Relationship class's service Application Ready (see 7.3.1.3.5.5). Note that the Application Ready service confirms a parameterization sequence due to application relation establishment, plug/release of a submodule, or Prm Begin.

If the AR state is set to BACKUP when the service Prm End is initiated by the IO controller, the Submodule State.AR Info of all submodules related to the parameterization sequence is set to the submodule's state according to the AR with AR state set to PRIMARY. The diagnostic status for these submodules is also set according to this AR.

NOTE Dynamic reconfiguration can only be used if an SR-AR in state PRIMARY exists.

Exchange a submodule with a submodule of another configuration (that does not fit to the expected submodule list) is realized in two DR sequences: first removing submodule(s) and second adding submodule(s).

If submodules are added to the expected identification (dynamic reconfiguration), which are not yet contained in the PRIMARY AR, the submodule's Ident Info is set to NO_SUBMODULE. If later on the AR used for dynamic reconfiguration is set to PRIMARY and the added submodules are existent or have a substitute, they are reported to the AR with a plug alarm and will be parameterized within the plug sequence. Wrong submodules are reported with a plug wrong alarm.

7.3.1.6 Alarm class

7.3.1.6.1 Overview

7.3.1.6.1.1 General

The Alarm class provides a set of services to convey alarms issued by the IO device to the assigned IO controller. The assigned IO controller acknowledges the alarm.

For the transmission of an alarm the following conditions have to be fulfilled:

- the source submodule shall be existent (no empty subslot and no wrong submodule)
- a particular application relationship has the ownership of the submodule issuing the alarm; in this case all alarms are transported to the IO controller.
- a particular application relationship is associated to the submodule issuing the alarm; in this case the return of submodule alarm is transported to the IO controller.

An alarm shall always be issued; the sink shall respond with a negative acknowledgment "not supported" in case no handler for the alarm type is installed.

Alarms are used for several purposes: pull, plug, status, update, etc. and especially diagnosis.

Table 169 gives an overview over the defined alarm types, their usage and whether the support of the alarm is mandatory or optional.

The alarm types indicated as "attached to Diagnosis ASE" (see 7.3.4) are issued, whenever entries are added or removed from the Diagnosis ASE. Those alarms thus allow maintaining the actual diagnosis state of an IO device. The services of the diagnosis ASE allow getting the current state of the diagnosis.

The columns "alarm payload" define the items being part of the alarm payload of a particular alarm.

Table 169 – Alarm type

Alarm type	Usage	Use	Attached to Diagnosis ASE	Alarm Payload				
				Maintenance Item	Diagnosis Item	Common Profile Item	Manufacturer Alarm Item	Profile Alarm Item
Diagnosis	Indicate appearing or disappearing diagnosis in standard format for one or more channels. Indicates appearing diagnosis in USI format.	Mandatory	Yes	a	b	—	—	—
Diagnosis Disappears	Indicates all diagnosis disappears for the submodule, when having no Alarm Item (optimization). Indicates disappearing diagnosis in USI format. Indicates disappearing diagnosis information in standard format; not recommended, use diagnosis instead.	Mandatory	Yes	a	b	—	—	—
Media Redundancy mismatch – ring	Indicates a change in the media redundancy status for ring.	Mandatory when supporting media redundancy ring	Yes	a	b	—	—	—
Media Redundancy mismatch – interconnection	Indicates a change in the media redundancy status for interconnection.	Mandatory when supporting media redundancy interconnection	Yes	a	b	—	—	—
Multicast Communication Mismatch Notification	Indicates a multicast CR problem	Mandatory when supporting multicast	Yes	a	b	—	—	—
Port Data Change Notification	Indicates a change of port data e.g. link up or down	Mandatory	Yes	a	b	—	—	—
Sync Data Change Notification	Indicates a change of clock synchronization	Mandatory when supporting clock synchronization	Yes	a	b	—	—	—
Isochronous Mode Problem Notification	Indicates a problem of isochronous applications, e.g. started to late	Mandatory when supporting isochronous mode	Yes	a	b	—	—	—
Network Component Problem Notification	Indicates a problem of network components, e.g. frame dropped no resources	Mandatory when supporting network component diagnosis	Yes	a	b	—	—	—
Time Data Change Notification	Indicates a change of time synchronization	Mandatory when supporting time synchronization	Yes	a	b	—	—	—
Dynamic Frame Packing problem Notification	Indicates a problem during the dynamic frame packing operation	Mandatory when supporting dynamic frame packing	Yes	a	b	—	—	—
MRPD problem Notification	Indicates a problem during MRPD operation	Optional when supporting MRPD	Yes	a	b	—	—	—

Alarm type	Usage	Use	Attached to Diagnosis ASE	Alarm Payload				
				Maintenance Item	Diagnosis Item	Common Profile Item	Manufacturer Alarm Item	Profile Alarm Item
Multiple Interface Mismatch Notification	Indicates an inconsistent setting of parameters affecting more than one interface	Mandatory	Yes	a	b	—	—	—
Pull	Indicates pull of a requested module/submodule	Mandatory	No	—	—	—	c	—
Pull module	Indicates pull of a requested module	Mandatory when supporting the pull module alarm	No	—	—	—	c	—
Plug	Indicates a plug of a requested submodule	Mandatory	No	—	—	—	c	—
Plug Wrong Submodule	Indicates a plug of a wrong submodule	Mandatory	No	—	—	—	c	—
Controlled by supervisor	Indicates that a requested submodule is controlled by an IO supervisor Logical “pull” of a submodule to withdraw ownership	Mandatory	No	—	—	—	c	—
Released	Indicates that a requested submodule has been released by an IO supervisor, IO controller or by IO device local means Logical “plug” of a submodule to return ownership or trigger a reparameterization	Mandatory	No	—	—	—	c	—
Return Of Submodule	Indicates a change of IOCS/IOPS from BAD to GOOD for a requested submodule	Mandatory	No	—	—	—	c	—
Process	Indicates an alarm from the controlled process (usage application and process specific)	Optional	No	—	—	d	—	—
Status	Indicates a status change within a requested submodule	Optional	No	—	—	d	—	—
Update	Indicates a change of parameter for a requested submodule	Optional	No	—	—	d	—	—
Upload and Retrieval Notification	Indicates a request for upload and storage of Record Data objects	Optional	No	—	—	e	—	—
Manufacturer Specific	Values from 0x0020 to 0x007F may be used for manufacturer specific alarm types	Optional	No	—	—	—	f	—
Profile Specific	Shall be used according to Profile Guidelines if an IO device complies with a specific device profile	According to supported profile	No	—	—	—	—	g

- ^a The maintenance item is conveyed, if the diagnosis item contains at least one channel diagnosis with ChannelProperties.Maintenance set to MAINTENANCE_REQUIRED or MAINTENANCE_DEMANDED.
- ^b The diagnosis item can be omitted if all diagnosis disappear from the channel.
- ^c The alarm payload may contain manufacturer specific information; however, this should not be used.
- ^d The alarm payload may contain common profile specific information or else manufacturer specific information.
- ^e The alarm payload may contain common profile specific information.
- ^f The alarm payload may contain manufacturer specific information.
- ^g The alarm payload may contain profile specific information.

The priority ALARM_HIGH shall be used in the context of Alarm Type “Process” (see Table 169); all other Alarm Types shall use ALARM_LOW as not to interfere with application events.

7.3.1.6.1.2 Alarm types attached to diagnosis ASE

The alarm types stated in Table 170 are exclusively attached to the diagnosis ASE. The alarms are triggered by the diagnosis ASE itself.

Table 170 – Alarm types attached to diagnosis ASE

Alarm type
Diagnosis
Media Redundancy Mismatch – ring
Media Redundancy Mismatch – interconnection
Diagnosis Disappears
Multicast Communication Mismatch Notification
Port Data Change Notification
Sync Data Change Notification
Isochronous Mode Problem Notification
Network Component Problem Notification
Time Data Change Notification
Dynamic Frame Packing Problem Notification
MRPD problem Notification
Multiple Interface Mismatch Notification

Alarm types attached to the diagnosis ASE have a relation to channels as stated in the alarm payload.

7.3.1.6.1.3 Alarm types attached to ownership

The alarm types stated in Table 171 are exclusively attached to the OWNSM, ASSSM, and the RSMSM. The alarms are triggered by the state machines itself.

Table 171 – Alarm types attached to ownership

Alarm type
Pull
Pull module
Plug
Plug Wrong Submodule
Controlled by supervisor
Released
Return Of Submodule

Alarm types attached to ownership have no relation to channels; they always state the “whole” submodule in the alarm payload.

7.3.1.6.1.4 Alarm types attached to common profiles, profiles, and application

The alarm types stated in Table 172 are attached to common profiles, profiles, and application.

Table 172 – Alarm types attached to common profiles, profiles, and application

Alarm type
Process
Status
Update
Upload and Retrieval Notification
Manufacturer Specific

The alarm types can have a relation to channels.

The alarm payload may contain optionally common profile specific information:

- for alarm type “Upload and Retrieval alarm” an upload & retrieval item or an iParameter item,
- for alarm type “Status” a PE alarm item or an RS alarm item,
- for alarm type “Process” a process alarm item.

7.3.1.6.2 Relations

The services are bound to other services as shown in Table 173:

Table 173 – Binding Alarm services

Service	Binding	Usage
Alarm Notification	RTA::APMS A Data	Used by IO device

7.3.1.6.3 Template

An Alarm object is described by the following template:

ASE: AR ASE
CLASS: Alarm
CLASS ID: not used
PARENT CLASS: TOP
ATTRIBUTES:

1	(m) Key Attribute: Implicit
2	(m) Attribute: List of Alarm CRs
2.1	(m) Attribute: AREP
2.2	(m) Attribute: CREP
2.3	(m) Attribute: LT Field
2.4	(m) Attribute: Alarm CR Properties
2.4.1	(m) Attribute: Priority
2.4.2	(m) Attribute: Transport
2.5	(m) Attribute: RTA Timeout Factor
2.6	(m) Attribute: RTA Retries
2.7	(m) Attribute: Local Alarm Reference
2.8	(m) Attribute: Remote Alarm Reference
2.9	(m) Attribute: Max Alarm Data Length
2.10	(m) Attribute: Alarm CR Tag Header High
2.10.1	(m) Attribute: Vlan ID
2.10.2	(m) Attribute: Alarm User Priority
2.11	(m) Attribute: Alarm CR Tag Header Low
2.11.1	(m) Attribute: Vlan ID
2.11.2	(m) Attribute: Alarm User Priority
2.12	(m) Attribute: Alarm Priority High Sequence Number
2.13	(m) Attribute: Alarm Priority Low Sequence Number

SERVICES:

1	(m) OpsService: Alarm Notification

7.3.1.6.4 Attributes

Implicit

The key attribute Implicit indicates that the Alarm object is implicitly addressed by the services.

List of Alarm CRs

This attribute is composed of the following list elements:

AREP

This attribute identifies the AR this CR belongs. It is a cross reference to the application relationship class.

CREP

This attribute contains the local identifier of this CR. The attribute is used to uniquely identify a particular CR. It is a cross reference to the communication relationship class.

LT Field

This attribute contains the length type field of the Physical Layer Frame (see 7.3.1.4.4).

Alarm CR Properties

This attribute consists of the following attributes:

Attribute type: Unsigned16

Priority

This attribute defines whether the Alarm class uses one or two alarm queues.

An IO device shall always support two alarm queues. The IO controller as alarm sink may choose whether it limits itself to one resource or not.

Allowed values: USER_PRIORITY – the alarm priority as given by the user is used and Alarm notifications are enqueued in the alarm high or alarm low queue accordingly, FIXED_PRIORITY – user priority is ignored and Alarm notifications are always enqueued in the alarm low queue accordingly only the alarm low queue is used.

Transport

This attribute contains the transport layer (layer 2 resp. UDP) of the alarm.

RTA_CLASS_1 means, IEEE Std 802.3 and IEEE Std 802.1Q are applicable without any extension.

RTA_CLASS_UDP means, IEEE Std 802.3, IEEE Std 802.1Q, and IP-Suite (see 6.3.17.5) are applicable without any extension.

Attribute type: Unsigned8

Allowed values: RTA_CLASS_1, RTA_CLASS_UDP

RTA Timeout Factor

This attribute indicates the timeout value of the alarm source.

Attribute type: Unsigned16

Time Base: 100 ms

Allowed values: 1 up to 100 mandatory, 101 to 216-1 optional

Default value: 100 ms

RTA Retries

This attribute contains the number of retries.

Attribute type: Unsigned16

Allowed values: 3 to 15.

Local Alarm Reference

This attribute contains the identifier of the CM Initiator (e.g. IO controller).

Attribute type: Unsigned16

Remote Alarm Reference

This attribute contains the identifier of the CM Responder (e.g. IO device).

Attribute type: Unsigned16

Max Alarm Data Length

This attribute contains the maximum length of alarm data accepted by the alarm sink (IO controller, and IO supervisor).

Attribute type: Unsigned16

Allowed value: 200 to 1 432

Alarm CR Tag Header High

This attribute consists of the following attributes:

Vlan ID

This attribute contains the IEEE Std 802.1Q VLAN ID. The default value is NIL that indicates that the tag header contains only priority information.

Allowed values: according to IEEE Std 802.1Q

Alarm User Priority

This attribute contains the priority of the alarm.

Allowed values: USER_PRIORITY_HIGH

Alarm CR Tag Header Low

This attribute consists of the following attributes:

Vlan ID

This attribute contains the IEEE Std 802.1Q VLAN ID. The default value is NIL that indicates that the tag header contains only priority information.

Allowed values: according to IEEE Std 802.1Q

Alarm User Priority

This attribute contains the priority of the alarm.

Allowed values: USER_PRIORITY_LOW

Alarm Priority High Sequence Number

This attribute stores the sequence number of the last Alarm notification being sent to the alarm sink with alarm priority high. It is initialized with an arbitrary value and shall be incremented with every Alarm notification.

Whenever an Alarm is repeated over different ARs of an ARSet the same Sequence Number shall be used.

Attribute type: Unsigned16

Allowed values: 0x0000 to 0x7FFF

Alarm Priority Low Sequence Number

This attribute stores the sequence number of the last Alarm notification being sent to the alarm sink with alarm priority low. It is initialized with an arbitrary value and shall be incremented with every Alarm notification.

Whenever an Alarm is repeated over different ARs of an ARSet the same Sequence Number shall be used.

Attribute type: Unsigned16

Allowed values: 0x0000 to 0x7FFF

7.3.1.6.5 Services**7.3.1.6.5.1 Alarm Notification**

This service is used to transfer an alarm notification from the IO device to the IO controller and optional vice versa. This service shall only be used in conjunction with the IO AR. Table 174 shows the parameters of the service.

Table 174 – Alarm Notification

Parameter name	req	ind	rsp	cnf
Argument	M	M(=)		
AREP	M	M(=)		
Alarm Priority	M	M(=)		
Alarm type	M	M(=)		
API	M	M(=)		
Slot Number	M	M(=)		
Subslot Number	M	M(=)		
Module Ident Number	M	M(=)		
Submodule Ident Number	M	M(=)		
Alarm Specifier	M	M(=)		
Sequence Number	M	M(=)		
Channel Diagnosis	U	U(=)		
Manufacturer Specific Diagnosis	U	U(=)		
Submodule Diagnosis State	U	U(=)		
AR Diagnosis State	U	U(=)		
Alarm Payload	U	U(=)		
Maintenance Item	U	U(=)		
User Structure Identifier	M	M(=)		
Maintenance Status	M	M(=)		
Alarm Item	M	M(=)		
User Structure Identifier	M	M(=)		
Diagnosis Item	C	C(=)		
Channel Diagnosis	C	C(=)		
List of Channel Diagnosis Data	M	M(=)		
Channel Number	M	M(=)		
Channel Properties	M	M(=)		
Channel Error type	M	M(=)		
Ext Channel Diagnosis	C	C(=)		
List of Ext Channel Diagnosis Data	M	M(=)		
Channel Number	M	M(=)		
Channel Properties	M	M(=)		
Channel Error type	M	M(=)		
Ext Channel Error type	M	M(=)		
Ext Channel Add Value	M	M(=)		
Qualified Channel Diagnosis	C	C(=)		
List of Qualified Channel Diagnosis Data	M	M(=)		
Channel Number	M	M(=)		
Channel Properties	M	M(=)		
Channel Error type	M	M(=)		
Ext Channel Error type	M	M(=)		
Ext Channel Add Value	M	M(=)		
Qualified Channel Qualifier	M	M(=)		
Manufacturer Specific Diagnosis	C	C(=)		
List of Data	M	M(=)		

Parameter name	req	ind	rsp	cnf
Data	M	M(=)		
Upload & Retrieval Item	C	C(=)		
List of Records	M	M(=)		
Record Number	M	M(=)		
Record Length	M	M(=)		
iParameter Item	C	C(=)		
iPar Req Header	M	M(=)		
Max Segm Size	M	M(=)		
Transfer Index	M	M(=)		
Total iPar Size	M	M(=)		
Manufacturer Alarm Item	C	C(=)		
List of Data	M	M(=)		
Data	M	M(=)		
Profile Alarm Item	C	C(=)		
List of Data	M	M(=)		
Data	M	M(=)		
Result(+)			S	S
AREP			M	M
Alarm type			M	M
API			M	M
Slot Number			M	M
Subslot Number			M	M
Alarm Specifier			M	M
PNIO Status			M	M
Result(-)			S	S
AREP			M	M
PNIO Status			M	M

Argument

The argument shall convey the service specific parameters of the service request.

AREP

This parameter is the local identifier for the desired AR.

Alarm Priority

This parameter contains the priority of the alarm.

Allowed values: ALARM_HIGH, ALARM_LOW

Alarm type

Attribute type: Unsigned16

Allowed values: see Table 169

API

This parameter defines the API the submodule issuing the alarm belongs to.

Slot Number

This parameter defines the slot number as a local identifier. It shall contain the physical or logical slot which issues the alarm.

Subslot Number

This parameter defines the subslot number as a local identifier. It shall contain the physical or logical subslot which issues the alarm.

Module Ident Number

This parameter contains the module identification.

Submodule Ident Number

This parameter contains the submodule identification.

Alarm Specifier

This parameter consists of the following parameters:

Sequence Number

This parameter defines the sequence number of the alarm. By means of the Sequence Number the receiver detects duplications and reflects the value of the field in the Alarm.

Allowed values: 0 to 2 047

Channel Diagnosis

This parameter shall only be used for Alarm types attached to the Diagnosis ASE (see Table 169). For all other Alarm Types this parameter is not valid.

Table 175 shows the allowed values.

Table 175 – Channel Diagnosis

Value	Meaning
NO_CHANNEL_DIAG	Means that no diagnosis item in standard format exists on this submodule.
CHANNEL_DIAG	Means that diagnosis in standard format exists on this submodule.

Manufacturer Specific Diagnosis

This parameter shall only be used for Alarm types attached to the Diagnosis ASE (see Table 169). For all other Alarm Types this parameter is not valid.

Table 176 shows the allowed values.

Table 176 – Manufacturer Specific Diagnosis

Value	Meaning
NO_MAN_DIAG	Means that no diagnosis item in USI format exists on this submodule.
MAN_DIAG	Means that diagnosis in USI format exists on this submodule.

Submodule Diagnosis State

This parameter shall only be used for Alarm types attached to the Diagnosis ASE (see Table 169). For all other Alarm Types this parameter is not valid.

Table 177 shows the allowed values.

Table 177 – Submodule Diagnosis State

Value	Meaning
NO_FAULT	Fault free No diagnosis item exists in standard or USI format on this submodule with a severity in the range from Qualifier_27 to Qualifier_31, or Fault
FAULT	At least one diagnosis item exists in standard or USI format on this submodule with a severity in the range from Qualifier_27 to Qualifier_31, or Fault

AR Diagnosis State

This parameter shall only be used for Alarm types attached to the Diagnosis ASE (see Table 169). For all other Alarm Types this parameter is not valid.

The AR Diagnosis State shall be corresponding to the current state of the Communication Relationship class parameter Problem Indicator Flag, which is related to all modules/submodules that belong to the AR.

Table 178 shows the allowed values.

Table 178 – AR Diagnosis State

Value	Meaning
NO_FAULT	Fault free No diagnosis item exists in standard or USI format in this AR with a severity in the range from Qualifier_27 to Qualifier_31, or Fault.
FAULT	At least one diagnosis item exists in standard or USI format in this AR with a severity in the range from Qualifier_27 to Qualifier_31, or Fault

Alarm Payload

This optional parameter contains the alarm payload; structured according to the rules shown in Table 169. It consists of the following parameters:

Maintenance Item

This conditional parameter contains the maintenance status. It is provided if at least one diagnosis item exists in standard format on this submodule with a severity in the range Qualifier_3 to Qualifier_26, MaintenanceRequired, or MaintenanceDemanded. Otherwise the MaintenanceItem shall be omitted.

It consists of the following parameters:

User Structure Identifier

This parameter identifies the format of the item.

Attribute type: Unsigned16

Allowed values: MAINTENANCE_USI

Maintenance Status

This conditional parameter contains the maintenance status of the submodule.

It consists of the following parameters:

Maintenance Required

This parameter contains the value MAINTENANCE_REQUIRED if at least one diagnosis item exists with a severity in the range from Qualifier_7 to Qualifier_16, or MaintenanceRequired on this submodule.

Allowed values: MAINTENANCE_REQUIRED, NO_MAINTENANCE_REQUIRED

Maintenance Demanded

This parameter contains the value MAINTENANCE_DEMANDED if if at least one diagnosis item exists with a severity in the range from Qualifier_17 to Qualifier_26, or MaintenanceDemanded on this submodule.

Allowed values: MAINTENANCE_DEMANDED, NO_MAINTENANCE_DEMANDED

Qualifier 3

This parameter contains the value QUALIFIER_3_SET if at least one diagnosis item exists with a severity Qualifier_3 on this submodule.

Allowed values: QUALIFIER_3_SET, QUALIFIER_3_NOT_SET

Qualifier 31

This parameter contains the value QUALIFIER_31_SET if at least one diagnosis item exists with a severity Qualifier_31 on this submodule.

Allowed values: QUALIFIER_31_SET, QUALIFIER_31_NOT_SET

Alarm Item

This optional parameter contains the accompanying information for the alarm. It is present, if further information is conveyed. The rules which item (i.e. diagnosis item, upload and retrieval item, iParameter item, or common alarm item) is conveyed are described in Table 169.

This parameter is composed of the following parameters.

User Structure Identifier

This parameter identifies the format of the item.

Attribute type: Unsigned16

Allowed values: shown in Table 179

Table 179 – User Structure Identifier

Value	Meaning / Usage
CHANNEL_DIAGNOSIS_USI	Shall only be used in conjunction with Channel Diagnosis in Alarm Notification and Diagnosis Data.
EXT_CHANNEL_DIAGNOSIS_USI	Shall only be used in conjunction with Extended Channel Diagnosis in Alarm Notification and Diagnosis Data.
QUALIFIED_CHANNEL_DIAGNOSIS_USI	Shall only be used in conjunction with Qualified Channel Diagnosis in Alarm Notification and Diagnosis Data.
MANUFACTURER_SPECIFIC_USI_0x0000 up to MANUFACTURER_SPECIFIC_USI_0x7FFF	Shall be used in conjunction with diagnosis in USI format in Alarm Notification and Diagnosis Data.
PROFILE_SPECIFIC_USI_0x9000 up to PROFILE_SPECIFIC_USI_0x9FFF	The meaning is defined in profile specifications.
UPLOAD_AND_RETRIEVAL_USI	Shall be used in conjunction with Upload and Retrieval notification.
IPARAMETER_USI	Shall be used in conjunction with iParameter notification.

Diagnosis Item

This optional parameter is present only if the User Structure Identifier is set to CHANNEL_DIAGNOSIS_USI, EXT_CHANNEL_DIAGNOSIS_USI, QUALIFIED_CHANNEL_DIAGNOSIS_USI, MANUFACTURER_SPECIFIC_USI_0x0000 up to MANUFACTURER_SPECIFIC_USI_0x7FFF.

A list element consists of the following parameters:

Channel Diagnosis

This optional parameter is present if the User Structure Identifier is set to CHANNEL_DIAGNOSIS_USI. It consists of the following parameters:

List of Channel Diagnosis Data

This parameter contains a list of channel diagnosis data. A list element consists of the following parameters:

Channel Number

This parameter defines the channel number as a local identifier (see 7.3.4). This number is unique within a subslot. The numbering of channels within a subslot shall be in ascending order but may contain gaps in order to allow logical structuring. The list shall contain all physical or logical channels which have diagnosis.

The special value 0x8000 identifies the whole submodule instead of a special channel.

Attribute type: Unsigned16

Allowed values: 0 to 0x7FFF user specific channel number, 0x8000 submodule

Channel Properties

This parameter consists of the following parameters:

Type

This parameter has the same definition as specified in the Diagnosis ASE.

Accumulative

This parameter has the same definition as specified in the Diagnosis ASE.

Maintenance

This parameter has the same definition as specified in the Diagnosis ASE.

Specifier

This parameter indicates that diagnosis/maintenance appears or disappears. The semantic is shown in Table 180.

Allowed values: APPEARS, DISAPPEARS, DISAPPEARS_BUT_OTHER_REMAIN, ALL_DISAPPEARS

Table 180 – Semantics of Specifier

Maintenance	Specifier	Meaning
FAULT	APPEARS	Diagnosis appears The diagnosis ASE contains this and possible other entries with ChannelProperties.Maintenance = FAULT for this channel.
FAULT	DISAPPEARS	Diagnosis disappears The diagnosis ASE contains no further entry with ChannelProperties.Maintenance = FAULT for this channel.
FAULT	DISAPPEARS_BUT_OTHER_REMAIN	Diagnosis disappears The diagnosis ASE still contains other entries with ChannelProperties.Maintenance = FAULT for this channel.
FAULT	ALL_DISAPPEARS	Diagnosis disappears The diagnosis ASE contains no longer any entries for this channel, all subsequent ^a Diagnosis, Maintenance (required and demanded) and Qualified disappears.
MAINTENANCE_REQUIRED	APPEARS	Maintenance Required appears The diagnosis ASE contains this and possible other entries with ChannelProperties.Maintenance = MAINTENANCE_REQUIRED for this channel.
MAINTENANCE_REQUIRED	DISAPPEARS	Maintenance Required disappears The diagnosis ASE contains no further entry with ChannelProperties.Maintenance = MAINTENANCE_REQUIRED for this channel.
MAINTENANCE_REQUIRED	DISAPPEARS_BUT_OTHER_REMAIN	Maintenance Required disappears The diagnosis ASE still contains other entries with ChannelProperties.Maintenance = MAINTENANCE_REQUIRED for this channel.
MAINTENANCE_DEMANDED	APPEARS	Maintenance Demanded appears The diagnosis ASE contains this and possible other entries with ChannelProperties.Maintenance = MAINTENANCE_DEMANDED for this channel.
MAINTENANCE_DEMANDED	DISAPPEARS	Maintenance Demanded disappears The diagnosis ASE contains no further entry with ChannelProperties.Maintenance = MAINTENANCE_DEMANDED for this channel.
MAINTENANCE_DEMANDED	DISAPPEARS_BUT_OTHER_REMAIN	Maintenance Demanded disappears The diagnosis ASE still contains other entries with ChannelProperties.Maintenance = MAINTENANCE_DEMANDED for this channel.

Maintenance	Specifier	Meaning
QUALIFIED_DIAGNOSIS	APPEARS	Qualified Diagnosis appears The diagnosis ASE contains this and possible other entries with ChannelProperties.Maintenance = QUALIFIED_DIAGNOSIS for this channel.
QUALIFIED_DIAGNOSIS	DISAPPEARS	Qualified Diagnosis disappears The diagnosis ASE contains no further entry with ChannelProperties.Maintenance = QUALIFIED_DIAGNOSIS for this channel.
QUALIFIED_DIAGNOSIS	DISAPPEARS_BUT_OTHER_REMAIN	Qualified Diagnosis disappears The diagnosis ASE still contains other entries with ChannelProperties.Maintenance = QUALIFIED_DIAGNOSIS for this channel.
^a Subsequent means, that for this particular ChannelErrorType all ExtChannelErrorTypes (and the ChannelErrorType itself) with diagnosis, maintenance required, maintenance demanded, and qualified changes to OK.		

Direction

This parameter has the same definition as specified in the Diagnosis ASE.

Channel Error type

This parameter has the same definition as specified in the Diagnosis ASE.

Ext Channel Diagnosis

This optional parameter is present if the User Structure Identifier is set to EXT_CHANNEL_DIAGNOSIS_USI. It consists of the following parameters:

List of Ext Channel Diagnostic Data

This parameter contains a list of extended channel diagnosis data. A list element consists of the following parameters:

Channel Number

This parameter has the same definition as specified in the Diagnosis ASE.

Channel Properties

This parameter has the same definition as specified in the Channel Diagnosis above.

Channel Error type

This parameter has the same definition as specified in the Diagnosis ASE.

Ext Channel Error type

This parameter has the same definition as specified in the Diagnosis ASE.

Ext Channel Add Value

This parameter has the same definition as specified in the Diagnosis ASE.

Qualified Channel Diagnosis

This optional parameter is present if the User Structure Identifier is set to QUALIFIED_CHANNEL_DIAGNOSIS_USI. It consists of the following parameters:

List of Qualified Channel Diagnostic Data

This parameter contains a list of extended channel diagnosis data. A list element consists of the following parameters:

Channel Number

This parameter has the same definition as specified in the Diagnosis ASE.

Channel Properties

This parameter has the same definition as specified in the Channel Diagnosis above.

Channel Error type

This parameter has the same definition as specified in the Diagnosis ASE.

Ext Channel Error type

This parameter has the same definition as specified in the Diagnosis ASE.

Ext Channel Add Value

This parameter has the same definition as specified in the Diagnosis ASE.

Qualified Channel Qualifier

This parameter has the same definition as specified in the Diagnosis ASE.

Manufacturer Specific Diagnosis

This optional parameter is present if the User Structure Identifier is set to a value in the range from MANUFACTURER_SPECIFIC_USI_0x0000 up to MANUFACTURER_SPECIFIC_USI_0x7FFF. It consists of the following parameters:

Diagnosis in USI format shall only be used if Channel Diagnosis, or Extended Channel Diagnosis or Qualified Extended Channel Diagnosis does not cover the diagnosis information.

List of Data

This parameter contains a list of diagnosis data in USI formats. A list element consists of the following parameters.

Data

This parameter contains diagnosis data in USI format.

Attribute type: see Clause 5

Upload and Retrieval Item

This optional parameter is present only if the Alarm Type is set to "Upload and Retrieval Notification" and the User Structure Identifier is set to UPLOAD_AND_RETRIEVAL_USI.

With this parameter a submodule indicates the existence of Record Data objects which shall be stored at the IO controller. The IO controller shall upload and permanently store the Record Data objects. At every following connect sequence and for every following plug and released sequence the IO controller shall convey this additional Record Data objects to the source of the stored Record Data objects. Record Data objects which are part of the GSD description and conveyed from the engineering system to the IO controller shall not be part of the List of Records.

It consists of the following parameters:

List of Records

This parameter contains a list of Record Data objects. A list element consists of the following parameters:

Record Number

This parameter contains the Index of a Record Data object as shown in the Record Data Class in AR ASE.

Allowed values: 0 to 0xFFFF

Record Length

This parameter contains the Length of a Record Data object as shown in the Record Data Class in AR ASE.

Allowed values: 1 to 0xFFFFF00

iParameter Item

This optional parameter is present only if the Alarm Type is set to “Upload and Retrieval Notification” and the User Structure Identifier is set to IPARAMETER_USI.

With this parameter a submodule indicates to upload iParameters or requests to download previously stored iParameters.

The difference between this iParameter Item and the Upload and Retrieval Item defined above is that the iParameter Item uses one record data element, allows segmented transfer of the record data element and transfers the record data on request only.

If the submodule requests an upload, the IO controller shall upload and permanently store the record data object indicated in the alarm.

If the submodule requests a download, the previously stored record data object (result of a previous upload) is transferred to the submodule.

Record Data objects which are part of the GSD description and conveyed from the engineering system to the IO controller shall not be part of this iParameter record data object.

It consists of the following parameters:

iPar Req Header

This parameter contains the request header used for the up-/download of the iParameters. It consists of the following parameters:

SR_Version

This parameter indicates the version of the iParameter protocol.

Attribute type: Unsigned8

Allowed values: 0x01

N_Count

This parameter indicates the notification count of the iParameter protocol.

Attribute type: Unsigned8

Allowed values: 0x01

SR_Type

This parameter indicates the subtype of the iParameter notification.

Attribute type: Unsigned8

Allowed values: 0x01 for requesting an upload, 0x03 for requesting a download

Max Segm Size

This parameter contains the maximum segment size to use for an individual record data read. It thus allows fragmentation of huge iParameters.

Attribute type: Unsigned32

Allowed values: 1 to $2^{22} - 1$

Transfer Index

This parameter contains the record data index to use for the up-/download of the iParameters.

Attribute type: Unsigned32

Allowed values: 0 to 0x7FFF

Total iPar Size

This parameter contains the total size of the iParameters. The parameter shall be set to the size of the iParameters when requesting an upload. On requesting a download, the value “0” is allowed; indicating to download the whole parameter set as stored in the IO controller.

Attribute type: Unsigned32

Allowed values: 1 to $2^{32} - 256$

Manufacturer Alarm Item

This optional parameter is present only if the Alarm Type is set to “Manufacturer Specific”. In this case the User Structure Identifier shall be set to MANUFACTURER_SPECIFIC_USI_0x0000 up to MANUFACTURER_SPECIFIC_USI_0x7FFF.

List of Data

This parameter contains a list of manufacturer specific alarm data.

The length of the user data shall not exceed 1 408 octets.

A list element is composed of the following parameters:

Data

This parameter contains user specific alarm data.

Attribute type: see Clause 5

Profile Alarm Item

This optional parameter is present only if the Alarm Type is set to “Profile Specific”. In this case the User Structure Identifier shall be set to PROFILE_SPECIFIC_USI_0x9000 up to PROFILE_SPECIFIC_USI_0x9FFF.

List of Data

This parameter contains a list of profile specific alarm data.

The length of the user data shall not exceed 1 408 octets.

A list element is composed of the following parameters:

Data

This parameter contains user specific alarm data.

Attribute type: see Clause 5

Result(+)

This parameter indicates that the service request succeeded.

Alarm type

This parameter reflects the value from the request.

API

This parameter reflects the value from the request.

Slot Number

This parameter reflects the value from the request.

Subslot Number

This parameter reflects the value from the request.

Alarm Specifier

This parameter reflects the value from the request.

PNIO Status

This parameter shall contain the actual error code according to the protocol definition.

Attribute type: Unsigned32

Result(-)

This parameter indicates that the service request failed.

PNIO Status

This parameter shall contain the actual error code according to the protocol definition.

Attribute type: Unsigned32

7.3.1.6.6 Behavior**7.3.1.6.6.1 General behavior of the alarm sink**

Each application process shall maintain a receiving queue for each Alarm type. If used the queue size is determined by the flow control mechanisms. With the processing of the alarm the acknowledgment shall be sent to the source to enable the sending of further alarms of this type.

Alarm queues shall be cleared in case of AR termination and pull/plug/takeover alarms.

7.3.1.6.6.2 General behavior of the alarm source

An alarm is never sent for an associate (exception is the return of submodule alarm) or over an AR in state backup. If there is no owner of a submodule, no alarm is sent.

A new alarm of the same priority remains in the alarm queue on the IO device as long as the acknowledgement from the IO controller regarding the previous alarm is outstanding. This can queue up alarms in the IO device's alarm queue. This queue can contain entries which are obsolete due to other (later) entries (e.g. diagnosis "short circuit" coming and going when having a loose cable). In such a case the IO device may delete entries as an optimization if this deletion doesn't affect the user.

Alarm queues shall be cleared in case of AR termination.

7.3.1.6.6.3 Behavior during (Re-)Parameterization Sequence

Between the starting point of a submodule (re-)parameterization sequence, i.e. one of the services Connect.req (initiated by the IO controller), PrmBegin.req (initiated by the IO controller), Plug.req (initiated by the IO device), or Release.req (initiated by the IO device) and the end point of the sequence, i.e. ApplicationReady.rsp (initiated by the IO controller), the IO device shall not issue alarms to the IO controller which are related to the submodules being part of the (re-)parameterization sequence.

If at the starting point of the sequence alarm queues contain alarms related to the submodules contained in the sequence, these alarms are deleted from the alarm queues.

The end of the (re-)parameterization sequence is indicated by the IO controller using PrmEnd.req, committed by the IO device using ApplicationReady.req and committed by the IO controller using ApplicationReady.rsp.

However, if all application relations are in state backup after ApplicationReady.req, the IO device is not allowed to send diagnosis alarms. If afterwards an application relation turns to state primary, the IO device shall issue diagnosis alarms to match the difference between the diagnosis state as handed out in the ApplicationReady.req's Module Diff Block for this application relation and the current diagnosis state present in the diagnosis ASE.

7.3.1.6.6.4 Behavior of the attribute Submodule State

The attribute behavior of an IO device application is described in 7.3.2.2.6.

7.3.1.7 Record Data class

7.3.1.7.1 Overview

In the Application Layer environment, application processes contain data that remote applications are able to read and write. The Record Data class defines attributes of general purpose Record Data objects and provides a set of services used to read, and write their values.

A particular Record Data object has at least one of the access rights read or write, or even both.

The access to a record data object is entirely ("complete" record) and if supported by the application partially.

The local connection between a Record Data object and a real world or physical object is not in the scope of this definition.

A Record Data object can be connected to one real world object for read and write, or, it can be assigned to one real object for reading and for another one for writing the value.

The Record Data Class allows addressing Record Data objects related to specific layers of the addressing model. The scope of a particular record data object is derived from the Index as described in 7.1.6.2.

The scope of a particular Record Data object as derived from the index is

- a particular submodule within an AP; addressed by API, Slot Number, and Subslot Number.
- a particular module within an AP; addressed by API, and Slot Number.
- a particular AP; addressed by API.
- a particular application relation; addressed by ARUUID or if using an implicit AR by Target AR UUID.
- a device.

Record data may contain parameters or information for channels; whether this is the case is derivable from the record data structure only; it is not expressed in the addressing parameters.

Both IO controller and IO supervisor are able to read or write the value of some Record Data object from an IO device and optional from an IO controller or IO supervisor. The client application process may use the Application Relationship class to establish an application relation for access to Record Data objects of a server.

Write access is permitted to the owner of a submodule; i.e. IO controller or IO supervisor. By using the attribute Device Access an IO supervisor can write Record Data objects if permitted by the application process of the IO device. Read access is possible for all ARTypes including the implicit AR.

A NULL response for a read record request shall be created if

- the defined filter leads to no matching items (e.g. DiagnosisData)
- the addressed record is supported but was not written (e.g. Adjust or Check)
- the addressed object contains no information (e.g. LogBookData without entry or RecordInputDataObjectElement for inputs without data)

The NULL response is indicated by a positive response of the read, read implicit or read query service having Length set to 0 (i.e. no Data returned).

The access to Record Data objects is performed according to the Client/Server access model. The Client/Server model is characterized by a Client application sending a read or write request to a Server application that responds accordingly.

The formal model of the Record Data Class is presented by the Record Data class specification, containing a description of its attributes, services as well as invocations, followed by a detailed service specification.

The objects of an IO device can be read using the read record service and the predefined filters addressed by the record indices. The IO device builds the intersection and search for available objects.

The size of the intersection depends on the ARType, the record index and the IO device. For the implicit AR and the IOS AR for DeviceAccess the intersection is only depending on the record index and the IO device. For an IO AR it also depends on the selected submodules of the AR.

EXAMPLE Figure 42 shows the intersection of objects for a read record service with a slot specific index from an IO controller using an IO AR. In this case the IO device should use the “green” intersection to search for e.g. “Diagnosis in channel coding” and send the available data in the read record response.

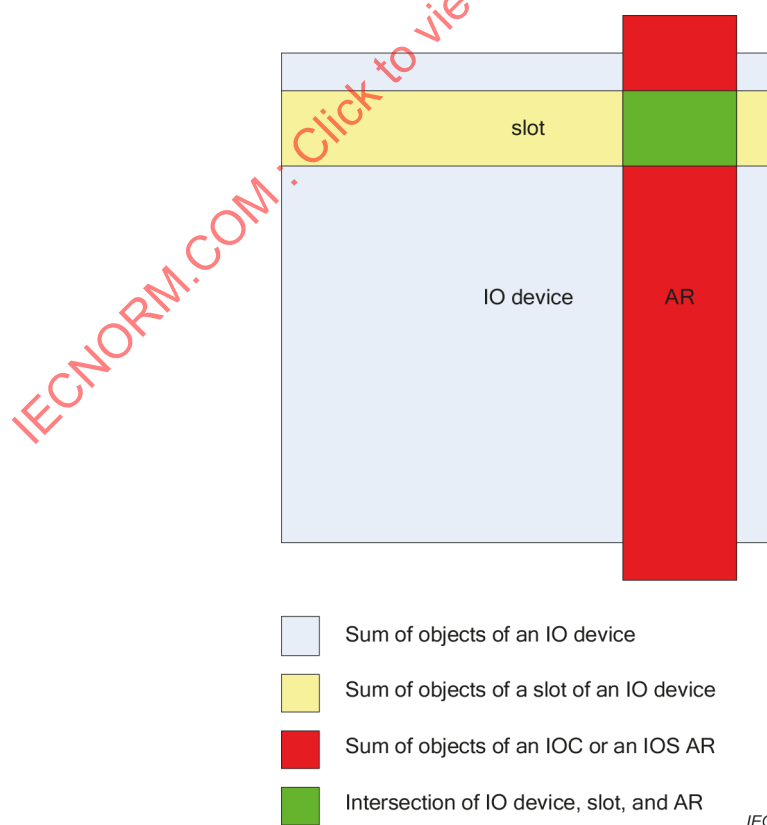


Figure 42 – Example for an intersection of IO device, slot, and AR

7.3.1.7.2 Void

Intentionally left blank.

7.3.1.7.3 Relations

The RecordData Classes services are bound to other services as shown in Table 181:

Table 181 – Binding Record Data services

Service	Binding	Usage
Read	RPC::Read RSI::Call(Read)	Used by IO controller or IO supervisor
Read Query	RPC::Read RSI::Call(Read)	Used by IO controller or IO supervisor
Write	RPC::Write RSI::Call(Write)	Used by IO controller or IO supervisor
Write Combined Object Container	RPC::Write RSI::Call(Write)	Used by IO controller or IO supervisor
Local Write Multiple	Local	Used by FAL
Local New Write Multiple	Local	Used by FAL

7.3.1.7.4 Template

A Record Data object is described by the following template:

ASE: AR ASE
CLASS: Record Data
CLASS ID: not used
PARENT CLASS: TOP
ATTRIBUTES:

- 1 (m) Key Attribute: Implicit
- 2 (m) Attribute: List of supported data records
- 2.1 (m) Attribute: Index
- 2.2 (m) Attribute: Read Record Data Description
- 2.3 (m) Attribute: Write Record Data Description

SERVICES:

- 1 (m) OpsService: Read
- 2 (m) OpsService: Read Implicit
- 3 (o) OpsService: Read Query
- 4 (m) OpsService: Write
- 5 (m) OpsService: Write Combined Object Container
- 6 (m) OpsService: Local Write Multiple
- 7 (m) OpsService: Local New Write Multiple

7.3.1.7.5 Attributes

Implicit

The key attribute Implicit indicates that the User Parameter object is implicitly addressed by the services.

Max Supported Record Size

This attribute indicates the maximum supported record size, when writing a data record.

This attribute list contains the following attributes:

Attribute type: Unsigned32

Default value: 4068

List of supported data records

This attribute list contains the following attributes:

Index

This attribute defines the index of the Record Data object.

Attribute type: Unsigned16

Allowed values: 0 to 0xFFFF

Read Record Data Description

This attribute can contain either a Simple Data Description or an Array Data Description or a Record Data Description.

Attribute type: see Clause 5

Write Record Data Description

This attribute can contain either a Simple Data Description or an Array Data Description or a Record Data Description.

Attribute type: see Clause 5

7.3.1.7.6 Services

7.3.1.7.6.1 Read Services

7.3.1.7.6.1.1 Read

This confirmed service is used to read the value of a Record Data object. Table 182 shows the parameters of the services.

Table 182 – Read

Parameter name	req	ind	rsp	cnf
Argument	M	M(=)		
AREP	M	M(=)		
API	M	M(=)		
Slot Number	M	M(=)		
Subslot Number	M	M(=)		
Index	M	M(=)		
Seq Number	M	M(=)		
Length	M	M(=)		
Requested Block Version	O	O(=)		
Result(+)			S	S(=)
AREP			M	M(=)
Seq Number			M	M(=)
Length			M	M(=)
Data			M	M(=)
Result(-)			S	S(=)
AREP			M	M(=)
Seq Number			M	M(=)

Parameter name	req	ind	rsp	cnf
PNIO Status			M	M(=)
Add Data 1			M	M(=)
Add Data 2			M	M(=)

Argument

The argument shall convey the service specific parameters of the service request.

AREP

This parameter is the local identifier for the desired AR.

API

If the scope of the record data object is subslot, slot or API, this parameter shall be used to address the desired AP.

Slot Number

If the scope of the record data object is subslot or slot, this parameter shall be used to address the desired slot (typically a module).

Subslot Number

If the scope of the record data object is subslot, this parameter shall be used to address the desired subslot (typically a submodule).

Index

The parameter Index shall be used to address the desired Record Data object. It is additionally used to derive the scope of the Record Data object (see IEC 61158-6-10).

Seq Number

The parameter Seq Number is used by the server to identify the duplication of services with a sequence number. The range of this service parameter is from 0 to 216 -1. The requesting application process shall provide a unique Seq Number to each outstanding service request. The parameter Seq Number shall be incremented for each service request during a session.

If for example a write service request had the Seq Number set to “17”, a following read service request shall have the Seq Number set to “18”.

When starting a new session, the sequence number shall start with 0. A confirmation with a Seq Number that is not outstanding will be ignored. An indication with a Seq Number that is not outstanding will be rejected. The Seq Number shall be maintained for each established AR separately.

Length

The parameter Length indicates the maximum number of octets to be read, as provided by the client. It describes the size of the buffer provided to hold the read result.

If the requested length is greater than or equal to the actual length, then the actual length with data shall be responded. If the requested length is shorter than the actual length, then a parameter error shall be the result.

Note that the parameter Length may exceed the Max Supported Record Size as provided by the IO device. Max Supported Record Size is used for Write requests only.

Attribute type: Unsigned32

Allowed values: 1 to 2³² – 256

Requested Block Version

This optional parameter indicates the requested block version of the addressed Index. The possible Block Versions are specified in IEC 61158-6-10.

The IO device shall confirm with the highest known Block Version when

- the parameter is unknown
- the parameter is given and contains a value lower than the lowest known Block Version
- the parameter is given and contains a value higher than the highest known Block Version

Otherwise, the IO device shall confirm a Data object with the desired block version. The block version of embedded (sub) blocks is not the target of this versioning.

The Requested Block Version unknown means

- the optional parameter is not given, or
- the parameter is given and contains the value zero.

Special case for AR Data if the Requested Block Version is unknown:

- If all existing AR Properties have Startup Mode = Legacy, then the responding Block Version Low shall be set to 0.
- If at least one AR Properties have Startup Mode = Advanced and all AR Properties have Time Aware System = NonTimeAware, then then the responding Block Version Low shall be set to 1.
- If at least one AR Properties have Time Aware System = TimeAware, then the responding Block Version Low shall be set to 2.

Result(+)

This parameter indicates that the service request succeeded.

Length

The parameter Length indicates the number of octets of the Data object that has been read.

Data

The parameter Data contains the value of the specific object which has been read and consists of the number of octets indicated in the Length. This parameter shall be composed of the data types defined in Clause 5. A specific meaning for the different services of this data exists, which is described in the special service parts. Table 183 shows the list of special read services.

Table 183 – Read Services

Service Name	Subclause
Read PD Port Statistic	7.3.3.3.5.11
Read AR Data for one API	7.3.1.3.5.10.2
Read AR Data for device	7.3.1.3.5.10.3
Read Module Diff Block for one AR	7.3.1.5.5.5
Read Expected Fast Startup Data	7.3.1.3.5.11
Read Expected Identification Data for one subslot	7.3.1.5.5.2
Read Expected Identification Data for one slot	7.3.1.5.5.3
Read Expected Identification Data for one AR	7.3.1.5.5.4
Read Record Input Data Object Element	7.3.2.2.5.9
Read Record Output Data Object Element	7.3.2.2.5.10
Read Substitute Data	7.3.2.2.5.11
Read GSD Data	7.3.2.2.5.13
Read Real Identification Data for one subslot	7.3.2.2.5.4
Read Real Identification Data for one slot	7.3.2.2.5.5
Read Real Identification Data for one AR	7.3.2.2.5.6

Service Name	Subclause
Read Real Identification Data for one API	7.3.2.2.5.7
Read API Data	7.3.2.2.5.8
Read I&M0 Filter Data	7.3.2.3.5.1
Read I&M4 Data	7.3.2.3.5.10
Read I&M5 Data	7.3.2.3.5.11
Read I&M0 Data	7.3.2.3.5.2
Read I&M1 Data	7.3.2.3.5.4
Read I&M2 Data	7.3.2.3.5.6
Read I&M3 Data	7.3.2.3.5.8
Read PDev Data	7.3.3.3.5.1
Read PD NC Data Check	7.3.3.3.5.10
Read PD Port Data Real	7.3.3.3.5.11
Read PD Port Data Check	7.3.3.3.5.15
Read PD Port Data Adjust	7.3.3.3.5.17
Read PD Port FO Data Real	7.3.3.3.5.18
Read PD Port FO Data Check	7.3.3.3.5.20
Read PD Real Data	7.3.3.3.5.2
Read PD Port FO Data Adjust	7.3.3.3.5.22
Read PD Expected Data	7.3.3.3.5.3
Read PD Interface Data Real	7.3.3.3.5.4
Read PD Interface Adjust	7.3.3.3.5.5
Read PD Interface FSU Data Adjust	7.3.3.3.5.8
Read CIM SNMP Adjust	7.3.3.3.5.27
Read CIM Electric PowerReal	7.3.3.3.5.28
Read PD Sync Data	7.3.3.10.5.2
Read PD IR Data	7.3.3.7.5.2
Read PD IR Subframe Data	7.3.3.7.5.4
Read PD Interface MRP Data Real	7.3.3.9.5.1
Read PD Interface MRP Data Check	7.3.3.9.5.3
Read PD Interface MRP Data Adjust	7.3.3.9.5.5
Read PD Port MRP Data Real	7.3.3.9.5.6
Read PD Port MRP Data Adjust	7.3.3.9.5.8
Read PD Port MRPIC Data Real	7.3.3.9.5.9
Read PD Port MRPIC Data Check	7.3.3.9.5.11
Read PD Port MRPIC Data Adjust	7.3.3.9.5.13
Read PD Time Data	7.3.3.5.5.2
Read Diagnosis in channel coding for one subslot	7.3.4.2.5.5
Read Diagnosis in all codings for one subslot	7.3.4.2.5.5.2
Read Maintenance required in channel coding for one subslot	7.3.4.2.5.5.3
Read Maintenance required in all codings for one subslot	7.3.4.2.5.5.4
Read Maintenance demanded in channel coding for one subslot	7.3.4.2.5.5.5
Read Maintenance demanded in all codings for one subslot	7.3.4.2.5.5.6
Read Diagnosis, Maintenance, Qualified and Status for one subslot	7.3.4.2.5.5.7
Read Diagnosis in channel coding for one slot	7.3.4.2.5.6

Service Name	Subclause
Read Diagnosis in all codings for one slot	7.3.4.2.5.6.2
Read Maintenance required in channel coding for one slot	7.3.4.2.5.6.3
Read Maintenance required in all codings for one slot	7.3.4.2.5.6.4
Read Maintenance demanded in channel coding for one slot	7.3.4.2.5.6.5
Read Maintenance demanded in all codings for one slot	7.3.4.2.5.6.6
Read Diagnosis, Maintenance, Qualified and Status for one slot	7.3.4.2.5.6.7
Read Diagnosis in channel coding for one AR	7.3.4.2.5.7
Read Diagnosis in all codings for one AR	7.3.4.2.5.7.2
Read Maintenance required in channel coding for one AR	7.3.4.2.5.7.3
Read Maintenance required in all codings for one AR	7.3.4.2.5.7.4
Read Maintenance demanded in channel coding for one AR	7.3.4.2.5.7.5
Read Maintenance demanded in all codings for one AR	7.3.4.2.5.7.6
Read Diagnosis, Maintenance, Qualified and Status for one AR	7.3.4.2.5.7.7
Read Diagnosis in channel coding for one API	7.3.4.2.5.8
Read Diagnosis in all codings for one API	7.3.4.2.5.8.2
Read Maintenance required in channel coding for one API	7.3.4.2.5.8.3
Read Maintenance required in all codings for one API	7.3.4.2.5.8.4
Read Maintenance demanded in channel coding for one API	7.3.4.2.5.8.5
Read Maintenance demanded in all codings for one API	7.3.4.2.5.8.6
Read Diagnosis, Maintenance, Qualified and Status for one API	7.3.4.2.5.8.7
Read Diagnosis, Maintenance, Qualified and Status for device	7.3.4.2.5.9
Read PE Entity Filter Data for one AR	7.3.5.2.5.4.2
Read PE Entity Filter Data for device	7.3.5.2.5.4.3
Read PE Entity Status Data for one subslot	7.3.5.2.5.5.2
Read PE Entity Status Data for one AR	7.3.5.2.5.5.3
Read PE Entity Status Data for device	7.3.5.2.5.5.4
Read LogBook Data	7.3.6.2.5.1
Read Isochronous Mode Data	7.3.2.4.4.2
Read RS Get Event	7.3.7.2.5.2
Read RS Adjust Observer	7.3.7.2.5.4
Read CIM NetConf Upload Network Attributes	7.3.3.7.5.5
Read CIM NetConf Data Adjust	7.3.3.7.5.7
Read CIM NetConf Data Real	7.3.3.7.5.8
Read CIM NetConf Sync Forward Data	7.3.3.7.5.10
Read CIM Stream Forward Data	7.3.3.7.5.12
Read CIM NetConf Expected Network Data	7.3.3.7.5.14

Result(-)

This parameter indicates that the service request failed.

PNIO Status

This parameter shall contain the actual error code according to the protocol definition. For details, see the error code hierarchy in 7.3.1.7.7.3.

Attribute type: Unsigned32

Add Data 1

The parameter Add Data is API specific (profile). The value 0 shall be transmitted if no additional data 1 is defined.

Attribute type: Unsigned 16

Add Data 1 may be used by profile specifications to transmit specific error messages.

Add Data 2

The parameter Add Data is user specific. The value 0 shall be transmitted if no additional data 2 is defined.

Attribute type: Unsigned 16

Add Data 2 may be used by device vendors to transmit specific error messages.

7.3.1.7.6.1.2 Read Implicit

This confirmed service is used to read the value of a Record Data object using an implicit AR.

If read implicit is rejected by RPC error NCA_server_too_busy (indicating that the resources for implicit reads are used up currently for other clients), the client should retry the service after waiting a random time between 1 s and 10 s.

The same behavior should be applied to an RSIR OutOfResources error.

Table 184 shows the parameters of the service.

Table 184 – Read Implicit

Parameter name	req	ind	rsp	cnf
Argument	M	M(=)		
API	M	M(=)		
Target AR UUID	C	C(=)		
Slot Number	M	M(=)		
Subslot Number	M	M(=)		
Index	M	M(=)		
Length	M	M(=)		
Requested Block Version	O	O(=)		
Result(+)			S	S(=)
AREP			M	M(=)
Length			M	M(=)
Data			M	M(=)
Result(-)			S	S(=)
AREP			M	M(=)
PNIO Status			M	M(=)
Add Data 1			M	M(=)
Add Data 2			M	M(=)

Argument

The argument shall convey the service specific parameters of the service request. It contains the parameters similar to the Read Service (see 7.3.1.7.6.1.1) and an additional parameter:

Target AR UUID

For a record data object with scope application relation, this parameter indicates the target AR.

Result(+)

This parameter indicates that the service request succeeded. It contains the parameters of the Read Service Result (+) (see 7.3.1.7.6.1.1).

Result(-)

This parameter indicates that the service request failed. It contains the parameters of the Read Service Result (-) (see 7.3.1.7.6.1.1).

7.3.1.7.6.1.3 Read Query

This confirmed service is used to read the value of a Record Data object.

To optimize the access to many small data objects a server can offer different combinations of this data behind one Index. In this case, the content of the Record Data object is defined by the Selector. Table 185 shows the parameters of the service.

Table 185 – Read Query

Parameter name	req	ind	rsp	cnf
Argument	M	M(=)		
AREP	M	M(=)		
API	M	M(=)		
Target AR UUID	C	C(=)		
Slot Number	M	M(=)		
Subslot Number	M	M(=)		
Index	M	M(=)		
Seq Number	M	M(=)		
Length	M	M(=)		
Requested Block Version	O	O(=)		
QueryData	M	M(=)		
Result(+)			S	S(=)
AREP			M	M(=)
Seq Number			M	M(=)
Length			M	M(=)
Data			M	M(=)
Result(-)			S	S(=)
AREP			M	M(=)
Seq Number			M	M(=)
PNIO Status			M	M(=)
Add Data 1			M	M(=)
Add Data 2			M	M(=)

Argument

The argument shall convey the service specific parameters of the service request. It contains the parameters of the Read Service (see 7.3.1.7.6.1.1) and an additional parameter:

QueryData

The QueryData parameter is used to implement a request – response behavior with this service.

The request data should be used as an extension after the index, as an additional selector for the response data.

Or the request data should be used as data to be written, and the response data should reflect the result of the write request.

Table 186 shows the list of special read services.

Table 186 – Read Query Services

Service Name	Subclause
NME Stream Add	7.3.9.3.4.3
NME Stream Remove	7.3.9.3.4.4
NME Stream Renew	7.3.9.3.4.5

Result(+)

This parameter indicates that the service request succeeded. It contains the parameters of the Read Service Result (+) (see 7.3.1.7.6.1.1).

Result(-)

This parameter indicates that the service request failed. It contains the parameters of the Read Service Result (-) (see 7.3.1.7.6.1.1).

7.3.1.7.6.2 Write Services**7.3.1.7.6.2.1 Write**

This confirmed service is used to write the value of a Record Data object.

In addition to this common write service, additional services are defined for write specific application data. All this write services use the same parameters, only the data field is different. Table 187 shows the parameters of the services.

Table 187 – Write

Parameter name	req	ind	rsp	cnf
Argument	M	M(=)		
AREP	M	M(=)		
API	M	M(=)		
Slot Number	M	M(=)		
Subslot Number	M	M(=)		
Index	M	M(=)		
Seq Number	M	M(=)		
Length	M	M(=)		
Data	M	M(=)		
Prm Flag		M		
Result(+)			S	S(=)
AREP			M	M(=)
Seq Number			M	M(=)

Parameter name	req	ind	rsp	cnf
Result(-)			S	S(=)
AREP			M	M(=)
Seq Number			M	M(=)
PNIO Status			M	M(=)
Add Data 1			M	M(=)
Add Data 2			M	M(=)

Argument

The argument shall convey the service specific parameters of the service request. It contains the parameters of the Read Service (see 7.3.1.7.6.1.1) and additional parameters:

Length

The parameter Length indicates the number of octets to be written.

The parameter Length shall not exceed the Max Supported Record Size as provided by the IO device.

If the requested length does not match the length of the actual data record an error shall be the result.

Attribute type: Unsigned32

Allowed values: 1 to 232 – 256

Data

The parameter Data contains the value of the Record Data object which shall be written and consists of the number of octets indicated in the Length of the request. This parameter shall be composed of the data types defined in Clause 5. A specific meaning for the different services of this data exists, which is described in the special service parts. Table 188 shows the list of special write services.

Table 188 – Write Services

Service Name	Subclause
Write Expected Fast Startup Data	7.3.1.3.5.12
Write Substitute Value	7.3.2.2.5.12
Write I&M1 Data	7.3.2.3.5.3
Write I&M2 Data	7.3.2.3.5.5
Write I&M3 Data	7.3.2.3.5.7
Write I&M4 Data	7.3.2.3.5.9
Write PD Interface Adjust	7.3.3.3.5.5
Write PD Interface FSU Data Adjust	7.3.3.3.5.7
Write CIM SNMP Adjust	7.3.3.3.5.26
Write PD NC Data Check	7.3.3.3.5.9
Write PD Port Data Check	7.3.3.3.5.14
Write PD Port Data Adjust	7.3.3.3.5.16
Write PD Port FO Data Check	7.3.3.3.5.19
Write PD Port FO Data Adjust	7.3.3.3.5.21
Write PD Sync Data	7.3.3.10.5.1
Write PD IR Data	7.3.3.7.5.1

Service Name	Subclause
Write PD IR Subframe Data	7.3.3.7.5.3
Write PD Interface MRP Data Check	7.3.3.9.5.2
Write PD Interface MRP Data Adjust	7.3.3.9.5.4
Write PD Port MRP Data Adjust	7.3.3.9.5.7
Write PD Port MRPIC Data Check	7.3.3.9.5.10
Write PD Port MRPIC Data Adjust	7.3.3.9.5.12
Write PD Time Data	7.3.3.5.5.1
Write Isochronous Mode Data	7.3.2.4.4.1
Write RS Ack Event	7.3.7.2.5.3
Write RS Adjust Observer	7.3.7.2.5.4
Write CIM NetConf Data Adjust	7.3.3.7.5.6
Write CIM NetConf Sync Forward Data	7.3.3.7.5.9
Write CIM NetConf Stream Forward Data	7.3.3.7.5.11
Write CIM NetConf Expected Network Data	7.3.3.7.5.13

Prm Flag

The local indication parameter shall contain the value TRUE while parameterization during the connection establishment phase. Otherwise, the value shall be set to FALSE.

Attribute type: Boolean

Result(+)

This parameter indicates that the service request succeeded.

Result(-)

This parameter indicates that the service request failed. It contains the parameters of the Read Service Result (-) (see 7.3.1.7.6.1.1).

7.3.1.7.6.2.2 Write Combined Object Container

This confirmed service allows writing the combined object container to the combined object access point (see 7.3.1.7.7.5.3 for details).

The parameter structure and the meaning of the parameters is the same as described in the write service (see 7.3.1.7.6.2.1); for the error code hierarchy, 7.3.1.7.7.1 applies. The parameter Data has a service specific structure and meaning; see Table 189 for its structure.

The AR context is of no meaning for this service; see 7.3.1.7.7.4 for details.

If the ARState is BACKUP, the request is handled as a transparent packet like a single record and is responded with "MultipleWrite.rsp (-) Backup" for the whole package.

Table 189 – Data elements of Write Combined Object Container

Parameter name	Service specific elements	req	ind
Data	List of Container	M	M(=)
	API	M	M(=)
	Slot Number	M	M(=)
	Subslot Number	M	M(=)
	Index	M	M(=)
	Length	M	M(=)
	Data	M	M(=)

Data

This parameter contains the value of the object to write.

List of Container

The service transmits a number of data records with this list to write to the access point. Each list element consists of the following elements:

API

If the scope of the record data object is subslot, slot or API, this parameter shall be used to address the desired AP.

Slot Number

If the scope of the record data object is subslot or slot, this parameter shall be used to address the desired slot (typically a module).

Subslot Number

If the scope of the record data object is subslot, this parameter shall be used to address the desired subslot (typically a submodule).

Index

The parameter Index shall be used to address the desired Record Data object. It is additionally used to derive the scope of the Record Data object.

Length

The parameter Length indicates the number of octets of a Record Data object which shall be written. The allowed length is from 0 to $2^{32} - 256$.

Data

The parameter Data contains the value of the Record Data object which shall be written and consists of the number of octets indicated in the Length of the request. This parameter shall be composed of the data types defined in Clause 5. A specific meaning for the different services of this data exists, which is described in the special service parts. Table 188 shows the list of special write services.

7.3.1.7.6.2.3 Local Write Multiple

This local service is used to convey multiple Record Data objects within one APDU. This service shall only be used in conjunction with the IO AR or Supervisor AR. Table 190 shows the parameters of the service.

It is possible to convey Record Data objects and attributes from multiple ASEs (e.g. Communication Interface Management ASE) in one APDU.

This local service is mapped by building a surrounding data record from the individual address information (API, slot, subslot, index), sequence number and data of the particular data records. This data record is then transmitted to the device by using the service Write.req (see 7.3.1.7.6.2.1).

Within the device such a surrounding data record is recognized by its special index (see IEC 61158-6-10 for its definition; in particular the APDU substitution IODWriteMultipleReq). Within the device a receipt of such a data record (indicated via Write.ind) is then mapped to the local service Local New Write Multiple.

If the ARState is BACKUP, the response contains in List of Results for each data record “Write.rsp (-) Backup”, the service itself is responded with “MultipleWrite.rsp (+) OK”.

Table 190 – Local Write Multiple

Parameter name	req	cnf
Argument	M	
AREP	M	
Seq Number	M	
List of Data Records	M	
API	M	
Slot Number	M	
Subslot Number	M	
Index	M	
Seq Number	M	
Length	M	
Data	M	
Prm Flag		
Result(+)		S
AREP		M
Seq Number		M
List of Results		M
Seq Number		M
PNIO Status		M
Add Data 1		M
Add Data 2		M
Result(-)		S
AREP		M
Seq Number		M
PNIO Status		M
Add Data 1		M
Add Data 2		M

Argument

The argument shall convey the service specific parameters of the service request.

AREP

This parameter is the local identifier for the desired AR.

Seq Number

See Definition in 7.3.1.7.6.1.1.

The Seq Number for the Write Multiple data record is the lowest one.

NOTE 1 This seq number is used for the write multiple service.

List of Data Records

The service transmits a number of data records with this list. Each list element is contained of the following elements:

API

This parameter shall be used to address the desired API.

Slot Number

The parameter Slot Number is used in the destination device for addressing the desired Record Data object in a specific slot (typically a module).

Subslot Number

The parameter Subslot Number is used in the destination device for addressing the desired Record Data object in a specific sub-element (typically a submodule).

Index

The parameter Index is used in the destination device for addressing the desired Record Data object.

Seq Number

See Definition in 7.3.1.7.6.1.1.

The Seq Number for each data record in the list is in ascending order.

NOTE 2 This seq number is used for the individual data record.

Length

The parameter Length indicates the number of octets of a Record Data object which shall be written. The allowed length is from 0 to $2^{32}-65$.

Data

The parameter Data contains the value of the Record Data object which shall be written and consists of the number of octets indicated in the Length of the request. This parameter shall be composed of the data types defined in Clause 5.

Prm Flag

The local indication parameter shall contain the value TRUE while parameterization during the connection establishment phase. Otherwise, the value shall be set to FALSE.

Attribute type: Boolean

Result(+)

This parameter indicates that the service request succeeded.

Result(-)

This parameter indicates that the service request failed.

7.3.1.7.6.2.4 Local New Write Multiple

This local service indicates the receipt of multiple Record Data objects within one APDU. This service shall only be used in conjunction with the IO AR or Supervisor AR. Table 191 shows the parameters of the service.

It is possible to convey Record Data objects and attributes from multiple ASEs (e.g. Communication Interface Management ASE) in one APDU.

This local service is mapped by receipt of a surrounding data record indicated by receiving the special index (see IEC 61158-6-10 for its definition; in particular the APDU substitution IODWriteMultipleReq) on the service indication Write.ind (see 7.3.1.7.6.2.1).

The individual address information (API, slot, subslot, index), sequence number and data of the particular data records are extracted from the surrounding data record by the application and presented in this service's indication.

If the surrounding data record is not decodable (due to its internal structure) the AR is aborted with protocol error. See IEC 61158-6-10 for details.

Otherwise, the particular data records are applied one by one onto the application by using the address information and the data. The results of the particular data record writes are collected together (see IEC 61158-6-10 for its definition; in particular the APDU substitution IODWrite-MultipleReq) and returned via Write.rsp(+).

The local service Write Multiple.cnf then extracts the particular results from the returned information and returns it to the application.

Table 191 – Local New Write Multiple

Parameter name	ind	rsp
Argument	M(=)	
AREP	M(=)	
Seq Number	M(=)	
Slot Number	M(=)	
Subslot Number	M(=)	
Index	M(=)	
Seq Number	M(=)	
Length	M(=)	
Data	M(=)	
Prm Flag	M	
Result(+)		S
AREP		M
Seq Number		M
List of Results		M
Seq Number		M
PNIO Status		M
Add Data 1		M
Add Data 2		M
Result(-)		S
AREP		M
Seq Number		M
PNIO Status		M
Add Data 1		M
Add Data 2		M

Argument

The argument shall convey the service specific parameters of the service request.

AREP

This parameter is the local identifier for the desired AR.

Seq Number

See Definition in 7.3.1.7.6.1.1.

NOTE 1 This seq number is used for the write multiple service.

List of Data Records

The service transmits a number of data records with this list. Each list element is contained of the following elements:

API

This parameter shall be used to address the desired API.

Slot Number

The parameter Slot Number is used in the destination device for addressing the desired Record Data object in a specific slot (typically a module).

Subslot Number

The parameter Subslot Number is used in the destination device for addressing the desired Record Data object in a specific sub-element (typically a submodule).

Index

The parameter Index is used in the destination device for addressing the desired Record Data object.

Seq Number

See Definition in 7.3.1.7.6.1.1.

NOTE 2 This seq number is used for the individual data record.

Length

The parameter Length indicates the number of octets of a Record Data object which shall be written. The allowed length is from 0 to $2^{32}-65$.

Data

The parameter Data contains the value of the Record Data object which shall be written and consists of the number of octets indicated in the Length of the request. This parameter shall be composed of the data types defined in Clause 5.

Prm Flag

The local indication parameter shall contain the value TRUE while parameterization during the connection establishment phase. Otherwise, the value shall be set to FALSE.

Attribute type: Boolean

Result(+)

This parameter indicates that the service request itself succeeded; note however that the PNIO Status of some or even all write results can indicate an error.

List of Results

This list contains the result of each data record access. Each list element is contained of the following elements:

PNIO Status

This parameter shall contain the actual error code according to the protocol definition.

Attribute type: Unsigned32

Add Data 1

The parameter Add Data is API specific (profile). The value 0 shall be transmitted if no additional data 1 is defined.

Attribute type: Unsigned 16

Add Data 1 can be used by profile specifications to transmit specific error messages.

Add Data 2

The parameter Add Data is user specific. The value 0 shall be transmitted if no additional data 2 is defined.

Attribute type: Unsigned 16

Add Data 2 can be used by device vendors to transmit specific error messages.

Result(-)

This parameter indicates that the service request failed totally and none of the data records has been written.

PNIO Status

This parameter shall contain the actual error code according to the protocol definition.

Attribute type: Unsigned32

Add Data 1

The parameter Add Data is API specific (profile). The value 0 shall be transmitted if no additional data 1 is defined.

Attribute type: Unsigned 16

Add Data 1 can be used by profile specifications to transmit specific error messages.

Add Data 2

The parameter Add Data is user specific. The value 0 shall be transmitted if no additional data 2 is defined.

Attribute type: Unsigned 16

Add Data 2 can be used by device vendors to transmit specific error messages.

7.3.1.7.7 Behavior**7.3.1.7.7.1 Invocation of the Record Data object**

For the invocation of the Record Data object the following rules apply:

- Record Data objects shall not exceed the total length of $2^{32} - 65$ octets.
- The attribute Record Data description shall be set accordingly.

7.3.1.7.7.2 Length of Record Data Objects

A Record Data object shall not exceed the total length of $4\ 294\ 967\ 231$ ($2^{32} - 65$) octets.

If a record data object is sub-structured into blocks, the length of a particular block (due to the definition of the block header in IEC 61158-6-10 “APDU abstract syntax”) shall not exceed 65 533 octets.

7.3.1.7.7.3 Error code hierarchy of the Record Data object

The PNIO Status returned from the record data services shall be set according to the current error and shall consist of the elements Error code, Error Decode, Error code 1, and Error code 2.

If PNIO Status is set to (0x00, 0x00, 0x00, 0x00) the special case “No error” applies.

It is recommended to apply the error checks when writing a Record Data object in the following order:

- a) If service violates the IEC 61158-6-10 “PDU checking rules”, PNIO status is set according to IEC 61158-6-10 “PDU checking rules”.

- b) If AR state is set to BACKUP:
PNIO Status = { IODWriteRes, PNIORW, "access / backup", user specific value }
- c) If AR is not owner of the submodule or is a device access AR and application does not grant write access:
PNIO Status = { IODWriteRes, PNIORW, "access / access denied", user specific value }
See 7.3.2.2.6.2.3 for details.
- d) If index is not supported:
PNIO Status = { IODWriteRes, PNIORW, "access / invalid index", ec2 }
ec2 is set to 10 (recommended) or a user specific value.
- e) If write-access is not supported:
PNIO Status = { IODWriteRes, PNIORW, ec1, user specific value }
ec1 is set to "application / write error", "access / type conflict", "access / state conflict", or "access / access denied".
- f) Content errors in the structure of data record object to be written, or partial write onto a data record not supporting partial access:
PNIO Status = { IODWriteRes, PNIORW, ec1, user specific value }
ec1 is set to "access / write length error", "access / invalid range", "access / invalid parameter" or "access / invalid type".
- g) Resource errors during access:
PNIO Status = { IODWriteRes, PNIORW, ec1, user specific value }
ec1 is set to "resource / read constrain conflict", "resource / write constrain conflict", "resource / resource busy", "resource / resource unavailable", or "resource / user specific 12" to "resource / user specific 19".
This indicates a temporary error and can lead to a successful access when the clients retries.
- h) Application errors during access:
PNIO Status = { IODWriteRes, PNIORW, ec1, user specific value }
Error code 1 is set to "application / module failure", "application / busy", "application / version conflict", "application / feature not supported", or "application / user specific 1" to "application / user specific 6".
- i) User specific errors during access:
PNIO Status = { IODWriteRes, PNIORW, "user specific / user specific", user specific value }

It is recommended to apply the error checks when reading a Record Data object in the following order:

- a) If service violates the IEC 61158-6-10 "PDU checking rules", PNIO status is set according to IEC 61158-6-10 "PDU checking rules".
- b) If index is not supported:
PNIO Status = { IODReadRes, PNIORW, "access / invalid index", ec2 }
ec2 is set to 10 (recommended) or a user specific value.
- c) If read-access is not supported:
PNIO Status = { IODReadRes, PNIORW, ec1, user specific value }
ec1 is set to "application / read error", "access / type conflict", "access / state conflict", or "access / access denied".
- d) Partial read onto a data record not supporting partial access:
PNIO Status = { IODReadRes, PNIORW, ec1, user specific value }
Error code 1 is set to "access / invalid range", or "access / invalid type".

e) Resource errors during the access onto the data record object:

PNIO Status = { IODReadRes, PNIORead, ec1, user specific value }

ec1 is set to “resource / read constrain conflict”, “resource / write constrain conflict”, “resource / resource busy”, “resource / resource unavailable”, or “resource / user specific 12” to “resource / user specific 19”.

This indicates a temporary error and can lead to a successful access when the clients retries.

f) Application errors during the access onto the data record object:

PNIO Status = { IODReadRes, PNIORead, ec1, user specific value }

Error code 1 is set to “application / module failure”, “application / busy”, “application / version conflict”, “application / feature not supported”, or “application / user specific 1” to “application / user specific 6”.

g) User specific errors during the access onto the data record object:

PNIO Status = { IODReadRes, PNIORead, “user specific / user specific”, user specific value }

7.3.1.7.7.4 Focus of the record data object

A particular record data object is associated to an AR context in one of the following modes

- The AR context is needed to access the record data object.
- The AR context is used to filter the information of the record data object.
- The AR context has no meaning for accessing the record data object.

If the AR context is needed for the record data object, the information is always related to the expected identification data (see Expected Identification class).

The information of a record data object is filtered according to the following rules:

- If the record data object is addressed over the established AR or over implicit AR with Target AR UUID != NIL, the information
 - is filtered according to the expected identification data (see Expected Identification class), if the addressed object is part of the addressed application relation.

NOTE 1 e.g. by getting diagnosis information from a slot, where at least one submodule is part of the expected identification data, only diagnosis related to submodules within the addressed slots, which are part of the expected identification data is returned.

- is filtered according to the real identification data (see Real Identification class) if the addressed object is not part of the addressed application relation.

NOTE 2 e.g. by getting diagnosis information from a slot, where no submodule is part of the expected identification data, diagnosis related to all submodules within the addressed slots, which are part of the real identification data is returned.

- If the record data object is addressed over implicit AR with Target AR UUID == NIL, the information is always filtered according to the real identification data (see Real Identification class).

The reason for these filter rules is that the user wants to see only the objects he is interested in.

If the AR context has no meaning for the record data object, the information is always related to the real identification data (see Real Identification class).

A Device Access AR does not provide an expected identification. Thus, a DeviceAccess AR belongs to NO API. Thus, the API-filtered records are empty for a DeviceAccess.

7.3.1.7.7.5 Parameterization behavior

7.3.1.7.7.5.1 General

The parameterization of a submodule is done by using the Record Data Class Write service.

The error code hierarchy stated in 7.3.1.7.7.1 shall be applied as fully as possible.

If the data record write service request succeeded, but the data record content evaluation leads to a parameterization error (for example due to interdependencies between several data records needed for the complete parametrization, to a delayed parameter evaluation, combined object container, etc.), a parameter missing or parameter fault diagnosis shall be added to the diagnosis ASE for the addressed submodule (see 7.3.4.1.5). The diagnosis' ExtChannelAddValue contains an index (if known) of the data record and the offset (if known) of the faulty parameter. If multiple errors are detected one arbitrary error (for example the first detected) is stated.

For the parameterization within a parameterization sequence, initiated with Connect.req, Prm Begin.req, or Plug.req and ended with Prm End.req, the submodule shall act as if it was reset to its default and applied just those parameters written during the parameterization sequence.

This can be implemented as follows:

- Generate the parameters to apply by using the default parameters of the submodule and apply the ones written during the parameterization sequence.
- Validate the parameters to apply.
- If invalid generate the parameterization error and reset the submodule to default parameterization.
- If valid apply the parameters by resetting the submodule to its default and add parameters to apply or in a smarter way: Determine the delta between the current parameterization of the submodule and the parameters to apply. Apply smart this delta to reduce the impact onto the periphery.

7.3.1.7.7.5.2 Write Multiple

This service is be used to convey multiple Record Data objects within one APDU. This service is used in conjunction with the IO AR or Supervisor AR. It is possible to convey Record Data objects and attributes from multiple ASEs (e.g. Communication Interface Management ASE) in one APDU.

Within the device such a surrounding data record is recognized by its special index (see IEC 61158-6-10 for its definition; in particular the APDU substitution IODWriteMultipleReq).

WriteMultiple shall be used, if supported by the IO device, for startup parameterization during Connect, Plug and dynamic reconfiguration.

7.3.1.7.7.5.3 Combined Object

An IO device may define so called “combined objects”. A particular combined object is a group of related submodules, e.g. an interface and its ports. One of the submodules is defined as the combined object's “access point”, e.g. the interface. All members of a combined object are known by the IO device.

The transport of the parameters for the submodules of a combined object is done by writing the combined object container (COC) to its access point; addressed by API, slot, subslot and index. The combined object container holds all records for all member submodules; for this it is sub structured in subblocks; each having an address for the submodule (API, slot and subslot), an index for the data record to write and the data itself, which are written during startup or plug sequence. The combined object container shall only contain data records assigned to

submodules of the combined object. The records shall be sorted according to the transfer sequence defined in 7.3.1.3.6.3.1.

One or more combined object containers are transmitted to the access point of a particular group. The number of containers is defined by the amount of record data to be transmitted and the allowed record size for a single record.

A combined object container could be integrated into MultipleWrite.

Immediate error response (i.e. as a result of the Record Data write service) is given only if the combined object container contains records which are not part of the combined object or when the access point does not exist.

For errors due to parameter checking and applying 7.3.1.7.7.1 applies.

The access point acts as proxy to a local entity holding the Record Data objects located in the combined object container for all submodules of the combined object group. This entity distributes the Record Data objects dedicated for a particular submodule of the combined object, whenever parameterization is required for it (in the scenarios Connect, Prm Begin, Plug or Release).

This procedure allows plugging a bunch of submodules at the same time (e.g. a pluggable interface with its ports) and having an implicit parameterization bracket for all submodules together (this is especially important in the context of the physical device). This however works only if all record data for the combined object is placed into the combined object container.

A port or interface parameter record change, a change of a parameter of a combined object group member, shall be executed by a PrmBegin/End sequence for the corresponding combined object access point.

Record data is always read directly from the particular submodule; in particular the “transport box” combined object container is not readable.

A special case for the combined object is used for the physical device (e.g. in the context of pluggable interfaces and ports). The combined object access point in this case is the interface submodule. The combined object container contains the Record Data objects for the interface and all port submodules.

If ARProperties.CombinedObjectContainer is set to COC, the IO controller shall send all parameters during the parameterization sequence using one or more combined object containers to the group. The IO device may deny the write of single data records during this sequence.

7.3.1.7.7.6 Internal sorting

If a data record defined within this specification contains indexable elements,

- the elements should be returned on a read request in ascending order (for example API, slot number, subslot number)
- the elements should be provided on a write request in ascending order.

7.3.1.7.7.7 Persistency

Whether a write to a record data object is stored non-volatile in the device's persistency is defined in IEC 61158-6-10.

The persistency of the device is attached to the Configuration Interface Management ASE; see 7.3.3.3.6.2 for details.

7.3.2 Real Identification ASE

7.3.2.1 Overview

The Real Identification ASE represents physically available APOs. It represents all APOs and conveys all events (for example pull and plug, parameterization) from and to the APOs.

The APO represents the submodule with its channels and therefore is an access point to the application. Behind them is the physical module as a real object. The Real Identification ASE works on submodule granularity.

The Real Identification ASE is organized in 4 classes:

- Real Identification class: managing the APOs and the ownership
- I&M Data class: managing the I&M data of the APOs
- Isochronous Mode Application class: managing necessary parameter for isochronous mode
- Observers class: managing the diagnosis information for one submodule

There are two places where IO data exist: In the Real Identification ASE, the IO data are stored in the Real Identification Format. In the Communication Relationship class the IO data are stored in the Expected Identification Format.

In Isochronous Mode, the application shall use the FAL services for reading and writing of data. These need to be delivered or collected at the correct timepoint.

The record data for the Isochronous Mode are stored in the Expected Identification.

Definitions for records object in case of system redundancy are shown in IEC 61158-6-10 subclause "Record index".

7.3.2.2 Real Identification class

7.3.2.2.1 Overview

See 7.3.2.1.

7.3.2.2.2 Relations

The services are bound to other services as shown in Table 192:

Table 192 – Binding real identification services

Service	Binding	Usage
Local Add Submodule	Local	Used by FAL
Local Remove Submodule	Local	Used by FAL
Read Real Identification Data for one subslot	AR:Record Data:Read	Used by IO controller or IO supervisor
Read Real Identification Data for one slot	AR:Record Data:Read	Used by IO controller or IO supervisor
Read Real Identification Data for one AR	AR:Record Data:Read	Used by IO controller or IO supervisor
Read Real Identification Data for one API	AR:Record Data:Read	Used by IO controller or IO supervisor
Read API Data	AR:Record Data:Read	Used by IO controller or IO supervisor
Read Record Input Data Object Element	AR:Record Data:Read	Used by IO controller or IO supervisor

Service	Binding	Usage
Read Record Output Data Object Element	AR:Record Data:Read	Used by IO controller or IO supervisor
Read Substitute Value	AR:Record Data:Read	Used by IO controller or IO supervisor
Write Substitute Value	AR:Record Data:Write	Used by IO controller or IO supervisor
Read GSD Data	AR:Record Data:Read	Used by IO controller or IO supervisor
Local	AR:Alarm:Alarm Notification	Used by RI class

7.3.2.2.3 Template

This class specifies the real identification; i.e. the submodules of the IO device.

The real identification object is described by the following template:

ASE: Real Identification ASE

CLASS: Real Identification

CLASS ID: not used

PARENT CLASS: TOP

ATTRIBUTES:

- 1 (m) Key Attribute: Implicit
- 2 (m) Attribute: List of Real Submodules
- 2.1 (m) Attribute: API
- 2.2 (m) Attribute: Slot Number
- 2.3 (m) Attribute: Subslot Number
- 2.4 (m) Attribute: Module Ident Number
- 2.5 (m) Attribute: Submodule Ident Number
- 2.6 (m) Attribute: Owner
- 2.7 (m) Attribute: Submodule Properties
- 2.7.1 (m) Attribute: Type
- 2.8 (m) Attribute: List of Data Descriptions
- 2.8.1 (m) Attribute: Data Direction
- 2.8.2 (m) Attribute: Submodule Data Length
- 2.8.3 (m) Attribute: Length IOPS
- 2.8.4 (m) Attribute: Length IOCS
- 2.9 (m) Attribute: Substitution Mode
- 2.10 (c) Constraint: Substitution Mode = REPLACEMENT_VALUE or
- PROFILE_SPECIFIC
- 2.10.1 (m) Attribute: Substitution Value
- 3 (o) Attribute: GSD Data

SERVICES:

- 1 (m) OpsService: Local Add Submodule
- 2 (m) OpsService: Local Remove Submodule
- 3 (m) OpsService: Read Real Identification Data for one subslot
- 4 (m) OpsService: Read Real Identification Data for one slot
- 5 (m) OpsService: Read Real Identification Data for one AR
- 6 (m) OpsService: Read Real Identification Data for one API
- 7 (m) OpsService: Read API Data
- 8 (m) OpsService: Read Record Input Data Object Element
- 9 (m) OpsService: Read Record Output Data Object Element
- 10 (o) OpsService: Read Substitute Value
- 11 (o) OpsService: Write Substitute Value
- 12 (o) OpsService: Read GSD Data

7.3.2.2.4 Attributes

Implicit

The key attribute Implicit indicates that the real identification object is implicitly addressed by the services.

List of Real Submodules

This list contains the list of real submodules:

One real submodule is composed of the following list elements:

API

This attribute defines the number of the application process the submodule is assigned to.

Attribute type: Unsigned32

Allowed values: 0 to 0xFFFFFFFF

Slot Number

This attribute defines the slot the submodule is assigned to.

Attribute type: Unsigned16

Allowed values: 0 to 0x7FFF

Subslot Number

This attribute defines the subslot the submodule is assigned to.

Attribute type: Unsigned16

Allowed values: 0 to 0x9FFF

Module Ident Number

This attribute defines the identification of the module.

Attribute type: Unsigned32

Allowed values: 1 to 0xFFFFFFFF

NOTE 1 The attribute value is manufacturer specific. See 7.1.4.6.4 for details.

Submodule Ident Number

This attribute defines the identification of the submodule.

Attribute type: Unsigned32

Allowed values: 0x0, 0x1 to 0xFFFFFFFF

NOTE 2 The attribute value is manufacturer specific, whereby the value 0 should not be used. See 7.1.4.6.4 for details.

Owner

This attribute defines the current owner of the submodule. It holds the AREP of the AR which has the ownership of the submodule.

Special cases: The value NONE indicates that the submodule is currently not owned, the value SOL indicates that the submodule is superordinated locked by the application.

Allowed values: AREP, SOL, NONE

Submodule Properties

This attribute consists of the following attributes.

Type

This attribute defines the type of the submodule.

Attribute type: Unsigned16

Allowed values: NO_IO, INPUT, OUTPUT, IO

List of Data Descriptions

The following rules apply for the data descriptions.

There shall be one data description with Data Direction = DIRECTION_INPUT for a submodule of Type NO_IO or INPUT.

There shall be one data description with Data Direction = DIRECTION_OUTPUT for a submodule of Type OUTPUT.

There shall be a data description with Data Direction = DIRECTION_INPUT and followed by a data description with Data Direction = DIRECTION_OUTPUT for a submodule of Type IO.

This attribute list consists of the following attributes.

Data Direction

The attribute defines the direction of the data description.

Attribute type: Unsigned16

Allowed values: DIRECTION_INPUT, DIRECTION_OUTPUT

Submodule Data Length

The attribute Submodule Data Length defines the number of octets of the Data Element **without** counting the IOPS.

Submodule Data Length is independent of the value of Reduce Input/Output Submodule Data Length.

Attribute type: Unsigned16

Allowed values: 0 to 1 439

Length IOPS

The attribute Length IOPS defines the number of octets of the IOPS.

Length IOPS is independent of the value of Discard IOXS.

Attribute type: Unsigned8

Allowed values: 1

Length IOCS

The attribute Length IOCS defines the number of octets of the IOCS. Length IOPS is independent of the value of Discard IOXS.

Attribute type: Unsigned8

Allowed values: 1

Substitution Mode

This attribute defines the substitution mode of the submodule for the output data object element.

Attribute type: Unsigned16

Allowed values: ZERO, LAST_VALUE, REPLACEMENT_VALUE, PROFILE_SPECIFIC

Substitution Value

This conditional attribute is present when the value of the Substitution Mode attribute is "REPLACEMENT_VALUE" or "PROFILE_SPECIFIC". It contains the value to be substituted.

Attribute type: according to data description

GSD Data

This optional attribute hosts the GSD for this IO device.

Attribute type: OctetString

7.3.2.2.5 Services

7.3.2.2.5.1 General Data Definition for Identification Data

See 7.3.1.5.5.1.

7.3.2.2.5.2 Local Add Submodule

This local service, as shown in Table 193, shall be used to add (plug) a submodule into the real identification data.

Table 193 – Local Add Submodule

Parameter name	req	cnf
Argument	M(=)	M(=)
API	M(=)	M(=)
Slot Number	M(=)	M(=)
Subslot Number	M(=)	M(=)
Module Ident Number	M(=)	M(=)
Submodule Ident Number	M(=)	M(=)

Argument

The argument shall convey the service specific parameters of the service request.

API

This parameter contains the value of the corresponding attribute of the ASE object.

Slot Number

This parameter contains the value of the corresponding attribute of the ASE object.

Subslot Number

This parameter contains the value of the corresponding attribute of the ASE object.

Module Ident Number

This parameter contains the value of the corresponding attribute of the ASE object.

Submodule Ident Number

This parameter contains the value of the corresponding attribute of the ASE object.

7.3.2.2.5.3 Local Remove Submodule

This local service, as shown in Table 194, shall be used to remove (pull) a submodule from the real identification data.

Table 194 – Local Remove Submodule

Parameter name	req	cnf
Argument	M(=)	M(=)
API	M(=)	M(=)
Slot Number	M(=)	M(=)
Subslot Number	M(=)	M(=)

Argument

The argument shall convey the service specific parameters of the service request.

API

This parameter contains the value of the corresponding attribute of the ASE object.

Slot Number

This parameter contains the value of the corresponding attribute of the ASE object.

Subslot Number

This parameter contains the value of the corresponding attribute of the ASE object.

7.3.2.2.5.4 Read Real Identification Data for one subslot

This service allows reading the real identification data using a record data object with subslot scope (see 7.3.1.7.1).

The parameter structure and the meaning of the parameters is the same as described in the read service (see 7.3.1.7.6.1.1); for the error code hierarchy, 7.3.1.7.7.1 applies. The parameter Data has a service specific structure and meaning; see 7.3.1.5.5.1 for its general description.

The AR context is of no meaning for this service; see 7.3.1.7.7.4 for details.

7.3.2.2.5.5 Read Real Identification Data for one slot

This service allows reading the real identification data using a record data object with slot scope (see 7.3.1.7.1).

The parameter structure and the meaning of the parameters is the same as described in the read service (see 7.3.1.7.6.1.1); for the error code hierarchy, 7.3.1.7.7.1 applies. The parameter Data has a service specific structure and meaning; see 7.3.1.5.5.1 for its general description.

The AR context is used for this service; see 7.3.1.7.7.4 for details.

The response can vary depending on the vendor of the device:

- The real identification data for this slot not filtered by the AR, or
- If the slot is contained in the expected identification data of the AR, use the expected identification to filter the real identification and return the intersecting set; otherwise, return the real identification of the slot without filter.

7.3.2.2.5.6 Read Real Identification Data for one AR

This service allows reading the real identification data using a record data object with AR scope (see 7.3.1.7.1).

The parameter structure and the meaning of the parameters is the same as described in the read service (see 7.3.1.7.6.1.1); for the error code hierarchy, 7.3.1.7.7.1 applies. The parameter Data has a service specific structure and meaning; see 7.3.1.5.5.1 for its general description.

The AR context is needed for this service; see 7.3.1.7.7.4 for details.

7.3.2.2.5.7 Read Real Identification Data for one API

This service allows reading the real identification data using a record data object with API scope (see 7.3.1.7.1).

The parameter structure and the meaning of the parameters is the same as described in the read service (see 7.3.1.7.6.1.1); for the error code hierarchy, 7.3.1.7.7.1 applies. The parameter Data has a service specific structure and meaning; see 7.3.1.5.5.1 for its general description.

The AR context is of no meaning for this service; see 7.3.1.7.7.4 for details.

7.3.2.2.5.8 Read API Data

This service allows reading the supported application profiles using a record data object with device scope (see 7.3.1.7.1).

The parameter structure and the meaning of the parameters is the same as described in the read service (see 7.3.1.7.6.1.1); for the error code hierarchy, 7.3.1.7.7.1 applies. The parameter Data has a service specific structure and meaning; see Table 195 for its structure.

The AR context is of no meaning for this service; see 7.3.1.7.7.4 for details.

Table 195 – Data elements of Read API Data

Parameter name	Service specific elements	rsp	cnf
Data	List of APs	M	M(=)
	API	M	M(=)

Data

This parameter contains the values of the object which has been read.

List of APs

This parameter is composed of the following list elements:

API

This parameter contains the value of the corresponding attribute of the ASE object.

7.3.2.2.5.9 Read Record Input Data Object Element

This confirmed service allows reading the value of an Input Data object element.

The parameter structure and the meaning of the parameters is the same as described in the read service (see 7.3.1.7.6.1.1). But the parameter Data has a service specific structure and meaning. Table 196 shows the specific elements of Data for this service.

This service returns “access / invalid index” for submodules without input data; i.e. for submodules having output data only, or having no IO data.

If the submodule is owned by the AR specified in the service (over the AREP resp. the Target AR UUID), the input data object element as seen/provided by the owner of the submodule is returned. If the owner sees OK or SUBSTITUTE, the input data is returned accordingly (i.e. input data, IOPS from the device, IOCS from the IO controller owning the submodule), if the owner sees WRONG or NO_SUBMODULE, the service returns “access / invalid index”.

If the submodule is not owned by the AR, the service returns the real data of the submodule. If the real data cannot be determined by the application, the service returns “access / invalid index”.

Due to different reasons (e.g. physical input delays), this value may differ from the value of the real input data or from the last transferred value.

If the submodule is not owned by an AR, the service returns the real data of the submodule. If the real data cannot be determined by the application, the service returns “access / invalid index”.

Table 196 – Data elements of Read Record Input Data Object Element

Parameter name	Service specific elements	rsp	cnf
Data	Length IOCS	M	M(=)
	IOCS	M	M(=)
	Length IOPS	M	M(=)
	IOPS	M	M(=)
	Length Data	M	M(=)
	Data	M	M(=)

Data

This parameter contains the values of the object which has been read.

Length IOCS

This parameter contains the value of the corresponding attribute of the Input Data object.

IOCS

This parameter contains the value of the corresponding attribute of the Input Data object.

Length IOPS

This parameter contains the value of the corresponding attribute of the Input Data object.

IOPS

This parameter contains the value of the corresponding attribute of the Input Data object.

Length Data

This parameter contains the data length of the object which has been read.

Data

This parameter contains the value of the object which has been read and consists of the number of octets indicated in the parameter Length Data. Its content is composed according to the attribute Input Data Structure of the Input Data object. Data contains the input data as given by the IO device.

7.3.2.2.5.10 Read Record Output Data Object Element

This confirmed service allows reading the value of an Output Data object element with the substitute value.

The output data object allows applying a substitute value as seen in Figure 43.

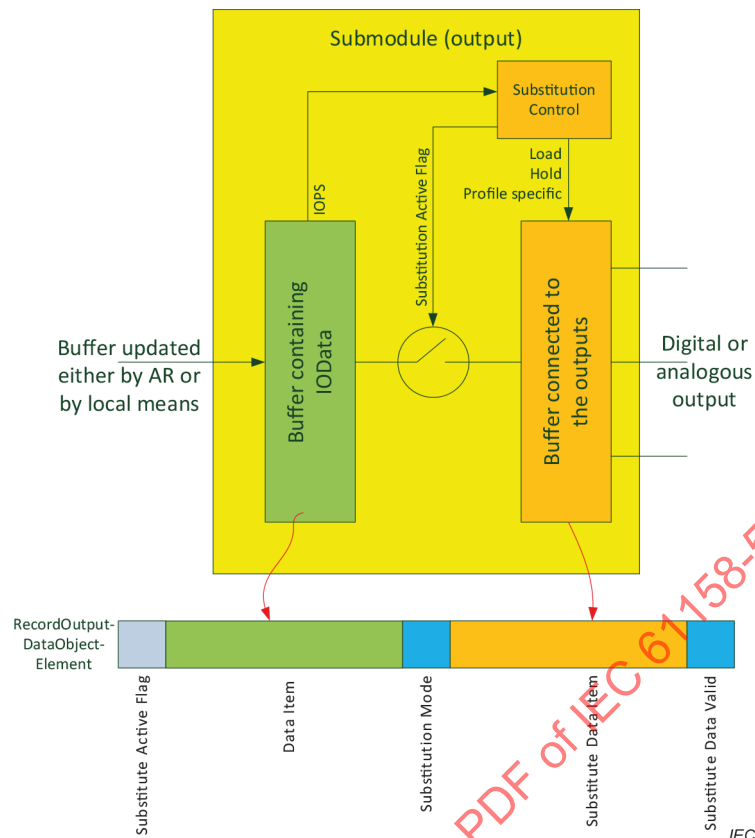


Figure 43 – Substitute Value

The substitute value is defined by one of the following substitution modes:

- ZERO – is a submodule specific function to set all output values of the Output Data element to inactive (e.g. free from voltage or current),
- LAST_VALUE – all output values of the Output Data element shall be set to the last valid (IOPS==GOOD) values of the Get Output confirmation service primitive,
- REPLACEMENT_VALUE – all output values of the Output Data element shall be set to the value of the attribute Substitution Mode (e.g. “0”),
- PROFILE_SPECIFIC – all output values of the Output Data element shall be set according to a specific profile.

The substitution mode is defined using the service Write Substitute Value (see 7.3.2.2.5.12), by applying a vendor specific data record or by local means.

The substitution control controls the buffer content connected to the outputs depending on the IOPS of the output data object.

If IOPS is set to GOOD

- the Substitute Active Flag is set to OPERATION, meaning the outputs are set according to normal control process (green drawn buffer).
- the output data buffer updated by the AR being the owner of the submodule is applied to the buffer connected to the outputs.
- the service Read Substitute Value returns
 - Substitute Active Flag = OPERATION
 - Data Item contains the output data buffer updated by the AR
 - Substitution Mode contains the configured substitution mode

- If Substitute Data Valid == GOOD
 - Substitute Data Item contains the buffer connected to the outputs (preferred solution)
- If Substitute Data Valid == BAD_BY_SUBSLOT
 - Substitute Data Item is invalid

NOTE The buffer connected to the outputs is already delivered with the Data Item.

If IOPS is set to BAD_BY_XXX

- the Substitute Active Flag is set to SUBSTITUTE, meaning the outputs are set according to the substitution mode.
- the output data buffer updated by the AR being the owner of the submodule is disconnected from the buffer connected to the outputs; the buffer to the outputs is filled by the substitute control according to the substitution mode (zero, last value, replacement value, or profile specific).
- the service Read Substitute Value returns
 - Substitute Active Flag = SUBSTITUTE
 - Data Item contains the output data buffer updated by the AR
 - Substitution Mode contains the configured substitution mode
 - Substitute Data Valid = GOOD
 - if Substitution Mode is set to ZERO, Substitute Data Item should contain the buffer connected to the outputs.
 - if Substitution Mode is set to another value than ZERO, Substitute Data Item shall contain the buffer connected to the outputs.

The parameter structure and the meaning of the parameters is the same as described in the read service (see 7.3.1.7.6.1.1). But the parameter Data has a service specific structure and meaning. Table 197 shows the specific elements of Data for this service.

This service returns “access / invalid index” for submodules without output data; i.e. for submodules having input data only, or having no IO data.

If the submodule is owned by the AR specified in the service (over the AREP resp. the Target AR UUID), the output data object element as provided/seen within this AR is returned. If the owner sees OK or SUBSTITUTE, the output data is returned accordingly (i.e. output data, IOPS from the IO controller owning the submodule, IOCS from the device), if the owner sees WRONG or NO_SUBMODULE, the service returns “access / invalid index”.

If the submodule is not owned by the AR, the service returns the real data of the submodule. If the real data cannot be determined by the application, the service returns “access / invalid index”.

Due to different reasons (e.g. physical output delays) this value may differ from the value of the real output data or from the last transferred value.

Table 197 – Data elements of Read Record Output Data Object Element

Parameter name	Service specific elements	rsp	cnf
Data	Substitute Active Flag	M	M(=)
	Length IOCS	M	M(=)
	Length IOPS	M	M(=)
	Length Data	M	M(=)
	Data Item	M	M(=)
	IOCS	M	M(=)
	Data	M	M(=)
	IOPS	M	M(=)
	Substitute Value	M	M(=)
	Substitution Mode	M	M(=)
	Substitute Data Item	M	M(=)
	IOCS	M	M(=)
	Data	M	M(=)
	Substitute Data Valid	M	M(=)

Data

This parameter contains the values of the object which has been read.

Substitute Active Flag

This parameter contains the value of the corresponding attribute of the Output Data object.

Length IOCS

This parameter contains the value of the corresponding attribute of the Output Data object.

Length IOPS

This parameter contains the value of the corresponding attribute of the Output Data object.

Length Data

This parameter contains the data length of the object which has been read.

Data Item

This parameter is composed of the following elements:

IOCS

This parameter contains the value of the corresponding attribute of the Output Data object.

Data

This parameter contains the value of the object which has been read and consists of the number of octets indicated in the Length Data of the response. Its content is composed according to the attribute Output Data Structure of the Output Data object. Data contains the output data as given by the IO controller.

IOPS

This parameter contains the value of the corresponding attribute of the Output Data object.

Substitute Value

This parameter is composed of the following elements:

Substitution Mode

This parameter contains the value of the corresponding attribute of the Output Data object.

Substitute Data Item

This parameter is composed of the following elements:

IOCS

This parameter contains the value of the corresponding attribute of the Output Data object.

Data

This parameter contains the value of the object which has been read and consists of the number of octets indicated in the Length Data of the response. Its content is composed according to the attribute Output Data Object Format of the Output Data object.

For the content of the data, refer to the explanation above.

Substitute Data Valid

This parameter contains the value of the corresponding attribute of the Output Data object.

7.3.2.2.5.11 Read Substitute Value

This confirmed and optional service allows reading the substitute value.

The parameter structure and the meaning of the parameters is the same as described in the read service (see 7.3.1.7.6.1.1). But the parameter Data has a service specific structure and meaning. Table 198 shows the specific elements of Data for this service.

The AR context is of no meaning for this service; see 7.3.1.7.7.4 for details.

This service returns “access / invalid index” if the application does not support reading of values of Substitute Value objects or if the data of the Input Data object cannot be determined by the application.

Table 198 – Data elements of Read Substitute Value

Parameter name	Service specific elements	rsp	cnf
Data	Substitute Value	M	M(=)
	Substitution Mode	M	M(=)
	Substitute Data Item	M	M(=)
	IOCS	M	M(=)
	Data	M	M(=)
	Substitute Data Valid	M	M(=)

Data

This parameter contains the values of the object which has been read.

Substitute Value

This parameter is composed of the following elements:

Substitution Mode

This parameter contains the value of the corresponding attribute of the Output Data object.

Substitute Data Item

This parameter is composed of the following elements:

IOCS

This parameter contains the value of the corresponding attribute of the Output Data object.

Data

This parameter contains the Substitute Value which has been read and consists of the number of octets indicated in the Length Data of the response. Its content is composed according to the attribute Output Data Object Format of the Output Data object.

Substitute Data Valid

This parameter contains the value of the corresponding attribute of the Output Data object.

If the submodule does not support Substitute Value either a negative response containing the values Error Decode = "PNIORW", Error code 1 = "invalid index", Error code 2 = "user specific" may be given or else a null record may be returned.

7.3.2.2.5.12 Write Substitute Value

This confirmed and optional service allows writing the substitute value of an Output Data object element.

The parameter structure and the meaning of the parameters is the same as described in the write service (see 7.3.1.7.6.2.1). But the parameter Data has a service specific structure and meaning. Table 198 shows the specific elements of Data for this service.

The AR context is of no meaning for this service; see 7.3.1.7.7.4 for details.

This service returns "access / invalid index" if the application does not support writing of values of Substitute Value objects or if the data of the Input Data object cannot be determined by the application.

Data

See Read Substitute Value (7.3.2.2.5.11).

7.3.2.2.5.13 Read GSD Data

This confirmed and optional service allows reading GSD Data using a record data object with device scope (see 7.3.1.7.1).

The parameter structure and the meaning of the parameters is the same as described in the read query service (see 7.3.1.7.6.1.3); for the error code hierarchy, 7.3.1.7.7.1 applies. The parameter Data has a service specific structure and meaning; see 7.3.4.2.5.1 for its general description.

The AR context is of no meaning for this service; see 7.3.1.7.7.4 for details.

GSD data belongs to the device. The parameter Index identifies the data record index as specified in IEC 61158-6-10.

The model to upload the GSD is described as follows:

- The uploader starts with From Offset Data set to "0" (i.e. start uploading at the begin) and specifies in the Read Query request the maximum length to read in one chunk via the parameter Length

- The IO device responds with Data set according to Table 199; mirrors the requested From Offset Data, specifies for the uploader which value to use for the next call to this service as Next Offset Data, and informs the uploader about the Total Size. The Data returned is a chunk from the ASE's attribute GSD Data (starting with GSD Data[From Offset Data] up to GSD Data[Next Offset Data]).
- If Next Offset Data is returned with a value "0", the last chunk of the GSD Data has been read

Table 199 shows the specific elements of Selector for this service.

Table 199 – Selector for Read GSD Data

Parameter name	Service specific elements	rsp	cnf
Selector	From Offset Data	M	M(=)

Data

This parameter contains the value of the object which has been read.

From Offset Data

Specifies the start offset for the GSD data.

Attribute type: Unsigned32

Table 200 shows the specific elements of Data for this service.

Table 200 – Data elements of Read GSD Data

Parameter name	Service specific elements	rsp	cnf
Data	From Offset Data	M	M(=)
	Next Offset Data	M	M(=)
	Total Size	M	M(=)
	Data	M	M(=)

Data

This parameter contains the value of the object which has been read.

From Offset Data

Mirrors the From Offset Data of the request

Attribute type: Unsigned32

Next Offset Data

Specifies the next offset to read the GSD data

Attribute type: Unsigned32

Special case: 0, if last chunk of GSD data has been transmitted

Total Size

Specifies the total size of the GSD data

Attribute type: Unsigned32

Data

Chunk of GSD Data

7.3.2.2.6 Behavior

7.3.2.2.6.1 General

The real identification object contains the real identification data from the perspective of the IO device. The real identification is detected by local means of the IO device and kept always “up to date”, i.e. it reflects the current configuration of the IO device. The real identification can be changed during operation by local means, such as plug or pull of modules or submodules or ownership handling (takeover, release...). In such a case, the real identification shall be updated appropriately using Local Add / Remove / Update Submodule.

If an AR is affected by a change in the real identification, the IO device shall inform the IO controller/supervisor by means of an Alarm service. The Alarm Types “Controlled By Supervisor”, “Released”, “Pull”, “Plug” or “Plug Wrong Submodule” shall be used to indicate such events.

When receiving the Alarm Notification with Alarm type “Plug” the IO controller/supervisor shall check if the new added submodule needs startup parameter and convey this parameter to the IO device.

When receiving the Alarm Notification with Alarm type “Pull” or “Plug Wrong Submodule” the IO controller will inform the local user.

7.3.2.2.6.2 Behavior in case of configuration change

7.3.2.2.6.2.1 General

The behavior in case of pull or plug of modules and/or submodules, IO supervisor control and release during operation and AR establishment and release is referred to as configuration change.

The behavior in case of configuration change is defined as described below.

7.3.2.2.6.2.2 Real Submodule

7.3.2.2.6.2.2.1 Primitive definitions

7.3.2.2.6.2.2.2 Primitives exchanged between remote machines

The service primitives including their associated parameters issued or received by Real Submodule State Machine (RSM) are described in the service definition and shown in Table 201.

Table 201 – Remote primitives issued or received by RSMSM

Primitive	Source	Destination	Associated parameters	Functions
UserPlugSM.req	local	RSMSM	RealModuleID, RealSubmoduleID, API, Slot, Subslot	—
UserPullISM.req	local	RSMSM	API, Slot, Subslot	—
UserPlugSM.cnf ()	RSMSM	local		—
UserPullISM.cnf ()	RSMSM	local		—
PlugAlarm.req	RSMSM	PLUGSM	RealModuleID, RealSubmoduleID, API, Slot, Subslot	—
PlugAlarm.cnf ()	PLUGSM	RSMSM	API, Slot, Subslot	—
PlugWrongAlarm.req	RSMSM	PLUGSM	RealModuleID, RealSubmoduleID, API, Slot, Subslot	—
PlugWrongAlarm.cnf ()	PLUGSM	RSMSM	API, Slot, Subslot	—
PullAlarm.req	RSMSM	PULLSM	API, Slot, Subslot	—
PullAlarm.cnf ()	PULLSM	RSMSM	API, Slot, Subslot	—

7.3.2.2.6.2.2.3 Primitives exchanged between local machines

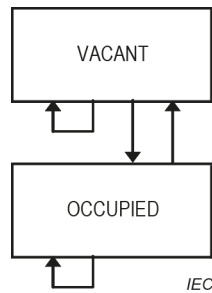
The local service primitives including their associated parameters issued or received by RSMSM described in the service definition and shown in Table 202.

Table 202 – Local primitives issued or received by RSMSM

Primitive	Source	Destination	Associated parameters	Functions
—	—	—	—	—

7.3.2.2.6.2.2.4 State transition diagram

The state transition diagram is shown in Figure 44.

**Figure 44 – State transition diagram RSMSM**

States of the RSMSM

VACANT

The addressed API, Slot, Subslot is vacant. This means no submodule is plugged or assigned.

OCCUPIED

The addressed API, Slot, Subslot is occupied. This means a submodule is plugged or assigned.

7.3.2.2.6.2.2.5 State machine description

This state machine covers for a particular subslot its occupation by a submodule and raises the appropriate Pull and Plug alarms. Note that the Plug alarm is not issued, when a wrong submodule is plugged into the subslot, if no current owner exists, or if the current owner is the application (SOL).

7.3.2.2.6.2.2.6 State table

Table 203 defines the state table for the selected behavior.

Table 203 – State table RSMSM

#	Current State	Event /Condition =>Action	Next State
1	VACANT	UserPlugSM.req () /GetOwnerFromAdministration () == FREE GetOwnerFromAdministration () == SOL => ignore UserPlugSM.cnf (+)	OCCUPIED
2	VACANT	UserPlugSM.req () /GetOwnerFromAdministration () == OWNER && UserCheckIdent () != WRONG => Create PlugSubmodule alarm PDU for the OWNER PlugAlarm.req () UserPlugSM.cnf (+)	OCCUPIED
3	VACANT	UserPlugSM.req () /GetOwnerFromAdministration () == OWNER && UserCheckIdent () == WRONG => Create PlugWrongSubmodule alarm PDU for the OWNER PlugWrongAlarm.req () UserPlugSM.cnf (+)	OCCUPIED
4	VACANT	UserPullSM.req () => ignore UserPullSM.cnf (+)	VACANT

#	Current State	Event /Condition =>Action	Next State
5	VACANT	PlugAlarm.cnf () => ignore	VACANT
6	VACANT	PlugWrongAlarm.cnf () => ignore	VACANT
7	VACANT	PullAlarm.cnf () => ignore	VACANT
8	OCCUPIED	UserPullSM.req () /GetOwnerFromAdministration () == FREE GetOwnerFromAdministration () == SOL => ignore UserPullSM.cnf (+)	VACANT
9	OCCUPIED	UserPullSM.req () /GetOwnerFromAdministration () == OWNER => Create PullSubmodule alarm PDU for the OWNER PullAlarm.req () UserPullSM.cnf (+)	VACANT
10	OCCUPIED	UserPlugSM.req () => ignore UserPlugSM.cnf (-)	OCCUPIED
11	OCCUPIED	PlugAlarm.cnf () => ignore	OCCUPIED
12	OCCUPIED	PlugWrongAlarm.cnf () => ignore	OCCUPIED
13	OCCUPIED	PullAlarm.cnf () => ignore	OCCUPIED

7.3.2.2.6.2.2.7 Functions, Macros, Timers and Variables

Table 204 contains the functions, macros, timers and variables used by RSMSM and their arguments and descriptions.

Table 204 – Functions, Macros, Timers and Variables used by RSMSM

Name	Type	Function/Meaning
UserCheckIdent	Function	UserCheckIdent(API, Slot, Subslot, RealModuleID, RealSubmoduleID, ExpModuleID, ExpSubmoduleID) Returns the ident information for the expected submodule: OK: is returned, if a submodule is plugged at the specified location (API, slot and subslot) and it's the right one; i.e. its real ident information (RealModuleID, RealSubmoduleID) is equivalent to the expected ident information (ExpModuleID and ExpSubmoduleID). SUBSTITUTE: is returned, if a submodule is plugged at the specified location (API, slot and subslot) and is able to be a decent substitute; i.e. its real ident information (RealModuleID, RealSubmoduleID) is able to substitute the expected ident information (ExpModuleID and ExpSubmoduleID). WRONG: is returned, if a submodule is plugged at the specified location (API, slot and subslot) and it's wrong, i.e. if its real ident information (RealModuleID, RealSubmoduleID) does not match the expected ident information (ExpModuleID and ExpSubmoduleID), if it doesn't support the expected API. NOSUBMODULE: is returned, if no submodule is plugged at the location specified by API, slot and subslot.
GetOwnerFromAdministration	Function	This local function returns the owner of the submodule. FREE: No owner OWNER: The asking AREP is the Owner SOL: The submodule is superordinated locked

7.3.2.2.6.2.2.8 Truth Table

Table 205 contains the truth table used by RSMSM.

Table 205 – Rules for Submodule State.Ident Info

Input	Output – Owner	Output – Not owner
Result of UserCheckIdent()	Submodule State.Ident Info	Submodule State.Ident Info
OK	OK	OK
SUBSTITUTE	SUBSTITUTE	WRONG
WRONG	WRONG	WRONG
NOSUBMODULE	NOSUBMODULE	NOSUBMODULE

7.3.2.2.6.2.3 Ownership and Association of a Submodule**7.3.2.2.6.2.3.1 Common**

For the access to a submodule within a particular AR there exist the following “qualities”:

- If the AR is the owner of the submodule, the AR has
 - read access to input data,
 - write access to output data,
 - read access to data records,
 - write access to data records, if being primary or first,
 - and is allowed to create or receive every kind of alarm notification.

- If the AR is associate of the submodule, the AR has
 - read access to input data,
 - read access to data records,
 - and is allowed to create or receive the Return Of Submodule alarm notification.
- A device access AR has
 - read access to data records,
 - and, where the application allows, write access (independent of ownership).
- An implicit AR has
 - read access to data records.

The handling of the ownership for a particular submodule is described in Figure 45.

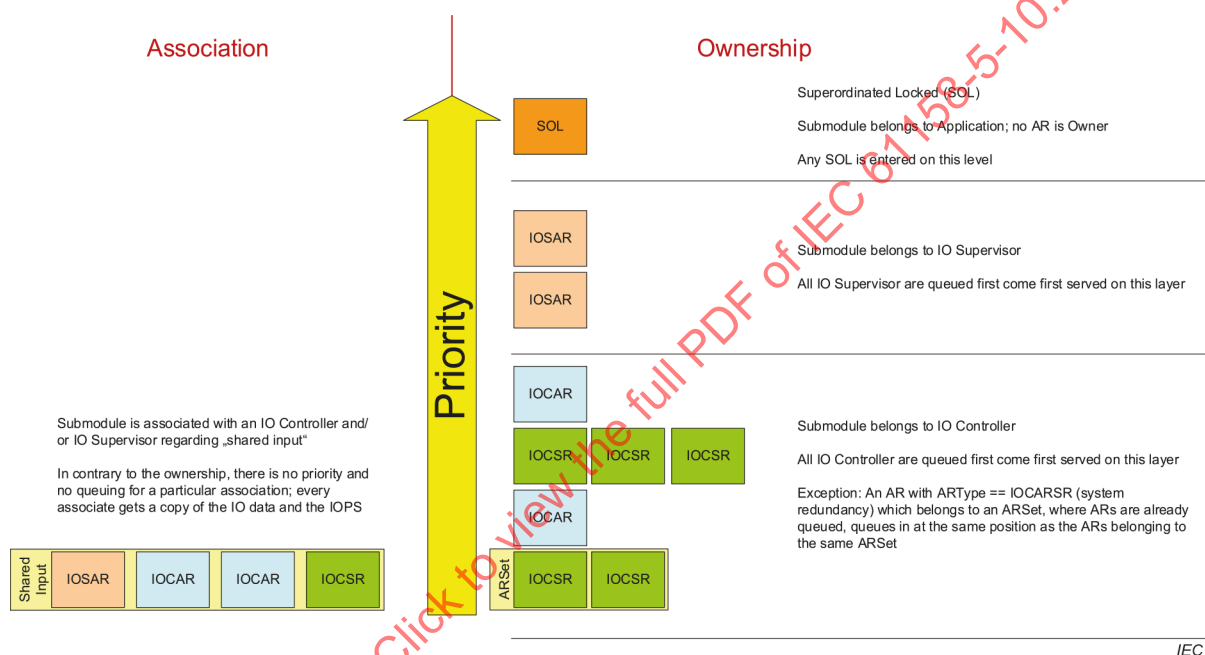


Figure 45 – Ownership handling

The ownership is based on the following principles:

- The ownership of a submodule is in principle handled “first come first served”. Thus the first application relation wanting the submodule will get the ownership; any further application relation will get a “Locked” and is queued at the end.
- The user application is able to lock the submodule for superordinated use at any time. The current owner of the submodule is informed by a “Controlled” alarm.
- If the current owner’s application relation allows a supervisor takeover (as indicated by the ARProperties), an application relation with ARTYPE IOSAR is able to take over the submodule from its current owner. This application relation is set as the queue head and thus gets the ownership; the now previous owner is then informed by a “Controlled” alarm.
- If the current owner’s application relation doesn’t allow a supervisor takeover (as indicated by the ARProperties), an application relation with ARTYPE IOSAR is not able to take over the submodule from its current owner. Thus, the IO supervisor application relation is queued after the head but after the last waiting IO supervisor AR.
- An application relation with ARTYPE IOCARSR of an already known AR Set (as indicated by the application relations ARUUID; for details, see IEC 61158-6-10) is queued in at the same location as the other ARs of this AR Set. Note that all application relations of the AR Set have the same view on the ownership as expressed by the Module Diff Block.

- If the current owner goes, the ownership is handed over to the next application relation waiting in the queue. If the new owner is an application relation with ARTYPE != IOCARSR, a Released alarm is issued to indicate the hand over. If the ARTYPE is IOCARSR and the new owner is in the same AR Set as the previous owner, no Released alarm is issued.
- The ownership is handled in the OWNSM.

The association is based on the following principles:

- The association of a submodule is handled without any priority. All requesting ARs have the same priority; there is no queuing.
- The reason to associate a submodule is to have read access using an Input CR to the input data of a submodule from another IO controller / IO supervisor. This is also called "shared input".
- Since the validity of the input data is determined by the IOPS, the Return of Submodule is a necessary alarm for an IO controller using an association.
- Since no alarms are allowed on an association beside the Return Of Submodule alarm, an associate has only information about the availability of the input data. Other information like the submodule's presence (pull, plug, plug wrong), its parameterization state (application ready pending) or its diagnosis of the submodule is not available, since it will not be actualized via some alarm. Thus, the Submodule State shall contain in any Module Diff Block for a shared input submodule
 - for the Ident Info (indicating its presence) the value OK,
 - for Advice (indicating its advice information) the value NO_ADVICE,
 - for Maintenance Required (indicating its maintenance required information) the value NO_MAINTENANCE_REQUIRED,
 - for Maintenance Demanded (indicating its maintenance demanded information) the value NO_MAINTENANCE_DEMANDED,
 - for Fault (indicating its diagnosis information) the value NO_FAULT,
 - for AR Info (indicating ownership problems) the value OWN,
 independent of the submodule's state. In other words, this information is only available for the application having the ownership on the submodule. The rules for setting the IOPS to BAD e.g., in case of a pulled or a wrongly plugged submodule (see 7.3.1.4.5) will take care that the submodule's input data is not useable in such a case.
- The association is handled in the ASSSM.

If the submodule is not usable by the next one in the ownership queue due to being the wrong submodule (WRONG) plugged as waited for or having no submodule plugged at the subslot (NOSUBMODULE). In this case no Released alarm is sent to the new owner as an optimization ("hidden ownership change") because the submodule is still not usable for him. Note however that all further alarms regarding this submodule (e.g., a Plug alarm) are sent to the new owner.

Thus, an IO controller implementation shall accept alarms for submodules even for those he is not owning from his current point of view.

The ownership of an interface or port submodule is handled by the OWNSM state machine. Even if an IOAR owns one of these submodules, write access can be limited due to the usage in a time-aware system. The records of the PDxxxAdjust shall be rejected if the attribute NMNameAddress of the time-aware system is set. The records of the type PDxxxCheck shall be accepted.

An established IOAR containing records of the type PDxxxAdjust shall be aborted if the attribute NMNameAddress is written afterwards (ErrorCode2 "Discrepancy between Pdev and ARTYPE").

7.3.2.2.6.2.3.2 Primitive definitions

7.3.2.2.6.2.3.3 Primitives exchanged between remote machines

The service primitives including their associated parameters issued or received by Ownership Submodule State Machine (OWNSM) and Association Submodule State Machine (ASSSM) are described in the service definition and shown in Table 206.

Table 206 – Remote primitives issued or received by OWNSM and ASSSM

Primitive	Source	Destination	Associated parameters	Functions
Connect.req	FAL	OWNSM, ASSSM	see 7.3.1.3.5.1	—
Read.req	FAL	OWNSM, ASSSM	see 7.3.1.7.6.1.1	—
Release.req	FAL	OWNSM, ASSSM	see 7.3.1.3.5.2	—
Write.req	FAL	OWNSM, ASSSM	see 7.3.1.7.6.2.1	—
UserSetSMState.cnf	local	OWNSM	API, Slot, Subslot	—
UserSetSMState.req	local	OWNSM	Command, API, Slot, Subslot	—
Read.rsp	OWNSM, ASSSM	FAL	see 7.3.1.7.6.1.1	—
Write.rsp	OWNSM, ASSSM	FAL	see 7.3.1.7.6.2.1	—
ReleasedAlarm.req	OWNSM	PLUGSM	ANY.AREP, ANY.API, ANY.Slot, ANY.Subslot	—
ControlledAlarm.req	OWNSM	PULLSM	ANY.AREP, ANY.API, ANY.Slot, ANY.Subslot	—
ReleasedAlarm.cnf	PLUGSM	OWNSM	ANY.AREP, ANY.API, ANY.Slot, ANY.Subslot	—
ControlledAlarm.cnf	PULLSM	OWNSM	ANY.AREP, ANY.API, ANY.Slot, ANY.Subslot	—

7.3.2.2.6.2.3.4 Primitives exchanged between local machines

The local service primitives including their associated parameters issued or received by OWNSM are described in the service definition and shown in Table 207.

Table 207 – Local primitives issued or received by OWNSM

Primitive	Source	Destination	Associated parameters	Functions
—	—	—	—	—

7.3.2.2.6.2.3.5 State transition diagram**7.3.2.2.6.2.3.6 OWNSM**

The state transition diagram is shown in Figure 46.

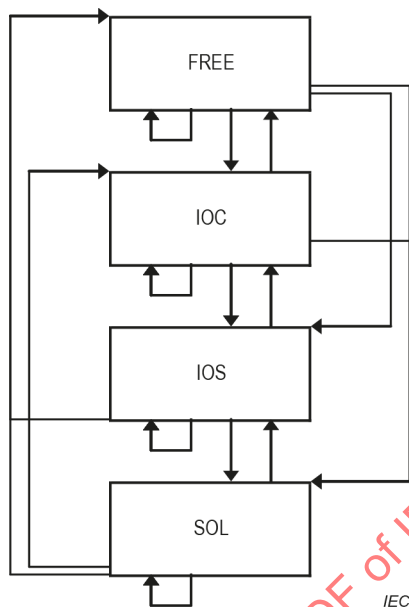


Figure 46 – State transition diagram OWNSM

States of the OWNSM

FREE	The submodule has no owner
SOL	The submodule is superordinated locked
IOS	The submodule is owned by an IO supervisor
IOC	The submodule is owned by an IO controller

7.3.2.2.6.2.3.7 ASSM

The state transition diagram is shown in Figure 47.

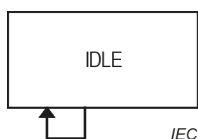


Figure 47 – State transition diagram ASSM

States of the ASSM

IDLE	The submodule is waiting for an association

7.3.2.2.6.2.3.8 State machine description**7.3.2.2.6.2.3.9 OWNSM**

The state machine treats the ownership of a particular submodule. The handover of the ownership to an IO supervisor or to the application (superordinated locked) is accompanied by the Controlled By Supervisor alarm, the release by the Released alarm.

The state machine handles the ownership queue (i.e. those application relations waiting in line for the particular submodule) and the flag SupervisorTakeoverAllowed.

It additionally filters write requests, if issued via a different application relation than the current owner.

7.3.2.2.6.2.3.10 ASSSM

The state machine treats the association of a particular submodule.

7.3.2.2.6.2.3.11 State table

Table 208 defines the state table for the selected behavior of the OWNSM. This state table shall be used if Submodule Properties.Shared Input is set to 0x00.

Table 209 defines the state table for the selected behavior of the ASSSM. This state table shall be used if Submodule Properties.Shared Input is set to 0x01.

Table 208 – State table OWNSM

#	Current State	Event /Condition =>Action	Next State
1	FREE	Connect.req () /Submodule is not in list of the ExpectedSubmoduleBlock => ignore	FREE
2	FREE	Connect.req () /Submodule is in list of the ExpectedSubmoduleBlock && ARType != IOSAR => AddToOwnershipAdministration ()	IOC
3	FREE	Connect.req () /Submodule is in list of the ExpectedSubmoduleBlock && ARType == IOSAR => AddToOwnershipAdministration ()	IOS
4	FREE	UserSetSMState.req () /Command == SOL => ignore UserSetSMState.cnf ()	SOL
5	FREE	UserSetSMState.req () /Command != SOL => ignore UserSetSMState.cnf ()	FREE
6	FREE	Release.req () => ignore	FREE
7	FREE	ReleasedAlarm.cnf () => ignore	FREE
8	FREE	ControlledAlarm.cnf () => ignore	FREE
9	FREE	Write.ind () => ErrorDecode := PNORW ErrorCode1 := access denied Write.rsp (-)	FREE

#	Current State	Event /Condition =>Action	Next State
10	FREE	Read.ind () => Fetch data for read response Read.rsp () //NOTE Depending whether the user is able to return data (+) or (-) is returned	FREE
11	IOC	Connect.req () /Submodule is not in list of the ExpectedSubmoduleBlock => ignore	IOC
12	IOC	Connect.req () /Submodule is in list of the ExpectedSubmoduleBlock && ARType != IOSAR => AddToOwnershipAdministration ()	IOC
13	IOC	Connect.req () /Submodule is in list of the ExpectedSubmoduleBlock && ARType == IOSAR && Owner.ARProperties.SupervisorTakeoverAllowed == TRUE => AddToOwnershipAdministration () Create ControlledBySupervisor alarm PDU to be sent to the now previous owner ControlledAlarm.req ()	IOS
14	IOC	Connect.req () /Submodule is in list of the ExpectedSubmoduleBlock && ARType == IOSAR && Owner.ARProperties.SupervisorTakeoverAllowed == FALSE => AddToOwnershipAdministration ()	IOC
15	IOC	UserSetSMState.req () /Command == SOL => AddToOwnershipAdministration () Create ControlledBySupervisor alarm PDU to be sent to the now previous owner ControlledAlarm.req () UserSetSMState.cnf ()	SOL
16	IOC	UserSetSMState.req () /Command != SOL => ignore UserSetSMState.cnf ()	IOC
17	IOC	Release.req () /Submodule is not in list of the ExpectedSubmoduleBlock => ignore	IOC
18	IOC	Release.req () /Submodule is in list of the ExpectedSubmoduleBlock && RemoveAndGetOwnerFromAdministration () == FREE => ignore	FREE

#	Current State	Event /Condition =>Action	Next State
19	IOC	Release.req () /Submodule is in list of the ExpectedSubmoduleBlock && RemoveAndGetOwnerFromAdministration () == IOC && (UserCheckIdent () == WRONG UserCheckIdent () == NOSUBMODULE) => ignore //NOTE No Released alarm is sent, because the submodule is still not usable for the new owner.	IOC
20	IOC	Release.req () /Submodule is in list of the ExpectedSubmoduleBlock && RemoveAndGetOwnerFromAdministration () == IOC && (UserCheckIdent () == OK UserCheckIdent () == SUBSTITUTE) => Create Released alarm PDU to be sent to the new owner ReleasedAlarm.req ()	IOC
21	IOC	Release.req () /Submodule is in list of the ExpectedSubmoduleBlock && RemoveAndGetOwnerFromAdministration () == IOS && (UserCheckIdent () == WRONG UserCheckIdent () == NOSUBMODULE) //NOTE IOS was blocked by TakeoverNotAllowed => ignore //NOTE No Released alarm is sent, because the submodule is still not usable for the new owner.	IOS
22	IOC	Release.req () /Submodule is in list of the ExpectedSubmoduleBlock && RemoveAndGetOwnerFromAdministration () == IOS && (UserCheckIdent () == OK UserCheckIdent () == SUBSTITUTE) //NOTE IOS was blocked by TakeoverNotAllowed => Create Released alarm PDU to be sent to the new owner ReleasedAlarm.req ()	IOS
23	IOC	Release.req () /Submodule is in list of the ExpectedSubmoduleBlock && RemoveAndGetOwnerFromAdministration () == IOC, ARset => ignore //NOTE SystemRedundancy case	IOC
24	IOC	Release.req () /Submodule is in list of the ExpectedSubmoduleBlock && RemoveAndGetOwnerFromAdministration () == UNCHANGED => ignore	IOC
25	IOC	ReleasedAlarm.cnf () => ignore	IOC
26	IOC	ControlledAlarm.cnf () => ignore	IOC

#	Current State	Event /Condition =>Action	Next State
27	IOC	Write.ind () /AREP == GetCurrentOwner () //NOTE Accept write only from the current owner => Give data for write to user and fetch status for write response Write.rsp () //NOTE Depending whether the user is able to handle data (+) or (-) is returned	IOC
28	IOC	Write.ind () /AREP != GetCurrentOwner () //NOTE Accept write only from the current owner => ErrorDecode := PNORW ErrorCode1 := access denied Write.rsp (-)	IOC
29	IOC	Read.ind () => Fetch data for read response Read.rsp () //NOTE Depending whether the user is able to return data (+) or (-) is returned	IOC
30	IOS	Connect.req () /Submodule is not in list of the ExpectedSubmoduleBlock => ignore	IOS
31	IOS	Connect.req () /Submodule is in list of the ExpectedSubmoduleBlock && ARType != IOSAR => AddToOwnershipAdministration ()	IOS
32	IOS	Connect.req () /Submodule is in list of the ExpectedSubmoduleBlock && ARType == IOSAR => AddToOwnershipAdministration ()	IOS
33	IOS	UserSetSMState.req () /Command == SOL => AddToOwnershipAdministration () Create ControlledBySupervisor alarm PDU to be sent to the now previous owner ControlledAlarm.req () UserSetSMState.cnf ()	SOL
34	IOS	UserSetSMState.req () /Command != SOL => ignore UserSetSMState.cnf ()	IOS
35	IOS	Release.req () /Submodule is not in list of the ExpectedSubmoduleBlock => ignore	IOS
36	IOS	Release.req () /Submodule is in list of the ExpectedSubmoduleBlock && RemoveAndGetOwnerFromAdministration () == FREE => ignore	FREE

#	Current State	Event /Condition =>Action	Next State
37	IOS	Release.req () /Submodule is in list of the ExpectedSubmoduleBlock && RemoveAndGetOwnerFromAdministration () == IOC && (UserCheckIdent () == WRONG UserCheckIdent () == NOSUBMODULE) => ignore //NOTE No Released alarm is sent, because the submodule is still not usable for the new owner.	IOC
38	IOS	Release.req () /Submodule is in list of the ExpectedSubmoduleBlock && RemoveAndGetOwnerFromAdministration () == IOC && (UserCheckIdent () == OK UserCheckIdent () == SUBSTITUTE) => Create Released alarm PDU to be sent to the new owner ReleasedAlarm.req ()	IOC
39	IOS	Release.req () /Submodule is in list of the ExpectedSubmoduleBlock && RemoveAndGetOwnerFromAdministration () == IOS && (UserCheckIdent () == WRONG UserCheckIdent () == NOSUBMODULE) => ignore //NOTE No Released alarm is sent, because the submodule is still not usable for the new owner.	IOS
40	IOS	Release.req () /Submodule is in list of the ExpectedSubmoduleBlock && RemoveAndGetOwnerFromAdministration () == IOS && (UserCheckIdent () == OK UserCheckIdent () == SUBSTITUTE) => Create Released alarm PDU to be sent to the new owner ReleasedAlarm.req ()	IOS
41	IOS	Release.req () /Submodule is in list of the ExpectedSubmoduleBlock && RemoveAndGetOwnerFromAdministration () == UNCHANGED => ignore	IOS
42	IOS	ReleasedAlarm.cnf () => ignore	IOS
43	IOS	ControlledAlarm.cnf () => ignore	IOS
44	IOS	Write.ind () /AREP == GetCurrentOwner () //NOTE Accept write only from the current owner => Give data for write to user and fetch status for write response Write.rsp () //NOTE Depending whether the user is able to handle data (+) or (-) is returned	IOS

#	Current State	Event /Condition =>Action	Next State
45	IOS	Write.ind () /AREP != GetCurrentOwner () //NOTE Accept write only from the current owner => ErrorDecode := PNORW ErrorCode1 := access denied Write.rsp (-)	IOS
46	IOS	Read.ind () => Fetch data for read response Read.rsp () //NOTE Depending whether the user is able to return data (+) or (-) is returned	IOS
47	SOL	Connect.req () /Submodule is not in list of the ExpectedSubmoduleBlock => ignore	SOL
48	SOL	Connect.req () /Submodule is in list of the ExpectedSubmoduleBlock => AddToOwnershipAdministration ()	SOL
49	SOL	UserSetSMState.req () /Command == SOL => ignore UserSetSMState.cnf ()	SOL
50	SOL	UserSetSMState.req () /Command != SOL && RemoveAndGetOwnerFromAdministration () == FREE => ignore UserSetSMState.cnf ()	FREE
51	SOL	UserSetSMState.req () /Command != SOL && RemoveAndGetOwnerFromAdministration () == IOC && (UserCheckIdent () == WRONG UserCheckIdent () == NOSUBMODULE) => //NOTE No Released alarm is sent, because the submodule is still not usable for the new owner. UserSetSMState.cnf ()	IOC
52	SOL	UserSetSMState.req () /Command != SOL && RemoveAndGetOwnerFromAdministration () == IOC && (UserCheckIdent () == OK UserCheckIdent () == SUBSTITUTE) => Create Released alarm PDU to be sent to the new owner ReleasedAlarm.req () UserSetSMState.cnf ()	IOC
53	SOL	UserSetSMState.req () /Command != SOL && RemoveAndGetOwnerFromAdministration () == IOS && (UserCheckIdent () == WRONG UserCheckIdent () == NOSUBMODULE) => //NOTE No Released alarm is sent, because the submodule is still not usable for the new owner. UserSetSMState.cnf ()	IOS

#	Current State	Event /Condition =>Action	Next State
54	SOL	UserSetSMState.req () /Command != SOL && RemoveAndGetOwnerFromAdministration () == IOS && (UserCheckIdent () == OK UserCheckIdent () == SUBSTITUTE) => Create Released alarm PDU to be sent to the new owner ReleasedAlarm.req () UserSetSMState.cnf ()	IOS
55	SOL	Release.req () /Submodule is not in list of the ExpectedSubmoduleBlock => ignore	SOL
56	SOL	Release.req () /Submodule is in list of the ExpectedSubmoduleBlock => RemoveAndGetOwnerFromAdministration () //NOTE In this case only the ownership administration is updated	SOL
57	SOL	ReleasedAlarm.cnf () => ignore	SOL
58	SOL	ControlledAlarm.cnf () => ignore	SOL
59	SOL	Write.ind () => ErrorDecode := PNORW ErrorCode1 := access denied Write.rsp (-)	SOL
60	SOL	Read.ind () => Fetch data for read response Read.rsp () //NOTE Depending whether the user is able to return data (+) or (-) is returned	SOL

Table 209 – State table ASSSM

#	Current State	Event /Condition =>Action	Next State
1	IDLE	Connect.req () /Submodule is not in list of the ExpectedSubmoduleBlock => ignore	IDLE
2	IDLE	Connect.req () /Submodule is in list of the ExpectedSubmoduleBlock => AddToAssociation ()	IDLE
3	IDLE	Release.req () /Submodule is not in list of the ExpectedSubmoduleBlock => ignore	IDLE
4	IDLE	Release.req () /Submodule is in list of the ExpectedSubmoduleBlock => RemoveFromAssociation ()	IDLE

#	Current State	Event /Condition =>Action	Next State
5	IDLE	Write.ind () => ErrorDecode := PNORW ErrorCode1 := access denied Write.rsp (-)	IDLE
6	IDLE	Read.ind () => Fetch data for read response Read.rsp () //NOTE Depending whether the user is able to return data (+) or (-) is returned	IDLE

7.3.2.2.6.2.3.12 Functions, Macros, Timers and Variables

Table 210 contains the functions, macros, timers and variables used by OWNSM and their arguments and descriptions.

Table 210 – Functions, Macros, Timers and Variables used by OWNSM

Name	Type	Function/Meaning
RemoveAndGetOwnerFromAdministration	Function	This local function removes the given AREP from the ownership administration. It returns whether/where to the ownership changed and the AREP of the application relation now owning the submodule. The ownership is primarily handled by the first come first served principle. This means that the first connect.req (first AR) requesting a "free" submodule will get the ownership. The exceptions to this principle are higher priority ownership request by the IO supervisor or local means (Superordinated lock) or by the TakeoverNotAllowed property of a IOC-AR. Principle: A supervisor may take away a submodule from an IO controller and local means may take away a submodule from an IO supervisor or IO controller. FREE This submodule has no longer an owner IOC The ownership of the submodule is transferred to an IOC IOC, ARset The ownership of the submodule is transferred to an IOC within the same ARset as the previous owner IOS The ownership of the submodule is transferred to an IOS UNCHANGED The ownership of the submodule did not change; i.e. the AREP removed was not the current owner
GetCurrentOwner	Function	This local function returns the AREP of the submodule's current owner
AddToOwnershipAdministration	Function	This local function adds the new owner or a candidate, addressed by the AREP, to the ownership administration.

Name	Type	Function/Meaning
UserCheckIdent	Function	This local function asks the User to check the expected ModuleID and SubmoduleID against the real one. Returns the ident information for the expected submodule: OK: is returned, if a submodule is plugged at the specified location (API, slot and subslot) and it's the right one; i.e. its real ident information (RealModuleID, RealSubmoduleID) is equivalent to the expected ident information (ExpModuleID and ExpSubmoduleID). SUBSTITUTE: is returned, if a submodule is plugged at the specified location (API, slot and subslot) and is able to be a decent substitute; i.e. its real ident information (RealModuleID, RealSubmoduleID) is able to substitute the expected ident information (ExpModuleID and ExpSubmoduleID). WRONG: is returned, if a submodule is plugged at the specified location (API, slot and subslot) and it's wrong; i.e. if its real ident information (RealModuleID, RealSubmoduleID) does not match the expected ident information (ExpModuleID and ExpSubmoduleID). NOSUBMODULE: is returned, if no submodule is plugged at the location specified by API, slot and subslot.

Table 211 – Functions, Macros, Timers and Variables used by ASSSM

Name	Type	Function/Meaning
AddToAssociation	Function	This local function adds the new associate, addressed by the AREP, to the association. Adding a submodule to the association shall not create an entry in the module diff block.
RemoveFromAssociation	Function	This local function removes the new associate, addressed by the AREP, to the association.

7.3.2.2.6.2.3.13 Truth Table

Table 212 contains the truth table used by OWNSM.

Table 212 – Rules for Submodule State.AR Info

Input		Output
Current Owner	Parameter Check Pending	Submodule State.AR Info
OWN Owner is in same AR Set	No	OWN
OWN Owner is in same AR Set	Yes	APPLICATION_READY_PENDING
Superordinated Locked	-	SUPERORDINATED_LOCKED
Other IO controller	-	LOCKED_BY_IO_CONTROLLER
Other IO supervisor	-	LOCKED_BY_IO_SUPERVISOR

7.3.2.2.6.2.4 Plug**7.3.2.2.6.2.4.1 Primitive definitions****7.3.2.2.6.2.4.2 Primitives exchanged between remote machines**

The service primitives including their associated parameters issued or received by plug state machine (PLUGSM) are described in the service definition and shown in Table 213.

Table 213 – Remote primitives issued or received by PLUGSM

Primitive	Source	Destination	Associated parameters	Functions
Alarm.cnf ()	FAL	PLUGSM	see 7.3.1.6.5	—
ApplicationReady.cnf ()	FAL	PLUGSM	see 7.3.1.3.5.5	—
PrmEnd.ind	FAL	PLUGSM	see 7.3.1.3.5.4	—
Write.ind	FAL	PLUGSM	see 7.3.1.7.6.2.1	—
ReturnOfSubmodulAlarm.req	local	PLUGSM	AREP, API, Slot, Subslot, UserInfo;	—
UserControl.rsp ()	local	PLUGSM	AREP, PrmEnd	—
UserWriteRecord.rsp ()	local	PLUGSM		—
ReleasedAlarm.req	OWNSM	PLUGSM	AREP, API, Slot, Subslot, UserInfo;	—
Alarm.req	PLUGSM	FAL	see 7.3.1.6.5	—
ApplicationReady.req	PLUGSM	FAL	see 7.3.1.3.5.5	—
PrmEnd.rsp ()	PLUGSM	FAL	see 7.3.1.3.5.4	—
Write.rsp ()	PLUGSM	FAL	see 7.3.1.7.6.2.1	—
ReturnOfSubmodulAlarm.cnf ()	PLUGSM	local	AREP, API, Slot, Subslot, UserInfo;	—
UserControl.ind	PLUGSM	local	AREP, PrmEnd	—
UserWriteRecord.ind	PLUGSM	local		—
ReleasedAlarm.cnf ()	PLUGSM	OWNSM	AREP, API, Slot, Subslot, UserInfo;	—
PlugAlarm.cnf ()	PLUGSM	RSMSM		—
PlugWrongAlarm.cnf ()	PLUGSM	RSMSM	AREP, API, Slot, Subslot, UserInfo;	—
PlugAlarm.req	RSMSM	PLUGSM	AREP, API, Slot, Subslot, UserInfo;	—

Primitive	Source	Destination	Associated parameters	Functions
PlugWrongAlarm.req	RSMSM	PLUGSM	AREP, API, Slot, Subslot, UserInfo;	—

7.3.2.2.6.2.4.3 Primitives exchanged between local machines

The local service primitives including their associated parameters issued or received by PLUGSM are described in the service definition and shown in Table 214.


Table 214 – Local primitives issued or received by PLUGSM

Primitive	Source	Destination	Associated parameters	Functions
Local New Output_ind	FAL	PLUGSM	see 7.3.1.4.5.10	—
Local Set Input_req	PLUGSM	FAL	see 7.3.1.4.5.1	—
Local Set Output IOCS_req	PLUGSM	FAL	see 7.3.1.4.5.7	—

7.3.2.2.6.2.4.4 State transition diagram

The state transition diagram is shown in Figure 48.

IECNORM.COM : Click to view the full PDF of IEC 61158-5-10:2023

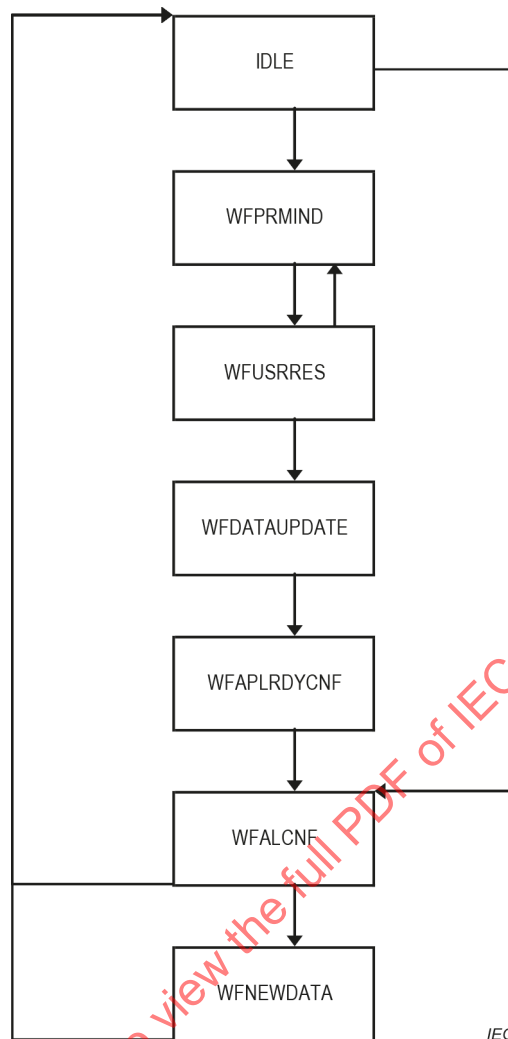

IEC

Figure 48 – State transition diagram PLUGSM**States of PLUGSM**

IDLE	Idle state
WFPRMIND	Wait for PrmEnd indication
WFUSRRES	Wait for User response
WFDATAUPDATE	Wait for Data Update
WFAPLRDYCNF	Wait for ApplicationReady confirmation
WFALCNF	Wait for Alarm confirmation
WFNEWDATA	Wait for New Data indication

7.3.2.2.6.2.4.5 State machine description

This state machine handles a plug of a submodule including the re-parameterization of the submodule. The plug sequence is initiated by plugging a submodule (including a wrong one), by ownership change or else by return of a submodule (transition from BAD to GOOD).

When physically plugging a submodule, the service Local Add Submodule is called by the application. This results in an update of the real identification. When checking the updated real identification against the expected identification, PlugAlarm.req() or PlugWrongAlarm.req() are called, when the slot / subslot where the submodule was plugged is part of some expected identification. This state machine is started at this point.

A second case is the virtual plug of the submodule, i.e. supervisor or some other IO controller, which locked this submodule, releases it, and the ownership is transferred. In this case ReleasedAlarm.req() is called, and the state machine is started at this point.

A third case is when IOPS turns to GOOD. In this case ReturnOfSubmoduleAlarm.req() is called, and the state machine is started at this point.

The state machine is concurrently started together with the transmission of the associated alarm to the IO controller.

7.3.2.2.6.2.4.6 State table

Table 215 defines the state table for the plug behavior.

Table 215 – State table PLUGSM

#	Current State	Event /Condition =>Action	Next State
1	IDLE	PlugAlarm.req () => TYPE = Plug Alarm.req ()	WFPRMIND
2	IDLE	ReleasedAlarm.req () => TYPE = Released Alarm.req ()	WFPRMIND
3	IDLE	PlugWrongAlarm.req () => TYPE = Wrong Alarm.req ()	WFALCNF
4	IDLE	ReturnOfSubmoduleAlarm.req () => TYPE = Return Alarm.req ()	WFALCNF
5	WFPRMIND	Write.ind () => UserWriteRecord.ind ()	WFUSRRES
6	WFPRMIND	PrmEnd.ind () => UserControl.ind ()	WFUSRRES
7	WFUSRRES	UserWriteRecord.rsp () => Write.rsp ()	WFPRMIND
8	WFUSRRES	UserControl.rsp () => PrmEnd.rsp ()	WFDATAUPDATE
9	WFDATAUPDATE	UserUpdate () => Local Set Input_req () Local Set Output IOCS_req () ApplicationReady.req ()	WFAPLRDYCNF
10	WFAPLRDYCNF	ApplicationReady.cnf () =>	WFALCNF
11	WFALCNF	Alarm.cnf () /((TYPE = Plug) (TYPE = Released)) && (PNIOSTATUS = OK) => Reset NewData Flag	WFNEWDATA
12	WFALCNF	Alarm.cnf () /((TYPE = Wrong) && (PNIOSTATUS = OK)) => PlugWrongAlarm.cnf (+)	IDLE

#	Current State	Event /Condition =>Action	Next State
13	WFALCNF	Alarm.cnf () /(TYPE = Return) && (PNIOSTATUS = OK) => ReturnOfSubmodulAlarm.cnf (+)	IDLE
14	WFALCNF	Alarm.cnf () /(TYPE = Plug) && (PNIOSTATUS <> OK) => PlugAlarm.cnf (-)	IDLE
15	WFALCNF	Alarm.cnf () /(TYPE = Released) && (PNIOSTATUS <> OK) => ReleasedAlarm.cnf (-)	IDLE
16	WFALCNF	Alarm.cnf () /(TYPE = Wrong) && (PNIOSTATUS <> OK) => PlugWrongAlarm.cnf (-)	IDLE
17	WFALCNF	Alarm.cnf () /(TYPE = Return) && (PNIOSTATUS <> OK) => ReturnOfSubmodulAlarm.cnf (-)	IDLE
18	WFNEWDATA	Local New Output_ind () /TYPE = Plug => PlugAlarm.cnf (+)	IDLE
19	WFNEWDATA	Local New Output_ind () /TYPE = Released => ReleasedAlarm.cnf (+)	IDLE

7.3.2.2.6.2.4.7 Functions, Macros, Timers and Variables

Table 216 contains the functions, macros, timers and variables used by PLUGSM and their arguments and descriptions.

Table 216 – Functions, Macros, Timers and Variables used by PLUGSM

Name	Type	Function/Meaning
UserUpdate	Function	This local function is an acknowledge from the user to use the data and issue an application ready. It uses the following parameters: AREP, API, Slot, Subslot, Data, IOXS

7.3.2.2.6.2.5 Pull

7.3.2.2.6.2.5.1 Primitive definitions

7.3.2.2.6.2.5.2 Primitives exchanged between remote machines

The service primitives including their associated parameters issued or received by pull state machine (PULLSM) are described in the service definition and shown in Table 217.

Table 217 – Remote primitives issued or received by PULLSM

Primitive	Source	Destination	Associated parameters	Functions
Alarm.cnf ()	FAL	PULLSM	see 7.3.1.6.5	—
ControlledAlarm.req	OWNSM	PULLSM	AREP, API, Slot, Subslot, UserInfo;	—
Alarm.req	PULLSM	FAL	see 7.3.1.6.5	—
ControlledAlarm.cnf ()	PULLSM	OWNSM	AREP, API, Slot, Subslot, UserInfo;	—
PullAlarm.cnf ()	PULLSM	RSMSM	AREP, API, Slot, Subslot, UserInfo;	—
PullAlarm.req	RSMSM	PULLSM	AREP, API, Slot, Subslot, UserInfo;	—

7.3.2.2.6.2.5.3 Primitives exchanged between local machines

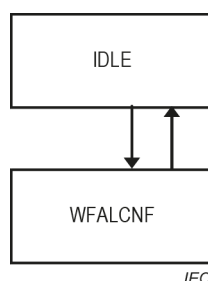
The local service primitives including their associated parameters issued or received by PULLSM are described in the service definition and shown in Table 218.

Table 218 – Local primitives issued or received by PULLSM

Primitive	Source	Destination	Associated parameters	Functions
—	—	—	—	—

7.3.2.2.6.2.5.4 State transition diagram

The state transition diagram is shown in Figure 49.

**Figure 49 – State transition diagram PULLSM**

States of PULLSM

IDLE

Idle state

WFALCNF

Wait for Alarm confirmation

7.3.2.2.6.2.5.5 State machine description

This state machine handles a pull of a submodule. The pull sequence is initiated by pulling a submodule or by ownership change.

When physically pulling a submodule, the service Local Remove Submodule is called by the application. This results in an update of the real identification. When checking the updated real identification against the expected identification, PullAlarm.req() is called, when the slot / subslot where the submodule was pulled is part of some expected identification. This state machine is started at this point.

A second case is the virtual pull of the submodule, i.e. supervisor locks this submodule, and the ownership is withdrawn. In this case ControlledAlarm.req() is called, and the state machine is started at this point.

The state machine is concurrently started together with the transmission of the associated alarm to the IO controller.

7.3.2.2.6.2.5.6 State table

Table 219 defines the state table PULLSM.

Table 219 – State table PULLSM

#	Current State	Event /Condition =>Action	Next State
1	IDLE	PullAlarm.req () => TYPE = Pull Alarm.req ()	WFALCNF
2	IDLE	ControlledAlarm.req () => TYPE= Controlled Alarm.req ()	WFALCNF
4	WFALCNF	Alarm.cnf () /(TYPE = Pull) && (PNIOSTATUS = OK) => PullAlarm.cnf (+)	IDLE
5	WFALCNF	Alarm.cnf () /(TYPE = Controlled) && (PNIOSTATUS = OK) => ControlledAlarm.cnf (+)	IDLE
6	WFALCNF	Alarm.cnf () /(TYPE = Pull) && (PNIOSTATUS <> OK) => PullAlarm.cnf(-)	IDLE
7	WFALCNF	Alarm.cnf () /(TYPE = Controlled) && (PNIOSTATUS <> OK) => ControlledAlarm.cnf(-)	IDLE

7.3.2.2.6.2.5.7 Functions, Macros, Timers and Variables

Table 220 contains the functions, macros, timers and variables used by PULLSM and their arguments and descriptions.

Table 220 – Functions, Macros, Timers and Variables used by PULLSM

Name	Type	Function/Meaning
—	—	—

7.3.2.2.6.3 Adaption of Real Identification during Connect

After powering on, a device shall set its real identification. If there are multiple possible RIs, the device shall choose one. During Connect phase (between Connect.ind and Connect.rsp), this can be adapted (if needed).

The following cases are possible:

Default is a modular device or one with a fixed real identification. After power on, this real identification shall be created with Add/Remove/Update Submodule. Changes to the real configuration of the devices lead to changes of the real identification data.

In case of multiple possible RIs, the application shall check the Expected Identification of the incoming Connect.ind and adapt the submodules of the real identification data with Add/Remove/Update. Afterwards, the Connect.rsp is generated with the now adapted RI.

7.3.2.2.6.4 Upload & Retrieval

The user plugs a submodule and the standard sequence for plugging is run (module parameterization). The submodule detects that the IOC only partly delivered the required parameters. If it is capable of Upload&Retrieval, a diagnosis (parameter missing / error) is announced. An alarm (Upload&Retrieval alarm) is sent to the IOC. In the IOC, an application reacts upon the Upload&Retrieval alarm and sends the parameters saved in the PLC to the submodule. Once all parameters are written, the submodule removes the diagnosis item. If the IOC ignores the alarm, the diagnosis item remains set.

The APO decides whether the Upload&Retrieval Diagnosis is set and this feature is used.

7.3.2.2.6.5 Submodule and channel behavior

A submodule consists of one or more channels, which are in state activated or deactivated.

An activated output channel provides data to the attached actor using a process value (according to the user application in the IO controller) or a substitute value (e.g. fixed value, holding last value, ZERO, etc.).

A deactivated output channel provides a vendor specific value “ZERO” to the attached actor (e.g. free from voltage or current).

An activated input channel provides input data and diagnosis according to the attached sensor.

For a deactivated input channel providing of input data or diagnosis is optional.

A submodule has two states, activated and deactivated. If the state of the submodule is deactivated, all channels of the submodule are deactivated. If the state of the submodule is activated, a particular channel is activated or deactivated, depending on parameterization or function of the channel.

The state of the submodule is defined as follows:

- After PowerOn
 - If parameters for the submodule reside in persistency, the parameters decide the behavior of the submodule and its channels.
 - Without parameters in persistency, the behavior of the submodule and its channels is vendor specific (activated or deactivated).
- After application relationship is established
 - If the submodule is not owned by the application relationship, submodule and its channels continue to behave as before.
 - Otherwise, the submodule is activated. If parameters are written to the submodule, the parameters control the behavior of the channels. If no parameters are written and the submodule is able to work with default parameter data, all channels are implicitly activated.
- After application relationship is aborted or closed, the behavior of the submodule and its channels continues to be controlled by the parameters written in the application relationship (e.g. substitute value or ZERO).
- After dynamic reconfiguration, where the submodule was removed from the application relationship
 - The submodule is deactivated.
 - The persistency for this submodule is set to the vendor specific default.
 - The behavior for the submodule is according to the vendor specific default behavior (channels are preferred deactivated).
- After reset to factory concerning the submodule's persistent data (RESET_APPLICATION_DATA)
 - The persistency for this submodule is set to the vendor specific default.
 - The behavior for the submodule is according to the vendor specific default (channels are preferred deactivated).

For persistency of record data, the persistency defined in the Communication Interface Management ASE is used; see 7.3.3.3.6.2 for details.

7.3.2.3 I&M Data class

7.3.2.3.1 Overview

This class provides information to support the end user during various scenarios of asset life cycle management be it identification, configuration, commissioning, parameterization, diagnosis, maintenance, repair, firmware update, asset management, audit trailing, and alike.

Assets are represented in two possible characteristics:

- An asset modeled according to this document (e.g. IO data, parameterization...) is represented by a submodule or a group of submodules; its life cycle information indicated by I&M data.
- The life cycle information of an asset not modeled by this document is indicated in Asset Management Data.

For further details, see 7.3.2.3.6.

7.3.2.3.2 Relations

The services are bound to other services as shown in Table 221:

Table 221 – Binding I&M data services

Service	Binding	Usage
Read I&M0 Filter Data	AR:Record Data:Read	Used by IO controller or IO supervisor
Read I&M0 Data	AR:Record Data:Read	Used by IO controller or IO supervisor
Write I&M1 Data	AR:Record Data:Write	Used by IO controller or IO supervisor
Read I&M1 Data	AR:Record Data:Read	Used by IO controller or IO supervisor
Write I&M2 Data	AR:Record Data:Write	Used by IO controller or IO supervisor
Read I&M2 Data	AR:Record Data:Read	Used by IO controller or IO supervisor
Write I&M3 Data	AR:Record Data:Write	Used by IO controller or IO supervisor
Read I&M3 Data	AR:Record Data:Read	Used by IO controller or IO supervisor
Write I&M4 Data	AR:Record Data:Write	Used by IO controller or IO supervisor
Read I&M4 Data	AR:Record Data:Read	Used by IO controller or IO supervisor
Read I&M5 Data	AR:Record Data:Read	Used by IO controller or IO supervisor
Read Asset Management Record	AR:Record Data:Read	Used by IO controller or IO supervisor

7.3.2.3.3 Template

This class specifies the object for the parameter data that are related to the IO devices itself and/or to the modules/submodules of the IO device.

The IO device context object is described by the following template:

ASE: Real Identification ASE

CLASS: I&M Data

CLASS ID: not used

PARENT CLASS: TOP

ATTRIBUTES:

- 1 (m) Key Attribute: Implicit
- 2 (m) Attribute: List of I&M Carriers
- 2.1 (m) Attribute: API
- 2.2 (m) Attribute: Slot Number
- 2.3 (m) Attribute: Subslot Number
- 2.4 (m) Attribute: I&M0 Data
- 2.4.1 (m) Attribute: Vendor ID
- 2.4.2 (m) Attribute: Order ID
- 2.4.3 (m) Attribute: IM Serial Number
- 2.4.4 (m) Attribute: IM Hardware Revision
- 2.4.5 (m) Attribute: IM Software Revision
- 2.4.5.1 (m) Attribute: Prefix
- 2.4.5.2 (m) Attribute: Functional Enhancement
- 2.4.5.3 (m) Attribute: Bug Fix
- 2.4.5.4 (m) Attribute: Internal Change

2.4.6	(m) Attribute:	IM Revision Counter
2.4.7	(m) Attribute:	IM Profile ID
2.4.8	(m) Attribute:	IM Profile Specific Type
2.4.9	(m) Attribute:	IM Version
2.4.10	(m) Attribute:	IM Supported
2.5	(o) Attribute:	I&M1 Data
2.5.1	(m) Attribute:	Function
2.5.2	(m) Attribute:	Location
2.6	(o) Attribute:	I&M2 Data
2.6.1	(m) Attribute:	Installation Date
2.7	(o) Attribute:	I&M3 Data
2.7.1	(m) Attribute:	Description
2.8	(o) Attribute:	I&M4 Data
2.9	(o) Attribute:	I&M5 Data
2.9.1	(m) Attribute:	Number Of Entries
2.9.1.1	(m) Attribute:	I&M5 Data Format
2.9.1.2	(c) Constraint:	I&M5 Data Format = I&M5Data
2.9.1.1.1	(m) Attribute:	IM Annotation
2.9.1.1.2	(m) Attribute:	Vendor ID
2.9.1.1.3	(m) Attribute:	IM Order ID
2.9.1.1.4	(m) Attribute:	IM Serial Number
2.9.1.1.5	(m) Attribute:	IM Hardware Revision
2.9.1.1.6	(m) Attribute:	IM Software Revision
2.9.1.3	(c) Constraint:	I&M5 Data Format = AMData
2.9.1.3.1	(m) Attribute:	IM Unique Identifier
2.9.1.3.2	(m) Attribute:	AM Location
2.9.1.3.3	(m) Attribute:	IM Annotation
2.9.1.3.4	(m) Attribute:	IM Order ID
2.9.1.3.5	(o) Attribute:	AM Software Revision
2.9.1.3.6	(o) Attribute:	AM Hardware Revision
2.9.1.3.7	(m) Attribute:	IM Serial Number
2.9.1.3.8	(o) Attribute:	IM Software Revision
2.9.1.3.9	(m) Attribute:	AM Device Identification
2.9.1.3.10	(m) Attribute:	AM Type Identification
2.9.1.3.11	(o) Attribute:	IM Hardware Revision
2.10	(m) Attribute:	Representative
2.10.1	(m) Attribute:	Module
2.10.2	(m) Attribute:	Device
3	(o) Attribute:	Asset Management Data
3.1	(m) Attribute:	IM Unique Identifier
3.2	(m) Attribute:	AM Location
3.3	(m) Attribute:	IM Annotation
3.4	(m) Attribute:	IM Order ID
3.5	(o) Attribute:	AM Software Revision
3.6	(o) Attribute:	AM Hardware Revision
3.7	(m) Attribute:	IM Serial Number
3.8	(o) Attribute:	IM Software Revision
3.9	(m) Attribute:	AM Device Identification
3.10	(m) Attribute:	AM Type Identification
3.11	(o) Attribute:	IM Hardware Revision

SERVICES:

1	(m) OpsService:	Read I&M0 Filter Data
2	(m) OpsService:	Read I&M0 Data

3	(o) OpsService: Write I&M1 Data
4	(o) OpsService: Read I&M1 Data
5	(o) OpsService: Write I&M2 Data
6	(o) OpsService: Read I&M2 Data
7	(o) OpsService: Write I&M3 Data
8	(o) OpsService: Read I&M3 Data
9	(o) OpsService: Write I&M4 Data
10	(o) OpsService: Read I&M4 Data
11	(o) OpsService: Read I&M5 Data
12	(o) OpsService: Read Asset Management Record

7.3.2.3.4 Attributes

Implicit

The key attribute Implicit indicates that the I&M data object is implicitly addressed by the services.

List of I&M Carriers

This attribute lists those submodules (according to the real identification) being a carrier of I&M data.

One list element consists of the following attributes:

API

This attribute defines the number of the application process the submodule is assigned to.

Attribute type: Unsigned32

Allowed values: 0 to 0xFFFFFFFF

Slot Number

This attribute defines the slot the submodule is assigned to.

Attribute type: Unsigned16

Allowed values: 0 to 0x7FFF

Subslot Number

This attribute defines the subslot the submodule is assigned to.

Attribute type: Unsigned16

Allowed values: 0 to 0x9FFF

I&M0 Data

This attribute consists of the following attributes.

Vendor ID

This attribute defines the ID of the submodule's manufacturer. 0x0000 is used in case a manufacturer does not want to handle an ID.

Attribute type: Unsigned16

Allowed values: 0 to 0xFFFF

Order ID

This attribute defines the complete order number or at least a relevant part that allows unambiguous identification of the submodule within the manufacturer's order spectrum.

The attribute is filled as visible string. Unused octets shall be set to 0x20 (blank).

Attribute type: VisibleString[20]

IM Serial Number

This attribute defines the serial number of the submodule. The serial number is a unique production number of the device manufacturer even for devices with the same hardware, software or firmware revision.

The attribute is filled as visible string. Unused octets shall be set to 0x20 (blank).

Attribute type: VisibleString[16]

IM Hardware Revision

This attribute defines the hardware revision of the submodule.

Attribute type: Unsigned16

Allowed values: 0 to 0xFFFF

IM Software Revision

This attribute defines the software or firmware revision of the submodule. Any component that carries software shall present its software version even if the user will not be aware of it. If the submodule contains no software, the software revision should be set to "V0.0.0".

This attribute consists of the following attributes:

Prefix

The prefix attribute forms the "Vx.y.z" part of the software revision.

Attribute type: VisibleString[1]

Preferred values:

"V" (= officially released version) or "R" (= Revision)

"P" = Prototype

"U" = Under Test (field test)

"T" = Test Device

Functional Enhancement

The functional enhancement attribute forms the "Vx.y.z" part of the software revision.

Attribute type: Unsigned8

Allowed values: 0 to 0xFF

Bug Fix

The bug fix attribute forms the "Vx.y.z" part of the software revision.

Attribute type: Unsigned8

Allowed values: 0 to 0xFF

Internal Change

The internal change attribute forms the "Vx.y.z" part of the software revision.

Attribute type: Unsigned8

Allowed values: 0 to 0xFF

IM Revision Counter

This attribute is not used in the context of this document.

Attribute type: Unsigned16

Allowed values: 0

IM Profile ID

This attribute defines the ID of the application profile the submodule is following. Submodules not following any application profile shall use 0x0000.

Attribute type: Unsigned16

Allowed values: 0x0000 (Non profile device), 0x0001 – 0xF6FF (administrative number), 0xF700 – 0xFFFE (reserved for profiles)

IM Profile Specific Type

In case a submodule follows a special application profile, this attribute offers information about the usage of its channels and/or sub devices. The submodule/channel information shall be according to the respective definitions of the application profile.

In conjunction with Profile ID == 0 the attribute indicates the type of sensor or actuator.

Attribute type: Unsigned16

Allowed values:

Unspecified (0x0000): This value can be used if none of the well-defined values is suitable.

Standard Controller (0x0001): This value shall be used for a PLC.

PC-based Station (0x0002): This value shall be used for a personal computer-based station, if no other value is suitable.

IO-Module (0x0003): This value shall be used for submodules offering a remote IO functionality.

Communication Module (0x0004): This value shall be used for submodules working as a communication module, for example an IO Link Master.

Interface Module (0x0005): This value shall be used for a submodule representing the IO device.

Active Network Infrastructure Component (0x0006): This value shall be used for ethernet bridges / switches or media converter.

Media attachment unit (0x0007): This value shall be used for media attachment units, e.g. an adapter to connect different Ethernet MAU types.

Manufacturer Specific Type (0x0100 – 0x7FFF): This value is defined by the vendor of the device.

In case a submodule follows an application profile, the definition is stated there.

Attribute type: Unsigned16

Allowed values: 0 to 0xFFFF

IM Version

This attribute indicates the implemented version of the I&M functions as structure with major and minor version. Octet 1 (MSB) contains the major version number, e.g. 1 of version 1.0; octet 2 (LSB) contains the minor version number, e.g. 0 of version 1.0.

Attribute type: OctetString[2]

IM Supported

This attribute indicates the availability of further I&M records. Bit 0 indicates the availability of Profile specific I&M, Bit 1 the availability of I&M1, Bit 2 the availability of I&M2, ... and Bit 15 the availability of I&M15.

Attribute type: V2

I&M1 Data

This optional attribute consists of the following attributes.

IM Tag Function

This attribute indicates the submodule's function or task. This can be a standard symbolic tag ("AKZ") out of a list or any other type of label defined by a configuration tool. Unused characters shall be set to 0x20 (blank).

Attribute type: VisibleString[32]

IM Tag Location

This attribute indicates the submodule's location. This can be a standard symbolic tag ("OKZ") out of a list or any other type of label defined by a configuration tool. Unused characters shall be set to 0x20 (blank).

Attribute type: VisibleString[22]

I&M2 Data

This optional attribute consists of the following attribute.

IM Date

This attribute indicates the date of installation or commissioning of a device or module. The content is a fixed date and time format according to ISO 8601-1: YYYY-MM-DD T HH:MM, where YYYY is the year in the usual Gregorian calendar, MM is the month of the year between 01 (January) and 12 (December), DD is the day of the month between 01 and 31, where HH is the hour of the day (0 – 23) and MM the minutes of the hour (0 – 59).

Time and date are normally separated by a "T" but for this appearance shall be separated by a blank character.

For example, the fourth day of February in the year 1995 is written in the standard notation as:

1995-02-04 16:23

Unused characters shall be set to 0x20 (blank).

Attribute type: VisibleString[16]

I&M3 Data

This optional attribute consists of the following attributes.

IM Descriptor

This attribute allows storing any individual additional information and annotation.

Unused characters shall be set to 0x20 (blank).

Attribute type: VisibleString[54]

I&M4 Data

This optional attribute should only be used together with Functional Safety.

I&M5 Data

This optional attribute allows identifying additional information for this asset. It consists of the following attributes.

Number Of Entries

This attribute indicates the number of entries in the following list.

Attribute type: Unsigned16

Data Format

This attribute identifies the data format used for the I&M5 data.

Allowed values: IMFormat, AMFormat

IMFormat

If Data Format is “IMFormat”, OEM information for this asset is specified. There is at most one information in “IMFormat”. For other information use “AMFormat”.

IM Annotation

This conditional attribute is present when Data Format is “IMFormat”.

It allows to identify the OEM part using text.

The attribute is filled as visible string. Unused octets shall be set to 0x20 (blank).

Attribute type: UnicodeString8[64]

Allowed values: 0 to 0xFFFF

IM Order ID

This conditional attribute is present when Data Format is “IMFormat”.

This attribute defines the complete order number or at least a relevant part that allows unambiguous identification of the submodule within the manufacturer's order spectrum.

The attribute is filled as visible string. Unused octets shall be set to 0x20 (blank).

Attribute type: UnicodeString8[64]

Vendor ID

This conditional attribute is present when Data Format is “IMFormat”.

This attribute defines the ID of the submodule's manufacturer according to the attribute in I&M0 data in this class

IM Serial Number

This conditional attribute is present when Data Format is “IMFormat”.

This attribute defines the serial number of the submodule according to the attribute in I&M0 data in this class.

IM Hardware Revision

This conditional attribute is present when Data Format is “IMFormat”.

This attribute defines the hardware revision of the submodule.

Attribute type: Unsigned16

Allowed values: 0 to 0xFFFF

IM Software Revision

This conditional attribute is present when Data Format is “IMFormat”.

This attribute defines the software or firmware revision of the submodule.

This attribute consists of the following attributes:

Prefix

The prefix attribute forms the “Vx.y.z” part of the software revision.

Attribute type: VisibleString[1]

Preferred values:

“V” (= officially released version) or “R” (= Revision)

“P” = Prototype

“U” = Under Test (field test)

“T” = Test Device

Functional Enhancement

The functional enhancement attribute forms the “Vx.y.z” part of the software revision.

Attribute type: Unsigned8

Allowed values: 0 to 0xFF

Bug Fix

The bug fix attribute forms the “Vx.y.z” part of the software revision.

Attribute type: Unsigned8

Allowed values: 0 to 0xFF

Internal Change

The internal change attribute forms the “Vx.y.z” part of the software revision.

Attribute type: Unsigned8

Allowed values: 0 to 0xFF

AMFormat

If Data Format is “AMFormat”, the information specifies additional information for this asset. AM Type Information specifies the type of information.

IM Unique Identifier

This conditional attribute is present when Data Format is “AMFormat”.

This attribute identifies the asset uniquely during the lifetime of the asset. It is a manufacturer created unique identifier (UUID) according to ISO/IEC 9834-8.

Attribute type: UUID

AM Location

This conditional attribute is present when Data Format is “AMFormat”.

This attribute is used to specify the asset's location. The coding is defined in IEC 61158-6-10.

In case of I&M5 Data AM Location shall be set to “0”.

Attribute type: OctetString[16]

IM Annotation

This conditional attribute is present when Data Format is “AMFormat”.

This attribute specifies the asset's annotation; used for a human readable description of the asset. The format and content of IM Annotation is vendor specific.

The string is left justified and filled with blanks (0x20) if the annotation is shorter than 64 characters.

Attribute type: UnicodeString8[64]

IM Order ID

This conditional attribute is present when Data Format is “AMFormat”.

This attribute specifies the asset’s complete order number or at least a relevant part that allows unambiguous identification of the asset within the manufacturer’s order spectrum. The format and content of IM Order ID is vendor specific.

The string in the annotation is left justified and filled with blanks (0x20) if the IM Order ID is shorter than 64 characters.

Attribute type: UnicodeString8[64]

AM Software Revision

This conditional attribute is present when Data Format is “AMFormat”.

This optional attribute is present only if the asset contains software or firmware.

It contains the manufacturer defined software revision in a “free” format. If the asset’s software revision can be described using IM Software Revision (e.g. “V1.2.3”), then this field shall be filled with blanks.

For an evaluating tool: If this field contains a value (i.e. is not filled with blanks only), show this value, otherwise the value in IM Software Revision.

Attribute type: UnicodeString8[64]

AM Hardware Revision

This conditional attribute is present when Data Format is “AMFormat”.

This optional attribute is present only if the asset contains hardware.

It contains the manufacturer defined hardware revision in a “free” format. If the asset’s hardware revision can be described using IM_Hardware_Revision (e.g. “17”), then this field shall be filled with blanks.

For an evaluating tool: If this field contains a value (i.e. is not filled with blanks only), show this value, otherwise the value in IM Hardware Revision.

Attribute type: UnicodeString8[64]

IM Serial Number

This conditional attribute is present when Data Format is “AMFormat”.

This attribute defines the asset’s serial number. The serial number is a unique production number of the device manufacturer even for devices with the same hardware, software or firmware revision.

The string in the IM Serial Number is left justified and filled with blanks (0x20) if the IM Order ID is shorter than 16 characters.

Attribute type: VisibleString[16]

IM Software Revision

This conditional attribute is present when Data Format is “AMFormat”.

This optional attribute is present only if the asset contains software or firmware.

This attribute defines the software revision of the asset.

If the software revision is specified using AM Software Revision, fill this field with “V0.0.0”.

This attribute consists of the following attributes:

Prefix

The prefix attribute forms the “Vx.y.z” part of the software revision.

Attribute type: VisibleString[1]

Preferred values:

“V” (= officially released version) or “R” (= Revision)

“P” = Prototype

“U” = Under Test (field test)

“T” = Test Device

Functional Enhancement

The functional enhancement attribute forms the “Vx.y.z” part of the software revision.

Attribute type: Unsigned8

Allowed values: 0 to 0xFF

Bug Fix

The bug fix attribute forms the “Vx.y.z” part of the software revision.

Attribute type: Unsigned8

Allowed values: 0 to 0xFF

Internal Change

The internal change attribute forms the “Vx.y.z” part of the software revision.

Attribute type: Unsigned8

Allowed values: 0 to 0xFF

AM Device Identification

This conditional attribute is present when Data Format is “AMFormat”.

This attribute is used to specify the asset’s organization, vendor, device and device sub identification. The coding is defined in IEC 61158-6-10.

The device identification is hierarchically structured, meaning

- organization defines the scope for vendor,
- vendor the scope for device,
- and device the scope for device sub identification.

Attribute type: OctetString[8]

AM Type Identification

This conditional attribute is present when Data Format is “AMFormat”.

This attribute defines the asset’s type according to the attribute IM Profile Specific Type in I&M0 data in this class. This attribute specifies the type of the information for this asset.

The special value 0x8000 indicates that OEM information for this asset is specified.

IM Hardware Revision

This conditional attribute is present when Data Format is “AMFormat”.

This optional attribute is present only if the asset contains hardware.

This attribute defines the asset's hardware revision according to the attribute in I&MO data in this class.

If the hardware revision is specified using AM Hardware Revision, fill this field with “0x0000”.

Representative

This attribute defines whether this submodule is a representative for module and/or device.

It consists of

Module

This attribute defines whether this submodule is a representative for the module.

Attribute type: Boolean

Allowed values: FALSE, TRUE

Device

This attribute defines whether this submodule is a representative for the device.

Attribute type: Boolean

Allowed values: FALSE, TRUE

Asset Management Data

This attribute is used to specify the assets not modeled using this document; i.e. the assets not represented by a submodule.

It consists of the following elements.

Number Of Entries

This attribute indicates the number of entries in the following list.

IM Unique Identifier

This attribute identifies the asset uniquely during the lifetime of the asset. It is a manufacturer created unique identifier (UUID) according to ISO/IEC 9834-8.

Attribute type: UUID

AM Location

This attribute is used to specify the asset's location. The coding is defined in IEC 61158-6-10.

AM Location allows to specify the location concept in two format alternatives.

One is a level tree format, whereas each level allows to specify a number between 0 and 1 022 resp. an indication that this level is not used. A sample would be “12.7.5.6”. Using this format the AM Location allows to locate the assets in a tree structure; how to locate the position in this tree.

The other is a slot / subslot format, whereas the physical position of the asset is noted with a begin and end slotnumber and a begin and end subslotnumber. It is also possible to express that the asset covers a whole slot or multiple whole slots. A sample would be “covers slot 1 and 2 on the whole”. Using this format, the AM Location is aligned to the physical layout of the device.

Using this format, the AM Location is aligned to the physical layout of the device as shown in Figure 50.

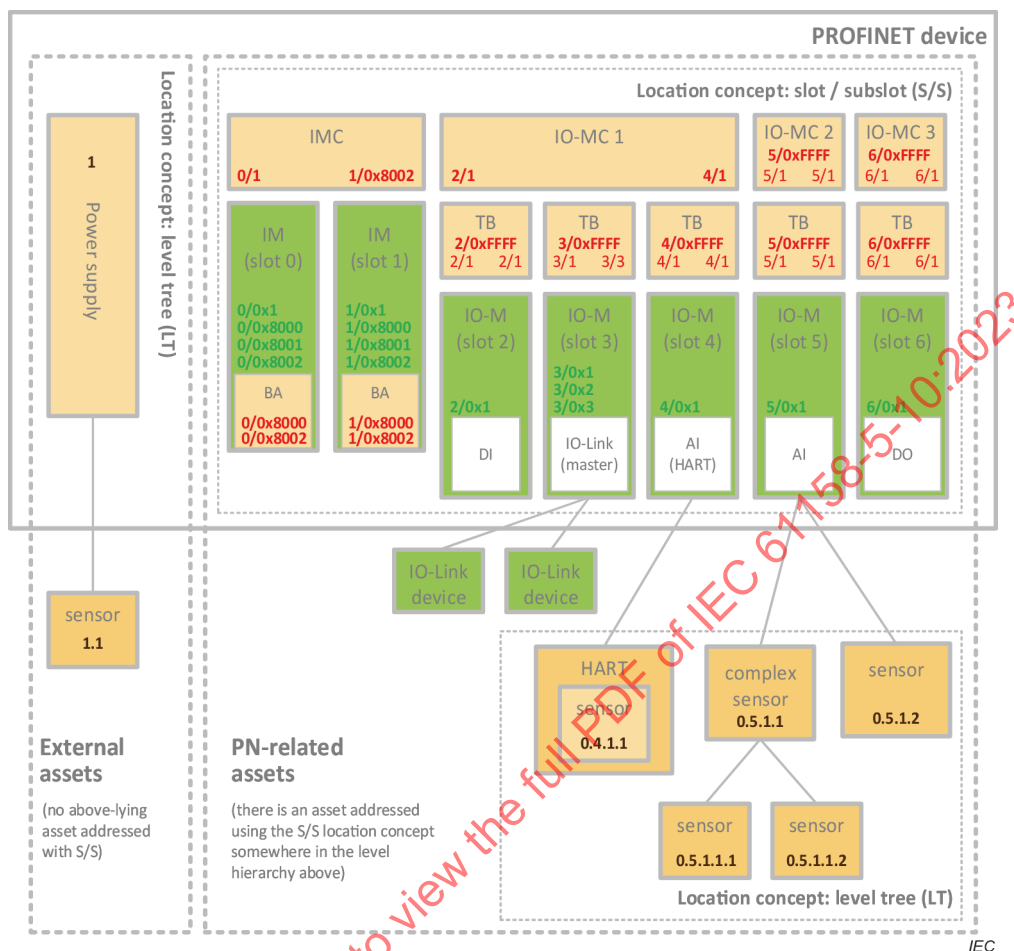


Figure 50 – Location concepts in Asset Management

Attribute type: OctetString[16]

IM Annotation

This attribute specifies the asset's annotation; used for a human readable description of the asset. The format and content of IM Annotation is vendor specific.

The string is left justified and filled with blanks (0x20) if the annotation is shorter than 64 characters.

Attribute type: UnicodeString8[64]

IM Order ID

This attribute specifies the asset's complete order number or at least a relevant part that allows unambiguous identification of the asset within the manufacturer's order spectrum. The format and content of IM Order ID is vendor specific.

The string in the annotation is left justified and filled with blanks (0x20) if the IM Order ID is shorter than 64 characters.

Attribute type: UnicodeString8[64]

AM Software Revision

This optional attribute is present only if the asset contains software or firmware.

It contains the manufacturer defined software revision in a “free” format. If the asset’s software revision can be described using IM Software Revision (e.g. “V1.2.3”), then this field shall be filled with blanks.

For an evaluating tool: If this field contains a value (i.e. is not filled with blanks only), show this value, otherwise the value in IM Software Revision.

Attribute type: UnicodeString8[64]

AM Hardware Revision

This optional attribute is present only if the asset contains hardware.

It contains the manufacturer defined hardware revision in a “free” format. If the asset’s hardware revision can be described using IM_Hardware_Revision (e.g. “17”), then this field shall be filled with blanks.

For an evaluating tool: If this field contains a value (i.e. is not filled with blanks only), show this value, otherwise the value in IM Hardware Revision.

Attribute type: UnicodeString8[64]

IM Serial Number

This attribute defines the asset’s serial number. The serial number is a unique production number of the device manufacturer even for devices with the same hardware, software or firmware revision.

The string in the IM Serial Number is left justified and filled with blanks (0x20) if the IM Order ID is shorter than 16 characters.

Attribute type: VisibleString[16]

IM Software Revision

This optional attribute is present only if the asset contains software or firmware.

This attribute defines the software revision of the asset according to the attribute in I&M0 data in this class.

If the software revision is specified using AM Software Revision, fill this field with “V0.0.0”.

This attribute consists of the following attributes:

Prefix

The prefix attribute forms the “Vx.y.z” part of the software revision.

Attribute type: VisibleString[1]

Preferred values:

“V” (= officially released version) or “R” (= Revision)

“P” = Prototype

“U” = Under Test (field test)

“T” = Test Device

Functional Enhancement

The functional enhancement attribute forms the “Vx.y.z” part of the software revision.

Attribute type: Unsigned8

Allowed values: 0 to 0xFF

Bug Fix

The bug fix attribute forms the “Vx.y.z” part of the software revision.

Attribute type: Unsigned8

Allowed values: 0 to 0xFF

Internal Change

The internal change attribute forms the “Vx.y.z” part of the software revision.

Attribute type: Unsigned8

Allowed values: 0 to 0xFF

AM Device Identification

This attribute is used to specify the asset’s organization, vendor, device and device sub identification. The coding is defined in IEC 61158-6-10.

The device identification is hierarchically structured, meaning

- organization defines the scope for vendor,
- vendor the scope for device,
- and device the scope for device sub identification.

Attribute type: OctetString[8]

AM Type Identification

This attribute specifies the asset’s type.

This attribute defines the asset’s type according to the attribute IM Profile Specific Type in I&M0 data in this class.

IM Hardware Revision

This optional attribute is present only if the asset contains hardware.

This attribute defines the asset’s hardware revision. If the asset’s hardware revision is specified using AM Hardware Revision, fill this field with “0x0000”.

Attribute type: Unsigned16

Allowed values: 0 to 0xFFFF

7.3.2.3.5 Services**7.3.2.3.5.1 Read I&M0 Filter Data**

This service allows reading I&M0 Filter Data using a record data object with device scope (see 7.3.1.7.1).

I&M0 Filter Data indicates all submodules being a carrier of discrete identification and maintenance data. I&M1, I&M2, I&M3, and I&M4, if supported, can be written on such submodules.

Optionally the submodules acting as module representative are indicated.

I&M0 Filter Data indicates one device representative on which I&M1, I&M2, and I&M3 shall be writeable.

The parameter structure and the meaning of the parameters is the same as described in the read service (see 7.3.1.7.6.1.1); for the error code hierarchy, 7.3.1.7.7.1 applies. The parameter Data has a service specific structure and meaning; see Table 222 for its structure.

The AR context is of no meaning for this service; see 7.3.1.7.7.4 for details.

Table 222 – Data elements of Read I&M0 Filter Data

Parameter name	Service specific elements	rsp	cnf
Data	I&M0 Filter Data	M	M(=)
	I&M0 Carrier Data	M	M(=)
	List of APs	M	M(=)
	API	M	M(=)
	List of Slots	M	M(=)
	Slot Number	M	M(=)
	Module Ident Number	M	M(=)
	List of Subslots	M	M(=)
	Subslot Number	M	M(=)
	Submodule Ident Number	M	M(=)
	Module Representative Data	O	O(=)
	List of APs	M	M(=)
	API	M	M(=)
	List of Slots	M	M(=)
	Slot Number	M	M(=)
	Module Ident Number	M	M(=)
	List of Subslots	M	M(=)
	Subslot Number	M	M(=)
	Submodule Ident Number	M	M(=)
	Device Representative Data	M	M(=)
	List of APs	M	M(=)
	API	M	M(=)
	List of Slots	M	M(=)
	Slot Number	M	M(=)
	Module Ident Number	M	M(=)
	List of Subslots	M	M(=)
	Subslot Number	M	M(=)
	Submodule Ident Number	M	M(=)

Data

This parameter contains the values of the object which has been read.

I&M0 Filter Data

This attribute consists of the following attributes:

I&M0 Carrier Data

This attribute contains all submodules being carrier of identification and maintenance data.

It consists of the following attributes.

List of APs

This attribute is composed of the following list elements:

API

This parameter contains the value of the corresponding attribute of the ASE object.

List of Slots

This attribute defines the slots of the application process. One Slot is composed of the following list elements:

Slot Number

This parameter contains the value of the corresponding attribute of the ASE object.

Module Ident Number

This parameter contains the value of the corresponding attribute of the ASE object.

List of Subslots

This attribute consists of the following attributes.

Subslot Number

This parameter contains the value of the corresponding attribute of the ASE object.

Submodule Ident Number

This parameter contains the value of the corresponding attribute of the ASE object.

Module Representative Data

This optional attribute indicates the submodules acting as module representative and thus carrying the module's I&M data; at most one submodule being carrier of identification and maintenance information shall be returned per module.

It consists of the following attributes.

List of APs

This attribute is composed of the following list elements:

API

This parameter contains the value of the corresponding attribute of the ASE object.

List of Slots

This attribute defines the slots of the application process. One Slot is composed of the following list elements:

Slot Number

This parameter contains the value of the corresponding attribute of the ASE object.

Module Ident Number

This parameter contains the value of the corresponding attribute of the ASE object.

List of Subslots

This attribute consists of the following attributes.

Subslot Number

This parameter contains the value of the corresponding attribute of the ASE object.

Submodule Ident Number

This parameter contains the value of the corresponding attribute of the ASE object.

Device Representative Data

This attribute contains exactly one submodule, which is a carrier of identification and maintenance information and provides access to I&M1, I&M2, I&M3 and I&M4.

This attribute consists of the following attributes.

List of APs

This attribute is composed of the following list elements:

API

This parameter contains the value of the corresponding attribute of the ASE object.

List of Slots

This attribute defines the slots of the application process. One Slot is composed of the following list elements:

Slot Number

This parameter contains the value of the corresponding attribute of the ASE object.

Module Ident Number

This parameter contains the value of the corresponding attribute of the ASE object.

List of Subslots

This attribute consists of the following attributes.

Subslot Number

This parameter contains the value of the corresponding attribute of the ASE object.

Submodule Ident Number

This parameter contains the value of the corresponding attribute of the ASE object.

7.3.2.3.5.2 Read I&M0 Data

This service allows reading I&M0 Data using a record data object with subslot scope (see 7.3.1.7.1).

This confirmed service is used to read I&M0 Data. This service shall only be used in conjunction with the implicit AR, IO AR or Supervisor AR.

The parameter structure and the meaning of the parameters is the same as described in the read service (see 7.3.1.7.6.1.1); for the error code hierarchy, 7.3.1.7.7.1 applies. The parameter Data has a service specific structure and meaning; see Table 223 for its structure.

The AR context is of no meaning for this service; see 7.3.1.7.7.4 for details.

Table 223 – Data elements of Read I&M0 Data

Parameter name	Service specific elements	rsp	cnf
Data	I&M0 Data	C	C(=)
	Vendor ID	M	M(=)
	Order ID	M	M(=)
	IM Serial Number	M	M(=)
	IM Hardware Revision	M	M(=)
	IM Software Revision	M	M(=)
	IM Revision Counter	M	M(=)
	IM Profile ID	M	M(=)
	IM Profile Specific Type	M	M(=)
	IM Version	M	M(=)
	IM Supported	M	M(=)

Data

This parameter contains the values of the object which has been read.

I&M0 Data

This parameter consists of the following elements:

Vendor ID

This parameter contains the value of the corresponding attribute of the ASE object.

Order ID

This parameter contains the value of the corresponding attribute of the ASE object.

IM Serial Number

This parameter contains the value of the corresponding attribute of the ASE object.

IM Hardware Revision

This parameter contains the value of the corresponding attribute of the ASE object.

IM Software Revision

This parameter contains the value of the corresponding attribute of the ASE object.

IM Revision Counter

This parameter contains the value of the corresponding attribute of the ASE object.

IM Profile ID

This parameter contains the value of the corresponding attribute of the ASE object.

IM Profile Specific Type

This parameter contains the value of the corresponding attribute of the ASE object.

IM Version

This parameter contains the value of the corresponding attribute of the ASE object.

IM Supported

This parameter contains the value of the corresponding attribute of the ASE object.

The following parameters have a specific meaning at this service:

Length (Result(+))

The parameter Length indicates the number of octets of the I&M0 Data read.

Special case (legacy submodules / modules):

The value zero, in conjunction with an entry in the I&M0 Carrier Data, indicates that the submodule is not able to retrieve its I&M0 data.

In this case the engineering system may use locally generated I&M0 data.

7.3.2.3.5.3 Write I&M1 Data

This service allows writing I&M1 Data using a record data object with subslot scope (see 7.3.1.7.1).

The parameter structure and the meaning of the parameters is the same as described in the write service (see 7.3.1.7.6.2.1); for the error code hierarchy, 7.3.1.7.7.1 applies. The parameter Data has a service specific structure and meaning; see Table 224 for its structure.

The AR context is of no meaning for this service; see 7.3.1.7.7.4 for details.

Table 224 – Data elements of Write I&M1 Data

Parameter name	Service specific elements	req	ind
Data	I&M1 Data	M	M(=)
	IM Tag Function	M	M(=)
	IM Tag Location	M	M(=)

Data

This parameter contains the values of the object which are written.

I&M1 Data

This parameter consists of the following elements:

IM Tag Function

This parameter contains the value of the corresponding attribute of the ASE object.

IM Tag Location

This parameter contains the value of the corresponding attribute of the ASE object.

7.3.2.3.5.4 Read I&M1 Data

This service allows reading I&M1 Data using a record data object with subslot scope (see 7.3.1.7.1).

The parameter structure and the meaning of the parameters is the same as described in the read service (see 7.3.1.7.6.1.1); for the error code hierarchy, 7.3.1.7.7.1 applies. The parameter Data has a service specific structure and meaning; see Table 224 for its structure.

The AR context is of no meaning for this service; see 7.3.1.7.7.4 for details.

Data

See Write I&M1 Data (7.3.2.3.5.3).

7.3.2.3.5.5 Write I&M2 Data

This service allows writing I&M2 Data using a record data object with subslot scope (see 7.3.1.7.1).

The parameter structure and the meaning of the parameters is the same as described in the write service (see 7.3.1.7.6.2.1); for the error code hierarchy, 7.3.1.7.7.1 applies. The parameter Data has a service specific structure and meaning; see Table 225 for its structure.

The AR context is of no meaning for this service; see 7.3.1.7.7.4 for details.

Table 225 – Data elements of Write I&M2 Data

Parameter name	Service specific elements	req	ind
Data	I&M2 Data	M	M(=)
	IM Date	M	M(=)

Data

This parameter contains the value of the object which are written.

I&M2 Data

This parameter consists of the following elements.

IM Date

This parameter contains the value of the corresponding attribute of the ASE object.

7.3.2.3.5.6 Read I&M2 Data

This service allows reading I&M2 Data using a record data object with subslot scope (see 7.3.1.7.1).

The parameter structure and the meaning of the parameters is the same as described in the read service (see 7.3.1.7.6.1.1); for the error code hierarchy, 7.3.1.7.7.1 applies. The parameter Data has a service specific structure and meaning; see Table 225 for its structure.

The AR context is of no meaning for this service; see 7.3.1.7.7.4 for details.

Data

See Write I&M2 Data in 7.3.2.3.5.5.

7.3.2.3.5.7 Write I&M3 Data

This service allows writing I&M3 Data using a record data object with subslot scope (see 7.3.1.7.1).

The parameter structure and the meaning of the parameters is the same as described in the write service (see 7.3.1.7.6.2.1); for the error code hierarchy, 7.3.1.7.7.1 applies. The parameter Data has a service specific structure and meaning; see Table 226 for its structure.

The AR context is of no meaning for this service; see 7.3.1.7.7.4 for details.

Table 226 – Data elements of Write I&M3 Data

Parameter name	Service specific elements	req	ind
Data	I&M3 Data	M	M(=)
	IM Descriptor	M	M(=)

Data

This parameter contains the value of the object which are written.

I&M3 Data

This parameter consists of the following elements:

IM Descriptor

This parameter contains the value of the corresponding attribute of the ASE object.

7.3.2.3.5.8 Read I&M3 Data

This service allows reading I&M3 Data using a record data object with subslot scope (see 7.3.1.7.1).

The parameter structure and the meaning of the parameters is the same as described in the read service (see 7.3.1.7.6.1.1); for the error code hierarchy, 7.3.1.7.7.1 applies. The parameter Data has a service specific structure and meaning; see Table 226 for its structure.

The AR context is of no meaning for this service; see 7.3.1.7.7.4 for details.

Data

See Write I&M3 Data in 7.3.2.3.5.7.

7.3.2.3.5.9 Write I&M4 Data

This service allows writing I&M4 Data using a record data object with subslot scope (see 7.3.1.7.1).

If the I&M4 Data is used in the context of application profile functional safety, the data should only be written by the functional safety application. The Write I&M4 Data service should be denied, due to the functional safety assignment.

The parameter structure and the meaning of the parameters is the same as described in the write service (see 7.3.1.7.6.2.1); for the error code hierarchy, 7.3.1.7.7.1 applies. The parameter Data has a service specific structure and meaning; see Table 227 for its structure.

The AR context is of no meaning for this service; see 7.3.1.7.7.4 for details.

Table 227 – Data elements of Write I&M4 Data

Parameter name	Service specific elements	req	ind
Data	I&M4 Data	M	M(=)

Data

This parameter contains the value of the object which are written.

I&M4 Data

This parameter is defined by the functional safety profile.

7.3.2.3.5.10 Read I&M4 Data

This service allows reading I&M4 Data using a record data object with subslot scope (see 7.3.1.7.1).

The parameter structure and the meaning of the parameters is the same as described in the read service (see 7.3.1.7.6.1.1); for the error code hierarchy, 7.3.1.7.7.1 applies. The parameter Data has a service specific structure and meaning; see Table 227 for its structure.

The AR context is of no meaning for this service; see 7.3.1.7.7.4 for details.

Data

See Write I&M4 Data in 7.3.2.3.5.9.

7.3.2.3.5.11 Read I&M5 Data

This service allows reading I&M5 Data using a record data object with subslot scope (see 7.3.1.7.1).

The parameter structure and the meaning of the parameters is the same as described in the read service (see 7.3.1.7.6.1.1); for the error code hierarchy, 7.3.1.7.7.1 applies. The parameter Data has a service specific structure and meaning; see Table 228 for its structure.

The AR context is of no meaning for this service; see 7.3.1.7.7.4 for details.

Table 228 – Data elements of Read I&M5 Data

Parameter name	Service specific elements	rsp	cnf
Data	I&M5 Data	C	C(=)
	Number Of Entries	M	M(=)
	Data Format	M	M(=)
	IMFormat	C	M(=)
	IM Annotation	M	M(=)
	Vendor ID	M	M(=)
	IM Order ID	M	M(=)
	IM Serial Number	M	M(=)
	IM Hardware Revision	M	M(=)
	IM Software Revision	M	M(=)
	AMFormat	C	M(=)
	IM Unique Identifier	M	M(=)
	AM Location	M	M(=)
	IM Annotation	M	M(=)
	IM Order ID	M	M(=)
	AM Software Revision	U	U(=)
	AM Hardware Revision	U	U(=)
	IM Serial Number	M	M(=)
	IM Software Revision	U	U(=)
	AM Device Identification	M	M(=)
	AM Type Identification	M	M(=)
	IM Hardware Revision	U	U(=)

Data

This parameter contains the value of the object which has been read.

I&M5 Data

This parameter consists of the following elements:

Number Of Entries

This parameter contains the value of the corresponding attribute of the ASE object.

Data Format

This attribute identifies the data format used for the I&M5 data.

Allowed values: IMFormat, AMFormat

IMFormat

IM Annotation

This conditional attribute is present when Data Format is “IMFormat”.

This parameter contains the value of the corresponding attribute of the ASE object.

IM Order ID

This conditional attribute is present when Data Format is “IMFormat”.

This parameter contains the value of the corresponding attribute of the ASE object.

Vendor ID

This conditional attribute is present when Data Format is “IMFormat”.

This parameter contains the value of the corresponding attribute of the ASE object.

IM Serial Number

This conditional attribute is present when Data Format is “IMFormat”.

This parameter contains the value of the corresponding attribute of the ASE object.

IM Hardware Revision

This conditional attribute is present when Data Format is “IMFormat”.

This parameter contains the value of the corresponding attribute of the ASE object.

IM Software Revision

This conditional attribute is present when Data Format is “IMFormat”.

This parameter contains the value of the corresponding attribute of the ASE object.

AMFormat

IM Unique Identifier

This conditional attribute is present when Data Format is “AMFormat”.

This parameter contains the value of the corresponding attribute of the ASE object.

AM Location

This conditional attribute is present when Data Format is “AMFormat”.

This parameter contains the value of the corresponding attribute of the ASE object.

IM Annotation

This conditional attribute is present when Data Format is “AMFormat”.

This parameter contains the value of the corresponding attribute of the ASE object.

IM Order ID

This conditional attribute is present when Data Format is “AMFormat”.

This parameter contains the value of the corresponding attribute of the ASE object.

AM Software Revision

This conditional attribute is present when Data Format is “AMFormat”.

This parameter contains the value of the corresponding attribute of the ASE object.

AM Hardware Revision

This conditional attribute is present when Data Format is “AMFormat”.

This parameter contains the value of the corresponding attribute of the ASE object.

IM Serial Number

This conditional attribute is present when Data Format is “AMFormat”.

This parameter contains the value of the corresponding attribute of the ASE object.

IM Software Revision

This conditional attribute is present when Data Format is “AMFormat”.

This parameter contains the value of the corresponding attribute of the ASE object.

AM Device Identification

This conditional attribute is present when Data Format is “AMFormat”.

This parameter contains the value of the corresponding attribute of the ASE object.

AM Type Identification

This conditional attribute is present when Data Format is “AMFormat”.

This parameter contains the value of the corresponding attribute of the ASE object.

IM Hardware Revision

This conditional attribute is present when Data Format is “AMFormat”.

This parameter contains the value of the corresponding attribute of the ASE object.

7.3.2.3.5.12 Read Asset Management Record

This service allows reading Asset Management Data using a record data object with device scope (see 7.3.1.7.1).

The parameter structure and the meaning of the parameters is the same as described in the read service (see 7.3.1.7.6.1.1); for the error code hierarchy, 7.3.1.7.7.1 applies. The parameter Data has a service specific structure and meaning; see Table 229 for its structure.

The AR context is of no meaning for this service; see 7.3.1.7.7.4 for details.

Table 229 – Data elements of Read Asset Management Data

Parameter name	Service specific elements	rsp	cnf
Data	Asset Management Data	C	C(=)
	Number Of Entries	M	M(=)
	IM Unique Identifier	M	M(=)
	AM Location	M	M(=)
	IM Annotation	M	M(=)
	IM Order ID	M	M(=)
	AM Software Revision	U	U(=)
	AM Hardware Revision	U	U(=)
	IM Serial Number	M	M(=)
	IM Software Revision	U	U(=)
	AM Device Identification	M	M(=)
	AM Type Identification	M	M(=)
	IM Hardware Revision	U	U(=)

Data

This parameter contains the value of the object which has been read.

Asset Management Data

This parameter contains the value of the corresponding attribute of the ASE object and consists of the following elements.

Number Of Entries

This attribute indicates the number of entries in the following list.

IM Unique Identifier

This parameter contains the value of the corresponding attribute of the ASE object.

AM Location

This parameter contains the value of the corresponding attribute of the ASE object.

IM Annotation

This parameter contains the value of the corresponding attribute of the ASE object.

IM Order ID

This parameter contains the value of the corresponding attribute of the ASE object.

AM Software Revision

This optional parameter contains the value of the corresponding attribute of the ASE object.

AM Hardware Revision

This optional parameter contains the value of the corresponding attribute of the ASE object.

IM Serial Number

This parameter contains the value of the corresponding attribute of the ASE object.

IM Software Revision

This optional parameter contains the value of the corresponding attribute of the ASE object.

AM Device Identification

This parameter contains the value of the corresponding attribute of the ASE object.

AM Type information

This parameter contains the value of the corresponding attribute of the ASE object.

IM Hardware Revision

This optional parameter contains the value of the corresponding attribute of the ASE object.

7.3.2.3.6 Behavior**7.3.2.3.6.1 I&M Data**

As stated in 7.3.2.3.1 an asset modeled according to this document is represented by a submodule or a group of submodules.

Exactly one of the asset's submodules is responsible for carrying the identification and maintenance data. This submodule is called the carrier. Only the carrier allows write access (if supported) to the identification and maintenance data.

To allow each application relation to access the identification and maintenance information of a particular submodule (e.g. shared device), each submodule of the group shall support reading identification and maintenance data. It thus acts as a proxy to its carrier (if not being itself the carrier) and returns the identification and maintenance information as stored at the carrier.

The following rules apply to I&M0 filter data (see 7.3.2.3.5.1).

- The list of carriers is returned with I&M0 carrier data.
- There is at least one submodule of the device, where I&M1, I&M2, and I&M3 can be written. This submodule is indicated in the device representative list.

The I&M0 Data of the device representative shall be consistent to RPC Annotation, System Description and Chassis ID of the device. The System Description may differ for historic reasons, but should not. The Vendor ID within RPC Annotation in I&M0 Data shall be identical to one used in the GSD.

If I&M1, I&M2, and I&M3 are supported, their default is either NULL (NULL response when reading the data record; preferred) or attributes filled with 0x20 (blank).

Devices following the application profile functional safety shall provide I&M4. In this case the restrictions of functional safety for I&M4 apply. Devices not following the application profile may provide I&M4; however, it is not recommended to do so.

I&M5 allows offering a list of identification information for a particular submodule.

Devices built by using separately handable OEM parts (e.g. pluggable interface submodules) provide their own identification using I&M0 as usual. The OEM identification, in particular order number and versioning information of the OEM, may additionally be offered using I&M5. Use for the OEM identification either the IMFormat or the AMFormat vom AM Type Identification set to 0x8000.

Additional identification information (e.g. software driver...) is always stated in AMFormat, using an appropriate AM Type Identification.

7.3.2.3.6.2 Asset Management Data

As stated in 7.3.2.3.1 there could be assets which are not modeled according to this document. All such assets are stated in the asset management data.

A particular device is able to offer more than one Asset Management Data Record.

Therefore, a tool retrieving Asset Management Data shall read the Asset Management Data records starting with index 0xF880 up 0xF889 and stop reading, whenever a non-temporary error is returned. The tool shall then combine all assets delivered with each of the retrieved data records.

Be aware that the content can be inconsistent if several independent reads have been made. Assets can appear twice or can be missing, if anything in the addressed device changes during the read sequence. Consistency for the retrieved data is only offered, whenever the asset management data of the device fits completely into one data record. After the read the tool shall combine the information from the multiple data records and filter duplicates using the IM Unique Identifier.

A particular device is free to use what data record size is convenient for transporting the assets to the client. This means in particular that a small data record size indicates that there are no more assets in a further data record.

7.3.2.4 Isochronous Mode Application class

7.3.2.4.1 Overview

This class specifies the structure of the necessary parameters for isochronous mode of applications. The IsoM ASE provides a set of services used to read, and write their values. This class is an option and does not affect non-isochronous applications.

Figure 51 shows the basic model for isochronous applications:

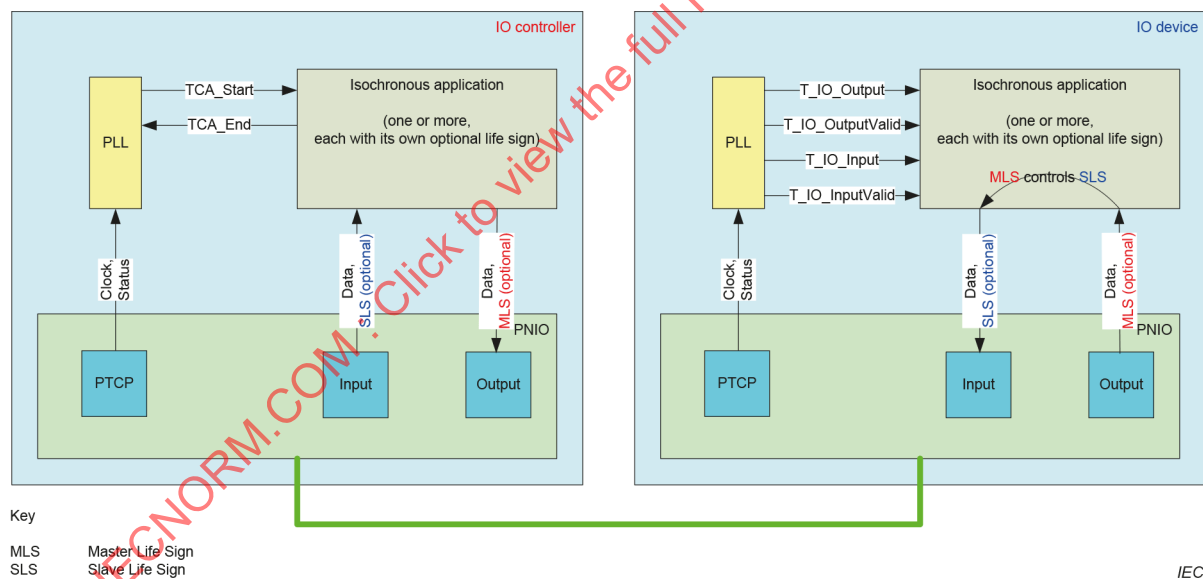


Figure 51 – Basic model for isochronous applications

Isochronous Mode couples signal measurement, transfer and processing, transfer and signal output to the conveyance of the fieldbus. Isochronous mode is application coupling and not an attribute of the transmitting media.

Thus, one should not confuse isochronous mode with an equidistant fieldbus. In fact, it is possible to model isochronous mode onto a non-equidistant fieldbus or run applications freely on top of an equidistant fieldbus. However, to reduce complexity, isochronous mode is modeled typically onto an equidistant fieldbus, to make the transfer of data robust and deterministic.

Isochronous mode means, that a bunch of peripheral inputs, their processing within an application program on the controller and a bunch of peripheral outputs are related to a common pulse.

Figure 52 shows the means for isochronous mode; in particular the common pulse is defined by the start of the data cycle (T_DC), T_IO_Input relates peripheral inputs and T_IO_Output relates peripheral outputs to the data cycle. The isochronous application within the I/O controller is related to the data cycle by local means.

For increasing the transmission's robustness data loss is accepted even within an equidistant fieldbus. The data hold time (as configured by the user) defines the maximum number of data losses accepted. A typical value is $3 \times$ data actualization time (the default, however configurable by the user), which accepts two losses of data.

Thus a data actuality window is opened. The application per se does not know, whether a specific peripheral input value is related to this current data cycle or to some past data cycle. This applies also to a specific peripheral output; again, the output does not know whether the data value to be set is out of this current data cycle or from some past data cycle. The actuality of data may be spread over 2 data cycles without getting any notice of the peripheral bus system.

If on base of a data actuality window an isochronous application is to be modeled, the application needs means to uncover whether data is from the current cycle or some past cycle. For this the application cycles are synchronized by application means: the so called “Life Sign” (Master Life Sign and Slave Life Sign).

Figure 52 and Figure 53 show the relation of the class attributes within the isochronous application model.

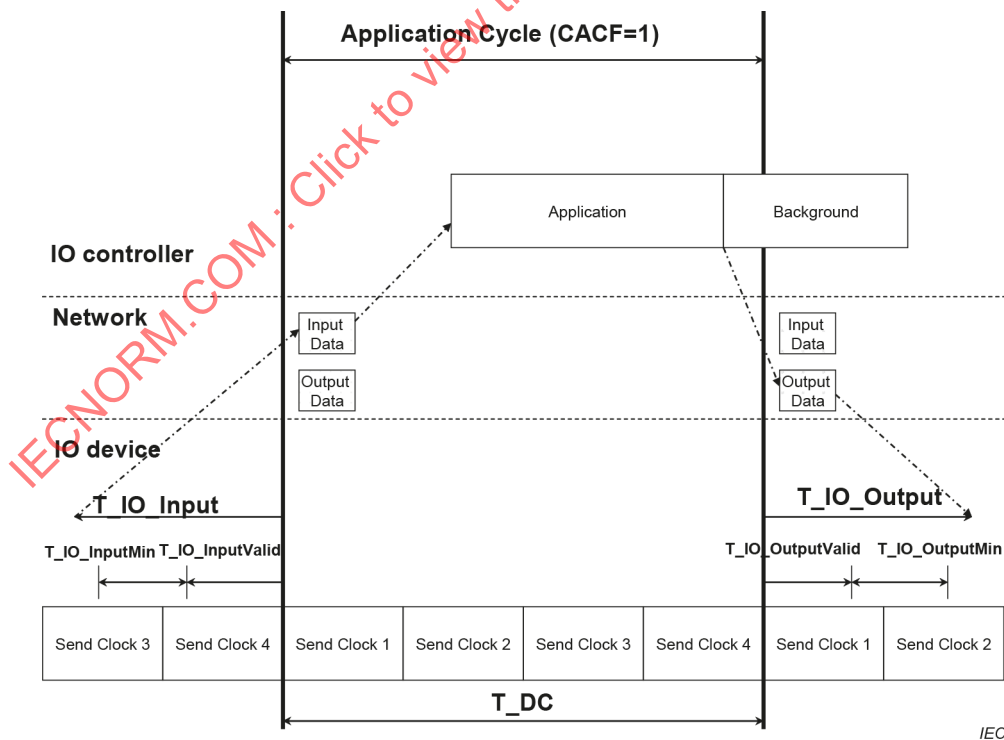


Figure 52 – General isochronous application model (example CACF == 1)

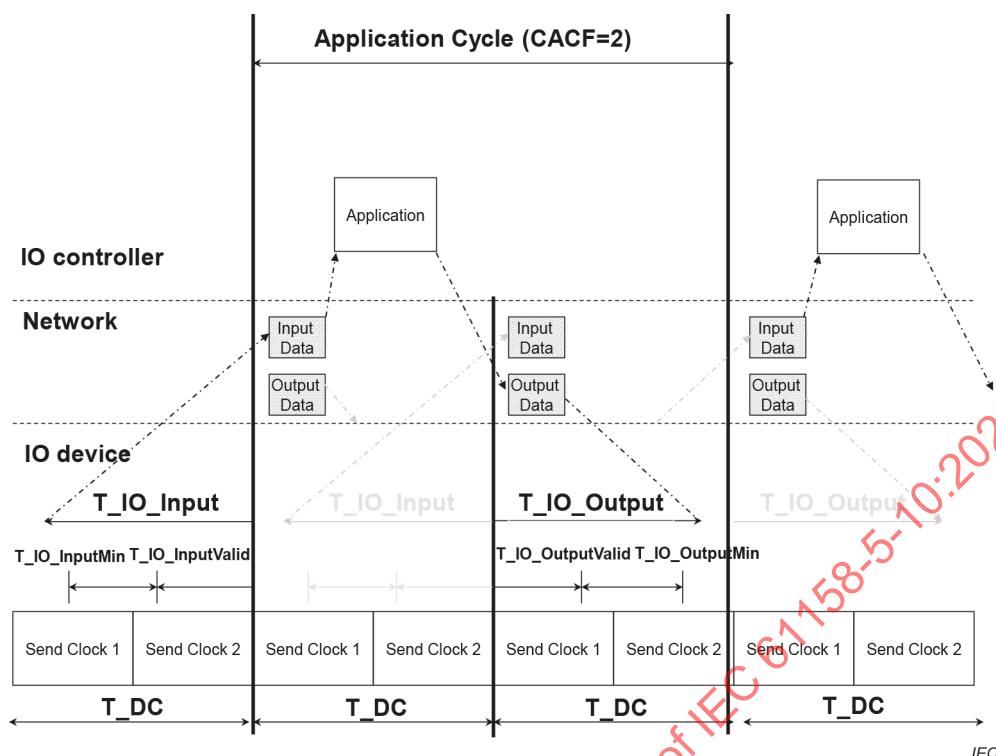


Figure 53 – General isochronous application model (example CACF == 2)

The application in the IO controller is started with a reduction to the data cycle (CACF). It may thus run in parallel to the data cycle (if $CACF = 1$) or reduced to the data cycle (if $CACF > 1$). The controller application provides new output values every controller application cycle ($CACF \times T_{DC} \times T_{DC\_BASE} \times 31,25 \mu s$).

The data from/for a particular submodule is transported via RTC data services in every data cycle (T_{DC}). The application in the IO device runs in every data cycle; thus in every data cycle new input values are available for the IO controller ($T_{DC} \times T_{DC\_BASE} \times 31,25 \mu s$).

New output values are optionally indicated by the IO controller by a change of the MLS (master life sign) which is a part of the output data. The MLS changes thus in every controller application cycle ($CACF \times T_{DC} \times T_{DC\_BASE} \times 31,25 \mu s$). The values are sampled by the IO device at T_{IO_Output} after the data cycle begins, when the new data was being received.

New input values are optionally indicated by the IO device by a change of the SLS (slave life sign) which is a part of the input data. The SLS changes thus in every data cycle ($T_{DC} \times T_{DC\_BASE} \times 31,25 \mu s$). The values are sampled by the IO device at T_{IO_Input} before the next data cycle begins.

7.3.2.4.2 Relations

The services are bound to other services as shown in Table 230:

Table 230 – Binding Isochronous Mode Application services

Service	Binding	Usage
Write Isochronous Mode Data	AR:Record Data:Write	used by IO controller or IO supervisor
Read Isochronous Mode Data	AR:Record Data:Read	used by IO controller or IO supervisor

7.3.2.4.3 Template

An Isochronous Mode Application process object is described by the following template:

ASE:	Isochronous Mode Application ASE
CLASS:	Isochronous Mode Application
CLASS ID:	not used
PARENT CLASS:	TOP
ATTRIBUTES:	
1	(m) Key Attribute: Implicit
2	(m) Attribute: List of IsoM Submodules
2.1	(m) Attribute: API
2.2	(m) Attribute: Slot Number
2.3	(m) Attribute: Subslot Number
2.4	(m) Attribute: IsoM Data
2.4.1	(m) Attribute: Time Data Cycle Factor
2.4.2	(m) Attribute: Time IO Input
2.4.3	(m) Attribute: Time IO Output
2.4.4	(m) Attribute: Time IO Input Valid
2.4.5	(m) Attribute: Time IO Output Valid
2.4.6	(m) Attribute: Controller Application Cycle Factor
3.	(m) Attribute: Device Parameter
3.1	(m) Attribute: Time Data Cycle Base
3.2	(m) Attribute: Time IO Base
3.3	(m) Attribute: Time Data Cycle Min
3.4	(m) Attribute: Time Data Cycle Max
3.5	(m) Attribute: Time IO Input Min
3.6	(m) Attribute: Time IO Output Min
SERVICES:	
1	(m) OpsService: Write Isochronous Mode Data
2	(m) OpsService: Read Isochronous Mode Data
Attributes	

Implicit

The key attribute Implicit indicates that the Isochronous Mode Application process object is implicitly addressed by the service.

List of IsoM Submodules

This attribute list contains the following attributes:

API

This attribute defines the number of the application process the submodule is assigned to.

Slot Number

This attribute defines the slot the submodule is assigned to.

Subslot Number

This attribute defines the subslot the submodule is assigned to.

IsoM Data

This attribute consists of the following attributes:

Time Data Cycle Factor

This attribute indicates the time factor for the data cycle. This time includes all parts of the isochronous data cycle to convey inputs and outputs.

The Time Data Cycle (T_DC) is calculated by Time Data Cycle Factor × 31,25 µs.

Note that T_DC has a step size of T_DC_BASE, e.g. T_DC = n × T_DC_BASE.

Time base: 31,25 μ s

Attribute type: Unsigned16

Allowed values: 1 to 1 024

Time IO Input (T_IO_Input)

This attribute indicates the time factor to fetch the inputs for the IO device. The time base is value of T_IO_Base multiplied with 1 ns.

The time (T_IO_Input) is related to the start of T_DC and describes a time before the start of T_DC.

Note that T_IO_Input has a step size of T_IO_Base; i.e. $T\_IO\_Input = n \times T\_IO\_BASE$.

For T_IO_Input the following relation shall be applied:

$$(T\_IO\_InputValid + T\_IO\_InputMin) \leq T\_IO\_Input \leq T\_DC$$

Time base: 1 ns

Attribute type: Unsigned32

Allowed values: 1 to 32 000 000

Time IO Output (T_IO_Output)

This attribute indicates the time factor to set the outputs for the IO device. The time base is value of T_IO_Base multiplied with 1 ns.

The time (T_IO_Output) is related to the start of T_DC and describes a time after the start of T_DC.

T_IO_Output has a step size of T_IO_Base; i.e. $T\_IO\_Output = n \times T\_IO\_BASE$.

For T_IO_Output the following relation shall be applied:

$$(T\_IO\_OutputValid + T\_IO\_OutputMin) \leq T\_IO\_Output \leq T\_DC$$

Time base: 1 ns

Attribute type: Unsigned32

Allowed values: 1 to 32 000 000

Time IO Input Valid (T_IO_InputValid)

This attribute indicates the point of time the new input data shall be available to convey.

This point of time is related to the start of T_DC and describes a time before the start of T_DC.

T_IO_InputValid has a step size of T_IO_Base; i.e. $T\_IO\_InputValid = n \times T\_IO\_BASE$.

Time base: 1 ns

Attribute type: Unsigned32

Allowed values: 1 to 32 000 000

Time IO Output Valid (T_IO_OutputValid)

This attribute indicates the point of time the new output data are available to process.

This point of time is related to the start of T_DC and describes a time after the start of T_DC.

T_IO_OutputValid has a step size of T_IO_Base; i.e. $T\_IO\_OutputValid = n \times T\_IO\_BASE$.

Time base: 1 ns

Attribute type: Unsigned32

Allowed values: 1 to 32 000 000

Controller Application Cycle Factor (CACF)

This attribute indicates the IO controller Application cycle time as a factor in multiples of T_DC. It determines the time the application of the IO controller needs to process an isochronous application task completely. From isochronous point of view there is exactly one user task for each AR controlling the isochronous part of the application.

The isochronous application task of the IO controller is started with a local time offset at the beginning of each cycle in which the global cycle counter modulo $(T\_DC \times CACF) == 0$.

Time base: T_DC

Attribute type: Unsigned16

Allowed values: 1 to 1 024

Device Parameter

This attribute consists of the following attributes.

Time Data Cycle Base (T_DC_Base)

This attribute determines the granularity for data cycle adjustment.

This field is part of the GSD.

Time base: 31,25 µs

Attribute type: Unsigned16

Allowed values: 1 to 1 024

Time IO Base (T_IO_Base)

This attribute determines the granularity for input and output delay time adjustment.

The time for T_IO_Base is calculated by $T\_IO\_Base \times 1 \text{ ns}$.

This field is part of the GSD.

Time base: 1 ns

Attribute type: Unsigned32

Allowed values: 1 to 32 000 000

Time Data Cycle Min (T_DC_Min)

This attribute determines the smallest possible data cycle.

The time for T_DC_Min is calculated by $T\_DC\_Min \times T\_DC\_Base \times 31,25 \text{ µs}$.

This field is part of the GSD.

Time base: $T\_DC\_Base \times 31,25 \text{ µs}$

Attribute type: Unsigned16

Allowed values: 1 to 1 024

Time Data Cycle Max (T_DC_Max)

This attribute determines the longest possible data cycle.

The time for T_DC_Max is calculated by $T\_DC\_Max \times T\_DC\_Base \times 31,25 \mu s$.

This field is part of the GSD.

Time base: $T\_DC\_Base \times 31,25 \mu s$

Attribute type: Unsigned16

Allowed values: 1 to 1 024

Time IO Input Min (T_IO_InputMin)

This attribute contains the factor for the smallest possible input refresh delay time. It should be the smallest possible time to copy or preprocess the input data.

This point of time is related to the start of T_DC and describes a time before the start of T_DC.

The time for T_IO_InputMin is calculated by $T\_IO\_InputMin \times T\_IO\_Base \times 1 ns$.

This field is part of the GSD.

Time base: $T\_IO\_Base \times 1 ns$

Attribute type: Unsigned32

Allowed values: 1 to 32 000 000

Time IO Output Min (T_IO_OutputMin)

This attribute contains the factor for the smallest possible output refresh delay time. It should be the smallest possible time to copy or preprocess the output data.

This point of time is related to the start of T_DC and describes a time after the start of T_DC.

The time for T_IO_OutputMin is calculated by $T\_IO\_OutputMin \times T\_IO\_Base \times 1 ns$.

This field is part of the GSD.

Time base: $T\_IO\_Base \times 1 ns$

Attribute type: Unsigned32

Allowed values: 1 to 32 000 000

7.3.2.4.4 Services**7.3.2.4.4.1 Write Isochronous Mode Data**

This service allows writing Isochronous Mode Data using a record data object with subslot scope (see 7.3.1.7.1).

The parameter structure and the meaning of the parameters is the same as described in the write service (see 7.3.1.7.6.2.1); for the error code hierarchy, 7.3.1.7.7.1 applies. The parameter Data has a service specific structure and meaning; see Table 231 for its structure.

The AR context is of no meaning for this service; see 7.3.1.7.7.4 for details.

Table 231 – Data elements of Write Isochronous Mode Data

Parameter name	Service specific elements	req	ind
Data	Isochronous Mode Data	M	M(=)
	Time Data Cycle Factor	M	M(=)
	Time IO Input	M	M(=)
	Time IO Output	M	M(=)
	Time IO Input Valid	M	M(=)
	Time IO Output Valid	M	M(=)
	Controller Application Cycle Factor	M	M(=)

Data

This parameter contains the values of the object which are written.

Isochronous Mode Data

This parameter is composed of the following elements:

Time Data Cycle Factor

This parameter contains the value of the corresponding attribute of the ASE object.

Time IO Input

This parameter contains the value of the corresponding attribute of the ASE object.

Time IO Output

This parameter contains the value corresponding attribute of the ASE object.

Time IO Input Valid

This parameter contains the value corresponding attribute of the ASE object.

Time IO Output Valid

This parameter contains the value corresponding attribute of the ASE object.

Controller Application Cycle Factor

This parameter contains the value corresponding attribute of the ASE object.

7.3.2.4.4.2 Read Isochronous Mode Data

This service allows reading Isochronous Mode Data using a record data object with subslot scope (see 7.3.1.7.1).

The parameter structure and the meaning of the parameters is the same as described in the write service (see 7.3.1.7.6.2.1); for the error code hierarchy, 7.3.1.7.7.1 applies. The parameter Data has a service specific structure and meaning; see Table 231 for its structure.

The AR context is of no meaning for this service; see 7.3.1.7.7.4 for details.

Data

See Write Isochronous Mode Data (7.3.2.4.4.1).

7.3.2.4.5 Behavior**7.3.2.4.5.1 Overview of relations to other ASE objects**

For performance reasons, the value for the Output Data object shall be transferred on receipt as fast as possible to the object. The speed and the jitters of this action is a performance parameter of an IO device. This parameter determines the synchronization accuracy.

The Isochronous Mode Application model is a superset of the model described in IEC 61158-5-3.

Figure 54 shows the timing relations between different involved ASEs for a particular submodule.

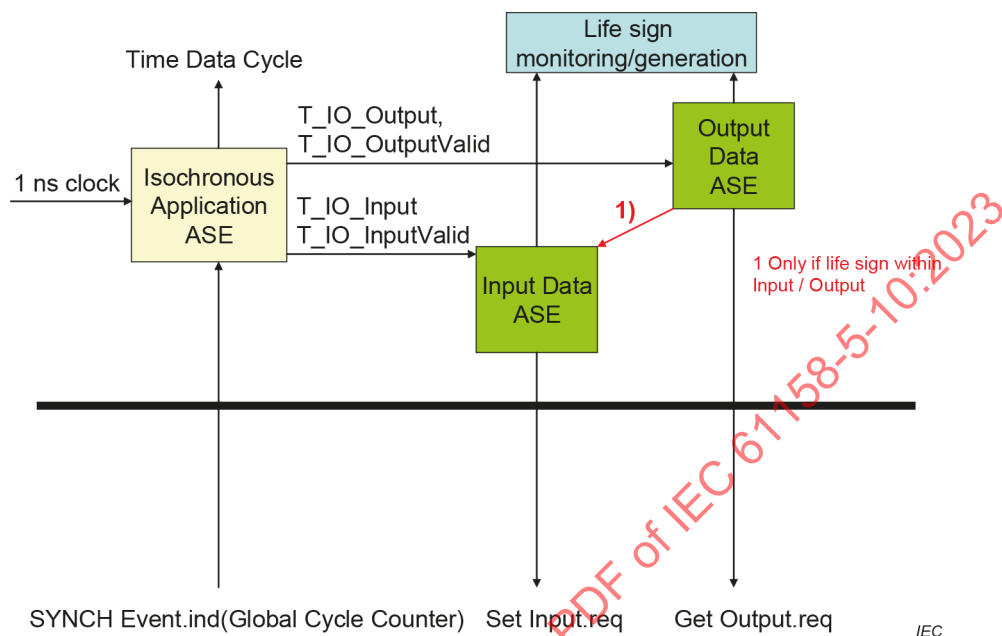


Figure 54 – ASE relations in an IO device operating in isochronous mode for a submodule

7.3.2.4.5.2 Basic behavior of input and output data in the isochronous mode

An IO system operating in the isochronous mode provides the following features:

- all IO devices taking part in the isochronous mode functionality synchronize their internal clock system with the synchronization message SYNCH Event with the isochronous data cycle,
- all IO devices taking part in the isochronous mode functionality shall be in the same PTCP subdomain and furthermore in the same isochronous real-time domain,
- the jitter of SYNCH Event.ind is less than 1 μ s (jitters within an IO device is assumed to be zero).

In an IO system with enabled isochronous mode functionality IO devices with basic functionality can be used in conjunction with synchronized IO devices:

- if the SYNCH-Event.ind is issued with the status “GLOBAL” then the application is synchronized with other devices,
- if the SYNCH-Event.ind is issued with the status “LOCAL” then the isochronous application shall be informed that the application is not synchronized with other devices.

7.3.2.4.5.3 State machine description for isochronous mode

7.3.2.4.5.3.1 General

The behavior of an Output Data object in case of Isochronous Mode is defined by the Isochronous Mode Output Data state machine (ISOM_OUT) state machine.

The ISOM_OUT is triggered by the Isochronous Mode Sync state machine (ISOM_SYNC).

The ISOM_OUT and ISOM_SYNC state machine represents a part of the User functionality and are included to ensure interoperability.

The ISOM_OUT and ISOM_SYNC state machine provides events to other parts of the User functionality. The ISOM_SYNC state machine has interfaces to the Isochronous Mode Input Data state machine (ISOM_IN) and the ISOM_OUT state machine for co-ordination purposes.

The main functionalities of the ISOM_OUT state machine are:

- Check the correct sequence: SYNCH, New Output, read out the Output Data at Time IO Output.
- Transfer the received Output Data to the application on time.
- Check the Controllers Sign of Life (C-LS).

The main functionalities of the ISOM_SYNC state machine are:

- Generate timing signals from the SYNCH-Event.ind
- Generation of a pulse scheme for the local application

The synchronization primitive (SYNCH Event) is conveyed by a local PLL.

7.3.2.4.5.3.2 ISOM_SYNC

7.3.2.4.5.3.2.1 Primitive definitions

7.3.2.4.5.3.2.1.1 Primitives exchanged between remote machines

The service primitives including their associated parameters issued or received by ISOM_SYNC state machine are described in the service definition and shown in Table 232.

Table 232 – Remote primitives issued or received by ISOM_SYNC

Primitive	Source	Destination	Associated parameters	Functions
Local SYNCH Event.ind	FAL	ISOM_SYNC	see 7.3.3.10.5.4	—

7.3.2.4.5.3.2.1.2 Primitives exchanged between local machines

The local service primitives including their associated parameters issued or received by ISOM_SYNC state machine are described in the service definition and shown in Table 233.

Table 233 – Local primitives issued or received by ISOM_SYNC

Primitive	Source	Destination	Associated parameters	Functions
SYNCH_Status_ind	ISOM_SYNC	ISOM_IN, ISOM_OUT	state	—
Start_O_ind	ISOM_SYNC	ISOM_OUT	—	—
SYNCH_I_ind	ISOM_SYNC	ISOM_IN	—	—
SYNCH_O_ind	ISOM_SYNC	ISOM_OUT	—	—

7.3.2.4.5.3.2.2 State transition diagram

Figure 55 shows the State transition diagram of the ISOM_SYNC state machine.

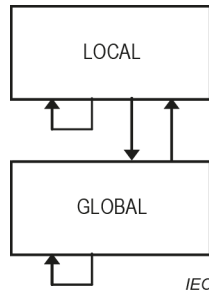


Figure 55 – State transition diagram of ISOM_SYNC

States of ISOM_SYNC

LOCAL

The clock is driven by the local time system

GLOBAL

The clock is driven by the global time system, synchronized for the corresponding devices

7.3.2.4.5.3.2.3 State machine description

This state machine indicates the ISOM_IN and ISOM_OUT state machines the state of the SYNCH signal (LOCAL or GLOBAL) and starts the ISOM_IN and ISOM_OUT state machines.

7.3.2.4.5.3.2.4 State table

Table 234 shows the states of an ISOM_SYNC state machine.

Table 234 – State table ISOM_SYNC

#	Current State	Event /Condition =>Action	Next State
1	LOCAL	Local SYNCH Event.ind () /Status == LOCAL => SYNCH_Status_ind (LOCAL)	LOCAL
2	LOCAL	Local SYNCH Event.ind () /Status == GLOBAL && (GlobalCycleCounter mod SendClock*ReductionRatio) != 0 => ignore	GLOBAL
3	LOCAL	Local SYNCH Event.ind () /Status == GLOBAL && (GlobalCycleCounter mod SendClock*ReductionRatio) == 0 => Start_I_ind Start_O_ind SYNCH_I_ind SYNCH_O_ind SYNCH_Status_ind (GLOBAL)	GLOBAL
4	GLOBAL	Local SYNCH Event.ind () /Status == LOCAL => ignore	LOCAL
5	GLOBAL	Local SYNCH Event.ind () /Status == GLOBAL && (GlobalCycleCounter mod SendClock*ReductionRatio) != 0 => ignore	GLOBAL

#	Current State	Event /Condition =>Action	Next State
6	GLOBAL	Local SYNCH Event.ind () /Status == GLOBAL && (GlobalCycleCounter mod SendClock*ReductionRatio) == 0 => Start_I_ind Start_O_ind SYNCH_I_ind SYNCH_O_ind SYNCH_Status_ind (GLOBAL)	GLOBAL

7.3.2.4.5.3.2.5 Functions, Macros, Timers and Variables

Table 235 contains the functions, macros, timers and variables used by ISOM_SYNC state machine and their arguments and descriptions.

Table 235 – Functions, Macros, Timers and Variables used by the ISOM_SYNC

Name	Type	Function/Meaning
—	—	—

7.3.2.4.5.3.3 ISOM_OUT

7.3.2.4.5.3.3.1 Primitive definitions

7.3.2.4.5.3.3.1.1 Primitives exchanged between remote machines

The service primitives including their associated parameters issued or received by ISOM_OUT machine are described in the service definition and shown in Table 236.

Table 236 – Remote primitives issued or received for ISOM_OUT

Primitive	Source	Destination	Associated parameters	Functions
Alarm.req	ISOM_OUT	FAL	see 7.3.1.6.5	—

7.3.2.4.5.3.3.1.2 Primitives exchanged between local machines


The local service primitives including their associated parameters issued or received by ISOM_OUT state machine are described in the service definition and shown in Table 237.

Table 237 – Local primitives issued or received for ISOM_OUT

Primitive	Source	Destination	Associated parameters	Functions
Local Get Output_cnf	FAL	ISOM_OUT	see 7.3.1.4.5.8	Confirms Get_Output request and passes new output data to output state machine
Local New Output_ind	FAL	ISOM_OUT	see 7.3.1.4.5.10	Indicates new output data has been received
Local Get Output_req	ISOM_OUT	FAL	see 7.3.1.4.5.8	
Start_O.ind	ISOM_SYNC	ISOM_OUT	—	Start Output Data processing
Stop_O.ind	ISOM_SYNC	ISOM_OUT	—	Stop Output Data processing
SYNCH_O.ind	ISOM_SYNC	ISOM_OUT	—	Trigger Signal for Output Data processing

7.3.2.4.5.3.3.2 State transition diagram

Figure 56 shows the State transition diagram of the ISOM_OUT state machine.

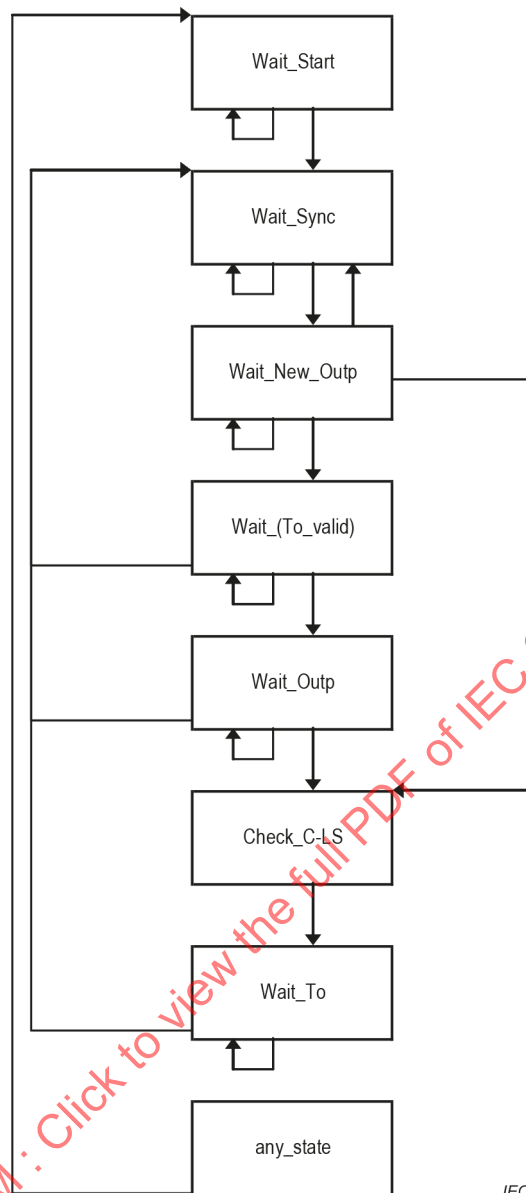

IEC

Figure 56 – State transition diagram ISOM_OUT

States of the ISOM_OUT state machine

Wait_Start	Waits for the start of the state machine.
Wait_Sync	Waits for the PLL being sync.
Wait_New_Outp	Wait for a new output indication.
Wait_(To_valid)	Waits for the expiration of the To_Valid timer.
Wait_To	Waits for the expiration of the To timer.
Wait_Outp	Waits for the return of the Get:output request.
Check_C-LS	Checks the controller life sign.
any_state	Any state of the above.

7.3.2.4.5.3.3 State machine description

This state machine drives the output of a particular isochronous submodule according to the SYNCH signal as being provided by the ISOM_SYNC state machine and according to the T_IO_OutputValid and T_IO_Output times as being configured by the Isochronous Mode data record.

The state machine issues alarms, whenever the outputs are not being received in time (e.g. after T_IO_OutputValid) or else the outputs have not been given to the application in time (e.g. after T_IO_Output).

7.3.2.4.5.3.3.4 State table

Table 238 shows the states of an ISOM_OUT state machine.

Table 238 – State table ISOM_OUT

#	Current State	Event /Condition =>Action	Next State
1	Wait_Start	Start_O.ind => O_Buffer:=NIL wrong_output_upd:=0	Wait_Sync
2	Wait_Start	OTHERS => ignore	Wait_Start
3	Wait_Sync	SYNCH_O.ind => StartTimer (To_valid) StartTimer (To)	Wait_New_Outp
4	Wait_Sync	OTHERS => ignore	Wait_Sync
5	Wait_New_Outp	Local New Output_ind () /wrong_output_upd != 1 => if (wrong_output_upd>0) wrong_output_upd:= wrong_output_upd-1 // NOTE No sequence alarm is outstanding or still in trouble with the outputs	Wait_(To_valid)
6	Wait_New_Outp	Local New Output_ind () /wrong_output_upd == 1 => wrong_output_upd := 0 // NOTE output sequence trouble is over; take back diagnosis IssueAlarm (IsochroneModeAlarm, OutputTimeFailure, NoFault)	Wait_(To_valid)
7	Wait_New_Outp	TimerExpired (To_valid) /wrong_output_upd < limit => wrong_output_upd:= wrong_output_upd+n // NOTE output sequence error; not issued since below limit	Check_C-LS
8	Wait_New_Outp	TimerExpired (To_valid) /wrong_output_upd >= limit => // NOTE Sequence Error is issued, since output sequence errors are above limit IssueAlarm (IsochroneModeAlarm, OutputTimeFailure, Fault)	Check_C-LS
9	Wait_New_Outp	TimerExpired (To) /wrong_output_upd < limit => wrong_output_upd:= wrong_output_upd+n // NOTE output sequence error; not issued since below limit	Wait_Sync
10	Wait_New_Outp	TimerExpired (To) /wrong_output_upd >= limit => // NOTE Sequence Error is issued, since output sequence errors are above limit IssueAlarm (IsochroneModeAlarm, OutputTimeFailure, Fault)	Wait_Sync

#	Current State	Event /Condition =>Action	Next State
11	Wait_New_Outp	OTHERS => ignore	Wait_New_Outp
12	Wait_(To_valid)	TimerExpired (To_valid) => Local Get Output_req ()	Wait_Outp
13	Wait_(To_valid)	TimerExpired (To) /wrong_output_upd < limit => wrong_output_upd:= wrong_output_upd+n // NOTE output sequence error; not issued since below limit	Wait_Sync
14	Wait_(To_valid)	TimerExpired (To) /wrong_output_upd >= limit && ALARM_PENDING == FALSE => // NOTE Sequence Error is issued, since output sequence errors are above limit IssueAlarm (IsochroneModeAlarm, OutputTimeFailure, Fault)	Wait_Sync
15	Wait_(To_valid)	Local New Output_ind () /wrong_output_upd < limit => wrong_output_upd:= wrong_output_upd+n // NOTE output sequence error; not issued since below limit	Wait_(To_valid)
16	Wait_(To_valid)	Local New Output_ind () /wrong_output_upd >= limit => // NOTE Sequence Error is issued, since output sequence errors are above limit IssueAlarm (IsochroneModeAlarm, OutputTimeFailure, Fault)	Wait_(To_valid)
17	Wait_(To_valid)	OTHERS => ignore	Wait_(To_valid)
18	Wait_Outp	Local Get Output_cnf () /New_Flag => O_Buffer := Subslot_Output_Data	Check_C-LS
19	Wait_Outp	Local Get Output_cnf () /!New_Flag => ignore // NOTE old value is kept	Check_C-LS
20	Wait_Outp	TimerExpired (To) /wrong_output_upd < limit => wrong_output_upd:= wrong_output_upd+n // NOTE output sequence error; not issued since below limit	Wait_Sync
21	Wait_Outp	TimerExpired (To) /wrong_output_upd >= limit => // NOTE Sequence Error is issued, since output sequence errors are above limit IssueAlarm (IsochroneModeAlarm, OutputTimeFailure, Fault)	Wait_Sync
22	Wait_Outp	OTHERS => ignore	Wait_Outp
23	Check_C-LS	/CheckC-LS () == VALID => // NOTE O_Buffer is either new or old (in case of errors)	Wait_To

#	Current State	Event /Condition =>Action	Next State
24	Check_C-LS	/CheckC-LS () == INVALID => O_Buffer := substitute value IssueAlarm (IsochroneModeAlarm, OutputTimeFailure, Fault)	Wait_To
25	Wait_To	TimerExpired (To) => SYNCH_OUT	Wait_Sync
26	Wait_To	Local New Output_ind () /wrong_output_upd < limit => wrong_output_upd:= wrong_output_upd+n // NOTE output sequence error; not issued since below limit	Wait_To
27	Wait_To	Local New Output_ind () /wrong_output_upd >= limit => // NOTE Sequence Error is issued, since output sequence errors are above limit IssueAlarm (IsochroneModeAlarm, OutputTimeFailure, Fault)	Wait_To
28	Wait_To	OTHERS => ignore	Wait_To
29	any_state	Stop_O.ind =>	Wait_Start

7.3.2.4.5.3.3.5 Functions, Macros, Timers and Variables

Table 239 contains the functions, macros, timers and variables used by ISOM_OUT state machine and their arguments and descriptions.

Table 239 – Functions, Macros, Timers and Variables used by the ISOM_OUT

Name	Type	Function/Meaning
To	Timer	Timer to control the takeover of the data by the application.
To_valid	Timer	Timer to control the data being available from the communication.
SYNCH_OUT	Function	Pass the Output Buffer to the Output User Data
CheckC-LS	Function	Checks the controller life sign according to IEC 61800-7-203 6.3.12 "User data reliability". VALID and INVALID indicates the validity of the life sign according to the rules described there. If the use of the controller life sign is not intended by the submodule, VALID is returned always.
IssueAlarm	Function	The local diagnosis is updated to the current state and a change of the state is issued as alarm. The alarm confirmation is handled internally by the function. If there is a congestion of alarms, alarms will not be sent if they nullify each other.
StartTimer	Function	Starts a timer
TimerExpired	Function	Indication of a timer's expiration

7.3.2.4.5.3.4 ISOM_IN

7.3.2.4.5.3.4.1 Primitive definitions

7.3.2.4.5.3.4.1.1 Primitives exchanged between remote machines

The service primitives including their associated parameters issued or received by ISOM_IN state machine are described in the service definition and shown in Table 240.

Table 240 – Remote primitives issued or received for ISOM_IN

Primitive	Source	Destination	Associated parameters	Functions
—	—	—	—	—

7.3.2.4.5.3.4.1.2 Primitives exchanged between local machines

The local service primitives including their associated parameters issued or received by ISOM_IN state machine are described in the service definition and shown in Table 241.

Table 241 – Local primitives issued or received for ISOM_IN

Primitive	Source	Destination	Associated parameters	Functions
Local Set Input_cnf ()	FAL	ISOM_IN	see 7.3.1.4.5.1	Confirms Set_Input request
Local Set Input_req	ISOM_IN	FAL	see 7.3.1.4.5.1	Passes application input data to FAL
Start_I.ind	ISOM_SYNC	ISOM_IN	—	Start Input Data processing
Stop_I.ind	ISOM_SYNC	ISOM_IN	—	Stop Input Data processing
SYNCH_I.ind	ISOM_SYNC	ISOM_IN	Status	Trigger Signal for Input Data Processing

7.3.2.4.5.3.4.2 State transition diagram

Figure 57 shows the State transition diagram of the ISOM_IN state machine.

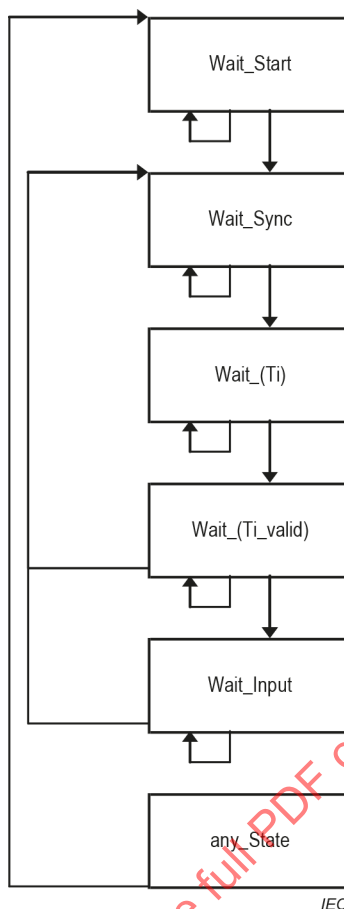


Figure 57 – State transition diagram ISOM_IN

States of the ISOM_IN state machine

Wait_Start	Waits for the start of the state machine.
Wait_Sync	Waits for the PLL being sync.
Wait_(Ti)	Waits for the expiration of the Ti timer.
Wait_(Ti_valid)	Waits for the expiration of the Ti_valid timer.
Wait_Input	Waits for the return of the Set_input request.
any_State	Any state of the above.

7.3.2.4.5.3.4.3 State machine description

This state machine drives the input of a particular isochronous submodule according to the SYNCH signal as being provided by the ISOM_SYNC state machine and according to the T_IO_InputValid and T_IO_Input times as being configured by the IsoM data record.

The state machine issues alarms, whenever the inputs are not being ready for transmission in time (i.e. after T_IO_InputValid).

7.3.2.4.5.3.4.4 State table

Table 242 shows the states of an ISOM_IN state machine.

Table 242 – State table ISOM_IN

#	Current State	Event /Condition =>Action	Next State
1	Wait_Start	Start_I.ind => SLS:=0 ALARM_PENDING := FALSE wrong_input_upd:=0	Wait_Sync
2	Wait_Start	OTHERS => ignore	Wait_Start
3	Wait_Sync	SYNCH_I.ind(Output_State) => StartTimer (Ti) StartTimer (Ti_valid) Store Output_State	Wait_(Ti)
4	Wait_Sync	OTHERS => ignore	Wait_Sync
5	Wait_(Ti)	TimerExpired (Ti) => SYNCH_IN // NOTE Fills the I_Buffer from the application	Wait_(Ti_valid)
6	Wait_(Ti)	OTHERS => ignore	Wait_(Ti)
7	Wait_(Ti_valid)	TimerExpired (Ti_valid) /CheckLS () == VALID && I_Buffer != NIL => Input_Data:= I_Buffer inc_LS(SLS) Input_Data.SLS:= SLS if (wrong_input_upd>0) wrong_input_upd= wrong_input_upd-1 if (wrong_input_upd==0) State := NoFault else State := Fault Local Set Input.req () IssueAlarm (IsochroneModeAlarm, InputTimeFailure, State)	Wait_Input
8	Wait_(Ti_valid)	TimerExpired (Ti_valid) /CheckLS () == INVALID && I_Buffer != NIL => Input_Data:= I_Buffer SLS := 0 Input_Data.SLS:= SLS if (wrong_input_upd>0) wrong_input_upd= wrong_input_upd-1 if (wrong_input_upd==0) State := NoFault else State := Fault Local Set Input.req () IssueAlarm (IsochroneModeAlarm, InputTimeFailure, State)	Wait_Input

#	Current State	Event /Condition =>Action	Next State
9	Wait_(Ti_valid)	TimerExpired (Ti_valid) /CheckLS () == NONE && I_Buffer != NIL => Input_Data:= I_Buffer if (wrong_input_upd>0) wrong_input_upd= wrong_input_upd-1 if (wrong_input_upd==0) State := NoFault else State := Fault Local Set Input.req () IssueAlarm (IsochroneModeAlarm, InputTimeFailure, State)	Wait_Input
10	Wait_(Ti_valid)	TimerExpired (Ti_valid) /I_Buffer == NIL && wrong_input_upd >= limit // NOTE Application didn't return buffer and input sequence errors above limit => IssueAlarm (IsochroneModeAlarm, InputTimeFailure, Fault)	Wait_Sync
11	Wait_(Ti_valid)	TimerExpired (Ti_valid) /I_Buffer == NIL && wrong_input_upd < limit => wrong_input_upd= wrong_input_upd+n	Wait_Sync
12	Wait_(Ti_valid)	OTHERS => ignore	Wait_(Ti_valid)
13	Wait_Input	Local Set Input.cnf () =>	Wait_Sync
14	Wait_Input	OTHERS => ignore	Wait_Input
15	any_State	Stop_I.ind =>	Wait_Start

7.3.2.4.5.3.4.5 Functions, Macros, Timers and Variables

Table 243 contains the functions, macros, timers and variables used by ISOM_IN state machine and their arguments and descriptions.

Table 243 – Functions, Macros, Timers and Variables used by the ISOM_IN

Name	Type	Function/Meaning
Ti	Timer	Timer to control the takeover of the data from the application.
Ti_valid	Timer	Timer to control the data being available for the communication.
SYNCH_IN	Function	Samples and collects the Values of the Input User Data
IssueAlarm	Function	The local diagnosis is updated to the current state and a change of the state is issued as alarm. The alarm confirmation is handled internally by the function. If there is a congestion of alarms, alarms will not be sent if they nullify each other.
StartTimer	Function	Starts a timer
TimerExpired	Function	Indication of a timer's expiration
SLS	Variable	Submodule Life Sign

7.3.2.5 Observer class

7.3.2.5.1 Overview

Observers are the modeled source of diagnostic information and are defined by this document or are defined vendor specific.

Every observer is assigned to a submodule. Thus, the lifetime of the observer is bound to the submodule lifetime.

Every check entity or state written to a submodule activates one or more observers at the addressed submodule. If the check entity or state is removed, those observers will be deactivated too.

The task of an observer is to compare the operational data (real object) with the data of the check entity or state. Differences between them shall be added with a defined diagnosis information to the Diagnosis ASE. Once there is no difference, this diagnostic information shall be removed from the Diagnosis ASE.

Record configured check, e.g. PD Port Data Check:

The real remote system data (real object) of the peer connected to a port is retrieved by LLDP requests. After reception of the LLDP indication the difference to the expected peer data shall be checked.

There are also observers which are not bound to a check record. Those observers are activated by writing of certain properties or through the existence of a submodule.

System specific check, e.g. Multiple interface mismatch:

If the IO device has multiple interfaces assigned to multiple end station components and the IP address (real object) is set, then the multiple interfaces are checked for the unambiguous IP address range.

Figure 58 shows the working principle of the observers. Figure 63 shows the embedding of the observers to the diagnosis base model.

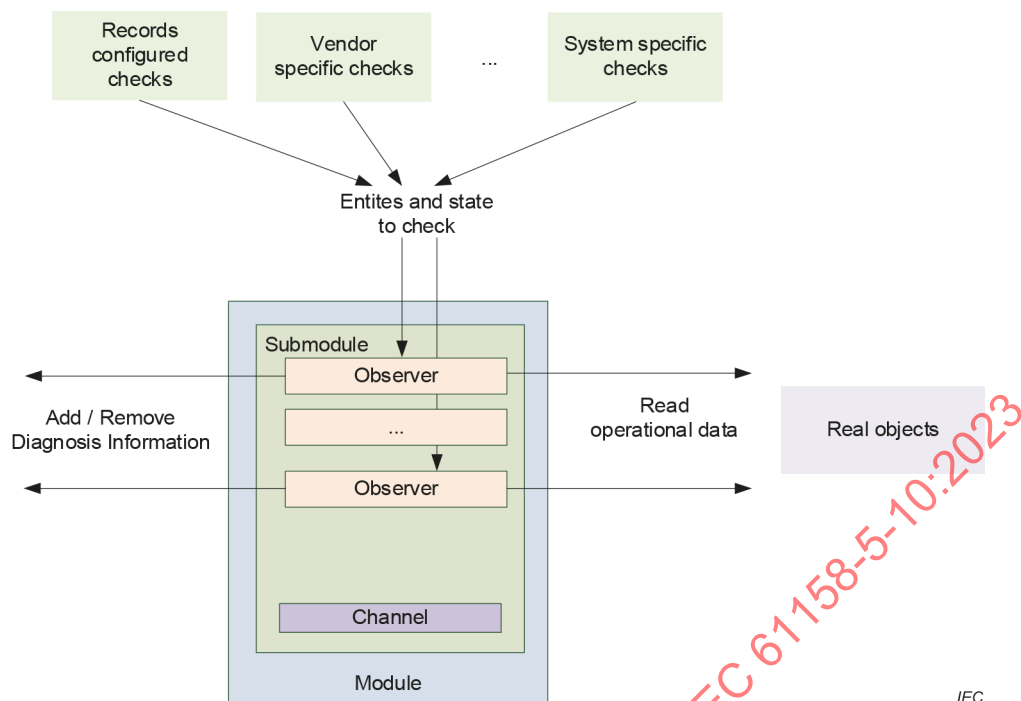


Figure 58 – Observer working principle

7.3.2.5.2 Relations

The services bound to other services as shown in Table 244:

Table 244 – Observer service binding

Service	Binding	Usage for Channel Error Type
Write Isochronous Mode Data	AR:Record Data:Write	IsochronousMode mismatch
Write PD Interface MRP Data Check	AR:Record Data:Write	Remote mismatch Media redundancy mismatch – ring
Write PD IR Data	AR:Record Data:Write	Remote mismatch Media redundancy with planned duplication mismatch
Write PD IR Subframe Data	AR:Record Data:Write	Dynamic Frame Packing function mismatch
Write PD NC Data Check	AR:Record Data:Write	Network component function mismatch
Write PD Port Data Check	AR:Record Data:Write	Data transmission impossible Remote mismatch
Write PD Port FO Data Check	AR:Record Data:Write	Fiber optic mismatch
Write PD Port MRPIC Data Adjust	AR:Record Data:Write	Media redundancy mismatch – interconnection
Write PD Port MRPIC Data Check	AR:Record Data:Write	Remote mismatch
Write PD Sync Data	AR:Record Data:Write	Sync mismatch
Contains Multicast Consumer Data	AR:Connect	Multicast CR mismatch
Set IP Parameter	DCP:Set	Multiple interface mismatch

7.3.2.5.3 Template

The Observer object is described by the following template:

ASE: Real Identification ASE

CLASS: Observer

CLASS ID: not used

PARENT CLASS: TOP

ATTRIBUTES:

1	(m)	Key Attribute: Implicit
2	(m)	Attribute: List of Submodules
2.1	(m)	Attribute: API
2.2	(m)	Attribute: Slot Number
2.3	(m)	Attribute: Subslot Number
2.4	(o)	Attribute: List of Observers
2.4.1	(m)	Attribute: Observer ID
2.4.1.1	(m)	Attribute: Channel Number
2.4.1.2	(m)	Attribute: Channel Properties
2.4.1.3	(m)	Attribute: Channel Error type
2.4.2	(o)	Attribute: Ext Channel Error type
2.4.3	(o)	Attribute: Ext Channel Add Values
2.4.4	(m)	Attribute: List of Observer records
2.4.2.1	(m)	Attribute: Expected Data
2.4.2.2	(o)	Attribute: Real Data

SERVICES:

1	(m)	OpsService: Write Isochronous Mode Data
2	(m)	OpsService: Write PD Interface MRP Data Check
3	(m)	OpsService: Write PD IR Data
4	(m)	OpsService: Write PD IR Subframe Data
5	(m)	OpsService: Write PD NC Data Check
6	(m)	OpsService: Write PD Port Data Check
7	(m)	OpsService: Write PD Port FO Data Check
8	(m)	OpsService: Write PD Port MRPIC Data Adjust
9	(m)	OpsService: Write PD Port MRPIC Data Check
10	(m)	OpsService: Write PD Sync Data
11	(m)	OpsService: Connect MCR Data
12	(m)	OpsService: DCP Set IP Parameter

7.3.2.5.4 Attributes

Implicit

The key attribute Implicit indicates that the Diagnosis object is implicitly addressed by the services.

List of Submodules

This attribute contains the activated observers.

A list element consists of the following attributes:

API

This attribute defines the number of the application process the submodule having diagnosis is assigned to.

Attribute type: Unsigned32

Allowed values: 0 to 0xFFFFFFFF

Slot Number

This attribute defines the slot the submodule is assigned to.

Attribute type: Unsigned16

Allowed values: 0 to 0x7FFF

Subslot Number

This attribute defines the subslot the submodule is assigned to.

Attribute type: Unsigned16

Allowed values: 0 to 0x9FFF

List of Observers

This attribute contains all observers associated to this submodule. A list element consists of the following attributes.

Observer ID

This attribute identifies an observer and consists of the following attributes.

Channel Number

This attribute defines the channel number as a local identifier as defined in 7.3.4.2.4.

The attributes API, Slot Number, Subslot Number, Channel Number, Direction, and Accumulative specify the source of the diagnosis.

Channel Properties

This attribute defines additional local identification attributes as defined in 7.3.4.2.4.

Channel Error type

This optional attribute indicates the error type of the Channel Related Diagnosis as defined in 7.3.4.2.4.

Ext Channel Error type

This optional attribute depends on the attribute Channel Error type and indicates an extended error type, where applicable, as defined in 7.3.4.2.4.

Ext Channel Add Value

This optional attribute contains an additional value to further specify the extended channel error as defined in 7.3.4.2.4.

List of Observer records

This attribute contains all check and real record associated to this observer. A list element consists of the following attributes.

Expected Data

This attribute contains the expected data record for the observer.

Attribute type: see 7.3.1.7.

Real Data

This attribute contains the real data record that corresponds to the type of check data.

Attribute type: see 7.3.1.7.

7.3.2.5.5 Services**7.3.2.5.5.1 Write Isochronous Mode Data**

This service allows writing Isochronous Mode Data using a record data object. For parameter structure and the meaning of the parameters, see 7.3.2.4.4.1.

7.3.2.5.5.2 Write PD Interface MRP Data Check

This service allows writing PD Interface MRP Data Check using a record data object. For parameter structure and the meaning of the parameters, see 7.3.3.9.5.2.

7.3.2.5.5.3 Write PD IR Data

This service allows writing PD IR Data using a record data object. For parameter structure and the meaning of the parameters, see 7.3.3.7.5.1.

7.3.2.5.5.4 Write PD IR Subframe Data

This service allows writing PD IR Subframe Data using a record data object. For parameter structure and the meaning of the parameters, see 7.3.3.7.5.3.

7.3.2.5.5.5 Write PD NC Data Check

This service allows writing PD NC Data Check using a record data object. For parameter structure and the meaning of the parameters, see 7.3.3.3.5.9.

7.3.2.5.5.6 Write PD Port Data Check

This service allows writing PD Port Data Check using a record data object. For parameter structure and the meaning of the parameters, see 7.3.3.3.5.14.

7.3.2.5.5.7 Write PD Port FO Data Check

This service allows writing PD Port FO Data Check using a record data object. For parameter structure and the meaning of the parameters, see 7.3.3.3.5.19.

7.3.2.5.5.8 Write PD Port MRPIC Data Adjust

This service allows writing PD Port MRPIC Data Adjust using a record data object. For parameter structure and the meaning of the parameters, see 7.3.3.9.5.12.

7.3.2.5.5.9 Write PD Port MRPIC Data Check

This service allows writing PD Port MRPIC Data Check using a record data object. For parameter structure and the meaning of the parameters, see 7.3.3.9.5.10.

7.3.2.5.5.10 Write PD Sync Data

This service allows writing PD Sync Data using a record data object. For parameter structure and the meaning of the parameters, see 7.3.3.10.5.1.

7.3.2.5.5.11 Connect MCR Data

This service allows the transfer of the List of Multicast CR Blocks from the Connect service. For parameter structure and the meaning of the parameters, see 7.3.1.3.5.1.

7.3.2.5.5.12 DCP Set IP Parameter

This service allows the transfer of the IP Option / IP Parameter from the DCP Set service. For parameter structure and the meaning of the parameters, see 6.3.11.3.2.

7.3.2.5.6 Behavior

Every activated observer instance uses the CIM ASE to read the associated Real Data.

Annex F shows all preconditions for the observer diagnosis.

7.3.3 CIM ASE

7.3.3.1 Overview

The Communication Interface Management ASE (CIM ASE) manages interface, end station and bridge components, and ports, i.e., the network access. It represents the station's local database for the physical device, middleware, and application as shown in Figure 3, Figure 4 and Annex A.

The physical device, covering end station and bridged end station, consists of managed objects that are “held” in the communication interface management ASE. The ASE is thus the station's local database for the managed objects related to the CIM.

The managed objects can be observed by remote management and, in some cases, modified, providing remote access to them. There are several remote access protocols and their associated addressing schemes that allow access.

Managed objects stored in the station's local database can also be monitored or modified by protocol state machines. Examples are LLDP, PTCP, IEEE 802.1AS and MRP.

Managed objects are classified according to their usage:

- Related to end station component or bridge component configuration
- Related to real-time configuration
 - Stream configuration and establishment
 - RT_CLASS_3 configuration and establishment

The managed objects classified as being for network configuration allow to setup the device for usage within a network. These objects include settings e.g., for VLAN, domains (for example TSN, PTCP, IEEE Std 802.1AS) and their boundaries, topology, sync master/slave for working clock or time, sync tree, loop breaker protocols (e.g. MRP), port settings (like MAU type, TSN shapers to use), and so on.

The managed objects referenced by this ASE are divided into three types of information:

- Adjust data (administrative data expressing the expected behavior or working mode)
- Real data (operational data expressing the real behavior or working mode), and
- Check data (administrative data for observer configuration initiating the report of diagnosis).

This ASE offers different views or datastores to the managed objects:

- Startup:
 - Read only,
 - Contains the persistent stored administrative data.
- Running:
 - Read only,
 - Contains the administrative data expressing the expected behavior or working mode.
- Operational:
 - Read only,
 - Contains the operational data expressing the real behavior or working mode,
 - Contains the administrative data expressing the expected behavior or working mode.
- Factory default:
 - Read only,

- Contains the factory default for administrative data expressing the expected behavior or working mode.
- Candidate:
 - Read and write,
 - Created on request and initially contains a copy of the requested source view,
 - Contains the new administrative data expressing the expected behavior or working mode,
 - Content is copied into Running and Startup after successful validation.

In Bridge Mode IEEE Std 802.1Q the objects include the settings e.g., for streams, for Bridge Mode RT_CLASS_3 the settings for isochronous communication.

A rough division of the managed objects.

- The managed objects defined in the ASEs related to the CIM ASE and the classes defined within this ASE (except the IEEE Std 802.1Q class) belong to bridge configuration.
- The managed objects defined in the IEEE Std 802.1Q class (see 7.3.3.4) belong to real-time configuration.

The CIM ASE is split into different classes:

- Communication interface management class: manages the following classes
- PTCP class: managing the working clock in case of Bridge Mode set to RT_CLASS_3
- IEEE Std 802.1AS class: managing synchronization of time and working clock. The latter in case when the Bridge Mode is set to IEEE Std 802.1Q.
- IEEE Std 802.1Q class: managing the interface aspect of real-time communication, i.e. configuration of TSN streams or RT_CLASS_3
- IEEE Std 802.1AB class: Link Layer Discovery Protocol
- IEEE Std 802.3 class: medium access
- Media redundancy class: managing loop freeness for non-real time communication.
- MIB class: managing the addressing schemas for SNMP
- YANG class: managing the addressing schemas for NETCONF

Figure 59 shows the interaction between end station and bridge component, and CIM. CIM ASE implements the interface from the middleware to the referenced classes. Accessing the attributes defined by the YANG models is another way to access the referenced classes.

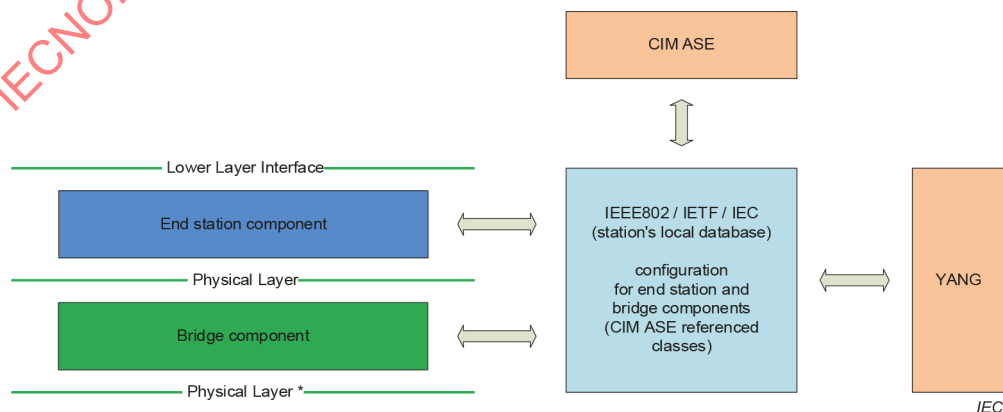


Figure 59 – CIM overview

7.3.3.2 Relations

The CIM ASE is related to the following ASEs specified in the common services (see 6.3):

- Domain Name Service ASE
- Simple network management ASE
- NETCONF ASE
- NETCONF event ASE
- IP suite ASE
- Discovery and basic configuration ASE
- Dynamic host configuration ASE
- IEEE Std 802.1AB ASE
- Media redundancy ASE
- Precision time control ASE
- IEEE Std 802.1Q ASE
- IEEE Std 802.1CB ASE
- Fragmentation ASE
- IEEE Std 802.3 ASE
- Common DL mapping ASE

7.3.3.3 Communication Interface Management class

7.3.3.3.1 Overview

Figure 60 shows the structuring of the CIM class data into three different areas:

- Observer data, used to configure observers needed for end station or bridge component diagnostics,
- Administrative data, used to configure end station and bridge components,
- Operational data, reporting the real configuration and status of end station and bridge components.

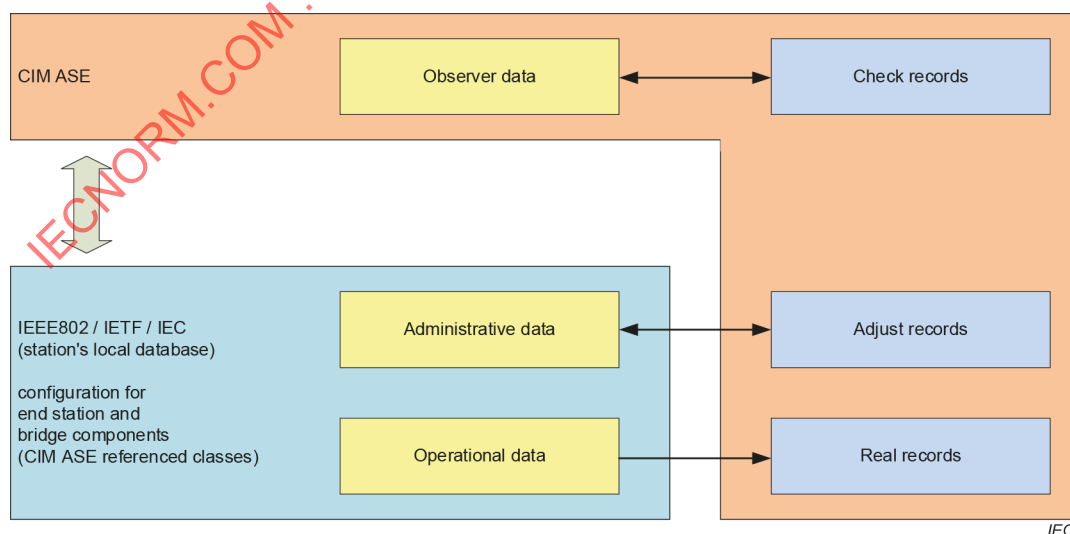


Figure 60 – CIM class principle

The CIM ASE represents end station components, bridge components and ports as API, slot and subslot. It is the responsibility of CIM ASE to translate this addressing information into the IEEE 802.1Q and IETF addressing scheme based on names.

7.3.3.3.2 Relations

The services are bound to other services as shown in Table 245:

Table 245 – Binding Communication Interface Management services

Service	Binding	Usage
Read PDev Data	AR:Record Data:Read	Used by IO controller or IO supervisor
Read PD Real Data	AR:Record Data:Read	Used by IO controller or IO supervisor
Read PD Expected Data	AR:Record Data:Read	Used by IO controller or IO supervisor
Read PD Interface Data Real	AR:Record Data:Read	Used by IO controller or IO supervisor
Write PD Interface Adjust	AR:Record Data:Write	Used by IO controller or IO supervisor
Read PD Interface Adjust	AR:Record Data:Read	Used by IO controller or IO supervisor
Write PD Interface FSU Data Adjust	AR:Record Data:Write	Used by IO controller or IO supervisor
Read PD Interface FSU Data Adjust	AR:Record Data:Read	Used by IO controller or IO supervisor
Write PD NC Data Check	AR:Record Data:Write	Used by IO controller or IO supervisor
Read PD NC Data Check	AR:Record Data:Read	Used by IO controller or IO supervisor
Read PD Port Data Real	AR:Record Data:Read	Used by IO controller or IO supervisor
Write PD Port Data Check	AR:Record Data:Write	Used by IO controller or IO supervisor
Read PD Port Data Check	AR:Record Data:Read	Used by IO controller or IO supervisor
Write PD Port Data Adjust	AR:Record Data:Write	Used by IO controller or IO supervisor
Read PD Port Data Adjust	AR:Record Data:Read	Used by IO controller or IO supervisor
Read PD Port FO Data Real	AR:Record Data:Read	Used by IO controller or IO supervisor
Write PD Port FO Data Check	AR:Record Data:Write	Used by IO controller or IO supervisor
Read PD Port FO Data Check	AR:Record Data:Read	Used by IO controller or IO supervisor
Write PD Port FO Data Adjust	AR:Record Data:Write	Used by IO controller or IO supervisor
Read PD Port FO Data Adjust	AR:Record Data:Read	Used by IO controller or IO supervisor
Read PD Port Statistic	AR:Record Data:Read	Used by IO controller or IO supervisor
Write CIM SNMP Adjust	AR:Record Data:Write	Used by IO controller or IO supervisor
Read CIM SNMP Adjust	AR:Record Data:Read	Used by IO controller or IO supervisor
Write PD Port SFP Data Check	AR:Record Data:Write	Used by IO controller or IO supervisor
Read PD Port SFP Data Check	AR:Record Data:Read	Used by IO controller or IO supervisor

7.3.3.3.3 Template

A Communication Interface Management object is described by the following template:

ASE: Communication Interface Management ASE
CLASS: Communication Interface Management
CLASS ID: not used
PARENT CLASS: IEEE Std 802.3, IEEE Std 802.1AB, IP suite, DNS, DHCP, DCP
ATTRIBUTES:

- 1 (m) Key Attribute: Implicit
- 2 (m) Attribute: List of Interfaces
- 2.1 (m) Attribute: API
- 2.2 (m) Attribute: Slot Number
- 2.3 (m) Attribute: Subslot Number
- 2.4 (m) Attribute: PD Interface Data Real
- 2.4.1 (m) Attribute: Chassis ID

2.4.2	(m) Attribute:	MAC Address
2.4.3	(m) Attribute:	IP Parameter Value
2.4.3.1	(m) Attribute:	IP Address
2.4.3.2	(m) Attribute:	Subnet Mask
2.4.3.3	(m) Attribute:	Standard Gateway
2.5	(m) Attribute:	PD Interface Data Adjust
2.5.1	(m) Attribute:	Multiple Interface Mode
2.6	(o) Attribute:	PD Interface FSU Data Adjust
2.6.1	(o) Attribute:	FS Hello Block
2.6.1.1	(m) Attribute:	FS Hello Mode
2.6.1.2	(m) Attribute:	FS Hello Interval
2.6.1.3	(m) Attribute:	FS Hello Retry
2.6.1.4	(m) Attribute:	FS Hello Delay
2.6.2	(o) Attribute:	Fast Startup Block
2.6.2.1	(m) Attribute:	Data
2.7	(o) Attribute:	PD NC Data Check
2.7.1	(m) Attribute:	Maintenance Demanded Drop Budget
2.7.2	(m) Attribute:	Maintenance Required Drop Budget
2.7.3	(m) Attribute:	Error Drop Budget
2.8	(m) Attribute:	List of Ports
2.8.1	(m) Attribute:	API
2.8.2	(m) Attribute:	Slot Number
2.8.3	(m) Attribute:	Subslot Number
2.8.4	(m) Attribute:	Media Type
2.8.5	(m) Attribute:	Fiber Optic type
2.8.6	(m) Attribute:	Fiber Optic Cable type
2.8.7	(o) Attribute:	Fiber Optic Manufacturer Specific
2.8.7.1	(m) Attribute:	Vendor ID
2.8.7.2	(m) Attribute:	Manufacturer Specific Fiber Optic Data
2.8.8	(o) Attribute:	Fiber Optic Power Budget Real
2.8.9	(o) Attribute:	Fiber Optic Power Budget Check
2.8.9.1	(m) Attribute:	Maintenance Demanded Power Budget
2.8.9.2	(m) Attribute:	Maintenance Required Power Budget
2.8.9.3	(m) Attribute:	Error Power Budget
2.8.10	(m) Attribute:	Preamble Length
2.8.11	(m) Attribute:	Domain Boundary
2.8.11.1	(m) Attribute:	Ingress
2.8.11.2	(m) Attribute:	Egress
2.8.12	(m) Attribute:	Multicast Boundary
2.8.13	(m) Attribute:	Peer To Peer Boundary
2.8.13.1	(m) Attribute:	LLDP
2.8.13.2	(m) Attribute:	PTCP
2.8.13.3	(m) Attribute:	Time
2.8.14	(m) Attribute:	DCP Boundary
2.8.15	(o) Attribute:	PD Port Data Real
2.8.15.1	(m) Attribute:	Own Port Name
2.8.15.2	(m) Attribute:	Line Delay
2.8.15.3	(m) Attribute:	MAU Type
2.8.15.4	(o) Attribute:	MAU Type Extension
2.8.15.5	(m) Attribute:	Link State
2.8.15.6	(m) Attribute:	RTClass3_PortStatus
2.8.15.7	(m) Attribute:	Number Of Peers
2.8.15.8	(m) Attribute:	List of Peers

2.8.15.8.1	(m) Attribute:	Peer Port Name
2.8.15.8.2	(m) Attribute:	Peer Station Name
2.8.15.8.3	(m) Attribute:	Line Delay
2.8.15.8.4	(m) Attribute:	Peer MAC Address
2.8.16	(o) Attribute:	PD Port SFP Data Check
2.8.16.1	(m) Attribute:	MaintenanceDemanded AdminStatus
2.8.16.2	(m) Attribute:	Error AdminStatus
2.9	(m) Attribute:	List of Real Records
2.10	(m) Attribute:	List of Adjust Records
2.11	(m) Attribute:	List of Check Records
3	(m) Attribute:	CIM SNMP Adjust
3.1	(m) Attribute:	SNMP Control
3.2	(m) Attribute:	ReadOnly CommunityName
3.3	(m) Attribute:	ReadWrite CommunityName
4	(m) Attribute:	CIM Electric PowerReal
4.1	(m) Attribute:	EP DeviceData
4.2	(m) Attribute:	List of Ports
4.2.1	(m) Attribute:	EP PortData

SERVICES:

1	(o) OpsService:	Read PDev Data
2	(m) OpsService:	Read PD Real Data
3	(m) OpsService:	Read PD Expected Data
4	(m) OpsService:	Read PD Interface Data Real
5	(m) OpsService:	Write PD Interface Adjust
6	(m) OpsService:	Read PD Interface Adjust
7	(o) OpsService:	Write PD Interface FSU Data Adjust
8	(o) OpsService:	Read PD Interface FSU Data Adjust
9	(o) OpsService:	Write PD NC Data Check
10	(o) OpsService:	Read PD NC Data Check
11	(m) OpsService:	Read PD Port Statistic
12	(m) OpsService:	Read PD Port Data Real
13	(m) OpsService:	Read PD Port Data Real Extended
14	(m) OpsService:	Write PD Port Data Check
15	(m) OpsService:	Read PD Port Data Check
16	(m) OpsService:	Write PD Port Data Adjust
17	(m) OpsService:	Read PD Port Data Adjust
18	(o) OpsService:	Read PD Port FO Data Real
19	(o) OpsService:	Write PD Port FO Data Check
20	(o) OpsService:	Read PD Port FO Data Check
21	(o) OpsService:	Write PD Port FO Data Adjust
22	(o) OpsService:	Read PD Port FO Data Adjust
23	(o) OpsService:	Write PD Port SFP Data Check
24	(o) OpsService:	Read PD Port SFP Data Check
25	(o) OpsService:	Read PD RSI Instances
26	(o) OpsService:	Write CIM SNMP Adjust
27	(o) OpsService:	Read CIM SNMP Adjust
28	(o) OpsService:	Read CIM Electric PowerReal
29	(o) OpsService:	CIM Create Candidate
30	(o) OpsService:	CIM Write
31	(o) OpsService:	CIM Read
32	(o) OpsService:	CIM Check Candidate
33	(o) OpsService:	CIM Check And Write Candidate

7.3.3.3.4 Attributes

Implicit

The key attribute Implicit indicates that the Communication Interface Management object is implicitly addressed by the service.

List of Interfaces

This attribute list lists all interfaces related to the Communication Interface Management object. It contains the following attributes:

API

This attribute contains the API containing the interface submodule.

The interface submodule is always assigned to the default API.

Attribute type: Unsigned32

Allowed values: 0x00000000

Slot Number

This attribute contains the slot number of the module containing the interface submodule.

Attribute type: Unsigned16

Allowed values: 0x0000 to 0x7FFF

Subslot Number

This attribute contains the subslot number of the interface.

Attribute type: Unsigned16

Allowed Values shall be used according to Table 246.

Table 246 – Subslot number for interface submodules

Value (hexadecimal)	Meaning
0x8i00	Interface Submodule i + 1 0x0 ≤ i ≤ 0xF
0x9i00	Special case system redundancy R1/R2: Interface Submodule i + 1 on right or down delivering endnode 0x0 ≤ i ≤ 0xF
0xA00i	Used for addressing bridge components. (0 ≤ i ≤ F; shall correspond to the subslot number of the related interface submodule)

PD Interface Data Real

This attribute contains the following attributes:

Chassis ID

This attribute contains the Chassis ID according to the IEEE Std 802.1AB ASE.

Attribute type: VisibleString[240]

MAC Address

This attribute contains the value of the IEEE Std 802.3 MAC address of the interface.

Attribute type: OctetString[6]

IP Parameter Value

This parameter consists of the following elements:

IP Address

This attribute contains the current IP address of the interface according to IETF RFC 791.

Attribute type: Unsigned32

Subnet Mask

This attribute contains the current subnet mask according to IETF RFC 791.

Attribute type: Unsigned32

Standard Gateway

This attribute contains the current IP address of the standard gateway according to IETF RFC 791.

Attribute type: Unsigned32

PD Interface Data Adjust

This attribute contains the following attributes:

Multiple Interface Mode

This attribute contains the Multiple Interface Mode according to the IEEE Std 802.1AB ASE.

PD Interface FSU Data Adjust

This optional attribute contains the following attributes to control the interface's fast startup behavior:

FS Hello Block

This optional attribute contains the following attributes to control the DCP Hello service:

FS Hello Mode

This attribute contains the currently active model to convey the Hello service of the DCP ASE.

Attribute type: Unsigned32

Allowed values: OFF, ON_LINKUP, ON_LINKUP_AFTER_DELAY

Default value: OFF

FS Hello Interval

This attribute contains the interval between retries of the Hello service request.

Attribute type: Unsigned32

Allowed values: 30_MILLISECONDS, 50_MILLISECONDS, 100_MILLISECONDS, 300_MILLISECONDS, 500_MILLISECONDS, 1_SECOND

Default value: 30_MILLISECONDS

FS Hello Retry

This attribute contains the number of retries for the Hello request service.

Attribute type: Unsigned32

Allowed values: 1 to 15

Default value: 3

FS Hello Delay

This attribute contains the initial delay for the first Hello service request. The value is valid only if the attribute DCP Hello Mode is set to ON_LINKUP_AFTER_DELAY.

Attribute type: Unsigned32

Allowed values: NO_DELAY, 50_MILLISECONDS, 100_MILLISECONDS, 500_MILLISECONDS, 1_SECOND

Default value: NO_DELAY

Fast Startup Block

This optional attribute contains the following attributes:

Data

This attribute contains manufacturer specific fast startup data.

Attribute type: OctetString

PD NC Data Check

This optional attribute contains the following attributes:

Maintenance Demanded Drop Budget

This attribute contains the number of dropped frames that is accepted per second. If the number of dropped frames on a port per second exceeds this value, a Maintenance Demanded message is generated. The maintenance message can be deactivated.

Attribute type: Unsigned32

Allowed values: DISABLED, Maintenance Demanded Drop Budget

Maintenance Required Drop Budget

This attribute contains the number of dropped frames that is accepted per second. If the number of dropped frames on a port per second exceeds this value, a Maintenance Required message is generated. The maintenance message can be deactivated.

Attribute type: Unsigned32

Allowed values: DISABLED, Maintenance Required Drop Budget

Error Drop Budget

This attribute contains the number of dropped frames that is accepted per second. If the number of dropped frames on a port per second exceeds this value, a Diagnosis message is generated. The diagnosis message can be deactivated.

Attribute type: Unsigned32

Allowed values: DISABLED, Error Drop Budget

List of Ports

This attribute list lists all ports related to the interface. It contains the following attributes:

API

This attribute contains the API containing the port submodule.

The port submodule is always assigned to the default API.

Attribute type: Unsigned32

Allowed values: 0x00000000

Slot Number

This attribute contains the slot number of the module containing the port submodule.

Attribute type: Unsigned16

Allowed values: 0x0000 to 0x7FFF

Subslot Number

This attribute contains the subslot number of the local port.

Attribute type: Unsigned16

Allowed Values shall be used according to Table 247. The value for the parameter “i” in Table 247 shall correspond with the related interface submodule. Each interface may contain up to 255 ports.

The related interface module may be placed in a different slot.

Table 247 – Subslot number for port submodules

Value (hexadecimal)	Meaning
0x8i01	First Port Submodule ($0 \leq i \leq F$; shall correspond to the subslot number of the related interface submodule)
0x8i02	Port Submodule 2 ($0 \leq i \leq F$; shall correspond to the subslot number of the related interface submodule)
0x8i03	Port Submodule 3 ($0 \leq i \leq F$; shall correspond to the subslot number of the related interface submodule)
...	...
0x8iFF	Port Submodule 255 ($0 \leq i \leq F$; shall correspond to the subslot number of the related interface submodule)
0x9i01	Special case system redundancy and R devices: First Port Submodule ($0 \leq i \leq F$; shall correspond to the subslot number of the related interface submodule)
0x9i02	Special case system redundancy and R devices: Port Submodule 2 ($0 \leq i \leq F$; shall correspond to the subslot number of the related interface submodule)
...	...
0x9iFF	Special case system redundancy and R devices: Port Submodule 255 ($0 \leq i \leq F$; shall correspond to the subslot number of the related interface submodule)
0xA02i	Used for addressing bridge component ports. ($0 \leq i \leq F$; shall correspond to the subslot number of the related interface submodule)
0xA04i	Used for addressing end station component ports. ($0 \leq i \leq F$; shall correspond to the subslot number of the related interface submodule)

Media Type

This attribute contains the media type of the local port.

Attribute type: Unsigned16

Allowed values: UNKNOWN, COPPER_CABLE, FIBER_OPTIC_CABLE, RADIO_COMMUNICATION

Fiber Optic type

This attribute is present only if the port's Media Type attribute is equal to FIBER_OPTIC_CABLE. It contains the type of the fiber optic media connected to the port. The value is present only if the value is written previously by the service Write PD Port FO Data Adjust.

Attribute type: Unsigned32

Allowed Values shall be used according to IEC 61158-6-10.

Fiber Optic Cable type

This attribute is present only if the port's Media Type attribute is equal to FIBER_OPTIC_CABLE. It contains the type of the fiber optic cable connected to the port. The value is present only if the value is written previously by the service Write PD Port FO Data Adjust.

Attribute type: Unsigned32

Allowed Values shall be used according to IEC 61158-6-10.

Fiber Optic Manufacturer Specific

This optional attribute is present only if the port's Media Type attribute is equal to FIBER_OPTIC_CABLE and if the vendor supports vendor specific fiber optic data. This attribute contains the following attributes

Vendor ID

This attribute shall contain the vendor ID.

Attribute type: Unsigned 16

Manufacturer Specific Fiber Optic Data

This attribute shall contain vendor specific fiber optic data

Fiber Optic Power Budget Real

This optional attribute is present only if the port's Media Type attribute is equal to FIBER_OPTIC_CABLE and power budget control is supported by the port's hardware. If present, this attribute contains the current power budget of the port in 0,1 dB steps.

Attribute type: Unsigned32

Unit: 0,1 dB

Allowed values: Measured Power Budget

Fiber Optic Power Budget Check

This optional attribute is present only if the port's Media Type attribute is equal to FIBER_OPTIC_CABLE and power budget control is supported by the port's hardware. This optional attribute controls the behavior of the power budget. It contains the following attributes:

Maintenance Demanded Power Budget

This attribute contains a power budget in 0,1 dB steps that is used to generate a Maintenance Demanded message if the current power budget of a port is less or equal to this value. The maintenance message can be deactivated.

Attribute type: Unsigned32

Unit: 0,1 dB

Allowed values: DISABLED, Maintenance Demanded Power Budget

Maintenance Required Power Budget

This attribute contains a power budget in 0,1 dB steps that is used to generate a Maintenance Required message if the current power budget of a port is less or equal to this value. The maintenance message can be deactivated.

Attribute type: Unsigned32

Unit: 0,1 dB

Allowed values: DISABLED, Maintenance Required Power Budget

Error Power Budget

This attribute contains a power budget in 0,1 dB steps that is used to generate a Diagnosis Message if the current power budget of a port is less or equal to this value. The diagnosis message can be deactivated.

Attribute type: Unsigned32

Unit: 0,1 dB

Allowed values: DISABLED, Error Power Budget

Preamble Length

This attribute contains the number of preamble octets the PHY shall use before the start delimiter (SD) is sent. A value of 7 preamble octets is the default (as defined for Ethernet); a value of 1 preamble octet indicates a shortening of the preamble and shall only be used, if both sending and receiving peer support preamble shortening as indicated by GSD.

Attribute type: Unsigned16

Allowed values: 0x00 (seven octets preamble shall be used), 0x01 (one octet preamble shall be used)

Default Value: 0x00 (seven octets preamble shall be used)

Domain Boundary

This attribute consists of the following attributes:

Ingress

This attribute contains the value of the ingress synchronization domain boundary. Incoming frames with a destination mac address in the defined group will be blocked. The value shall be a list of allowed values for each multicast group.

Allowed values:

BLOCK_MULTICAST_ADDRESS_GROUP_0,
PASS_MULTICAST_ADDRESS_GROUP_0,

...

BLOCK_MULTICAST_ADDRESS_GROUP_31,
PASS_MULTICAST_ADDRESS_GROUP_31

The multicast groups are defined for the following IEEE Std 802 addresses:

ADDRESS_GROUP_0:

01-0E-CF-00-04-00,
01-0E-CF-00-04-20,
01-0E-CF-00-04-40,
01-0E-CF-00-04-80

ADDRESS_GROUP_1:

01-0E-CF-00-04-01,
01-0E-CF-00-04-21,
01-0E-CF-00-04-41,
01-0E-CF-00-04-81

...

ADDRESS_GROUP_31:

01-0E-CF-00-04-1F,
01-0E-CF-00-04-3F,
01-0E-CF-00-04-5F,
01-0E-CF-00-04-9F

ADDRESS_GROUP_0 shall be used for the PTCIP working clock, ADDRESS_GROUP_1 to ADDRESS_GROUP_31 are reserved according to IEC 61158-6-10.

Egress

This attribute contains the value of the egress synchronization domain boundary. Outgoing frames with a destination mac address in the defined group will be blocked. The allowed values shall be the same as for the Ingress attribute.

Multicast Boundary

This attribute contains the indication of the multicast boundary.

Attribute type: Unsigned32

Peer to Peer Boundary

This attribute contains the indication of peer to peer boundaries. It contains the following attributes

LLDP

This attribute contains the indication of the LLDP boundary. If set to BLOCK, the IEEE Std 802.1AB shall not send LLDP frames (egress filter).

Attribute type: Unsigned8

Allowed values: PASS, BLOCK

PTCP

This attribute contains the indication of the PTCIP boundary. If set to BLOCK, the Precision time control ASE shall not send PTCIP_DELAY frames (egress filter).

Attribute type: Unsigned8

Allowed values: PASS, BLOCK

Time

This attribute contains the indication of the Time boundary. If set to BLOCK, the IEEE Std 802.1AS ASE shall not send PATH_DELAY frames (egress filter).

Attribute type: Unsigned8

Allowed values: PASS, BLOCK

DCP Boundary

This attribute contains the indication of the DCP multicast boundary.

Attribute type: Unsigned32

Allowed values: PASS, BLOCK_HELLO, BLOCK_IDENTIFY, BLOCK_BOTH

PD Port Data Real

This attribute contains the current PD port data. It consists of the following attributes:

Own Port Name

This attribute contains the local port's name.

NOTE This value is independent from the old or new usage of the ChassisID and PortID in LLDP. The notation is always port-xyz or port-abcde-xyz.

Attribute type: VisibleString[255]

Line Delay

This attribute contains the value of the line delay as determined by this port.

The value 0 indicates that the line delay is unknown.

Attribute type: Unsigned32

Time Base: 1 ns

MAU Type

This attribute is defined in the IEEE Std 802.3 ASE.

MAU Type Extension

This optional attribute is defined in the IEEE Std 802.3 ASE.

Link State

This attribute is defined in the IEEE Std 802.3 ASE.

RTClass3_PortStatus

This attribute is defined in the IEEE Std 802.1AB ASE.

Number Of Peers

This attribute contains the number of peers contained in the following List of Peers.

Each device decides in its implementation the maximum number of peers contained in the list (recommended: up to 4).

Special case: If a device implementation supports 1 peer only, multiple neighbors are indicated by setting Number Of Peers to 2 and returning NULL (i.e. empty string...) in the second list entry.

Special case: If a device implementation supports more than 1 peer, but more than the supported number of peers are detected on the port, Number Of Peers is set to the number of supported peers.

If more peers than the maximum number of supported peers exist at a particular port, it is local behavior which peers are held in this list.

Attribute type: Unsigned8

Allowed values: 0 to 255

List of Peers

This attribute contains the actual list of peers.

It consists of the following attributes:

Peer Port Name

This attribute contains the value of the peer's port name.

Attribute type: VisibleString[255]

Peer Station Name

This attribute contains the value of the peer's station name.

Attribute type: VisibleString[255]

Line Delay

This attribute contains the value of the line delay as determined by the peer.

The value 0 indicates that the line delay is unknown.

Attribute type: Unsigned32

Time Base: 1 ns

Peer MAC Address

This attribute contains the value of the peer's MAC address.

Attribute type: OctetString[6]

PD Port SFP Data Check

This optional attribute controls the diagnosis information of the proper submodule. It consists of the following attributes:

MaintenanceDemanded AdminStatus

According to the following attributes diagnosis entries with maintenance MAINTENACE_DEMANDED can appear:

Temperature

If this attribute is set to CHECK, the diagnosis “SFP – Temperature threshold violation (High)” can appear.

Allowed values: CHECK, NO_CHECK

TXBias

If this attribute is set to CHECK, the diagnoses “SFP – TX Bias threshold violation (High)” and “SFP – TX Bias threshold violation (Low)” can appear.

Allowed values: CHECK, NO_CHECK

TXPower

If this attribute is set to CHECK, the diagnoses “SFP – TX Power threshold violation (High)” and “SFP – TX Power threshold violation (Low)” can appear.

Allowed values: CHECK, NO_CHECK

RXPower

If this attribute is set to CHECK, the diagnoses “SFP – RX Power threshold violation (High)” and “SFP – RX Power threshold violation (Low)” can appear.

Allowed values: CHECK, NO_CHECK

Error AdminStatus

According to the following attributes diagnosis entries with maintenance FAULT can appear:

TXFaultState

If this attribute is set to CHECK, the diagnosis “SFP – TX Fault State indication” can appear.

Allowed values: CHECK, NO_CHECK

RXLossState

If this attribute is set to CHECK, the diagnosis “SFP – RX Loss State indication” can appear.

Allowed values: CHECK, NO_CHECK

List of Real Records

This attribute should contain all Real Records (also known as operational data).

List of Adjust Records

This attribute should contain all Adjust Records (also known as administrative data).

List of Check Records

This attribute should contain all Check Records (also known as observer configuration data).

CIM SNMP Adjust

This attribute lists all attributes related to the SNMP v1/v2 object. This attribute controls the singleton SNMP agent, responsible for the access to the device.

It contains the following attributes:

SNMP Control

This attribute consists of the following attributes:

SNMP Control

This attribute indicates the availability of the SNMP ASE.

If set to DISABLE_SNMP, this ASE shall not exist and thus no SNMP service is available. Further all other control attributes shall not be set and their behavior shall not be executed.

Allowed values:

OFF	The SNMP agent is not available
READ_ONLY	The SNMP agent service is available. The SNMP Get services shall be responded. Any SNMP Set service shall be discarded and no response shall be given. The ReadOnly CommunityName shall be give.
READ_WRITE	The SNMP agent is available. The SNMP Get and SNMP Set services shall be responded. The ReadOnly CommunityName and the ReadWrite CommunityName shall be give.

ReadOnly CommunityName

This attribute contains community name for the SNMP protocol. The default value should be "public".

If set, every SNMP Get service shall check according to this value. If the value doesn't match the request shall discarded and no response is given.

Attribute type: OctecString

ReadWrite CommunityName

This attribute contains community name for the SNMP protocol. The default value should be "private".

If set, every SNMP Set service shall check according to this value. If the value doesn't match the request shall discarded and no response is given.

Attribute type: OctecString

CIM Electric PowerReal

This optional attribute lists all attributes related to the electric power of an APL object.

It contains the following attributes:

EP DeviceData

This attribute consists of the following attributes:

EP DeviceType

This attribute indicates the power source of the device.

Allowed value: PowerOverDataLine, PowerOverExtraPowerIn

EP DeviceVoltage

This attribute gives the operational voltage according to the given voltage type.

Unit: 1 mV

Accuracy: 5 %

List of Ports

This list of attribute consists of the following attributes:

EP PortData

This attribute consists of the following attributes:

EP PortType

This attribute indicates the electric type of the port

Allowed value: PowerOff, PowerSource, PowerLoad

EP PortVoltage

This attribute gives the operational voltage according to the given port type.

Unit: 1 mV

Accuracy: 5 %

EP PortCurrent

This attribute gives the operational current according to the given port type.

Unit: 1 mA

Accuracy: 5 %

7.3.3.3.5 Services

7.3.3.3.5.1 Read PDev Data

This service allows reading PDev Data using a record data object with device scope (see 7.3.1.7.1).

The parameter structure and the meaning of the parameters is the same as described in the read service (see 7.3.1.7.6.1.1); for the error code hierarchy, 7.3.1.7.7.1 applies. The parameter Data has a service specific structure and meaning; see Table 248 for its structure.

The AR context is of no meaning for this service; see 7.3.1.7.7.4 for details.

Table 248 – Data elements of Read PDev Data

Parameter name	Service specific elements	rsp	cnf
Data	PD IR Data	C	C(=)
	PD Sync Data	C	C(=)
	PD IR Subframe Data	C	C(=)
	PD Time Data	C	C(=)

Data

This parameter contains the values of the object which has been read.

PD IR Data

This conditional parameter is present only if the interface has PD IR data. It is composed analogous to the data as defined in 7.3.3.7.5.2.

PD Sync Data

This conditional parameter is present only if the interface has PD sync data. It is composed analogous to the data as defined in 7.3.3.10.5.2.

PD IR Subframe Data

This conditional parameter is present only if the interface has PD IR subframe data. It is composed analogous to the data as defined in 7.3.3.7.5.4.

PD Time Data

This conditional parameter is present only if the interface has PD IR subframe data. It is composed analogous to the data as defined in 7.3.3.5.5.2.

7.3.3.3.5.2 Read PD Real Data

This service allows reading PD Real Data using a record data object with device scope (see 7.3.1.7.1).

The parameter structure and the meaning of the parameters is the same as described in the read service (see 7.3.1.7.6.1.1); for the error code hierarchy, 7.3.1.7.7.1 applies. The parameter Data has a service specific structure and meaning; see Table 249 for its structure.

The AR context is of no meaning for this service; see 7.3.1.7.7.4 for details.

Table 249 – Data elements of Read PD Real Data

Parameter name	Service specific elements	rsp	cnf
Data	List of Submodules	M	M(=)
	Slot Number	M	M(=)
	Subslot Number	M	M(=)
	PD Port Data Real	C	C(=)
	PD Port Data Real Extended	C	C(=)
	PD Interface MRP Data Real	C	C(=)
	PD Port MRP Data Real	C	C(=)
	PD Port FO Data Real	C	C(=)
	PD Interface Data Real	C	C(=)
	PD Port Statistic	C	C(=)
	PD Port MRPIC Data Real	C	C(=)

Data

This parameter contains the values of the object which has been read.

List of Submodules

This parameter is composed of the following list elements:

Slot Number

This parameter contains the value of the corresponding attribute of the ASE object.

Subslot Number

This parameter contains the value of the corresponding attribute of the ASE object.

PD Port Data Real

This conditional parameter is present only if the submodule is a port submodule. It is composed analogous to the data as defined in 7.3.3.3.5.11.

PD Port Data Real Extended

This conditional parameter is present only if the submodule is a port submodule.

PD Interface MRP Data Real

This conditional parameter is present only if the submodule is an interface submodule and supports MRP. It is composed analogous to the data as defined in 7.3.3.9.5.1.

PD Port MRP Data Real

This conditional parameter is present only if the submodule is a port submodule and supports MRP. It is composed analogous to the data as defined in 7.3.3.9.5.6.

PD Port FO Data Real

This conditional parameter is present only if the submodule is a fiber optic port submodule. It is composed analogous to the data as defined in 7.3.3.3.5.18.

PD Interface Data Real

This conditional parameter is present only if the submodule is an interface submodule. It is composed analogous to the data as defined in 7.3.3.3.5.4.

PD Port Statistic

This conditional parameter is present only if the submodule is an interface of a port submodule. It is composed analogous to the data as defined in 7.3.3.3.5.11.

PD Port MRPIC Data Real

This conditional parameter is present only if the submodule is a port submodule and supports MRP interconnection. It is composed analogous to the data as defined in 7.3.3.9.5.9.

7.3.3.3.5.3 Read PD Expected Data

This service allows reading PD Expected Data using a record data object with device scope (see 7.3.1.7.1).

The parameter structure and the meaning of the parameters is the same as described in the read service (see 7.3.1.7.6.1.1); for the error code hierarchy, 7.3.1.7.7.1 applies. The parameter Data has a service specific structure and meaning, see Table 250 for its structure.

The AR context is of no meaning for this service; see 7.3.1.7.7.4 for details.

Table 250 – Data elements of Read PD Expected Data

Parameter name	Service specific elements	rsp	cnf
Data	List of Submodules	M	M(=)
	Slot Number	M	M(=)
	Subslot Number	M	M(=)
	PD Port Data Check	C	C(=)
	PD Port Data Adjust	C	C(=)
	PD Interface MRP Data Check	C	C(=)
	PD Interface MRP Data Adjust	C	C(=)
	PD Port MRP Data Adjust	C	C(=)
	PD Port FO Data Check	C	C(=)
	PD Port FO Data Adjust	C	C(=)
	PD NC Data Check	C	C(=)
	PD Interface FSU Data Adjust	C	C(=)
	PD Interface Adjust	C	C(=)
	PD Port MRPIC Data Check	C	C(=)
	PD Port MRPIC Data Adjust	C	C(=)

Data

This parameter contains the values of the object which has been read.

List of Submodules

This parameter is composed of the following list elements:

Slot Number

This parameter contains the value of the corresponding attribute of the ASE object.

Subslot Number

This parameter contains the value of the corresponding attribute of the ASE object.

PD Port Data Check

This conditional parameter is present only if the submodule is a port submodule and PD port data check has been written. It is composed analogous to the data as defined in 7.3.3.3.5.15.

PD Port Data Adjust

This conditional parameter is present only if the submodule is a port submodule and PD port data adjust has been written. It is composed analogous to the data as defined in 7.3.3.3.5.17.

PD Interface MRP Data Check

This conditional parameter is present only if the submodule is an interface submodule and PD interface MRP data check has been written. It is composed analogous to the data as defined in 7.3.3.9.5.3.

PD Interface MRP Data Adjust

This conditional parameter is present only if the submodule is an interface submodule and PD interface MRP data adjust has been written. It is composed analogous to the data as defined in 7.3.3.9.5.5.

PD Port MRP Data Adjust

This conditional parameter is present only if the submodule is an interface submodule and PD port MRP data adjust has been written. It is composed analogous to the data as defined in 7.3.3.9.5.7.

PD Port FO Data Check

This conditional parameter is present only if the submodule is a fiber optic port submodule and PD port FO data check has been written. It is composed analogous to the data as defined in 7.3.3.3.5.20.

PD Port FO Data Adjust

This conditional parameter is present only if the submodule is a fiber optic port submodule and PD port FO data adjust has been written. It is composed analogous to the data as defined in 7.3.3.3.5.22.

PD NC Data Check

This conditional parameter is present only if the submodule is an interface submodule and PD NC data check has been written. It is composed analogous to the data as defined in 7.3.3.3.5.10.

PD Interface FSU Data Adjust

This conditional parameter is present only if the submodule is an interface submodule and PD interface FSU data adjust has been written. It is composed analogous to the data as defined in 7.3.3.3.5.8.

PD Interface Adjust

This conditional parameter is present only if the submodule is an interface submodule and PD interface adjust has been written. It is composed analogous to the data as defined in 7.3.3.3.5.6.

PD Port MRPIC Data Check

This conditional parameter is present only if the submodule is an interface submodule and PD port MRPIC data check has been written. It is composed analogous to the data as defined in 7.3.3.9.5.10.

PD Port MRPIC Data Adjust

This conditional parameter is present only if the submodule is an interface submodule and PD port MRPIC data adjust has been written. It is composed analogous to the data as defined in 7.3.3.9.5.12.

7.3.3.3.5.4 Read PD Interface Data Real

This service allows reading PD Interface Data Real using a record data object with subslot scope (see 7.3.1.7.1). The service is applicable to interface submodules only.

The parameter structure and the meaning of the parameters is the same as described in the read service (see 7.3.1.7.6.1.1); for the error code hierarchy, 7.3.1.7.7.1 applies. The parameter Data has a service specific structure and meaning; see Table 251 for its structure.

The AR context is of no meaning for this service; see 7.3.1.7.7.4 for details.

Table 251 – Data elements of Read PD Interface Data Real

Parameter name	Service specific elements	rsp	cnf
Data	Chassis ID	M	M(=)
	MAC Address	M	M(=)
	IP Parameter Value	M	M(=)
	IP Address	M	M(=)
	Subnet Mask	M	M(=)
	Standard Gateway	M	M(=)

Data

This parameter contains the values of the object which has been read.

Chassis ID

This parameter contains the value of the corresponding attribute of the ASE object.

MAC Address

This parameter contains the value of the corresponding attribute of the ASE object.

IP Parameter Value

This parameter consists of the following elements:

IP Address

This parameter contains the value of the corresponding attribute of the ASE object.

Subnet Mask

This parameter contains the value of the corresponding attribute of the ASE object.

Standard Gateway

This parameter contains the value of the corresponding attribute of the ASE object.

7.3.3.3.5.5 Write PD Interface Adjust

This service allows writing PD Interface Adjust Data using a record data object with subslot scope (see 7.3.1.7.1). The service is applicable to interface submodules only.

The parameter structure and the meaning of the parameters is the same as described in the write service (see 7.3.1.7.6.2.1). PD Interface Data Adjust belongs to a submodule, which is addressed by the default API (zero), its slot and subslot number. The parameter Index identifies the data record index as specified in IEC 61158-6-10. If the addressed submodule does not represent an interface an error is returned.

The parameter structure and the meaning of the parameters is the same as described in the write service (see 7.3.1.7.6.2.1); for the error code hierarchy, 7.3.1.7.7.1 applies. The parameter Data has a service specific structure and meaning; see Table 252 for its structure.

The AR context is of no meaning for this service; see 7.3.1.7.7.4 for details.

Table 252 – Data elements of Write PD Interface Adjust

Parameter name	Service specific elements	req	ind
Data	Multiple Interface Mode	M	M(=)

Data

This parameter contains the values of the object which are written.

Multiple Interface Mode

This parameter contains the value of the corresponding attribute of the ASE object.

7.3.3.3.5.6 Read PD Interface Adjust

This service allows reading PD Interface Adjust using a record data object with subslot scope (see 7.3.1.7.1). The service is applicable to interface submodules only.

The parameter structure and the meaning of the parameters is the same as described in the read service (see 7.3.1.7.6.1.1); for the error code hierarchy, 7.3.1.7.7.1 applies. The parameter Data has a service specific structure and meaning; see Table 252 for its structure.

The AR context is of no meaning for this service; see 7.3.1.7.7.4 for details.

Data

See Write PD Interface Adjust in 7.3.3.3.5.5.

7.3.3.3.5.7 Write PD Interface FSU Data Adjust

This service allows writing PD Interface FSU Data Adjust using a record data object with subslot scope (see 7.3.1.7.1). The service is applicable to interface submodules only.

The parameter structure and the meaning of the parameters is the same as described in the write service (see 7.3.1.7.6.2.1); for the error code hierarchy, 7.3.1.7.7.1 applies. The parameter Data has a service specific structure and meaning; see Table 253 for its structure.

The AR context is of no meaning for this service; see 7.3.1.7.7.4 for details.

Table 253 – Data elements of Write PD Interface FSU Data Adjust

Parameter name	Service specific elements	req	ind
Data	FS Hello Block	U	U(=)
	FS Hello Mode	M	M(=)
	FS Hello Interval	M	M(=)
	FS Hello Retry	M	M(=)
	FS Hello Delay	M	M(=)
	Fast Startup Block	U	U(=)
	Data	M	M(=)

Data

This parameter contains the values of the object which are written.

FS Hello Block

This parameter consists of the following elements:

FS Hello Mode

This parameter contains the value of the corresponding attribute of the ASE object.

FS Hello Interval

This parameter contains the value of the corresponding attribute of the ASE object.

FS Hello Retry

This parameter contains the value of the corresponding attribute of the ASE object.

FS Hello Delay

This parameter contains the value of the corresponding attribute of the ASE object.

Fast Startup Block

This optional parameter consists of the following elements:

Data

This parameter contains the value of the corresponding attribute of the ASE object.

7.3.3.3.5.8 Read PD Interface FSU Data Adjust

This service allows reading PD Interface FSU Data Adjust using a record data object with subslot scope (see 7.3.1.7.1). The service is applicable to interface submodules only.

The parameter structure and the meaning of the parameters is the same as described in the read service (see 7.3.1.7.6.1.1); for the error code hierarchy, 7.3.1.7.7.1 applies. The parameter Data has a service specific structure and meaning; see Table 253 for its structure.

The AR context is of no meaning for this service; see 7.3.1.7.7.4 for details.

Data

See Write PD Interface FSU Data Adjust in 7.3.3.3.5.7.

7.3.3.3.5.9 Write PD NC Data Check

This service allows writing PD NC Data Check using a record data object with subslot scope (see 7.3.1.7.1). The service is applicable to interface submodules only.

The parameter structure and the meaning of the parameters is the same as described in the write service (see 7.3.1.7.6.2.1); for the error code hierarchy, 7.3.1.7.7.1 applies. The parameter Data has a service specific structure and meaning; see Table 254 for its structure.

The AR context is of no meaning for this service; see 7.3.1.7.7.4 for details.

Table 254 – Data elements of Write PD NC Data Check

Parameter name	Service specific elements	req	ind
Data	Maintenance Required Drop Budget	M	M(=)
	Maintenance Demanded Drop Budget	M	M(=)
	Error Drop Budget	M	M(=)

Data

This parameter contains the values of the object which are written.

Maintenance Required Drop Budget

This parameter contains the value of the corresponding attribute of the ASE object.

Maintenance Demanded Drop Budget

This parameter contains the value of the corresponding attribute of the ASE object.

Error Drop Budget

This parameter contains the value of the corresponding attribute of the ASE object.

7.3.3.3.5.10 Read PD NC Data Check

This service allows reading PD NC Data Check using a record data object with subslot scope (see 7.3.1.7.1). The service is applicable to interface submodules only.

The parameter structure and the meaning of the parameters is the same as described in the read service (see 7.3.1.7.6.1.1); for the error code hierarchy, 7.3.1.7.7.1 applies. The parameter Data has a service specific structure and meaning; see Table 254 for its structure.

The AR context is of no meaning for this service; see 7.3.1.7.7.4 for details.

Data

See Write PD NC Data Check in 7.3.3.3.5.9.

7.3.3.3.5.11 Read PD Port Statistic

This service allows reading PD Port Statistic using a record data object with subslot scope (see 7.3.1.7.1). The service is applicable to interface and port submodules only.

The parameter structure and the meaning of the parameters is the same as described in the read service (see 7.3.1.7.6.1.1); for the error code hierarchy, 7.3.1.7.7.1 applies. The parameter Data has a service specific structure and meaning; see Table 255 for its structure.

The AR context is of no meaning for this service; see 7.3.1.7.7.4 for details.

Table 255 – Data elements of Read PD Port Statistic

Parameter name	Service specific elements	rsp	cnf
Data	CounterStatus	C	C(=)
	ifInOctets	M	M(=)
	ifOutOctets	M	M(=)
	ifInDiscards	M	M(=)
	ifOutDiscards	M	M(=)
	ifInErrors	M	M(=)
	ifOutErrors	M	M(=)

Data

This parameter contains the values of the object which has been read.

CounterStatus

This parameter indicates whether the value of each of the following attributes is valid or invalid. Bitwise coding is used to address the validity of all following attributes.

ifInOctets

This parameter contains the value of the corresponding attribute of the SNMP ASE object.

ifOutOctets

This parameter contains the value of the corresponding attribute of the SNMP ASE object.

ifInDiscards

This parameter contains the value of the corresponding attribute of the SNMP ASE object.

ifOutDiscards

This parameter contains the value of the corresponding attribute of the SNMP ASE object.

ifInErrors

This parameter contains the value of the corresponding attribute of the SNMP ASE object.

ifOutErrors

This parameter contains the value of the corresponding attribute of the SNMP ASE object.

7.3.3.3.5.12 Read PD Port Data Real

This service allows reading PD Port Data Real using a record data object with subslot scope (see 7.3.1.7.1). The service is applicable to port submodules only.

The parameter structure and the meaning of the parameters is the same as described in the read service (see 7.3.1.7.6.1.1); for the error code hierarchy, 7.3.1.7.7.1 applies. The parameter Data has a service specific structure and meaning; see Table 256 for its structure.

The AR context is of no meaning for this service; see 7.3.1.7.7.4 for details.

Table 256 – Data elements of Read PD Port Data Real

Parameter name	Service specific elements	rsp	cnf
Data	Own Port Name	M	M(=)
	Number Of Peers	C	C(=)
	List of Peers	C	C(=)
	Peer Port Name	M	M(=)
	Peer Station Name	M	M(=)
	Line Delay	M	M(=)
	Peer MAC Address	M	M(=)
	MAU Type	M	M(=)
	RTClass3_PortStatus	M	M(=)
	Multicast Boundary	M	M(=)
	Link State	M	M(=)
	Media Type	M	M(=)

Data

This parameter contains the values of the object which has been read.

Own Port Name

This parameter contains the value of the corresponding attribute of the ASE object.

Number Of Peers

This parameter contains the value of the corresponding attribute of the ASE object.

List of Peers

This conditional parameter contains the value of the corresponding attribute of the ASE object.

Peer Port Name

This parameter contains the value of the corresponding attribute of the ASE object.

Peer Station Name

This parameter contains the value of the corresponding attribute of the ASE object.

Line Delay

This parameter contains the value of the corresponding attribute of the ASE object.

Peer MAC Address

This parameter contains the value of the corresponding attribute of the ASE object.

MAU Type

This parameter contains the value of the corresponding attribute of the ASE object.

RTClass3_PortStatus

This parameter contains the value of the corresponding attribute of the ASE object.

Multicast Boundary

This parameter contains the value of the corresponding attribute of the ASE object.

Link State

This parameter contains the value of the corresponding attribute of the ASE object.

Media Type

This parameter contains the value of the corresponding attribute of the ASE object.

7.3.3.3.5.13 Read PD Port Data Real Extended

This service allows reading PD Port Data Real Extended using a record data object with subslot scope (see 7.3.1.7.1). The service is applicable to port submodules only.

The parameter structure and the meaning of the parameters is the same as described in the read service (see 7.3.1.7.6.1.1); for the error code hierarchy, 7.3.1.7.7.1 applies. The parameter Data has a service specific structure and meaning; see Table 257 for its structure.

The AR context is of no meaning for this service; see 7.3.1.7.7.4 for details.

Table 257 – Data elements of Read PD Port Data Real Extended

Parameter name	Service specific elements	rsp	cnf
Data	Own Port Name	M	M(=)
	Line Delay	M	M(=)
	Media Type	M	M(=)
	Multicast Boundary	M	M(=)
	MAU Type	M	M(=)
	MAU Type Extension	M	M(=)
	Link State	M	M(=)
	RTClass3_PortStatus	M	M(=)
	Number Of Peers	C	C(=)
	List of Peers	C	C(=)
	Line Delay	M	M(=)
	MAU Type	M	M(=)
	MAU Type Extension	M	M(=)
	Peer MAC Address	M	M(=)
	Peer Port Name	M	M(=)
	Peer Station Name	M	M(=)

Data

This parameter contains the values of the object which has been read.

Own Port Name

This parameter contains the value of the corresponding attribute of the ASE object.

Line Delay

This parameter contains the value of the corresponding attribute of the ASE object.

Media Type

This parameter contains the value of the corresponding attribute of the ASE object.

Multicast Boundary

This parameter contains the value of the corresponding attribute of the ASE object.

MAU Type

This parameter contains the value of the corresponding attribute of the ASE object.

MAU Type Extension

This parameter contains the value of the corresponding attribute of the ASE object.

Link State

This parameter contains the value of the corresponding attribute of the ASE object.

RTClass3_PortStatus

This parameter contains the value of the corresponding attribute of the ASE object.

Number Of Peers

This parameter contains the value of the corresponding attribute of the ASE object.

List of Peers

This conditional parameter contains the value of the corresponding attribute of the ASE object.

Line Delay

This parameter contains the value of the corresponding attribute of the ASE object.

MAU Type

This parameter contains the value of the corresponding attribute of the ASE object.

MAU Type Extension

This parameter contains the value of the corresponding attribute of the ASE object.

Peer MAC Address

This parameter contains the value of the corresponding attribute of the ASE object.

Peer Port Name

This parameter contains the value of the corresponding attribute of the ASE object.

Peer Station Name

This parameter contains the value of the corresponding attribute of the ASE object.

7.3.3.3.5.14 Write PD Port Data Check

This service allows writing PD Port Data Check using a record data object with subslot scope (see 7.3.1.7.1). The service is applicable to port submodules only.

The parameter structure and the meaning of the parameters is the same as described in the write service (see 7.3.1.7.6.2.1); for the error code hierarchy, 7.3.1.7.7.1 applies. The parameter Data has a service specific structure and meaning; see Table 258 for its structure.

The AR context is of no meaning for this service; see 7.3.1.7.7.4 for details.

Table 258 – Data elements of Write PD Port Data Check

Parameter name	Service specific elements	req	ind
Data	List of Peers	U	U(=)
	Peer Port ID	M	M(=)
	Peer Chassis ID	M	M(=)
	Line Delay	U	U(=)
	MAU type	U	U(=)
	Link State	U	U(=)
	Sync Difference	U	U(=)
	MAU Type Difference	U	U(=)

Data

This parameter contains the values of the object which are written.

List of Peers

This optional parameter contains the value of the corresponding attribute of the ASE object.

Peer Port ID

This parameter contains the value of the corresponding attribute of the ASE object.

Peer Chassis ID

This parameter contains the value of the corresponding attribute of the ASE object.

Line Delay

This optional parameter contains the value of the corresponding attribute of the ASE object.

MAU type

This optional parameter contains the value of the corresponding attribute of the ASE object.

Link State

This optional parameter contains the value of the corresponding attribute of the ASE object.

Sync Difference

This optional parameter contains the value of the corresponding attribute of the ASE object.

MAU Type Difference

This optional parameter contains the value of the corresponding attribute of the ASE object.

7.3.3.3.5.15 Read PD Port Data Check

This service allows reading PD Port Data Check using a record data object with subslot scope (see 7.3.1.7.1). The service is applicable to port submodules only.

The parameter structure and the meaning of the parameters is the same as described in the read service (see 7.3.1.7.6.1.1); for the error code hierarchy, 7.3.1.7.7.1 applies. The parameter Data has a service specific structure and meaning; see Table 258 for its structure.

The AR context is of no meaning for this service; see 7.3.1.7.7.4 for details.

7.3.3.3.5.16 Write PD Port Data Adjust

This service allows writing PD Port Data Adjust using a record data object with subslot scope (see 7.3.1.7.1). The service is applicable to port submodules only.

The parameter structure and the meaning of the parameters is the same as described in the write service (see 7.3.1.7.6.2.1); for the error code hierarchy, 7.3.1.7.7.1 applies. The parameter Data has a service specific structure and meaning; see Table 259 for its structure.

The AR context is of no meaning for this service; see 7.3.1.7.7.4 for details.

Table 259 – Data elements of Write PD Port Data Adjust

Parameter name	Service specific elements	req	ind
Data	Adjust Domain Boundary	U	U(=)
	Adjust Multicast Boundary	U	U(=)
	Adjust MAU Type	U	U(=)
	Adjust Link State	U	U(=)
	Adjust Peer to Peer Boundary	U	U(=)
	Adjust DCP Boundary	U	U(=)
	Adjust Preamble Length	U	U(=)
	Adjust MAU Type Extension	U	U(=)

Data

This parameter contains the values of the object which are written.

Adjust Domain Boundary

This optional parameter contains the value of the corresponding attribute of the ASE object.

Adjust Multicast Boundary

This optional parameter contains the value of the corresponding attribute of the ASE object.

Adjust MAU Type

This optional parameter contains the value of the corresponding attribute of the ASE object.

Adjust Link State

This optional parameter contains the value of the corresponding attribute of the ASE object.

Adjust Peer to Peer Boundary

This optional parameter contains the value of the corresponding attribute of the ASE object.

Adjust DCP Boundary

This optional parameter contains the value of the corresponding attribute of the ASE object.

Adjust Preamble Length

This optional parameter contains the value of the corresponding attribute of the ASE object.

Adjust MAU Type Extension

This optional parameter contains the value of the corresponding attribute of the ASE object.

7.3.3.3.5.17 Read PD Port Data Adjust

This service allows writing PD Port Data Adjust using a record data object with subslot scope (see 7.3.1.7.1). The service is applicable to port submodules only.

The parameter structure and the meaning of the parameters is the same as described in the read service (see 7.3.1.7.6.1.1); for the error code hierarchy, 7.3.1.7.7.1 applies. The parameter Data has a service specific structure and meaning; see Table 259 for its structure.

The AR context is of no meaning for this service; see 7.3.1.7.7.4 for details.

Data

See Write PD Port Data Adjust in 7.3.3.3.5.16.

7.3.3.3.5.18 Read PD Port FO Data Real

This service allows reading PD Port FO Data Real using a record data object with subslot scope (see 7.3.1.7.1). The service is applicable to port submodules only.

The parameter structure and the meaning of the parameters is the same as described in the read service (see 7.3.1.7.6.1.1); for the error code hierarchy, 7.3.1.7.7.1 applies. The parameter Data has a service specific structure and meaning; see Table 260 for its structure.

The AR context is of no meaning for this service; see 7.3.1.7.7.4 for details.

Table 260 – Data elements of Read Port FO Data Real

Parameter name	Service specific elements	rsp	cnf
Data	Fiber Optic type	M	M(=)
	Fiber Optic Cable type	M	M(=)
	Fiber Optic Manufacturer Specific	C	C(=)
	Vendor ID	M	M(=)
	Manufacturer Specific Fiber Optic Data	M	M(=)
	Fiber Optic Power Budget Real	C	C(=)

Data

This parameter contains the values of the object which has been read.

Fiber Optic type

This parameter contains the value of the corresponding attribute of the ASE object.

Fiber Optic Cable type

This parameter contains the value of the corresponding attribute of the ASE object.

Fiber Optic Manufacturer Specific

This conditional parameter contains the value of the corresponding attribute of the ASE object.

Vendor ID

This parameter contains the value of the corresponding attribute of the ASE object.

Manufacturer Specific Fiber Optic Data

This parameter contains the value of the corresponding attribute of the ASE object.

Fiber Optic Power Budget Real

This parameter contains the value of the corresponding attribute of the ASE object.

7.3.3.3.5.19 Write PD Port FO Data Check

This service allows writing PD Port FO Data Check using a record data object with subslot scope (see 7.3.1.7.1). The service is applicable to port submodules only.

The parameter structure and the meaning of the parameters is the same as described in the write service (see 7.3.1.7.6.2.1); for the error code hierarchy, 7.3.1.7.7.1 applies. The parameter Data has a service specific structure and meaning; see Table 261 for its structure.

The AR context is of no meaning for this service; see 7.3.1.7.7.4 for details.

Table 261 – Data elements of Write PD Port FO Data Check

Parameter name	Service specific elements	req	ind
Data	Maintenance Required Power Budget	M	M(=)
	Maintenance Demanded Power Budget	M	M(=)
	Error Power Budget	M	M(=)

Data

This parameter contains the values of the object which are written.

Maintenance Required Power Budget

This parameter contains the value of the corresponding attribute of the ASE object.

Maintenance Demanded Power Budget

This parameter contains the value of the corresponding attribute of the ASE object.

Error Power Budget

This parameter contains the value of the corresponding attribute of the ASE object.

7.3.3.3.5.20 Read PD Port FO Data Check

This service allows reading PD Port FO Data Check using a record data object with subslot scope (see 7.3.1.7.1). The service is applicable to port submodules only.

The parameter structure and the meaning of the parameters is the same as described in the read service (see 7.3.1.7.6.1.1); for the error code hierarchy, 7.3.1.7.7.1 applies. The parameter Data has a service specific structure and meaning; see Table 261 for its structure.

The AR context is of no meaning for this service; see 7.3.1.7.7.4 for details.

Data

See Write PD Port FO Data Check in 7.3.3.3.5.19.

7.3.3.3.5.21 Write PD Port FO Data Adjust

This service allows writing PD Port FO Data Adjust using a record data object with subslot scope (see 7.3.1.7.1). The service is applicable to port submodules only.

The parameter structure and the meaning of the parameters is the same as described in the write service (see 7.3.1.7.6.2.1); for the error code hierarchy, 7.3.1.7.7.1 applies. The parameter Data has a service specific structure and meaning; see Table 262 for its structure.

The AR context is of no meaning for this service; see 7.3.1.7.7.4 for details.

Table 262 – Data elements of Write PD Port FO Data Adjust

Parameter name	Service specific elements	req	ind
Data	Adjust Fiber Optic type	M	M(=)
	Adjust Fiber Optic Cable type	M	M(=)

Data

This parameter contains the values of the object which are written.

Adjust Fiber Optic type

This parameter contains the value of the corresponding attribute of the ASE object.

Adjust Fiber Optic Cable type

This parameter contains the value of the corresponding attribute of the ASE object.

7.3.3.3.5.22 Read PD Port FO Data Adjust

This service allows reading PD Port FO Data Adjust using a record data object with subslot scope (see 7.3.1.7.1). The service is applicable to port submodules only.

The parameter structure and the meaning of the parameters is the same as described in the read service (see 7.3.1.7.6.1.1); for the error code hierarchy, 7.3.1.7.7.1 applies. The parameter Data has a service specific structure and meaning; see Table 262 for its structure.

The AR context is of no meaning for this service; see 7.3.1.7.7.4 for details.

Data

See Write PD Port FO Data Adjust in 7.3.3.3.5.21.

7.3.3.3.5.23 Write PD Port SFP Data Check

This service allows writing PD Port Data Check using a record data object with subslot scope (see 7.3.1.7.1). The service is applicable to port submodules only.

The parameter structure and the meaning of the parameters is the same as described in the write service (see 7.3.1.7.6.2.1); for the error code hierarchy, 7.3.1.7.7.1 applies. The parameter Data has a service specific structure and meaning; see Table 263 for its structure.

The AR context is of no meaning for this service; see 7.3.1.7.7.4 for details.

Table 263 – Data elements of Write PD Port SFP Data Check

Parameter name	Service specific elements	req	ind
Data	MaintenanceDemandedAdminStatus	M	U(=)
	ErrorAdminStatus	U	U(=)

Data

This parameter contains the values of the object which are written.

MaintenanceDemanded AdminStatus

This parameter contains the value of the corresponding attribute of the ASE object.

Error AdminStatus

This parameter contains the value of the corresponding attribute of the ASE object.

7.3.3.3.5.24 Read PD Port SFP Data Check

This service allows reading PD Port SFP Data Check using a record data object with subslot scope (see 7.3.1.7.1). The service is applicable to port submodules only.

The parameter structure and the meaning of the parameters is the same as described in the read service (see 7.3.1.7.6.1.1); for the error code hierarchy, 7.3.1.7.7.1 applies. The parameter Data has a service specific structure and meaning; see Table 263 for its structure.

The AR context is of no meaning for this service; see 7.3.1.7.7.4 for details.

7.3.3.3.5.25 Read PD RSI Instances

This optional service is available only if the remote service interface ASE (see 6.3.3) is available.

This service allows reading of PD RSI Instances using a record data object with device scope (see 7.3.1.7.1).

The parameter structure and the meaning of the parameters is the same as described in the read service (see 7.3.1.7.6.1.1); for the error code hierarchy, 7.3.1.7.7.1 applies. The parameter Data has a service specific structure and meaning; see Table 264 for its structure.

The AR context is of no meaning for this service; see 7.3.1.7.7.4 for details.

Table 264 – Data elements of Read RSI Instances

Parameter name	Service specific elements	rsp	cnf
Data	List of responder instances	M	M(=)
	Device Ident	M	M(=)
	Device Instance	M	M(=)
	RSI Interface	M	M(=)
	System Identification	M	M(=)

Data

This parameter contains the values of the object which has been read.

List of responder instances

This parameter is composed analogous to the data defined in 6.3.3.3.9.

Device Ident

This parameter is composed analogous to the data defined in 6.3.3.3.9.

Device Instance

This parameter is composed analogous to the data defined in 6.3.3.3.9.

RSI Interface

This parameter is composed analogous to the data defined in 6.3.3.3.9.

System Identification

This parameter contains the local Chassis ID as defined in 6.3.13.

7.3.3.3.5.26 Write CIM SNMP Adjust

This service allows writing CIM SNMP Adjust using a record data object with subplot scope (see 7.3.1.7.1). The service is applicable to interface submodules only. This data record object shall only be used together with the singleton SNMP v1 / v2 instance.

This record can be written within an AR and via the CIM interface. If the record is written in both ways, the record written by the CIM interface is used to configure SNMP. If the record is written within the AR after the record has been written through the CIM interface, the AR record will be response with the PNIORW error (access denied). The AR shall not abort.

Data

The parameter structure and the meaning of the parameters is the same as described in the attribute “CIM SNMP Adjust” (see 7.3.3.3.4).

7.3.3.3.5.27 Read CIM SNMP Adjust

This service allows reading CIM SNMP Adjust using a record data object with subslot scope (see 7.3.1.7.1). The service is applicable to interface submodules only.

Data

The parameter structure and the meaning of the parameters is the same as described in the attribute “CIM SNMP Adjust” (see 7.3.3.3.4).

The attributes ReadOnly CommunityName and ReadWrite CommunityName shall never be read back.

7.3.3.3.5.28 Read CIM Electric PowerReal

This service allows reading CIM Electric PowerReal using a record data object with device scope (see 7.3.1.7.1).

Data

The parameter structure and the meaning of the parameters is the same as described in the attribute “CIM Electric PowerReal” (see 7.3.3.3.4).

7.3.3.3.5.29 CIM Create Candidate

This optional service is creating a candidate datastore as described in 7.3.3.1. The CIM-related data is taken from the running datastore or from the factory default datastore.

7.3.3.3.5.30 CIM Write

This optional service writes adjustable data to the candidate datastore as described in 7.3.3.1.

7.3.3.3.5.31 CIM Read

This optional service reads adjusted data from the candidate datastore as described in 7.3.3.1.

7.3.3.3.5.32 CIM Check Candidate

This optional service validates the adjusted data with regard to their overall consistency within the candidate datastore as described in 7.3.3.1.

7.3.3.3.5.33 CIM Check And Write Candidate

This optional service validates the adjusted data with regard to their overall consistency within the candidate datastore. If everything is valid, the content is written to the running datastore as described in 7.3.3.1.

7.3.3.3.6 Behavior

7.3.3.3.6.1 General

The startup procedure provides the following steps for all end station and bridge components:

- start MAC interface
 - set link speed and negotiation if given by persistent configuration
- start LLDP
- start DCP receiver, DCP sender, and DHCP client (if DHCP enabled)
- use name of station (if persistent) or wait for it
- use IP address (if persistent) or wait for it

- IP address assignment to the IO device is part of the connection establishment
- IP address is not needed if the IO device doesn't support CLRPC
- IP address of the IO device will be assigned persistent; precondition for fast startup
- Optional: check its own IP address and station name for multiple use by means of ARP and DCP before usage (error duplicate IP address or duplicate station name)

7.3.3.3.6.2 Persistency data

Persistency is used to store data over power off.

To this data belong:

- Data set by using DCP:Set where BlockQualifier is set to SAVE_PERMANENT; these are IP Suite, Name Of Station, DHCP Parameters, NME Domain Name, or manufacturer specific data.
- Data records, where column "Persistence" in the tables stated in IEC 61158-6-10, Subclause "Record index" shows "Yes", and written during a (re-)parameterization sequence up to Prm End (initiated with Connect.req, Prm Begin.req, or Plug.req).
- Data records, where column "Persistence" in the tables stated in IEC 61158-6-10, Subclause "Record index" shows "User specific definition", and written within or outside a parametrization sequence, and the vendor of the device decided to store the data record in the persistency.
- Data written using SNMP:Set, where the data shall be stored persistent; for this specification these are at least sysContact, sysName, and sysLocation.
- Data written using NETCONF, where the data shall be stored persistent.

This data is stored in the persistency and automatically retrieved after power on. In case of ResetToFactory, the persistent parameters are deleted as defined; see 6.3.11.3.2 for details.

7.3.3.3.6.3 CIM parameters

For data records belonging to the CIM ASE (abbreviated in the following as CIM parameters) additional rules apply.

The submodules representing the CIM are an interface submodule and port submodules associated to the interface submodule. For parameterization, 7.3.1.7 and especially 7.3.1.7.7.5 apply, as for "normal" submodules.

These submodules are handled regarding consistency and persistency as a unit. With Prm End all data records written in the context of the CIM (interface and associated ports), i.e. the CIM parameters, are checked for consistency (as usual).

If the check fails, or if at least one data record belonging to the CIM parameters was rejected during the parameterization phase (e.g. a specific index was not accepted at a submodule; e.g. PD MRP Data Adjust), the CIM parameters are inconsistent.

Inconsistent CIM parameters are replaced by the default parameterization of interface and ports. The default parameters, which consists of an empty set of records, replace existing CIM parameters completely in the persistency and are applied to interface and ports. With this it is ensured that the device is still reachable on the network and can communicate.

Consistent CIM parameters will be stored in the persistency and applied to interface and ports. If the CIM parameters stored already in the persistency are identical to the ones to be applied, neither persistency nor parameterization of interface and ports shall be changed to avoid unnecessary disturbance of the network. If the CIM parameters are different to the already stored ones, the new CIM parameters replace the existing CIM parameters completely.

In detail:

a) (Re-)Parameterization sequence

If a (re-)parameterization sequence contains consistent CIM parameters:

- If the CIM parameters are already applied (i.e. the CIM parameters written are the same as the CIM parameters in the persistency), CIM parameterization shall be omitted to avoid unnecessary disturbance of interface and ports.
- Otherwise the CIM parameters are applied and saved to the persistency. They replace the previous CIM parameters completely.

If a (re-)parameterization sequence contains inconsistent CIM parameters:

- The CIM parameters are deleted from the persistency. Default CIM parameters are applied.

If a (re-)parameterization sequence does not contain CIM parameters:

- If the AR where the (re-)parameterization sequence runs has the ownership of the CIM submodules and the CIM submodules are contained in the sequence, the CIM parameters are set to default.
- Otherwise (no ownership, or not contained in the sequence), the current CIM parameters remain applied (i.e. no re-parameterization to default).

b) AR release / abort

The current CIM parameters remain applied (i.e. no re-parameterization to default).

c) Power on

The CIM parameters are retrieved from the persistency.

If the persistency contains consistent CIM parameters, the CIM parameters are applied.

Otherwise the CIM parameters are deleted from the persistency and default CIM parameters are applied.

7.3.3.3.6.4 Diagnosis

There exists no diagnosis at this level. Diagnosis is specific to the Diagnosis ASEs.

Thus, Diagnosis related to the CIM ASE, is utilized in the matching Observer class, see 7.3.2.5.

7.3.3.3.6.5 Station Name / IP address

The attribute Station Name is mandatory for all IO controller and IO devices. The attribute IP address is mandatory only in conjunction with CLRPC.

The attribute Station Name within the DCP group is essential for the function of an IO device and an IO controller. It shall be set by means of the DCP service DCP Set or local means. Without a Station Name the operation of an IO device is not permitted.

If the device supports the attribute IP address (legacy or GSD configured), the DCP protocol shall provide a service to set an IP address according to the Station Name. An IO device obtains the IP address from the IO controller (or IO supervisor) via the DCP Set service or optional from a DHCP server. An IO device shall support a volatile IP address in general, and additionally a non-volatile IP address for fast start-up mode. The DCP server is only passive in this procedure.

To support legacy implementations an additional mode with permanent IP addresses is permissible.

An IO controller obtains the IP address from the IO supervisor via the DCP Set service, local means, or DHCP.

The DHCP protocol should also be supported. It provides

- unique IP addresses for large systems and
- IP access for other applications (e.g. WEB access) to the IO device in case the IO controller is switched off

The DHCP client requests the IP address using the selected options. The used DHCP options are provided by the DCP Set service or local means.

EXAMPLE 1 A small environment consists of one IO controller and two IO devices. Installing and configuring of a DHCP server is not appropriate in this case. Each device has got a unique station name. The IO controller identifies each IO device by means of the DCP Identify service with the filter station name and assigns its IP address with the DCP Set service.

EXAMPLE 2 A large environment consists of 27 IO controller and 64 IO devices per IO controller. The devices may be connected to different subnets. Installing and configuring of a DHCP server is appropriate in this case. Each device has got a unique station name and the use of DHCP is enabled. Each device requests its IP address from the DHCP server using the option e.g. Client Identifier = station name. The IO controller resolves the IP address of its related IO devices via DCP Identify or via DNS Get Host By Name service. The use of DCP Identify is restricted to a subnet.

The IO controller shall support DCP. Furthermore, it should support DNS and DHCP. DNS can be used to provide IP addresses to:

- access IO devices behind IP routers
- use IO devices which receive their IP addresses from a DHCP server
- get an IP address for IO devices (without DHCP) if the IP address is not part of engineering information and DCP is selected to provide the IP address to the IO device

7.3.3.3.6.6 CIM interface

If the CIM ASE supports a time-aware system, the CIM ASE shall provide a CMDEV_DA with a CIM interface to provide access to the attributes.

The value, provided by DCP::CIM Identification, shall be used as additional address elements.

7.3.3.4 IEEE Std 802.1AB class

See 6.3.13.

7.3.3.5 IEEE Std 802.1AS class

7.3.3.5.1 Overview

IEEE Std 802.1AS is used for time synchronization and/or working clock synchronization.

The working clock is synchronized with this class only if the Bridge Mode is set to 802.1Q.

In the network, the device with the best local clock is automatically selected as Grand Master and used as time reference.

7.3.3.5.2 Relations

The services are bound to other services as shown in Table 265:

Table 265 – Binding IEEE Std 802.1AS services

Service	Binding	Usage
Write PD Time Data	AR:Record Data:Write	Used by IO controller or IO supervisor
Read PD Time Data	AR:Record Data:Read	Used by IO controller or IO supervisor
Write TSN Time Data	AR:Record Data:Read	Used by IO controller or IO supervisor
Read TSN Time Data	AR:Record Data:Read	Used by IO controller or IO supervisor

7.3.3.5.3 Template

The IEEE Std 802.1AS class object is described by the following template:

ASE: Communication Interface Management ASE

CLASS: IEEE Std 802.1AS

CLASS ID: not used

PARENT CLASS: IEEE Std 802.1AS

ATTRIBUTES:

- 1 (m) Key Attribute: Implicit
- 2 (m) Attribute: List of Interfaces
- 2.1 (m) Attribute: API
- 2.2 (m) Attribute: Slot Number
- 2.3 (m) Attribute: Subslot Number
- 2.4 (c) Attribute: PD Time Data
- 2.4.1 (m) Attribute: Time Master Priority 1
- 2.4.2 (m) Attribute: Time Master Priority 2
- 2.4.3 (m) Attribute: Time PLL Window
- 2.5 (c) Attribute: TSN Time Data
- 2.5.1 (c) Attribute: List of Time Domains
- 2.5.1.1 (m) Attribute: Time Domain Number
- 2.5.1.2 (m) Attribute: Time PLL Window
- 2.5.1.3 (m) Attribute: Message Interval Factor
- 2.5.1.4 (m) Attribute: Message Timeout Factor
- 2.5.1.5 (m) Attribute: Time Sync Properties
- 2.5.1.6 (m) Attribute: Time Domain Name Length
- 2.5.1.7 (m) Attribute: Time Domain Name
- 2.5.1.8 (m) Attribute: Time Domain UUID

SERVICES:

- 1 (o) OpsService: Write PD Time Data
- 2 (o) OpsService: Read PD Time Data
- 3 (o) OpsService: Write TSN Time Data
- 4 (o) OpsService: Read TSN Time Data

7.3.3.5.4 Attributes**Implicit**

The key attribute Implicit indicates that the IEEE Std 802.1AS object is implicitly addressed by the service.

List of Interfaces

This attribute list lists all interfaces related to the IEEE Std 802.1AS object. It contains the following attributes:

API

This attribute contains the API containing the interface submodule.

The interface submodule is always assigned to the default API.

Attribute type: Unsigned32

Allowed values: 0x00000000

Slot Number

This attribute contains the slot number of the module containing the interface submodule.

Attribute type: Unsigned16

Allowed values: 0x0000 to 0x7FFF

Subslot Number

This attribute contains the subslot number of the interface.

Attribute type: Unsigned16

Allowed Values shall be used according to Table 246.

PD Time Data

This optional attribute contains the following attributes:

Time Master Priority 1

This attribute contains master priority 1 as defined within IEEE Std 802.1AS.

Attribute type: Unsigned8

Allowed values: 0x80 (indicating the use as master), 0xFF (indicating the use as slave)

Time Master Priority 2

This attribute contains master priority 2 as defined within IEEE Std 802.1AS.

Attribute type: Unsigned8

Allowed values: 0xF8

Time PLL Window

This attribute contains the maximum jitter of the master time to the local time which is accepted without setting the local time. The attribute has no relevance for the Sync Master.

Attribute type: Unsigned32

Time Base: 1 ns

Allowed values: see IEC 61158-6-10.

TSN Time Data

This optional attribute contains the following attributes:

List of Time Domains

This attribute consists of the following elements:

Time Domain Number

This attribute contains the identification of the time synchronization domain.

Attribute type: Unsigned16

Allowed values: GLOBAL_TIME, GLOBAL_TIME_REDUNDANT, WORKING_CLOCK, WORKING_CLOCK_REDUNDANT

Time PLL Window

This attribute contains the allowed synchronization window.

Attribute type: Unsigned32

Time base: 1 μ s

Message Interval Factor

This attribute contains the required send cycle of the synchronization message.

The default intervals are 30 ms for time and 30 s for the working clock.

Attribute type: Unsigned32

Time base: 31,25 μ s

Message Timeout Factor

This attribute contains the factor for calculating the synchronization timeout.

The timeout is calculated as factor of the above interval. The default factor is 6.

Attribute type: Unsigned16

Allowed values: 0x0001 – 0x01FF

Time Sync Properties

This attribute contains the behavior of this instance according to the synchronization domain.

Attribute type: Unsigned16

Allowed values: MASTER, SLAVE

Time Domain Name Length

This attribute contains the length of the Time Domain Name.

Attribute type: Unsigned8

Allowed values: 1 to 240

Time Domain Name

This attribute contains the unique name of the Time Domain.

Attribute type: OctetString

Time Domain UUID

This attribute contains the MD5 hash of the Time Domain Name and is used for identification. The calculation of the UUID shall be done by the engineering tool.

Attribute type: UUID

7.3.3.5.5 Services**7.3.3.5.5.1 Write PD Time Data**

This service allows writing PD Time Data using a record data object with subslot scope (see 7.3.1.7.1). The service is applicable to interface submodules only.

The AR context is of no meaning for this service; see 7.3.1.7.4 for details.

Data

The parameter structure and the meaning of the parameters is the same as described in the attribute "PD Time Data" (see 7.3.3.5.4).

7.3.3.5.5.2 Read PD Time Data

This service allows reading PD Time Data using a record data object with subslot scope (see 7.3.1.7.1). The service is applicable to interface submodules only.

The AR context is of no meaning for this service; see 7.3.1.7.7.4 for details.

Data

The parameter structure and the meaning of the parameters is the same as described in the attribute “PD Time Data” (see 7.3.3.5.4).

7.3.3.5.5.3 Write TSN Time Data

This service allows writing TSN Time Data using a record data object with subslot scope (see 7.3.1.7.1). The service is applicable to interface submodules only. This service is embedded in the service Write CIM NetConf Data Adjust, see 7.3.3.7.5.6.

The AR context is of no meaning for this service; see 7.3.1.7.7.4 for details.

Data

The parameter structure and the meaning of the parameters is the same as described in the attribute “TSN List of Time Data” (see 7.3.3.5.4).

7.3.3.5.5.4 Read TSN Time Data

This service allows reading TSN Time Data using a record data object with subslot scope (see 7.3.1.7.1). The service is applicable to interface submodules only. This service is embedded in the service Read CIM NetConf Data Real, see 7.3.3.7.5.6.

The AR context is of no meaning for this service; see 7.3.1.7.7.4 for details.

Data

The parameter structure and the meaning of the parameters is the same as described in the attribute “TSN List of Time Data” (see 7.3.3.5.4).

7.3.3.5.6 Behavior

The goal for each device is to get time synchronized as soon as possible. IEEE Std 802.1AS needs to determine the line delays between devices. This shall start immediately after powering on a device.

7.3.3.6 IEEE Std 802.1CB class

See IEEE Std 802.1CB.

7.3.3.7 IEEE Std 802.1Q class

7.3.3.7.1 Overview

The IEEE Std 802.1Q Bridge class controls the bridging according to IEEE Std 802.1Q extended either with TSN features according to IEEE Std 802.1Q or the special requirements for RT_CLASS_3.

This class is based on the IEEE Std 802.1Q Bridge ASE.

To run communication relationships using TSN features between devices within an NME domain a consistent network setup is needed.

To run RT_CLASS_3 communication relationships between devices within a RT_CLASS_3 domain, the conformity between the engineered and the real peers of every device within the domain shall be guaranteed.

7.3.3.7.2 Relations

The services are bound to other services as shown in Table 266:

Table 266 – Binding IEEE Std 802.1Q bridge services

Service	Binding	Usage
Write PD IR Data	AR:Record Data:Write	Used by IO controller or IO supervisor
Read PD IR Data	AR:Record Data:Read	Used by IO controller or IO supervisor
Write PD IR Subframe Data	AR:Record Data:Write	Used by IO controller or IO supervisor
Read PD IR Subframe Data	AR:Record Data:Read	Used by IO controller or IO supervisor
Read CIM NetConf Upload Network Attributes	AR:Record Data:Read	Used by IO controller or IO supervisor
Write CIM NetConf Data Adjust	AR:Record Data:Write	Used by IO controller or IO supervisor
Read CIM NetConf Data Adjust	AR:Record Data:Read	Used by IO controller or IO supervisor
Read CIM NetConf Data Real	AR:Record Data:Read	Used by IO controller or IO supervisor
Write CIM NetConf Sync Tree Data	AR:Record Data:Write	Used by IO controller or IO supervisor
Read CIM NetConf Sync Tree Data	AR:Record Data:Read	Used by IO controller or IO supervisor
Write CIM NetConf Stream Path Data	AR:Record Data:Write	Used by IO controller or IO supervisor
Read CIM NetConf Stream Path Data	AR:Record Data:Read	Used by IO controller or IO supervisor

7.3.3.7.3 Template

A Communication Interface Management object is described by the following template:

ASE: Communication Interface Management ASE

CLASS: IEEE Std 802.1Q

CLASS ID: not used

PARENT CLASS: IEEE Std 802.1Q

ATTRIBUTES:

- 1 (m) Key Attribute: Implicit
- 2 (m) Attribute: List of Interfaces
- 2.1 (m) Attribute: API
- 2.2 (m) Attribute: Slot Number
- 2.3 (m) Attribute: Subslot Number
- 2.4 (c) Attribute: PD IR Data
- 2.4.1 (m) Attribute: PD IR Global Data
- 2.4.1.1 (m) Attribute: IR Data UUID
- 2.4.1.2 (m) Attribute: Max Bridge Delay
- 2.4.1.3 (m) Attribute: Number of Ports

2.4.1.4	(m) Attribute:	List of Port Delays
2.4.1.4.1	(m) Attribute:	Max Port Tx Delay
2.4.1.4.2	(m) Attribute:	Max Port Rx Delay
2.4.1.4.3	(m) Attribute:	Max Line Rx Delay
2.4.1.4.4	(m) Attribute:	Yellow Time
2.4.2	(m) Attribute:	PD IR Frame Data
2.4.2.1	(m) Attribute:	Frame Data Properties
2.4.2.2	(m) Attribute:	List of PD IR Frame Data Elements
2.4.2.2.1	(m) Attribute:	Frame Send Offset
2.4.2.2.2	(m) Attribute:	Data Length
2.4.2.2.3	(m) Attribute:	Reduction Ratio
2.4.2.2.4	(m) Attribute:	Phase
2.4.2.2.5	(m) Attribute:	Frame ID
2.4.2.2.6	(m) Attribute:	Ethertype
2.4.2.2.7	(m) Attribute:	Rx Port
2.4.2.2.8	(m) Attribute:	Frame Details
2.4.2.2.8.1	(m) Attribute:	Meaning Frame Send Offset
2.4.2.2.9	(m) Attribute:	Tx Port Group
2.4.2.2.9.1	(m) Attribute:	Number Of Tx Port Group Array Elements
2.4.2.2.9.2	(m) Attribute:	Tx Port Group Array
2.4.3	(m) Attribute:	PD IR Begin End Data
2.4.3.1	(m) Attribute:	Red Guard
2.4.3.1.1	(m) Attribute:	Start of Red Frame ID
2.4.3.1.2	(m) Attribute:	End of Red Frame ID
2.4.3.2	(m) Attribute:	Number of Ports
2.4.3.3	(m) Attribute:	List of Ports
2.4.3.3.1	(m) Attribute:	Number of Assignments
2.4.3.3.2	(m) Attribute:	List of Assignments
2.4.3.3.2.1	(m) Attribute:	Tx Begin End Assignment
2.4.3.3.2.1.1	(m) Attribute:	Red Period Begin
2.4.3.3.2.1.2	(m) Attribute:	Green Period Begin
2.4.3.3.2.2	(m) Attribute:	Rx Begin End Assignment
2.4.3.3.2.2.1	(m) Attribute:	Red Period Begin
2.4.3.3.2.2.2	(m) Attribute:	Green Period Begin
2.4.3.3.3	(m) Attribute:	Number of Phases
2.4.3.3.4	(m) Attribute:	List of Phases
2.4.3.3.4.1	(m) Attribute:	Tx Phase Assignment
2.4.3.3.4.1.1	(m) Attribute:	Assigned Value For Reserved Begin
2.4.3.3.4.1.2	(m) Attribute:	Assigned Value For Reserved End
2.4.3.3.4.2	(m) Attribute:	Rx Phase Assignment
2.4.3.3.4.2.1	(m) Attribute:	Assigned Value For Reserved Begin
2.4.3.3.4.2.2	(m) Attribute:	Assigned Value For Reserved End
2.5	(c) Attribute:	PD IR Subframe Data
2.5.1	(m) Attribute:	List of Subframes
2.5.1.1	(m) Attribute:	Frame ID
2.5.1.2	(m) Attribute:	SF IOCR Properties
2.5.1.2.1	(m) Attribute:	Distributed Watchdog Factor
2.5.1.2.2	(m) Attribute:	Restart Factor for Distributed Watchdog
2.5.1.2.3	(m) Attribute:	DFP Mode
2.5.1.2.4	(m) Attribute:	DFP Redundant Path Layout
2.5.1.2.5	(m) Attribute:	SFCRC16
2.5.1.2.6	(m) Attribute:	DFP Direction
2.6	(c) Attribute:	CIM NetConf Upload Network Attributes

2.6.1	(m) Attribute:	List of Ports
2.6.1.1	(m) Attribute:	CIM Port ID
2.6.1.2	(m) Attribute:	MAU Type
2.6.1.3	(m) Attribute:	MAU Type Extension
2.6.1.4	(m) Attribute:	Number of Queues
2.6.1.5	(m) Attribute:	Port Capabilities
2.6.1.5.1	(m) Attribute:	TimeAware
2.6.1.5.1	(m) Attribute:	Preemption
2.6.1.5.1	(m) Attribute:	QueueMasking
2.6.2	(m) Attribute:	Transfer Time TX
2.6.3	(m) Attribute:	Transfer Time RX
2.6.4	(m) Attribute:	Supported Burst Size
2.6.4.1	(m) Attribute:	MaxNumberOfFrames
2.6.4.2	(m) Attribute:	MaxOctets
2.6.5	(m) Attribute:	MinIPG BreakingPoint
2.6.6	(m) Attribute:	MinIPG FrameSize
2.6.7	(m) Attribute:	FrameSendOffset Deviation
2.6.8	(m) Attribute:	List of Forwarding Delay
2.6.8.1	(m) Attribute:	Ingress Port
2.6.8.2	(m) Attribute:	Egress Port
2.6.8.3	(m) Attribute:	Stream Class
2.6.8.4	(m) Attribute:	Forwarding Mode
2.6.8.5	(m) Attribute:	Dependent Forwarding Delay
2.6.8.6	(m) Attribute:	Independent Forwarding Delay
2.7	(c) Attribute:	CIM NetConf Data
2.7.1	(m) Attribute:	NME Domain Data
2.7.1.1	(m) Attribute:	NME Domain Name Length
2.7.1.2	(m) Attribute:	NME Domain Name
2.7.1.3	(m) Attribute:	NME Domain UUID
2.7.2	(m) Attribute:	NME Data
2.7.2.1	(m) Attribute:	NME Name Length
2.7.2.2	(m) Attribute:	NME Name
2.7.2.3	(m) Attribute:	NME Name UUID
2.7.2.4	(m) Attribute:	NME Parameter UUID
2.7.3	(m) Attribute:	Send Clock Factor
2.7.4	(m) Attribute:	Network Deadline
2.7.5	(m) Attribute:	NME Domain VID Data
2.7.5.1	(m) Attribute:	NonStream VID
2.7.5.2	(m) Attribute:	Stream LOW VID
2.7.5.3	(m) Attribute:	Stream LOW Redundant VID
2.7.5.4	(m) Attribute:	Stream HIGH VID
2.7.5.5	(m) Attribute:	Stream HIGH Redundant VID
2.7.5.6	(m) Attribute:	NonStream B VID
2.7.5.7	(m) Attribute:	NonStream C VID
2.7.5.8	(m) Attribute:	NonStream D VID
2.7.6	(m) Attribute:	CIM Port Data
2.7.6.1	(m) Attribute:	List of Ports
2.7.6.1.1	(m) Attribute:	CIM Port ID
2.7.6.1.2	(m) Attribute:	Port Config
2.7.6.1.2.1	(m) Attribute:	Preemption
2.7.6.1.2.2	(m) Attribute:	Port Boundary
2.7.6.1.3	(c) Constraint:	Ingress Rate Limiter = bridge component port
2.7.6.1.3.1	(m) Attribute:	Unicast

2.7.6.1.3.1.1	(m) Attribute:	Committed Information Rate
2.7.6.1.3.1.2	(m) Attribute:	Committed Burst Size
2.7.6.1.3.1.3	(m) Attribute:	Coupling Flag
2.7.6.1.3.1.4	(m) Attribute:	Envelope
2.7.6.1.3.1.5	(m) Attribute:	Rank
2.7.6.1.3.2	(m) Attribute:	Multicast
2.7.6.1.3.2.1	(m) Attribute:	Committed Information Rate
2.7.6.1.3.2.2	(m) Attribute:	Committed Burst Size
2.7.6.1.3.2.3	(m) Attribute:	Coupling Flag
2.7.6.1.3.2.4	(m) Attribute:	Envelope
2.7.6.1.3.2.5	(m) Attribute:	Rank
2.7.6.1.3.3	(m) Attribute:	Broadcast
2.7.6.1.3.3.1	(m) Attribute:	Committed Information Rate
2.7.6.1.3.3.2	(m) Attribute:	Committed Burst Size
2.7.6.1.3.3.3	(m) Attribute:	Coupling Flag
2.7.6.1.3.3.4	(m) Attribute:	Envelope
2.7.6.1.3.3.5	(m) Attribute:	Rank
2.7.6.1.3.4	(m) Attribute:	RTA Class
2.7.6.1.3.4.1	(m) Attribute:	Committed Information Rate
2.7.6.1.3.4.2	(m) Attribute:	Committed Burst Size
2.7.6.1.3.4.3	(m) Attribute:	Coupling Flag
2.7.6.1.3.4.4	(m) Attribute:	Envelope
2.7.6.1.3.4.5	(m) Attribute:	Rank
2.7.6.1.3.5	(m) Attribute:	RT Class
2.7.6.1.3.5.1	(m) Attribute:	Committed Information Rate
2.7.6.1.3.5.2	(m) Attribute:	Committed Burst Size
2.7.6.1.3.5.3	(m) Attribute:	Coupling Flag
2.7.6.1.3.5.4	(m) Attribute:	Envelope
2.7.6.1.3.5.5	(m) Attribute:	Rank
2.7.6.1.4	(c) Constraint:	Egress Rate Limiter = end station component port
2.7.6.1.4.1	(m) Attribute:	Queue 0
2.7.6.1.4.1.1	(m) Attribute:	Committed Information Rate
2.7.6.1.4.1.2	(m) Attribute:	Committed Burst Size
2.7.6.1.4.1.3	(m) Attribute:	Coupling Flag
2.7.6.1.4.1.4	(m) Attribute:	Envelope
2.7.6.1.4.1.5	(m) Attribute:	Rank
2.7.6.1.4.2	(m) Attribute:	Queue 1
2.7.6.1.4.2.1	(m) Attribute:	Committed Information Rate
2.7.6.1.4.2.2	(m) Attribute:	Committed Burst Size
2.7.6.1.4.2.3	(m) Attribute:	Coupling Flag
2.7.6.1.4.2.4	(m) Attribute:	Envelope
2.7.6.1.4.2.5	(m) Attribute:	Rank
2.7.6.1.4.3	(m) Attribute:	Queue 2
2.7.6.1.4.3.1	(m) Attribute:	Committed Information Rate
2.7.6.1.4.3.2	(m) Attribute:	Committed Burst Size
2.7.6.1.4.3.3	(m) Attribute:	Coupling Flag
2.7.6.1.4.3.4	(m) Attribute:	Envelope
2.7.6.1.4.3.5	(m) Attribute:	Rank
2.7.6.1.4.4	(m) Attribute:	Queue 3
2.7.6.1.4.4.1	(m) Attribute:	Committed Information Rate
2.7.6.1.4.4.2	(m) Attribute:	Committed Burst Size
2.7.6.1.4.4.3	(m) Attribute:	Coupling Flag
2.7.6.1.4.4.4	(m) Attribute:	Envelope

2.7.6.1.4.4.5	(m) Attribute:	Rank
2.7.6.1.4.5	(m) Attribute:	Queue 4
2.7.6.1.4.5.1	(m) Attribute:	Committed Information Rate
2.7.6.1.4.5.2	(m) Attribute:	Committed Burst Size
2.7.6.1.4.5.3	(m) Attribute:	Coupling Flag
2.7.6.1.4.5.4	(m) Attribute:	Envelope
2.7.6.1.4.5.5	(m) Attribute:	Rank
2.7.6.1.5	(m) Attribute:	List of QueueConfigs
2.7.6.1.5.1	(m) Attribute:	Queue ID
2.7.6.1.5.2	(m) Attribute:	TciPcp Priority
2.7.6.1.5.3	(m) Attribute:	Shaper
2.7.6.1.5.4	(m) Attribute:	Preemption Mode
2.7.6.1.5.5	(m) Attribute:	TimeOffset Unmask
2.7.6.1.5.6	(m) Attribute:	TimeOffset Mask
2.7.7	(m) Attribute:	TSN Time Data
2.8	(c) Attribute:	CIM NetConf Sync Forward Data
2.8.1	(m) Attribute:	List of Sync Domains
2.8.1.1	(m) Attribute:	Time Domain Number
2.8.1.2	(m) Attribute:	List of Ports
2.8.1.2.1	(m) Attribute:	CIM Port ID
2.8.1.2.2	(m) Attribute:	Port Sync Properties
2.9	(c) Attribute:	CIM NetConf Stream Forward Data
2.9.1	(m) Attribute:	List of Streams
2.9.1.1	(m) Attribute:	Stream ID
2.9.1.2	(m) Attribute:	TCI.VID
2.9.1.3	(m) Attribute:	Stream DA
2.9.1.4	(m) Attribute:	RxPort ID
2.9.1.5	(m) Attribute:	List of TxPorts
2.9.1.5.1	(m) Attribute:	TxPort ID
2.9.1.6	(m) Attribute:	Stream Time To Live
2.10	(c) Attribute:	CIM NetConf Expected Network Data
2.10.1	(m) Attribute:	List of Ports
2.10.1.1	(m) Attribute:	CIM Port ID
2.10.1.2	(m) Attribute:	MAU Type
2.10.1.3	(m) Attribute:	Number of Queues
2.10.1.4	(m) Attribute:	Port Capabilities
2.10.1.4.1	(m) Attribute:	TimeAware
2.10.1.4.1	(m) Attribute:	Preemption
2.10.1.4.1	(m) Attribute:	QueueMasking
2.10.1.5	(m) Attribute:	List of Peers
2.10.1.5.1	(m) Attribute:	Peer Port Name Length
2.10.1.5.2	(m) Attribute:	Peer Port Name
2.10.1.5.3	(m) Attribute:	Peer Station Name Length
2.10.1.5.4	(m) Attribute:	Peer Station Name
2.10.1.5.5	(m) Attribute:	Line Delay
2.10.2	(m) Attribute:	List of Forwarding Delay
2.10.2.1	(m) Attribute:	Ingress Port
2.10.2.2	(m) Attribute:	Egress Port
2.10.2.3	(m) Attribute:	Stream Class
2.10.2.4	(m) Attribute:	Forwarding Mode
2.10.2.5	(m) Attribute:	Dependent Forwarding Delay
2.10.2.6	(m) Attribute:	Independent Forwarding Delay

SERVICES:

1	(o) OpsService:	Write PD IR Data
2	(o) OpsService:	Read PD IR Data
3	(o) OpsService:	Write PD IR Subframe Data
4	(o) OpsService:	Read PD IR Subframe Data
5	(o) OpsService:	Read CIM NetConf Upload Network Attributes
6	(o) OpsService:	Write CIM NetConf Data Adjust
7	(o) OpsService:	Read CIM NetConf Data Adjust
8	(o) OpsService:	Read CIM NetConf Data Real
9	(o) OpsService:	Write CIM NetConf Sync Tree Data
10	(o) OpsService:	Read CIM NetConf Sync Tree Data
11	(o) OpsService:	Write CIM NetConf Stream Path Data
12	(o) OpsService:	Read CIM NetConf Stream Path Data
13	(o) OpsService:	Write CIM NetConf Expected Network Data
14	(o) OpsService:	Read CIM NetConf Expected Network Data

7.3.3.7.4 Attributes

Implicit

The key attribute Implicit indicates that the Communication Interface Management object is implicitly addressed by the service.

List of Interfaces

This attribute list lists all interfaces related to the Communication Interface Management object. It contains the following attributes:

API

This attribute contains the API containing the interface submodule.

The interface submodule is always assigned to the default API.

Attribute type: Unsigned32

Allowed values: 0x00000000

Slot Number

This attribute contains the slot number of the module containing the interface submodule.

Attribute type: Unsigned16

Allowed values: 0x0000 to 0x7FFF

Subslot Number

This attribute contains the subslot number of the interface.

Attribute type: Unsigned16

Allowed Values shall be used according to Table 246.

PD IR Data

This optional attribute shall be present only if the Bridge Mode is RT_CLASS_3. It contains the following attributes:

PD IR Global Data

This attribute contains the global IR data used by the engineering system as computation base. The device shall adjust its physical characteristics to match the global data. The attribute is composed of the following elements:

IR Data UUID

This attribute contains the unique identifier of the isochronous realtime project which is configured by the engineering system.

Attribute type: UUID

Max Bridge Delay

This attribute indicates the maximum bridge delay of the interface in multiples of 1 ns.

Attribute type: Unsigned32

Time base: 1 ns

Allowed values: 0x00000000 (“unknown”), 0x00000001 to 0x3B9AC9FF

Number of Ports

This attribute indicates the number of ports the List of Port Delays contains.

Attribute type: Unsigned32

Allowed values: 0x00000001 to 0x000000FF

List of Port Delays

This list contains the port transmit and receive delays for each port, starting with Port 1 up to the port number indicated by the attribute Number of Ports. A list element is composed of the following elements:

Max Port Tx Delay

This attribute indicates the maximum port transmission delay in multiples of 1 ns.

Attribute type: Unsigned32

Time base: 1 ns

Allowed values: 0x00000000 (“unknown”), 0x00000001 to 0x3B9AC9FF

Max Port Rx Delay

This attribute indicates the maximum port receive delay in multiples of 1 ns.

Attribute type: Unsigned32

Time base: 1 ns

Allowed values: 0x00000000 (“unknown”), 0x00000001 to 0x3B9AC9FF

Max Line Rx Delay

This attribute indicates the maximum line receive delay in multiples of 1 ns.

Attribute type: Unsigned32

Time base: 1 ns

Allowed values: 0x00000000 (“no delay, forward as soon as possible”), 0x00000001 to 0x3B9AC9FF

Yellow Time

This attribute indicates the yellow time in multiples of 1 ns.

The yellow time defines the length of the YELLOW period. It allows a bridge to optimize the forwarding of frames belonging to the protocols PTCP, MRP, RT and IEEE Std 802.1AS.

Attribute type: Unsigned32

Time base: 1 ns

Allowed values: 0x00001AE0 to 0x0001E848

PD IR Frame Data

This attribute contains the IR frame data. The attribute is composed of the following elements:

Frame Data Properties

This attribute contains of the following elements:

Forwarding Mode

This attribute describes the settings for the forwarding mode being used for RT_CLASS_3 frames.

Attribute type: Unsigned8

The allowed values are shown in Table 267:

Table 267 – Allowed values of Forwarding Mode

Value(decimal)	Meaning
0	Absolute mode The FrameSendOffset contains the sending time for a forwarded frame
1	Relative mode The FrameSendOffset shall contain the sending time of a forwarded frame or the “Best effort” value.

Fast Forwarding Multicast MAC Add

This attribute describes the settings for the destination address being used for RT_CLASS_3 frames.

Attribute type: Unsigned8

The allowed values are shown in Table 268:

Table 268 – Allowed values of Fast Forwarding Multicast MAC Add

Value(decimal)	Meaning
0	Use interface MAC destination unicast address (legacy)
1	Use RT_CLASS_3 destination multicast address
2	Use Fast Forwarding Multicast MAC address

List of PD IR Frame Data Elements

This list contains information for all frames in the frame ID range 3 (see IEC 61158-6-10). This covers path information (i.e. on which ports a particular frame is to be forwarded) and time information (i.e. when a particular frame is to be sent).

The path information is described by the attribute Tx Port Group, the time information by Frame Send Offset.

Typically, the Frame Send Offset is set to a value composed by the engineering system. A special case is setting Frame Send Offset to 0, indicating that the frame is to be sent “as fast as possible”; i.e. within RED the frame will leave the device with a slight time variation. For a frame fed in by the device, the Frame Send Offset indicated here shall match the Frame Send Offset as indicated in the Communication Relationship class.

If the forwarding mode is set to “absolute mode”, the device acts as absolute forwarder. In this case the list contains all frames which are injected, received and forwarded by the device.

If the forwarding mode is set to “relative mode”, the device acts as a relative forwarder. In this case the list contains the frames injected and received by the device. The rules for frames to be forwarded are as follows.

If a particular frame with a Frame ID in the RT_CLASS_3 singlecast range is received on some port and the device is not end point for it, the frame is transmitted with a constant delay on the other port.

If a particular frame with a Frame ID in the RT_CLASS_3 multicast range is received on some port, the frame is transmitted with a constant delay on the other port; independent whether the device is end point for it or not.

Since frames are forwarded “on the other port”, the relative mode is only applicable for a two port device.

The list is composed of the following list elements:

Frame Send Offset

This attribute indicates the offset relative to the beginning of the related send clock cycle when the particular frame shall be sent in multiples of 1 ns.

Attribute type: Unsigned32

Time base: 1 ns

Allowed values: 0x00000000 to 0x003D08FF

NOTE 1 The minimal planned gap between two frames out of frame ID range 3 (see IEC 61158-6-10) is 1 120 ns.

Data Length

This attribute contains the overall length of the transmitted Data (CSDU or else CSFSU Length); thus for a dynamically packed frame it indicates the length of all subframes including the subframe this IO device contributes.

Attribute type: Unsigned16

Allowed Values for RT_CLASS_3: 40 to 1 440

NOTE 2 The lower bound of the C_SDU length is derived from the minimum frame size of an Ethernet frame (= 64 octets). On subtracting the size of the header (i.e. destination address, source address and type) and the size of the footer (i.e. FCS) 46 octets are left. On subtracting the size of the RT frame header (i.e. Frame ID) and footer (i.e. cycle counter, data status and transfer status) the minimum length of the C_SDU is 40 octets.

Reduction Ratio

This attribute contains the reduction ratio of the frame compared to the send clock.

Attribute type: Unsigned16

The allowed values are shown in IEC 61158-6-10.

Phase

This attribute indicates the phase when the particular frame shall be sent.

Attribute type: Unsigned16

Allowed values: 1 until current value of the attribute Reduction Ratio

Frame ID

This attribute contains the identifier of the particular frame which is configured by the engineering system.

Attribute type: Unsigned16

The allowed values are shown in table “FrameID range 3” in IEC 61158-6-10.

Ethertype

This attribute indicates the Ether type to use for the frame.

Attribute type: Unsigned16

Allowed values: 0x8892

Rx Port

This attribute contains the number of the receiving port. The value LOCAL_INJECTION shall be used for frames received by this device. The value PORT_1 to PORT_255 shall be used for frames to be forwarded.

Attribute type: Unsigned8

Allowed values: LOCAL_INJECTION, PORT_1 to PORT_255

Frame Details

This attribute consists of the following elements:

Meaning Frame Send Offset

This attribute indicates the detailed meaning of the attribute Frame Send Offset.

The attribute shall be set to TX_FRAME, when the attribute Frame Send Offset indicates the time, when a frame out of frame ID range 3 (see IEC 61158-6-10) is to be transmitted.

NOTE 3 A frame is locally received, when the attribute Rx Port is set to LOCAL_INJECTION.

Attribute type: Unsigned8

Allowed values: TX_FRAME

Tx Port Group

This attribute indicates where the particular frame shall be transmitted. It consists of the following elements:

Number Of Tx Port Group Array Elements

This field shall count the succeeding Tx Port Group Array entries.

Attribute type: Unsigned8

Allowed values: 1, 3, 5, 7, 9, 11, 13, 15, ..., 31, 33.

Tx Port Group Array

The Tx Port Group Array is an array of octets that shall contain at least one and at most 33 octets referred to as Tx Port Group Array entry. A Tx Port Group Array Element shall consist of at least one and at most 8 TxPort entries referred to as TxPortGroup entry 0 to TxPortGroup entry 7. Therefore, the number of TxPortGroup octet corresponds to the number of ports within a device and shall be calculated as follows:

$$N = M_{\text{highest}} \text{ DIV } 8 + 1 \quad (20)$$

where

N is the number of TxPortGroup octets or the number of array elements,
 M_{highest} is the highest number of TxPorts within a device (maximum 255).

The unused TxPort entries shall be set to zero.

The last TxPortGroup octet (octet N) does not in every case contain all 8 TxPort entries. If $M_{\text{highest}} \text{ MOD } 8 \neq 7$ the octet N is not fully filled and the remaining bits shall be set to zero referred to as Padding Bits.

NOTE 4 The term DIV stands for division without remainder. The term MOD stands for the remainder of the division.

Bit 0: TxPortEntry_0

This bit shall be set with the values according to Table 269 if the TxPort with the number that meets $m \text{ MOD } 8 = 0$ is present. A padding bit shall be used if no TxPort is present.

Table 269 – Tx Port Entry

Value (hexadecimal)	Meaning
0x00	Transmission off
0x01	Transmission on

The TxPort of local injection is always placed in TxPortEntry_0 of the TxPortGroup octet number one. Thus local injection is mapped onto port 0.

Bit 1: TxPortEntry_1

This bit shall be set with the values according to Table 269 if the TxPort with the number that meets $m \text{ MOD } 8 = 1$ is present. A padding bit shall be used if no TxPort is present.

Bit 2: TxPortEntry_2

This bit shall be set with the values according to Table 269 if the TxPort with the number that meets $m \text{ MOD } 8 = 2$ is present. A padding bit shall be used if no TxPort is present.

Bit 3: TxPortEntry_3

This bit shall be set with the values according to Table 269 if the TxPort with the number that meets $m \text{ MOD } 8 = 3$ is present. A padding bit shall be used if no TxPort is present.

Bit 4: TxPortEntry_4

This bit shall be set with the values according to Table 269 if the TxPort with the number that meets $m \text{ MOD } 8 = 4$ is present. A padding bit shall be used if no TxPort is present.

Bit 5: TxPortEntry_5

This bit shall be set with the values according to Table 269 if the TxPort with the number that meets $m \text{ MOD } 8 = 5$ is present. A padding bit shall be used if no TxPort is present.

Bit 6: TxPortEntry_6

This bit shall be set with the values according to Table 269 if the TxPort with the number that meets $m \bmod 8 = 6$ is present. A padding bit shall be used if no TxPort is present.

Bit 7: TxPortEntry_7

This bit shall be set with the values according to Table 269 if the TxPort with the number that meets $m \bmod 8 = 7$ is present. A padding bit shall be used if no TxPort is present.

Where m is the number of the current TxPort with $1 \leq m \leq N$.

PD IR Begin End Data List

This list contains the Red Guard and the bandwidth administration information for the traffic classes RED and GREEN. It is composed of the following list elements.

Red Guard

This attribute controls the behavior of the receiving ports on Realtime Class 3 Port State Machine (RTC3PSM) being in state “Run”, i.e. the Rx port is in mode RED.

The Red Guard prevents wrong frames of entering the traffic class RED as a first filtering layer. All frames with a frame ID below Start of Red Frame ID or above End of Red Frame ID are blocked during the RED period.

The second filtering layer is provided by the IR Frame Data Elements. Only a frame crossing both filters is entering the traffic class RED. If the IR Frame Data is missing, the second filtering layer is omitted.

Start of Red Frame ID

This attribute defines the lower boundary of the Red Guard. The value shall be set to a lower value than the content of the attribute End of Red Frame ID.

Attribute type: Unsigned16

Allowed values: 0x0080 to 0x7FFF

Default value: 0x0100

End of Red Frame ID

This attribute defines the upper boundary of the Red Guard.

Attribute type: Unsigned16

Allowed values: 0x0080 to 0x7FFF

Default value: 0x7FFF

Number of Ports

This attribute contains the number of elements in the List of Ports.

Attribute type: Unsigned32

Allowed values: 0x00000001 to 0x000000FF

List of Ports

This list contains the bandwidth administration information. It is composed of the following list elements.

Number of Assignments

This attribute contains the number of elements in the List of Assignments. A device shall support at a minimum 5 different assignments (four for phases with reserved periods (RED) and one for phases without any reserved period).

Within the assignments at a minimum up to two different Red Period Begin values (one of them for phases without any reserved period) and up to five different Green Period Begin values (one of them for phases without any reserved period) shall be supported.

A phase without any reserved period is indicated by having Red Period Begin and Green Period Begin set to 0x0.

The number of assignments supported by the device is indicated by GSD.

Attribute type: Unsigned32

Allowed values: 0x00000005 to 0x00000010

List of Assignments

This list contains the assignments. A particular list element contains bandwidth information. A list element is composed of the following attributes:

Tx Begin End Assignment

This attribute defines the RED and GREEN period for Tx.

Red Period Begin

This attribute indicates the offset relative to the beginning of the send clock cycle when the RED period shall begin in multiples of 1 ns.

Attribute type: Unsigned32

Time base: 1 ns

Allowed values: 0x00000000

Green Period Begin

This attribute indicates the offset relative to the beginning of the send clock cycle when the GREEN period shall begin in multiples of 1 ns.

Attribute type: Unsigned32

Time base: 1 ns

Allowed values: 0x00000000 to 0x003D08FF

Rx Begin End Assignment

This attribute defines the RED and GREEN period for Rx.

Red Period Begin

This attribute indicates the offset relative to the beginning of the send clock cycle when the RED period shall begin in multiples of 1 ns.

Attribute type: Unsigned32

Time base: 1 ns

Allowed values: 0x00000000

Green Period Begin

This attribute indicates the offset relative to the beginning of the send clock cycle when the GREEN period shall begin in multiples of 1 ns.

Attribute type: Unsigned32

Time base: 1 ns

Allowed values: shall be set to the end of the RED period.

Number of Phases

This attribute contains the number of elements in the List of Phases used for assignments. Up to 16 different phase assignments are supported.

A particular frame's phase is mapped onto the assignment phase by equation (21)

$$\text{Assignment Phase} = \text{Frame Phase} \text{ MOD } \text{Number of Phases.} \quad (21)$$

where

<i>Assignment Phase</i>	is the assignment phase
<i>Frame Phase</i>	is the particular frame phase
<i>Number of Phases</i>	is the number of elements in the List of Phases

Attribute type: Unsigned32

Allowed values: 1, 2, 4, 8, 16

List of Phases

This attribute assigns to a particular phase the appropriate period begins.

For the assignment of the particular begins of that phase, the rules as stated in Table 270 apply.

Table 270 – Dependencies of RedPeriodBegin and GreenPeriodBegin

Value (hexadecimal)	Meaning
RedPeriodBegin < GreenPeriodBegin	Only a RED period is defined
RedPeriodBegin = GreenPeriodBegin = 0	No reserved period is defined
RedPeriodBegin > GreenPeriodBegin	Not used

Tx Phase Assignment

This attribute assigns the values of the RED and GREEN period on all Tx ports for a particular phase.

Assigned Value For Reserved Begin

This attribute contains the positional number of a particular element in the List of Assignments. The content of the attribute Red Period Begin within element's attribute Tx Begin End Assignment is used as begin of the RED period on the Tx port.

Attribute type: Unsigned8

Allowed values: 0 to Number of Assignments – 1

Assigned Value For Reserved End

This attribute contains the positional number of a particular element in the List of Assignments. The content of the attribute Green Period Begin within element's attribute Tx Begin End Assignment is used as begin of the GREEN period on the Tx port.

Attribute type: Unsigned8

Allowed values: 0 to Number of Assignments – 1

Rx Phase Assignment

This attribute assigns the values of the RED and GREEN period on all Rx ports for a particular phase.

Assigned Value For Reserved Begin

This attribute contains the positional number of a particular element in the List of Assignments. The content of the attribute Red Period Begin within element's attribute Rx Begin End Assignment is used as begin of the RED period on the Rx port.

Attribute type: Unsigned8

Allowed values: 0 to Number of Assignments – 1

Assigned Value For Reserved End

This attribute contains the positional number of a particular element in the List of Assignments. The content of the attribute Green Period Begin within element's attribute Rx Begin End Assignment is used as begin of the GREEN period on the Rx port.

Attribute type: Unsigned8

Allowed values: 0 to Number of Assignments – 1

PD IR Subframe Data

This optional attribute shall be present only if the Bridge Mode is set to RT_CLASS_3. lists the DFP information. It consists of the following attributes:

List of Subframes

This attribute lists all DFP subframes for which the IO device is involved. A list element includes the following attributes:

Frame ID

This parameter contains the frame ID of the related DFP IO CR.

Attribute type: Unsigned16

Allowed values: according to the Frame ID range usable for DFP as defined in IEC 61158-6-10.

SF IOCR Properties

This attribute describes the properties for the DFP frame. It contains the following attributes:

Distributed Watchdog Factor

This attribute contains the distributed watchdog factor. For details to the distributed watchdog, see Annex E.

The attribute shall be set to "0" only if the IO controller is able to work on subframe level.

Table 271 – Distributed Watchdog Factor

Value (hexadecimal)	Meaning	Description
0x00	Mandatory	Distributed Watchdog shall be disabled
0x01 – 0x02	Optional	The value "n" leads to an AR termination for n missed frames.
0x03 – 0x1F	Mandatory	An expiration shall be signaled to the application as a hint for a possible communication disturbance.
0x20 – 0xFF	Optional	

Time base: $\text{SendClockFactor} \times \text{ReductionRatio} \times 31,25 \mu\text{s}$

Attribute type: Unsigned8

Allowed values: see Table 271

Restart Factor for Distributed Watchdog

This attribute describes the restart factor for the distributed watchdog.

The attribute is set to “0” only if the IO controller is able to work on subframe level.

Table 272 – Restart Factor For Distributed Watchdog

Value (hexadecimal)	Meaning	Description
0x00	Mandatory	No restart delay necessary
0x01 – 0x09	Optional	Less than 1 s restart delay
0x0A – 0x50	Mandatory	1 s to 8 s restart delay
0x51 – 0xFF	Optional	More than 8 s restart delay

The RestartFactorForDistributedWD shall only be used if the SFIOCRProperties.DistributedWatchDogFactor is not set to zero.

NOTE 5 The RestartForDistributedWDTime is defined as minimum time having an accuracy between ‘-0’ and ‘+1 s’.

Time base: 100 ms

Attribute type: Unsigned8

Allowed values: see Table 272

DFP Mode

This attribute describes the DFP mode of the frame.

Table 273 – DFP Mode

Value (hexadecimal)	Meaning	Description
0x00	Mandatory	End node mode
0x01 – 0x3F	Mandatory	Concatenating mode Own Subframe position
0x40 – 0xFF	Optional	Concatenating mode Own Subframe position

Attribute type: Unsigned8

Allowed values: see Table 273

DFP Redundant Path Layout

This attributed describes the layout of the redundant DFP frame.

Table 274 – SFIOCRProperties.DFPRedundantPathLayout

Value (hexadecimal)	Meaning	Description
0x00	Mandatory	The Frame for the redundant path, coded by the FrameID with the least significant bit set to one, shall contain the ordering shown by SubframeData.
0x01	Mandatory	The Frame for the redundant path, coded by the FrameID with the least significant bit set to one, shall contain the inverse ordering of the SubframeData.

Attribute type: Boolean

Allowed values: see Table 274

SFCRC16

This attribute indicates the validity of the subframe checksum and the subframe's cycle counter.

Table 275 – SFCRC16

Value (hexadecimal)	Description
0x00	SFCRC16 and SFCycleCounter shall be created or set to zero by the sender and not checked by the receiver.
0x01	SFCRC16 and SFCycleCounter shall be created by the sender and checked by the receiver.

Attribute type: Boolean

Allowed values: see Table 275

DFP Direction

This attribute indicates the direction of the conveyance a DFP frame.

Attribute type: Boolean

Allowed values: DFP_INBOUND, DFP_OUTBOUND

CIM NetConf Upload Network Attributes

This optional attribute shall be present only if the Bridge Mode is 802.1Q. It contains the following attributes:

List of Ports

This attribute list consists of the following attributes:

CIM Port ID

This attribute identifies an end station component or bridge component port.

Attribute type: CIMPortID

MAU Type

This attribute contains the current MAU Type of the port according to the IEEE Std 802.3 ASE.

MAU Type Extension

This attribute contains the current MAU Type Extension of the port according to this specification.

Allowed values: NO_SUBMAUTYPE, POF, APL

Number of Queues

This parameter contains the number of available transmit queues of the port.

Attribute type: Unsigned8

Allowed values: 6, 8

Port Capabilities

This attribute consists of the following attributes:

TimeAware

This attribute indicates the usability of this port for a time-aware system

Allowed values: NOT_USABLE, USABLE

Preemption

This attribute indicates the availability of preemption for this port. This is only valid with TimeAware USABLE.

Allowed values: NOT_SUPPORTED, SUPPORTED

QueueMasking

This attribute indicates the availability of queue masking for this port. This is only valid with TimeAware USABLE.

Allowed values: NOT_SUPPORTED, SUPPORTED

Transfer Time TX

This attribute contains the amount of time to transfer a frame from the local application to the sending port. If there is more than one port, the maximum value is used.

Attribute type: Unsigned32

Allowed values: 0x00000001 to 0x000F4240

Time base: 1 ns

Transfer Time RX

This attribute contains the amount of time to transfer a frame from the receiving port to the local application. If there is more than one port, the maximum value is used.

Attribute type: Unsigned32

Allowed values: 0x00000001 to 0x000F4240

Time base: 1 ns

Supported Burst Size

This attribute list consists of the following attributes:

MaxNumberOfFrames

This attribute contains the maximum number of frames per gating cycle.

Allowed values: 0x0001 to 000FF

MaxOctets

This attribute contains the maximum number of octets per gating cycle.

Allowed values: 0x0040 to 0x6400

MinIPG BreakingPoint

This attribute contains the frame size in octets when the minimal IPG is no longer reachable.

Allowed values: 0x0040 to 0x07D0

Default: 0x0040

MinIPG FrameSize

This attribute contains the reachable interframe gap in bit times for a sequence of minimum sized frames.

Allowed values: 0x0060 to 0x03E8

Default: 0x0060

FrameSendOffset Deviation

This attribute contains the maximum permissible deviation, later than expected, to the FrameSendOffset.

Allowed values: 0x000A to 0x03E8

Default: 0x000A

Time base: 1 ns

List of Forwarding Delay

This attribute list consists of the following attributes:

Ingress Port

This attribute is the first key of the list and contains the bridge component port defined as ingress.

Attribute type: CIMPortID

Egress Port

This attribute is the second key of the list and contains the bridge component port defined as egress.

Attribute type: CIMPortID

Stream Class

This attribute is the third key of the list and contains the stream class.

Attribute type: Unsigned8

Allowed values: STREAM_LOW, STREAM_LOW_REDUNDANT, STREAM_HIGH, STREAM_HIGH_REDUNDANT

Forwarding Mode

This attribute contains the available forwarding mode for this combination.

Attribute type: Unsigned8

Allowed values: STORE_FORWARD, CUT_THROUGH

Dependent Forwarding Delay

This attribute contains the bridge delay for one octet of the frame. Shall be set to zero for CUT_THROUGH.

Allowed values: 0, 0x00000001 to 0x000C3500

Time base: 1 ns

Independent Forwarding Delay

This attribute contains the bridge delay regardless of the size of the frame.

Attribute type: Unsigned32

Allowed values: 0x00000001 to 0x000F4240

Time base: 1 ns

CIM Network Config Data

This optional attribute contains the basic configuration of a device that is integrated into an NME domain. The values of the corresponding DCP attributes shall be used.

NME Domain Data

This attribute consists of the following elements:

NME Domain Name Length

This attribute contains the length of the NME Domain Name.

Attribute type: Unsigned8

Allowed values: 0, 1 to 240

NME Domain Name

This attribute contains the name of the NME domain. All devices with the same NME Domain Name are members of this NME domain.

Attribute type: OctetString

NME Domain UUID

This attribute contains the MD5 hash of the NME Domain Name. NIL if the NME Domain Name Length is zero.

Attribute type: OctetString[16]

NME Data

This attribute shall contain the following attributes:

NME Name Length

This attribute contains the length of the NME Name. Zero means a non-parameterized NME ASE.

Attribute type: Unsigned8

Allowed values: 0, 1 to 240

NME Name

This attribute contains the name of the NME device which has written the local configuration. NIL indicates a non-parameterized NME ASE.

Attribute type: OctetString

NME Name UUID

This attribute contains a UUID to identify the NME Name. NIL means, there is no assigned NME.

Attribute type: UUID

NME Parameter UUID

This attribute contains a UUID to identify an NME parameter set. NIL indicates a non-parameterized NME ASE.

Attribute type: UUID

SendClock Factor

This attribute contains the Send Clock Factor for the interface.

Attribute type: Unsigned16

Time base: 31,25 µs

Allowed values: 1 to 128

Default Value: 32

Network Deadline

This attribute defines the latest point in time within a SendClock in which a frame is to be received. The value counts from the end of the SendClock to the beginning, thus, zero means no Network Deadline.

Attribute type: Unsigned32

Allowed values: 0, 0x00000001 to 0xFFFFFFFF

Default Value: 0

Time base: µs

NME Domain VID Data

This attribute consists of the VIDs for which this document is responsible. All VIDs shall be zero if not configured.

NonStream VID

This attribute contains the TCI.VID for all acyclic protocols and the cyclic stream, class RT.

Attribute type: Unsigned16

Stream LOW VID

This attribute contains the TCI.VID for the low priority cyclic data.

Attribute type: Unsigned16

Stream LOW Redundant VID

This attribute contains the TCI.VID for the low priority cyclic data for the redundant path.

Attribute type: Unsigned16

Stream HIGH VID

This attribute contains the TCI.VID for the high priority cyclic data.

Attribute type: Unsigned16

Stream HIGH Redundant VID

This attribute contains the TCI.VID for the high priority cyclic data for the redundant path.

Attribute type: Unsigned16

NonStream B VID

This attribute contains the TCI.VID intended for pass-through traffic. Zero means a disabled traffic.

Attribute type: Unsigned16

NonStream C VID

This attribute contains the TCI.VID intended for pass-through traffic. Zero means a disabled traffic.

Attribute type: Unsigned16

NonStream D VID

This attribute contains the TCI.VID intended for pass-through traffic. Zero means a disabled traffic.

Attribute type: Unsigned16

CIM Port Data

This attribute consists of the following attributes:

List of Ports

This attribute list consists of the following attributes:

CIM Port ID

This attribute identifies an end station component or bridge component ports.

Attribute type: CIMPortID

Port Config

This attribute consists of the following attributes:

Preemption

This attribute contains TRUE if preemption is enabled for this port.

Attribute type: Boolean

Port Boundary

This attribute contains the boundary information for this port.

Attribute type: Unsigned8

Allowed values: NO_BOUNDARY, BOUNDARY

Ingress Rate Limiter

This attribute exists if the CIM Port ID identifies a bridge component port and consists of the following attributes:

Unicast

This attribute consists of the following attributes:

Committed Information Rate

This attribute contains the bandwidth limit according to the line speed.

Attribute type: Unsigned16

Attribute unit: 0.1 Mbps

Allowed values: 0x0001 – 0xFFFF

Committed Burst Size

This attribute contains the burst size limit according to the line speed.

Attribute type: Unsigned16

Attribute unit: Octets

Allowed values: 0x0001 – 0xFFFF

Coupling Flag

This attribute contains the coupling information between rate limiters within the same envelope.

Attribute type: Unsigned8

Allowed values: NO_COUPLING, COUPLING

Envelope

This attribute contains the assigned envelope for the rate limiter.

Attribute type: Unsigned8

Allowed values: BEST_EFFORT, RT_CLASS

Rank

This attribute contains the rank information between rate limiters within the same envelope.

Attribute type: Unsigned8

Allowed values: RANK_1, RANK_2, RANK_3, RANK_4, RANK_5

Multicast

This attribute consists of the same attributes as Unicast.

Broadcast

This attribute consists of the same attributes as Unicast.

RTA Class

This attribute consists of the same attributes as Unicast.

RT Class

This attribute consists of the same attributes as Unicast.

Egress Rate Limiter

This attribute exists if the CIM Port ID identifies an end station component port and consists of the following attributes:

Queue 0

This attribute consists of the following attributes:

Committed Information Rate

This attribute contains the bandwidth limit according to the line speed.

Attribute type: Unsigned16

Attribute unit: Mbps

Allowed values: 0x0001 – 0xFFFF

Committed Burst Size

This attribute contains the burst size limit according to the line speed.

Attribute type: Unsigned16

Attribute unit: Octets

Allowed values: 0x0001 – 0xFFFF

Coupling Flag

This attribute contains the coupling information between rate limiters within the same envelope.

Attribute type: Unsigned8

Allowed values: NO_COUPLING, COUPLING

Envelope

This attribute contains the assigned envelope for the rate limiter.

Attribute type: Unsigned8

Allowed values: BEST_EFFORT

Rank

This attribute contains the rank information between rate limiters within the same envelope.

Attribute type: Unsigned8

Allowed values: RANK_1, RANK_2, RANK_3, RANK_4, RANK_5

Queue 1

This attribute consists of the same attributes as Queue 0.

Queue 2

This attribute consists of the same attributes as Queue 0.

Queue 3

This attribute consists of the same attributes as Queue 0.

Queue 4

This attribute consists of the same attributes as Queue 0.

List of QueueConfigs

This attribute consists of the following attributes:

Queue ID

This attribute contains the identification of the queue.

Attribute type: Unsigned16

Allowed values: 0 to 7

TciPcp Priority

This attribute contains the priority to traffic class mapping of the TCI.PCP field.

Attribute type: Unsigned8

Allowed values: 0 to 7

Shaper

This attribute contains the used shaper definition for this port and queue.

Attribute type: Unsigned8

Allowed values: Strict priority (SP)

Preemption Mode

This attribute contains the preemption behavior for this port and queue.

Attribute type: Unsigned8

Allowed values: EXPRESS, PREEMPTABLE

Default value: EXPRESS

TimeOffset Unmask

This attribute contains the offset to the start of the send cycle from which the queue becomes visible for the transmission selection.

Attribute type: Unsigned16

Time base: 8 ns

TimeOffset Mask

This attribute contains the offset to the start of the send cycle from which the queue becomes invisible for the transmission selection.

Attribute type: Unsigned16

Time base: 8 ns

TSN Time Data

This attribute is embedded into 7.3.3.4.

CIM NetConf Sync Forward Data

This optional attribute shall contain the following attributes:

List of Sync Domains

This attribute consists of the following elements:

Time Domain Number

This attribute contains the identification of the synchronization instance.

Attribute type: Unsigned16

List of Ports

This attribute contains the number of available ports.

CIM Port ID

This attribute consists of the end station component or bridge component port.

Attribute type: CIMPortID

Port Sync Properties

This attribute contains the synchronization properties of the port.

Attribute type: Unsigned8

Allowed values: NO, EGRESS, INGRESS

CIM NetConf Stream Forward Data

This optional attribute shall contain the following attributes:

List of Streams

This list attribute consists of the following elements:

Stream ID

This attribute identifies a TSN stream uniquely.

Attribute type: Unsigned64

TCI.VID

This attribute contains the VID part of a TSN stream.

Attribute type: Unsigned16

Stream DA

This attribute contains the multicast Stream Destination MAC address part of a TSN stream.

Attribute type: OctetString[6]

RxPort ID

This attribute contains the identification of the bridge component port receiving the TSN stream.

Attribute type: CIMPortID

List of TxPorts

This list attribute consists of the following elements

TxPort ID

This attribute contains the identification of the the bridge component port transmitting the TSN stream.

Attribute type: CIMPortID

Stream Time To Live

This attribute contains the number of seconds until this stream is removed. This attribute shall be set with Stream Add and Stream Renew. The value decrements on every second. If the value becomes zero, this stream is removed.

The value set by the services Add and Renew shall be given by the network policy.

Attribute type: Unsigned16

CIM NetConf Expected Network Data

This optional attribute shall contain the following attributes:

List of Ports

This attribute list consists of the following attributes:

CIM Port ID

This attribute identifies an end station component or bridge component port.

Attribute type: CIMPortID

MAU Type

This attribute contains the expected MAU Type of the port according to the IEEE Std 802.3 ASE.

Number of Queues

This parameter contains the number of expected transmit queues of the port.

Attribute type: Unsigned8

Allowed values: 6, 8

Port Capabilities

This attribute consists of the following attributes:

TimeAware

This attribute indicates the expected usability of this port for a time-aware system

Allowed values: NOT_USABLE, USABLE

Preemption

This attribute indicates the expected availability of preemption for this port. This is only valid with TimeAware USABLE.

Allowed values: NOT_SUPPORTED, SUPPORTED

QueueMasking

This attribute indicates the expected availability of queue masking for this port. This is only valid with TimeAware USABLE.

Allowed values: NOT_SUPPORTED, SUPPORTED

List of Peers

This attribute contains the expected list of peers and consists of the following attributes:

Peer Port Name Length

This attribute contains the length of the peer's port name.

Attribute type: Unsigned8

Peer Port Name

This attribute contains the value of the peer's port name.

Attribute type: VisibleString[255]

Peer Station Name Length

This attribute contains the length of the peer's station name.

Attribute type: Unsigned8

Peer Station Name

This attribute contains the value of the peer's station name.

Attribute type: VisibleString[255]

Line Delay

This attribute contains the expected value of the line delay as determined by the peer.

Attribute type: Unsigned32

Time Base: 1 ns

List of Forwarding Delay

This attribute list consists of the following attributes:

Ingress Port

This attribute is the first key of the list and contains the bridge component port defined as ingress.

Attribute type: CIMPortID

Egress Port

This attribute is the second key of the list and contains the bridge component port defined as egress.

Attribute type: CIMPortID

Stream Class

This attribute is the third key of the list and contains the stream class.

Attribute type: Unsigned8

Allowed values: STREAM_LOW, STREAM_LOW_REDUNDANT, STREAM_HIGH, STREAM_HIGH_REDUNDANT

Forwarding Mode

This attribute contains the expected forwarding mode for this combination.

Attribute type: Unsigned8

Allowed values: STORE_FORWARD, CUT_THROUGH

Dependent Forwarding Delay

This attribute contains the expected bridge delay for one octet of the frame. Shall be set to zero for CUT_THROUGH.

Attribute type: Unsigned32

Allowed values: 0, 0x00000001 to 0x000C3500

Time base: 1 ps

Independent Forwarding Delay

This attribute contains the expected bridge delay regardless of the size of the frame.

Attribute type: Unsigned32

Allowed values: 0x00000001 to 0x000C3500

Time base: 1 ps

7.3.3.7.5 Services**7.3.3.7.5.1 Write PD IR Data**

This service allows writing PD IR Data using a record data object with subslot scope (see 7.3.1.7.1). The service is applicable to interface submodules only.

The parameter structure and the meaning of the parameters is the same as described in the write service (see 7.3.1.7.6.2.1); for the error code hierarchy, 7.3.1.7.7.1 applies. The parameter Data has a service specific structure and meaning; see Table 276 for its structure.

The AR context is of no meaning for this service; see 7.3.1.7.7.4 for details.

Table 276 – Data elements of Write PD IR Data

Parameter name	Service specific elements	req	ind
Data	Slot Number	M	M(=)
	Subslot Number	M	M(=)
	PD IR Global Data	M	M(=)
	IR Data UUID	M	M(=)
	Max Bridge Delay	M	M(=)
	Number of Ports	M	M(=)
	List of Port Delays	M	M(=)
	Max Port Tx Delay	M	M(=)
	Max Port Rx Delay	M	M(=)

Parameter name	Service specific elements	req	ind
	Max Line Rx Delay	M	M(=)
	Yellow Time	M	M(=)
	PD IR Frame Data	M	M(=)
	Frame Data Properties	M	M(=)
	List of PD IR Frame Data Elements	M	M(=)
	Frame Send Offset	M	M(=)
	Data Length	M	M(=)
	Reduction Ratio	M	M(=)
	Phase	M	M(=)
	Frame ID	M	M(=)
	Ethertype	M	M(=)
	Rx Port	M	M(=)
	Frame Details	M	M(=)
	Tx Port Group	M	M(=)
	Number Of Tx Port Group Array Elements	M	M(=)
	Tx Port Group Array	M	M(=)
	PD IR Begin End Data	M	M(=)
	Red Guard	M	M(=)
	Start of Red Frame ID	M	M(=)
	End of Red Frame ID	M	M(=)
	Number of Ports	M	M(=)
	List of Ports	M	M(=)
	Number of Assignments	M	M(=)
	List of Assignments	M	M(=)
	Tx Begin End Assignment	M	M(=)
	Red Period Begin	M	M(=)
	Green Period Begin	M	M(=)
	Rx Begin End Assignment	M	M(=)
	Red Period Begin	M	M(=)
	Green Period Begin	M	M(=)
	Number of Phases	M	M(=)
	List of Phases	M	M(=)
	Tx Phase Assignment	M	M(=)
	Assigned Value For Reserved Begin	M	M(=)
	Assigned Value For Reserved End	M	M(=)
	Rx Phase Assignment	M	M(=)
	Assigned Value For Reserved Begin	M	M(=)
	Assigned Value For Reserved End	M	M(=)

Data

This parameter contains the values of the object which are written.

Slot Number

This parameter contains the value of the corresponding attribute of the ASE object.

Subslot Number

This parameter contains the value of the corresponding attribute of the ASE object.

PD IR Global Data

This parameter contains the value of the corresponding attribute of the ASE object.

PD IR Frame Data

This parameter contains the value of the corresponding attribute of the ASE object.

PD IR Begin End Data

This parameter contains the value of the corresponding attribute of the ASE object.

7.3.3.7.5.2 Read PD IR Data

This service allows reading PD IR Data using a record data object with subslot scope (see 7.3.1.7.1). The service is applicable to interface submodules only.

The parameter structure and the meaning of the parameters is the same as described in the read service (see 7.3.1.7.6.1.1); for the error code hierarchy, 7.3.1.7.7.1 applies. The parameter Data has a service specific structure and meaning; see Table 276 for its structure.

The AR context is of no meaning for this service; see 7.3.1.7.7.4 for details.

Data

See Write PD IR Data in 7.3.3.7.5.1.

7.3.3.7.5.3 Write PD IR Subframe Data

This service allows writing PD IR Subframe Data using a record data object with subslot scope (see 7.3.1.7.1). The service is applicable to interface submodules only.

The parameter structure and the meaning of the parameters is the same as described in the write service (see 7.3.1.7.6.2.1); for the error code hierarchy, 7.3.1.7.7.1 applies. The parameter Data has a service specific structure and meaning; see Table 277 for its structure.

The AR context is of no meaning for this service; see 7.3.1.7.7.4 for details.

Table 277 – Data elements of Write PD IR Subframe Data

Parameter name	Service specific elements	req	ind
Data	List of Subframes	M	M(=)
	Frame ID	M	M(=)
	SF IOCR Properties	M	M(=)
	Distributed Watchdog Factor	M	M(=)
	Restart Factor for Distributed Watchdog	M	M(=)
	DFP Mode	M	M(=)
	DFP Redundant Path Layout	M	M(=)
	SFCRC16	M	M(=)
	List of Subframe Data	M	M(=)
	Subframe Position	M	M(=)
	Subframe Length	M	M(=)

Data

This parameter contains the values of the object which are written.

List of Subframes

This parameter consists of the following elements:

Frame ID

This parameter contains the value of the corresponding attribute of the ASE object.

SF IOCR Properties

This parameter consists of the following elements:

Distributed Watchdog Factor

This parameter contains the value of the corresponding attribute of the ASE object.

Restart Factor for Distributed Watchdog

This parameter contains the value of the corresponding attribute of the ASE object.

DFP Mode

This parameter contains the value of the corresponding attribute of the ASE object.

DFP Redundant Path Layout

This parameter contains the value of the corresponding attribute of the ASE object.

SFCRC16

This parameter contains the value of the corresponding attribute of the ASE object.

List of Subframe Data

This parameter consists of the following elements:

Subframe Position

This parameter contains the value of the corresponding attribute of the Communication Relationship class (see 7.3.1.4.4).

Subframe Length

This parameter contains the value of the corresponding attribute of the Communication Relationship class (see 7.3.1.4.4).

7.3.3.7.5.4 Read PD IR Subframe Data

This service allows reading PD IR Subframe Data using a record data object with subslot scope (see 7.3.1.7.1). The service is applicable to interface submodules only.

The parameter structure and the meaning of the parameters is the same as described in the read service (see 7.3.1.7.6.1.1); for the error code hierarchy, 7.3.1.7.7.1 applies. The parameter Data has a service specific structure and meaning; see Table 277 for its structure.

The AR context is of no meaning for this service; see 7.3.1.7.7.4 for details.

Data

See Write PD IR Subframe Data in 7.3.3.7.5.3.

7.3.3.7.5.5 Read CIM NetConf Upload Network Attributes

This service allows reading CIM NetConf Upload Network Attributes using a record data object from the interface submodule (see 7.3.1.7).

The AR context is of no meaning for this service; see 7.3.1.7.7.4 for details.

Data

The parameter structure and the meaning of the parameters is the same as described in the attribute “CIM NetConf Upload Network Attributes” (see 7.3.9.3.2).

7.3.3.7.5.6 Write CIM NetConf Data Adjust

This service allows writing CIM NetConf Data Adjust using a record data object to the interface submodule (see 7.3.1.7).

The AR context is of no meaning for this service; see 7.3.1.7.7.4 for details.

For the behavior of writing a CIM record, see 7.3.3.7.6.

Data

The parameter structure and the meaning of the parameters is the same as described in the attribute “CIM Network Config Data” (see 7.3.9.3.2).

7.3.3.7.5.7 Read CIM NetConf Data Adjust

This service allows reading CIM NetConf Data Adjust using a record data object from the interface submodule (see 7.3.1.7).

The AR context is of no meaning for this service; see 7.3.1.7.7.4 for details.

Data

The parameter structure and the meaning of the parameters is the same as described in the attribute “CIM Network Config Data” (see 7.3.9.3.2).

7.3.3.7.5.8 Read CIM NetConf Data Real

This service allows reading CIM NetConf Data Real using a record data object from the interface submodule (see 7.3.1.7).

The AR context is of no meaning for this service; see 7.3.1.7.7.4 for details.

Data

The parameter structure and the meaning of the parameters is the same as described in the attribute “CIM Network Config Data” (see 7.3.9.3.2).

7.3.3.7.5.9 Write CIM NetConf Sync Forward Data

This service allows writing CIM NetConf Sync Forward Data using a record data object to the interface submodule (see 7.3.1.7).

The AR context is of no meaning for this service; see 7.3.1.7.7.4 for details.

Data

The parameter structure and the meaning of the parameters is the same as described in the attribute “CIM NetConf Sync Forward Data” (see 7.3.9.3.2).

7.3.3.7.5.10 Read CIM NetConf Sync Forward Data

This service allows reading CIM NetConf Sync Forward Data using a record data object from the interface submodule (see 7.3.1.7).

The AR context is of no meaning for this service; see 7.3.1.7.7.4 for details.

Data

The parameter structure and the meaning of the parameters is the same as described in the attribute “CIM NetConf Sync Forward Data” (see 7.3.9.3.2).

7.3.3.7.5.11 Write CIM NetConf Stream Forward Data

This service allows writing parts of CIM NetConf Stream Forward Data using a record data object to the interface submodule (see 7.3.1.7).

The AR context is of no meaning for this service; see 7.3.1.7.7.4 for details.

The CIM NetConf Stream Forward Data is not written as a single block. The write service allows to modify the Stream Forward Data by adding or removing entries.

The parameter Data has a service-specific structure and meaning; see Table 278 for its structure.

Table 278 – Write CIM NetConf Stream Forward Data

Parameter name	Service specific elements	req	ind
Data	Add or Remove	M	M(=)
	List of Streams	C	C(=)
	Stream ID	M	M(=)
	TCI.VID	M	M(=)
	Stream DA	M	M(=)
	RxPort ID	M	M(=)
	List of Ports	M	M(=)
	TxPort ID	M	M(=)

Data

This parameter contains the values of the object which are written.

Add or Remove

This parameter contains ADD, if the List of Streams shall be added to, and shall contain REMOVE, if the List of Streams shall be removed from the attribute “CIM NetConf Stream Forward Data”. If all streams shall be removed, this parameter shall contain REMOVE_ALL and the List of Streams shall not present.

Attribute type: Unsigned8

Allowed values: ADD, REMOVE, REMOVE_ALL

List of Streams

This optional parameter contains a list of entries to add or remove. The meaning and the value correspond to the attribute “CIM NetConf Stream Forward Data” of the ASE object.

7.3.3.7.5.12 Read CIM NetConf Stream Forward Data

This service allows reading CIM NetConf Stream Forward Data using a record data object from the interface submodule (see 7.3.1.7).

The AR context is of no meaning for this service; see 7.3.1.7.7.4 for details.

This service reads the entire CIM NetConf Stream Forward Data. All entries contain the value ADD in the parameter Add or Remove.

Data

The parameter structure and the meaning of the parameters is the same as described in the attribute “CIM NetConf Stream Forward Data” (see 7.3.9.3.2).

7.3.3.7.5.13 Write CIM NetConf Expected Network Data

This service allows writing CIM NetConf Expected Network Data using a record data object to the interface submodule (see 7.3.1.7).

The AR context is of no meaning for this service; see 7.3.1.7.7.4 for details.

Data

The parameter structure and the meaning of the parameters is the same as described in the attribute “CIM NetConf Expected Network Data” (see 7.3.9.3.2).

7.3.3.7.5.14 Read CIM NetConf Expected Network Data

This service allows reading CIM NetConf Expected Network Data using a record data object from the interface submodule (see 7.3.1.7).

The AR context is of no meaning for this service; see 7.3.1.7.7.4 for details.

Data

The parameter structure and the meaning of the parameters is the same as described in the attribute “CIM NetConf Expected Network Data” (see 7.3.9.3.2).

7.3.3.7.6 Behavior

See 6.3.17.5.

Behavior specific to CIM records:

Writing of CIM NetConf Data Adjust record starts a transaction for a new candidate database. The candidate database is populated with the CIM NetConf Data Adjust and then written to the running database which updates the persistent storage.

Writing of this record initiate the following sequence of services:

- a) CIM Create Candidate (factory default database)
- b) CIM Write
- c) CIM Check and Write Candidate

Thus, all entries that belonging to the previous CIM NetConf Data Adjust transaction are deleted from the running database (e.g. CIM NetConf Sync Forward Data and CIM NetConf Stream Forward Data).

Writing the remaining CIM records (e.g. CIM NetConf Sync Forward Data and CIM NetConf Stream Forward Data) initiate the following sequence of service:

- a) CIM Create Candidate (running database)
- b) CIM Write
- c) CIM Check and Write Candidate

Thus, existing entries in the CIM ASE are extended or changed.

7.3.3.8 IEEE Std 802.3 class

See 6.3.20.

7.3.3.9 Media Redundancy class

7.3.3.9.1 Overview

MRP is a recovery protocol based on a ring topology and the redundant interconnection of MRP rings. It is defined in IEC 62439-2 and used here for loop prevention and media redundancy.

MRP is designed to react deterministically on a single failure of an inter-switch link or switch in the ring or interconnection topology. Standard topology here is ring or ring with branches.

MRP interconnection protocol (MRPIC) is designed for redundant ring coupling of MRP rings.

7.3.3.9.2 Relations

The services are bound to other services as shown in Table 279:

Table 279 – Binding Media Redundancy services

Service	Binding	Usage
Read PD Interface MRP Data Real	AR:Record Data:Read	Used by IO controller or IO supervisor
Write PD Interface MRP Data Check	AR:Record Data:Write	Used by IO controller or IO supervisor
Read PD Interface MRP Data Check	AR:Record Data:Read	Used by IO controller or IO supervisor
Write PD Interface MRP Data Adjust	AR:Record Data:Write	Used by IO controller or IO supervisor
Read PD Interface MRP Data Adjust	AR:Record Data:Read	Used by IO controller or IO supervisor
Read PD Port MRP Data Real	AR:Record Data:Read	Used by IO controller or IO supervisor
Write PD Port MRP Data Adjust	AR:Record Data:Write	Used by IO controller or IO supervisor
Read PD Port MRP Data Adjust	AR:Record Data:Read	Used by IO controller or IO supervisor
Read PD Port MRPIC Data Real	AR:Record Data:Read	Used by IO controller or IO supervisor
Write PD Port MRPIC Data Check	AR:Record Data:Write	Used by IO controller or IO supervisor
Read PD Port MRPIC Data Check	AR:Record Data:Read	Used by IO controller or IO supervisor
Write PD Port MRPIC Data Adjust	AR:Record Data:Write	Used by IO controller or IO supervisor
Read PD Port MRPIC Data Adjust	AR:Record Data:Read	Used by IO controller or IO supervisor

7.3.3.9.3 Template

A MRP object is described by the following template:

ASE: Communication Interface Management ASE

CLASS: Media redundancy

CLASS ID: not used

PARENT CLASS: Media redundancy

ATTRIBUTES:

- 1 (m) Key Attribute: Implicit
- 2 (m) Attribute: List of Interfaces
- 2.1 (m) Attribute: API
- 2.1 (m) Attribute: Slot Number
- 2.2 (m) Attribute: Subslot Number
- 2.3 (m) Attribute: List of MRP Instances
- 2.4 (m) Attribute: List of MRPIC Ports

SERVICES:

1	(o) OpsService:	Read PD Interface MRP Data Real
2	(o) OpsService:	Write PD Interface MRP Data Check
3	(o) OpsService:	Read PD Interface MRP Data Check
4	(o) OpsService:	Write PD Interface MRP Data Adjust
5	(o) OpsService:	Read PD Interface MRP Data Adjust
6	(o) OpsService:	Read PD Port MRP Data Real
7	(o) OpsService:	Write PD Port MRP Data Adjust
8	(o) OpsService:	Read PD Port MRP Data Adjust
9	(o) OpsService:	Read PD Port MRPIC Data Real
10	(o) OpsService:	Write PD Port MRPIC Data Check
11	(o) OpsService:	Read PD Port MRPIC Data Check
12	(o) OpsService:	Write PD Port MRPIC Data Adjust
13	(o) OpsService:	Read PD Port MRPIC Data Adjust

7.3.3.9.4 Attributes

Implicit

The key attribute Implicit indicates that the Communication Interface Management object is implicitly addressed by the service.

List of Interfaces

This attribute list lists all interfaces related to the Communication Interface Management object. It contains the following attributes:

API

This attribute contains the API containing the interface submodule.

The interface submodule is always assigned to the default API.

Attribute type: Unsigned32

Allowed values: 0x00000000

Slot Number

This attribute contains the slot number of the module containing the interface submodule.

Attribute type: Unsigned16

Allowed values: 0x0000 to 0x7FFF

Subslot Number

This attribute contains the subslot number of the interface.

Attribute type: Unsigned16

Allowed Values shall be used according to Table 246.

List of MRP Instances

This attribute is defined in the Media redundancy ASE; see 6.3.14.2.3 for details.

List of MRPIC Ports

This attribute is defined in the Media redundancy ASE; see 6.3.14.2.3 for details.

7.3.3.9.5 Services

7.3.3.9.5.1 Read PD Interface MRP Data Real

This service allows reading PD Interface MRP Data Real using a record data object with subslot scope (see 7.3.1.7.1). The service is applicable to interface submodules only.

The parameter structure and the meaning of the parameters is the same as described in the read service (see 7.3.1.7.6.1.1); for the error code hierarchy, 7.3.1.7.7.1 applies. The parameter Data has a service specific structure and meaning; see Table 280 for its structure.

The AR context is of no meaning for this service; see 7.3.1.7.7.4 for details.

Table 280 – Data elements of Read PD Interface MRP Data Real

Parameter name	Service specific elements	req	ind
Data	List of MRP Instances	M	M(=)
	MRP Instance	M	M(=)
	MRP Domain UUID	M	M(=)
	MRP Role	M	M(=)
	MRP Domain Name	M	M(=)
	MRP Version	M	M(=)
	MRP Prio	C	C(=)
	MRP TOPchgT	C	C(=)
	MRP TOPNRmax	C	C(=)
	MRP TSTshortT	C	C(=)
	MRP TSTdefaultT	C	C(=)
	MRP TSTNRmax	C	C(=)
	MRP Ring State Data	C	C(=)
	MRP LNKdownT	C	C(=)
	MRP LNKupT	C	C(=)
	MRP LNKNRmax	C	C(=)

Data

This parameter contains the values of the object which has been read.

List of MRP Instances

This list contains the MRP instances of this node.

MRP Instance

This parameter contains the value of the corresponding attribute of the ASE object.

MRP Domain UUID

This parameter contains the value of the corresponding attribute of the ASE object.

MRP Role

This parameter contains the value of the attribute operational MRP role of the ASE object.

MRP Domain Name

This parameter contains the value of the corresponding attribute of the ASE object.

MRP Version

This parameter contains the value of the corresponding attribute of the ASE object.

MRP Prio

This conditional attribute is present when the value of the operational MRP role attribute is "MANAGER" or "MANAGER_AUTO". It contains the value of the corresponding attribute of the ASE object.

MRP TOPchgT

This conditional attribute is present when the value of the operational MRP role attribute is “MANAGER” or “MANAGER_AUTO”. It contains the value of the corresponding attribute of the ASE object.

MRP TOPNRmax

This conditional attribute is present when the value of the operational MRP role attribute is “MANAGER” or “MANAGER_AUTO”. It contains the value of the corresponding attribute of the ASE object.

MRP TSTshortT

This conditional attribute is present when the value of the operational MRP role attribute is “MANAGER” or “MANAGER_AUTO”. It contains the value of the corresponding attribute of the ASE object.

MRP TSTdefaultT

This conditional attribute is present when the value of the operational MRP role attribute is “MANAGER” or “MANAGER_AUTO”. It contains the value of the corresponding attribute of the ASE object.

MRP TSTNRmax

This conditional attribute is present when the value of the operational MRP role attribute is “MANAGER” or “MANAGER_AUTO”. It contains the value of the corresponding attribute of the ASE object.

MRP Ring State Data

This conditional attribute is present when the value of the operational MRP role attribute is “MANAGER” or “MANAGER_AUTO”. It contains the value of the corresponding attribute of the ASE object.

MRP LNKdownT

This conditional attribute is present when the value of the operational MRP role attribute is “CLIENT”. It contains the value of the corresponding attribute of the ASE object.

MRP LNKupT

This conditional attribute is present when the value of the operational MRP role attribute is “CLIENT”. It contains the value of the corresponding attribute of the ASE object.

MRP LKNRmax

This conditional attribute is present when the value of the operational MRP role attribute is “CLIENT”. It contains the value of the corresponding attribute of the ASE object.

7.3.3.9.5.2 Write PD Interface MRP Data Check

This service allows writing PD Interface MRP Data Check using a record data object with subslot scope (see 7.3.1.7.1). The service is applicable to interface submodules only.

The parameter structure and the meaning of the parameters is the same as described in the write service (see 7.3.1.7.6.2.1); for the error code hierarchy, 7.3.1.7.7.1 applies. The parameter Data has a service specific structure and meaning; see Table 281 for its structure.

The AR context is of no meaning for this service; see 7.3.1.7.7.4 for details.

Table 281 – Data elements of Write PD Interface MRP Data Check

Parameter name	Service specific elements	req	ind
Data	List of MRP Instances	M	M(=)
	MRP Instance	M	M(=)
	MRP Domain UUID	M	M(=)
	MRP Check	M	M(=)

Data

This parameter contains the values of the object which are written.

List of MRP Instances

This list contains the MRP instances of this node.

MRP Instance

This parameter contains the value of the corresponding attribute of the ASE object.

MRP Domain UUID

This parameter contains the value of the corresponding attribute of the ASE object.

MRP Check

This parameter contains the value of the corresponding attribute of the ASE object.

7.3.3.9.5.3 Read PD Interface MRP Data Check

This service allows reading PD Interface MRP Data Check using a record data object with subslot scope (see 7.3.1.7.1). The service is applicable to interface submodules only.

The parameter structure and the meaning of the parameters is the same as described in the read service (see 7.3.1.7.6.1.1); for the error code hierarchy, 7.3.1.7.7.1 applies. The parameter Data has a service specific structure and meaning; see Table 281 for its structure.

The AR context is of no meaning for this service; see 7.3.1.7.7.4 for details.

Data

See Write PD Interface MRP Data Check in 7.3.3.9.5.2.

7.3.3.9.5.4 Write PD Interface MRP Data Adjust

This service allows writing PD Interface MRP Data Adjust using a record data object with subslot scope (see 7.3.1.7.1). The service is applicable to interface submodules only.

The parameter structure and the meaning of the parameters is the same as described in the write service (see 7.3.1.7.6.2.1); for the error code hierarchy, 7.3.1.7.7.1 applies. The parameter Data has a service specific structure and meaning; see Table 282 for its structure.

The AR context is of no meaning for this service; see 7.3.1.7.7.4 for details.

Table 282 – Data elements of Write PD Interface MRP Data Adjust

Parameter name	Service specific elements	req	ind
Data	List of MRP Instances	M	M(=)
	MRP Instance	M	M(=)
	MRP Domain UUID	M	M(=)
	MRP Role	M	M(=)
	MRP Domain Name	M	M(=)
	MRP Prio	C	C(=)
	MRP TOPchgT	C	C(=)
	MRP TOPNRmax	C	C(=)
	MRP TSTshortT	C	C(=)
	MRP TSTdefaultT	C	C(=)
	MRP TSTNRmax	C	C(=)
	MRP LNKdownT	C	C(=)
	MRP LNKupT	C	C(=)
	MRP LKNRmax	C	C(=)

Data

This parameter contains the values of the object which are written.

List of MRP Instances

This list contains the MRP instances of this node.

MRP Instance

This parameter contains the value of the corresponding attribute of the ASE object.

MRP Domain UUID

This parameter contains the value of the corresponding attribute of the ASE object.

MRP Role

This parameter contains the value of the attribute administrative MRP role of the ASE object.

MRP Domain Name

This parameter contains the value of the corresponding attribute of the ASE object.

MRP Prio

This conditional attribute is present when the value of the operational MRP role attribute is "MANAGER" or "MANAGER_AUTO". It contains the value of the corresponding attribute of the ASE object.

MRP TOPchgT

This conditional attribute is present when the value of the operational MRP role attribute is "MANAGER" or "MANAGER_AUTO". It contains the value of the corresponding attribute of the ASE object.

MRP TOPNRmax

This conditional attribute is present when the value of the operational MRP role attribute is "MANAGER" or "MANAGER_AUTO". It contains the value of the corresponding attribute of the ASE object.

MRP TSTshortT

This conditional attribute is present when the value of the operational MRP role attribute is "MANAGER" or "MANAGER_AUTO". It contains the value of the corresponding attribute of the ASE object.

MRP TSTdefaultT

This conditional attribute is present when the value of the operational MRP role attribute is “MANAGER” or “MANAGER_AUTO”. It contains the value of the corresponding attribute of the ASE object.

MRP TSTNRmax

This conditional attribute is present when the value of the operational MRP role attribute is “MANAGER” or “MANAGER_AUTO”. It contains the value of the corresponding attribute of the ASE object.

MRP LNKdownT

This conditional attribute is present when the value of the operational MRP role attribute is “CLIENT”. It contains the value of the corresponding attribute of the ASE object.

MRP LNKupT

This conditional attribute is present when the value of the operational MRP role attribute is “CLIENT”. It contains the value of the corresponding attribute of the ASE object.

MRP LKNRmax

This conditional attribute is present when the value of the operational MRP role attribute is “CLIENT”. It contains the value of the corresponding attribute of the ASE object.

7.3.3.9.5.5 Read PD Interface MRP Data Adjust

This service allows reading PD Interface MRP Data Adjust using a record data object with subslot scope (see 7.3.1.7.1). The service is applicable to interface submodules only.

The parameter structure and the meaning of the parameters is the same as described in the read service (see 7.3.1.7.6.1.1); for the error code hierarchy, 7.3.1.7.7.1 applies. The parameter Data has a service specific structure and meaning; see Table 282 for its structure.

The AR context is of no meaning for this service; see 7.3.1.7.7.4 for details.

Data

See Write PD Interface MRP Data Adjust in 7.3.3.9.5.4.

7.3.3.9.5.6 Read PD Port MRP Data Real

This service allows reading PD Port MRP Data Real using a record data object with subslot scope (see 7.3.1.7.1). The service is applicable to port submodules only.

The parameter structure and the meaning of the parameters is the same as described in the read service (see 7.3.1.7.6.1.1); for the error code hierarchy, 7.3.1.7.7.1 applies. The parameter Data has a service specific structure and meaning; see Table 283 for its structure.

The AR context is of no meaning for this service; see 7.3.1.7.7.4 for details.

Table 283 – Data elements of Read PD Port MRP Data Real

Parameter name	Service specific elements	rsp	cnf
Data	MRP Instance	M	M(=)
	MRP Domain UUID	M	M(=)

Data

This parameter contains the value of the object which has been read.

MRP Instance

This parameter contains the value of the corresponding attribute of the ASE object.

MRP Domain UUID

This parameter contains the value of the corresponding attribute of the ASE object.

7.3.3.9.5.7 Write PD Port MRP Data Adjust

This service allows writing PD Port MRP Data Adjust using a record data object with subslot scope (see 7.3.1.7.1). The service is applicable to port submodules only.

The parameter structure and the meaning of the parameters is the same as described in the write service (see 7.3.1.7.6.2.1); for the error code hierarchy, 7.3.1.7.7.1 applies. The parameter Data has a service specific structure and meaning; see Table 284 for its structure.

The AR context is of no meaning for this service; see 7.3.1.7.7.4 for details.

Table 284 – Data elements of Write PD Port MRP Data Adjust

Parameter name	Service specific elements	rsp	cnf
Data	MRP Instance	M	M(=)
	MRP Domain UUID	M	M(=)

Data

This parameter contains the values of the object which are written.

MRP Instance

This parameter contains the value of the corresponding attribute of the ASE object.

MRP Domain UUID

This parameter contains the value of the corresponding attribute of the ASE object.

7.3.3.9.5.8 Read PD Port MRP Data Adjust

This service allows reading PD Port MRP Data Adjust using a record data object with subslot scope (see 7.3.1.7.1). The service is applicable to port submodules only.

The parameter structure and the meaning of the parameters is the same as described in the read service (see 7.3.1.7.6.1.1); for the error code hierarchy, 7.3.1.7.7.1 applies. The parameter Data has a service specific structure and meaning; see Table 284 for its structure.

The AR context is of no meaning for this service; see 7.3.1.7.7.4 for details.

Data

See Write PD Port MRP Data Adjust in 7.3.3.9.5.7.

7.3.3.9.5.9 Read PD Port MRPIC Data Real

This service allows reading PD Port MRPIC Data Real using a record data object with subslot scope (see 7.3.1.7.1). The service is applicable to port submodules only.

The parameter structure and the meaning of the parameters is the same as described in the read service (see 7.3.1.7.6.1.1); for the error code hierarchy, 7.3.1.7.7.1 applies. The parameter Data has a service specific structure and meaning; see Table 285 for its structure.

The AR context is of no meaning for this service; see 7.3.1.7.7.4 for details.

Table 285 – Data elements of Read PD Port MRPIC Data Real

Parameter name	Service specific elements	rsp	cnf
Data	MRPIC Domain ID	M	M(=)
	MRPIC Role	M	M(=)
	MRPIC Domain Name	M	M(=)
	MRPIC MIM Params	C	C(=)
	MRPIC State Data	C	C(=)
	MRPIC MIC Params	C	C(=)

Data

This parameter contains the value of the object which has been read.

MRPIC Domain ID

This parameter contains the value of the corresponding attribute of the ASE object.

MRPIC Role

This parameter contains the value of the corresponding attribute of the ASE object.

MRPIC Domain Name

This parameter contains the value of the corresponding attribute of the ASE object.

MRPIC MIM Params

This conditional attribute is present when the value of the MRPIC role attribute is “MIM”. It contains the value of the corresponding attribute of the ASE object.

MRPIC State Data

This conditional attribute is present when the value of the MRPIC role attribute is “MIM”. It contains the value of the corresponding attribute of the ASE object.

MRPIC MIC Params

This conditional attribute is present when the value of the MRPIC role attribute is “MIC”. It contains the value of the corresponding attribute of the ASE object.

7.3.3.9.5.10 Write PD Port MRPIC Data Check

This service allows writing PD Port MRPIC Data Check using a record data object with subslot scope (see 7.3.1.7.1). The service is applicable to port submodules only.

The parameter structure and the meaning of the parameters is the same as described in the write service (see 7.3.1.7.6.2.1); for the error code hierarchy, 7.3.1.7.7.1 applies. The parameter Data has a service specific structure and meaning; see Table 286 for its structure.

The AR context is of no meaning for this service; see 7.3.1.7.7.4 for details.

Table 286 – Data elements of Write PD Port MRPIC Data Check

Parameter name	Service specific elements	rsp	cnf
Data	MRPIC Check	M	M(=)

Data

This parameter contains the values of the object which are written.

MRPIC Check

This parameter contains the value of the corresponding attribute of the ASE object.

7.3.3.9.5.11 Read PD Port MRPIC Data Check

This service allows reading PD Port MRPIC Data Check using a record data object with subslot scope (see 7.3.1.7.1). The service is applicable to port submodules only.

The parameter structure and the meaning of the parameters is the same as described in the read service (see 7.3.1.7.6.1.1); for the error code hierarchy, 7.3.1.7.7.1 applies. The parameter Data has a service specific structure and meaning; see Table 284 for its structure.

The AR context is of no meaning for this service; see 7.3.1.7.7.4 for details.

Data

See Write PD Port MRPIC Data Check in 7.3.3.3.5.19.

7.3.3.9.5.12 Write PD Port MRPIC Data Adjust

This service allows writing PD Port MRPIC Data Adjust using a record data object with subslot scope (see 7.3.1.7.1). The service is applicable to port submodules only.

The parameter structure and the meaning of the parameters is the same as described in the write service (see 7.3.1.7.6.2.1); for the error code hierarchy, 7.3.1.7.7.1 applies. The parameter Data has a service specific structure and meaning; see Table 287 for its structure.

The AR context is of no meaning for this service; see 7.3.1.7.7.4 for details.

Table 287 – Data elements of Write PD Port MRPIC Data Adjust

Parameter name	Service specific elements	rsp	cnf
Data	MRPIC Domain ID	M	M(=)
	MRPIC Role	M	M(=)
	MRPIC Domain Name	M	M(=)
	MRPIC MIM Params	C	C(=)
	MRPIC MIC Params	C	C(=)

Data

This parameter contains the values of the object which are written.

MRPIC Domain ID

This parameter contains the value of the corresponding attribute of the ASE object.

MRPIC Role

This parameter contains the value of the corresponding attribute of the ASE object.

MRPIC Domain Name

This parameter contains the value of the corresponding attribute of the ASE object.

MRPIC MIM Params

This conditional attribute is present when the value of the MRPIC role attribute is “MIM”. It contains the value of the corresponding attribute of the ASE object.

MRPIC MIC Params

This conditional attribute is present when the value of the MRPIC role attribute is “MIC”. It contains the value of the corresponding attribute of the ASE object.

7.3.3.9.5.13 Read PD Port MRPIC Data Adjust

This service allows reading PD Port MRPIC Data Adjust using a record data object with subslot scope (see 7.3.1.7.1). The service is applicable to port submodules only.

The parameter structure and the meaning of the parameters is the same as described in the read service (see 7.3.1.7.6.1.1); for the error code hierarchy, 7.3.1.7.7.1 applies. The parameter Data has a service specific structure and meaning; see Table 284 for its structure.

The AR context is of no meaning for this service; see 7.3.1.7.7.4 for details.

Data

See Write PD Port MRPIC Data Adjust in 7.3.3.3.5.21.

7.3.3.9.6 Behavior

7.3.3.9.6.1 MRP

MRP defines different roles for the devices inside a ring topology.

For media redundancy the IEC 62439-2 applies. The support of the MRP Management Information Base (MIB) is optional.

The Media redundancy ASE specifies a uniform method of achieving media redundancy with deterministic recovery time in case of a single network failure (link failure, switch node failure causing link failures).

NOTE Media redundancy operates transparent to the application. No changes in the application are required.

The Media Redundancy Protocol (MRP) is designed to react deterministic on a single failure of a trunk link or node in the network.

A MRP compliant network shall have a ring topology with multiple nodes.

Each node in the ring requires an integrated switch with at least two ports (ringports) connected to the ring.

Each node in the ring shall be able to detect the failure or recovery of a trunk link or the failure or recovery of a neighbor node.

One of the nodes acts as media redundancy manager (MRM). The function of the MRM is to observe and to control the ring topology in order to react on network faults. The MRM does this by sending frames on one ringport over the ring and receiving them from the ring over its other ringport, and viceversa in the other direction.

The other nodes in the ring have the role of Media Redundancy Clients (MRC). A MRC reacts on received reconfiguration frames from the MRM and can detect and signal link changes on its ringports.

A node with administrative role MANAGER will always act as MRM and will have operational role MANAGER.

By adjusting one, some, or even all devices in the ring to administrative role MANAGER_AUTO, these devices select one of them to act as MRM and all others to act as MRC. The one acting as MRM will have operational role MANAGER_AUTO, the others operational role CLIENT. All nodes in administrative role MANAGER_AUTO will recognize a failure of the node with operational role MANAGER_AUTO due to missing test frames passing by and will start a new selection of the one acting as MRM.

A node with administrative role CLIENT will always act as MRC and will have operational role CLIENT.

A node with administrative role DISABLED will not participate in the MRP protocol and will have operational role DISABLED.

If a device supports MRP and starts out of the box (i.e. without configuration) with enabled MRP, then it shall start using the preferred startup mode.

This behavior applies also for ResetToFactory/FactoryReset.

If MRP needs to be disabled, engineering shall set the MRP Role explicitly to DISABLED.

The MRP consists of a service and a protocol entity. Both are described by IEC 62439-2.

7.3.3.9.6.2 MRPIC

It is possible to redundantly interconnect two or more MRP-rings via the MRP Interconnection Protocol. The principle of the MRP Interconnection Protocol is explained and defined in IEC 62439-2. To ease the introduction to the topic, a short overview is given hereunder.

An MRP Interconnection setup consists at a minimum of two rings and two redundant interconnection links between these rings, as shown in Figure 61. The redundant interconnection links are provided by four dedicated devices supporting the MRP Interconnection protocol. The roles of these four devices shall be:

- one Media Redundancy Interconnection Manager (MIM),
- and three Media Redundancy Interconnection Clients (MIC).

All four devices shall additionally take one of the basic operational MRP roles (MRC or MRM) as they are part of the interconnected MRP rings.

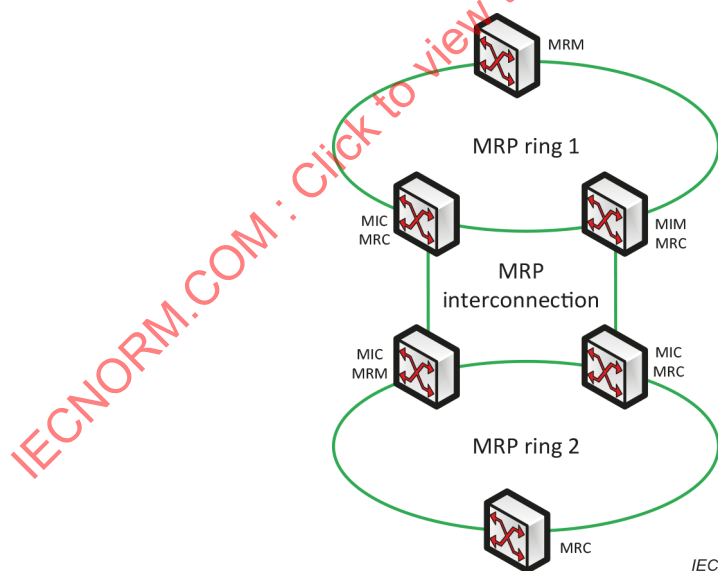


Figure 61 – MRP interconnection

The principle of the MRP Interconnection protocol is as follows:

- All four MRP Interconnection devices, i. e. the three MICs and one MIM, check the interconnection to their peer devices in the other ring by using the link CFM-MRP link detection protocol (which is identical with the definitions of the IEEE Std 802.1Q CFM using CCM).

- Depending on detecting a link-up or a link-down link status change on their interconnection ports, the MICs send MRP_InLinkChange notifications with link-up or link-down status, which will be received by the MIM.
- At startup, the MIM gets the link status from the MICs by issuing link status poll frames (MRP_InLinkStatusPoll) to the MICs.
- The MIM is thereby always informed about the link status of the MIC/MIC interconnection link (the so-called “primary link”) and its own interconnection link (the so-called “secondary link”).
- If the MIC/MIC (primary) interconnection is present, the MIM blocks its own interconnection port. Otherwise, if only its own interconnection (secondary) link is present, it sets it to forwarding.
- Whenever the MIM changes its interlink port status, it issues MRP_InTopologyChange frames into the rings.
- The MRMs of the rings, which receive the MRP_InTopologyChange frames, will convert these to MRP_TopologyChange frames of the standard MRP protocol, to initiate a ring reconfiguration as with basic MRP.

Note that two MICs in the same ring or the MIM and the MIC in the same ring do not need to be situated adjacent to each other, i.e. there can be other ring participants in between. But it is not allowed to plug other network devices into the interconnection links, between the two rings.

Generally, the configuration of the MRP ring redundancy roles (MRM, MRC, MRA) are independent from the configuration of the MRP Interconnection roles (MIM, MIC), i.e. a MIM role or a MIC role can be configured randomly with any of the roles MRM, MRC or MRA.

Nevertheless, the functionality of MRP and MRP Interconnection is not fully independent, as the MRP Interconnection protocol needs the MRM to care for the removal of the MRP Interconnection frames in the interconnected closed ring, not containing the MIM, as otherwise these frames would loop forever causing a network overload.

For simplification reasons, the MRP ring redundancy roles of the devices will not be displayed in any of the following example topologies of this MRP Interconnection protocol white paper.

7.3.3.10 PTCP class

7.3.3.10.1 Overview

“Precision Transparent Clock Protocol” (PTCP) is used for WORKING_CLOCK synchronization in case of Bridge Mode set to RT_CLASS_3.

Two device roles are specified: Sync master and sync slave. The WORKING_CLOCKs of all sync slaves are synchronized onto the WORKING_CLOCK of the sync master. The IO controller does not have to be the sync master. PTCP supports redundancy.

7.3.3.10.2 Relations

The services are bound to other services as shown in Table 288:

Table 288 – Binding PTCP services

Service	Binding	Usage
Write PD Sync Data	AR:Record Data:Write	Used by IO controller or IO supervisor
Read PD Sync Data	AR:Record Data:Read	Used by IO controller or IO supervisor
Local Sync State Info	Local	Used by FAL
Local SYNCH Event	Local	Used by FAL
Local	AR:Alarm:Alarm Notification	Used by PTCP class

7.3.3.10.3 Template

A PTCP object is described by the following template:

ASE: Communication Interface Management ASE

CLASS: PTCP

CLASS ID: not used

PARENT CLASS: PTCP

ATTRIBUTES:

- 1 (m) Key Attribute: Implicit
- 2 (m) Attribute: List of Interfaces
- 2.1 (m) Attribute: API
- 2.2 (m) Attribute: Slot Number
- 2.3 (m) Attribute: Subslot Number
- 2.4 (m) Attribute: PTCP Subdomain UUID
- 2.5 (m) Attribute: IR Data UUID
- 2.6 (m) Attribute: Reserved Interval Begin
- 2.7 (m) Attribute: Reserved Interval End
- 2.8 (m) Attribute: PLL Window
- 2.9 (m) Attribute: Sync Send Factor
- 2.10 (m) Attribute: Send Clock Factor
- 2.11 (m) Attribute: PTCP Timeout Factor
- 2.12 (m) Attribute: PTCP Takeover Timeout Factor
- 2.13 (m) Attribute: PTCP Master Startup Time
- 2.14 (m) Attribute: Sync Properties
- 2.14.1 (m) Attribute: Role
- 2.14.2 (m) Attribute: Sync Class
- 2.15 (m) Attribute: PTCP Master Priority 1
- 2.15.1 (m) Attribute: Priority
- 2.15.1 (m) Attribute: Level
- 2.16 (m) Attribute: PTCP Master Priority 2
- 2.16 (m) Attribute: PTCP Subdomain Name

SERVICES:

- 1 (o) OpsService: Write PD Sync Data
- 2 (o) OpsService: Read PD Sync Data
- 3 (o) OpsService: Local Sync State Info
- 4 (m) OpsService: Local SYNCH Event

7.3.3.10.4 Attributes

Implicit

The key attribute Implicit indicates that the Communication Interface Management object is implicitly addressed by the service.

List of Interfaces

This attribute list lists all interfaces related to the PTCP object.

An entry consists of the following attributes:

API

This attribute contains the API containing the interface submodule.

The interface submodule is always assigned to the default API.

Attribute type: Unsigned32

Allowed values: 0x00000000

Slot Number

This attribute contains the slot number of the module containing the interface submodule.

Attribute type: Unsigned16

Allowed values: 0x0000 to 0x7FFF

Subslot Number

This attribute contains the subslot number of the interface.

Attribute type: Unsigned16

Allowed Values shall be used according to Table 246.

PTCP Subdomain UUID

This attribute contains the unique identifier of the PTCP subdomain which is configured by the engineering system. A PTCP subdomain is a set of IO controller and/or IO devices with synchronized send clocks.

Attribute type: UUID

IR Data UUID

This attribute contains the unique identifier of the isochronous realtime project which is configured by the engineering system.

Attribute type: UUID

Reserved Interval Begin

This attribute contains the start of RT_CLASS_2 reserved bandwidth relatively to the current phase in nanoseconds.

Attribute type: Unsigned32

Allowed values: 0 (meaning no reserved bandwidth for RT_CLASS_2 is defined)

RT_CLASS_2 is usable in the context of legacy startup only. Only in that case, the value may be set to a value different from 0.

Reserved Interval End

This attribute contains the end of RT_CLASS_2 reserved bandwidth relatively to the current phase in nanoseconds.

Attribute type: Unsigned32

Allowed values: 0 (meaning no reserved bandwidth for RT_CLASS_2 is defined)

RT_CLASS_2 is usable in the context of legacy startup only. Only in that case, the value may be set to a value different from 0.

PLL Window

This attribute contains the maximum jitter of the start of the isochronous cycle with a time base of 1 ns. The value 0 indicates no PLL Window is defined. The attribute has no relevance for the Sync Master.

If the actual value of the local clock of the Sync Slave is inside +- PLL Window of the desired value, the clock is adjusted. Otherwise the sync aborts and restarts.

Attribute type: Unsigned32

Time Base: 1 ns

Sync Send Factor

This attribute contains the send interval of the sync PDUs. The Sync Send Factor shall be set in multiples of 31,25 µs.

Attribute type: Unsigned32

The values shall be in the range of 1 to 2 764 800 000.

Send Clock Factor

This attribute is defined in 7.3.1.4.4.

PTCP Timeout Factor

This attribute contains the Timeout Factor for detecting the loss of sync messages. The Time Base is the Sync Send Factor.

Attribute type: Unsigned16

Allowed values: 0x0000 to 0x00FF

Default value: 0x0006

PTCP Takeover Timeout Factor

This attribute contains a timeout value for detection the loss of sync messages from the current sync master. The sync slave shall try to find a new sync master after the expiration of this time. The PTCP takeover timeout value shall be in the range from 32 ms to 16 352 ms for Sync ID = CLOCK and in the range from 32 ms to 2 759 400 000 ms for Sync ID = TIME.

Attribute type: Unsigned32

Time Base: Sync Send Factor × 31,25 µs

Allowed values: 1 to 511

Default value: 0x00000003 for Sync Master, 0x00000002 for Sync Slave

PTCP Master Startup Time

This attribute shall be the duration of the startup phase of the sync master. During this time the sync master shall check if there is a sync master with a higher clock quality in the sync domain.

Attribute type: Unsigned16

Time Base: 1 s

Allowed values: 0 to 300 s

Default value: 60

Sync Properties

This attribute contains the following attributes:

Role

This attribute contains the role of the device related to time synchronization.

Allowed values shall be according to Table 289.

Table 289 – Sync Properties Role

Meaning
Local sync
External sync: Role Sync Slave
Sync Master

Sync Class

This attribute contains the value for the Sync Class. Allowed values shall be according to Table 290.

Table 290 – Sync Class

Meaning
Test Stratum
Primary (GPS, atom clock)
Secondary (directly connected to a primary clock)
Connected to an external time signal (over boundary clocks)
Not connected to an external time signal
No clock synchronization

PTCP Master Priority 1

This attribute is used in the execution of the best master clock algorithm. Lower values take precedence.

This attribute contains the following attributes:

Priority

This attribute contains the priority.

Attribute type: Unsigned8

Allowed values: 0x00 (if role is sync slave), 0x01-0x02 (if role is sync master)

Level

This attribute contains the level.

Attribute type: Unsigned8

Allowed values: 0x00 (highest) – 0x07 (lowest)

PTCP Master Priority 2

This attribute is used in the execution of the best master clock algorithm. Lower values take precedence.

Attribute type: Unsigned8

Allowed values: 0xFF

PTCP Subdomain Name

This attribute contains the name of the PTCP subdomain which is configured by the engineering system. A PTCP subdomain is a set of IO controller and/or IO devices with synchronized send clocks.

Attribute type: see Chassis ID

7.3.3.10.5 Services**7.3.3.10.5.1 Write PD Sync Data**

This service allows writing PD Sync Data using a record data object with subslot scope (see 7.3.1.7.1). The service is applicable to interface submodules only.

The parameter structure and the meaning of the parameters is the same as described in the write service (see 7.3.1.7.6.2.1); for the error code hierarchy, 7.3.1.7.7.1 applies. The parameter Data has a service specific structure and meaning; see Table 291 for its structure.

The AR context is of no meaning for this service; see 7.3.1.7.7.4 for details.

Table 291 – Data elements of Write PD Sync Data

Parameter name	Service specific elements	req	ind
Data	PTCP Subdomain ID	M	M(=)
	Reserved Interval Begin	M	M(=)
	Reserved Interval End	M	M(=)
	PLL Window	M	M(=)
	Sync Send Factor	M	M(=)
	Send Clock Factor	M	M(=)
	PTCP Timeout Factor	M	M(=)
	PTCP Takeover Timeout Factor	M	M(=)
	PTCP Master Startup Time	M	M(=)
	Sync Properties	M	M(=)
	PTCP Master Priority 1	M	M(=)
	PTCP Master Priority 2	M	M(=)
	PTCP Subdomain Name	M	M(=)

Data

This parameter contains the values of the object which are written.

PTCP Subdomain ID

This parameter contains the value of the corresponding attribute of the PTCP class.

Reserved Interval Begin

This parameter contains the value of the corresponding attribute of the PTCP class.

Reserved Interval End

This parameter contains the value of the corresponding attribute of the PTCP class.

PLL Window

This parameter contains the value of the corresponding attribute of the PTCP class.

Sync Send Factor

This parameter contains the value of the corresponding attribute of the PTCP class.

Send Clock Factor

This parameter contains the value of the corresponding attribute of the PTCP class.

PTCP Timeout Factor

This parameter contains the value of the corresponding attribute of the PTCP class.

PTCP Takeover Timeout Factor

This parameter contains the value of the corresponding attribute of the PTCP class.

PTCP Master Startup Time

This parameter contains the value of the corresponding attribute of the PTCP class.

Sync Properties

This parameter contains the value of the corresponding attribute of the PTCP class.

PTCP Master Priority 1

This parameter contains the value of the corresponding attribute of the PTCP class.

PTCP Master Priority 2

This parameter contains the value of the corresponding attribute of the PTCP class.

PTCP Subdomain Name

This parameter contains the value of the corresponding attribute of the PTCP class.

7.3.3.10.5.2 Read PD Sync Data

This service allows reading PD Sync Data using a record data object with subslot scope (see 7.3.1.7.1). The service is applicable to interface submodules only.

The parameter structure and the meaning of the parameters is the same as described in the read service (see 7.3.1.7.6.1.1); for the error code hierarchy, 7.3.1.7.7.1 applies. The parameter Data has a service specific structure and meaning; see Table 291 for its structure.

The AR context is of no meaning for this service; see 7.3.1.7.7.4 for details.

Data

See Write PD Sync Data (7.3.3.10.5.1).

7.3.3.10.5.3 Local Sync State Info

This local service indication shall be used to indicate any change of the synchronization state of an interface. Table 292 shows the parameters of the service.

Table 292 – Local Sync State Info

Parameter name	ind
Argument	M
Sync Data	S
Slot Number	M
Subslot Number	M
PTCP Subdomain ID	M
IR Data UUID	M
Reserved Interval Begin	M
Reserved Interval End	M
PLL Window	M
Sync Send Factor	M
Send Clock Factor	M
Sync Properties	M
Sync Frame Address	M
PTCP Timeout Factor	M

Argument

The argument shall convey the service specific parameters of the service indication.

Sync Data

This selective parameter shall be present if the interface has been synchronized. It is composed of the following list elements.

Slot Number

This parameter contains the value of the corresponding attribute of the ASE object.

Subslot Number

This parameter contains the value of the corresponding attribute of the ASE object.

PTCP Subdomain ID

This parameter contains the value of the corresponding attribute of the ASE object.

IR Data UUID

This parameter contains the value of the corresponding attribute of the ASE object.

Reserved Interval Begin

This parameter contains the value of the corresponding attribute of the ASE object.

Reserved Interval End

This parameter contains the value of the corresponding attribute of the ASE object.

PLL Window

This parameter contains the value of the corresponding attribute of the ASE object.

Sync Send Factor

This parameter contains the value of the corresponding attribute of the ASE object.

Send Clock Factor

This parameter contains the value of the corresponding attribute of the ASE object.

Sync Properties

This parameter contains the value of the corresponding attribute of the ASE object.

Sync Frame Address

This parameter contains the value of the corresponding attribute of the ASE object.

PTCP Timeout Factor

This parameter contains the value of the corresponding attribute of the ASE object.

Sync Error Status

This selective parameter shall be present if the interface has been lost the synchronization. It is composed of the following list elements:

Slot Number

This parameter contains the value of the corresponding attribute of the ASE object.

Subslot Number

This parameter contains the value of the corresponding attribute of the ASE object.

7.3.3.10.5.4 Local SYNCH Event

The service SYNCH indicates to the application of the IO device that a new isochronous send clock cycle has been started.

Table 293 shows the parameters of the service.

Table 293 – Local SYNCH Event

Parameter name	ind
Argument	M
Slot	M
Subslot	M
Global Cycle Counter	M
Phase	M
Status	M

Argument

The argument shall convey the service specific parameters of the service indication.

Slot Number

This parameter contains the Slot Number addressing the initiators interface.

Subslot Number

This parameter contains the Subslot Number addressing the initiators interface.

Global Cycle Counter

This parameter shall contain the local value of the cycle counter.

Phase

This parameter contains the Phase to be used for the RTC frame.

Status

This parameter shall contain the current status. The allowed values are LOCAL and GLOBAL. The value LOCAL shall be used to indicate that no valid synchronization frame has been received within the PLL window. The value GLOBAL shall be used to indicate that a valid synchronization frame has been received within the PLL window.

7.3.3.10.6 Behavior**7.3.3.10.6.1 Diagnosis and Alarms**

PTCP synchronization can cause diagnosis events. There are some dependencies of sync errors, so not all errors occur at once.

If no synchronization mismatch is present, PTCP synchronization has been successful. “Wrong PTCPSubDomainID” and “Wrong IRDataID” requires a sync message to be received. “Jitter out of Boundary” requires a sync message to be received and correct PTCPSubDomainID and IRDataID.

These dependencies are handled within PTCP “Local Sync State Info” service.

7.3.3.10.6.2 Primitive definitions

7.3.3.10.6.2.1 Primitives exchanged between remote machines

The service primitives including their associated parameters issued or received by synchronization diagnosis (SYNC_DIAG) devices are described in the service definition and shown in Table 294.

Table 294 – Remote primitives issued or received by SYNC_DIAG

Primitive	Source	Destination	Associated parameters	Functions
Local Diagnosis Event.req	SYNC_DIAG	FAL	see 7.3.4.2.5.5	—
Alarm.req	SYNC_DIAG	FAL	see 7.3.1.6.5	—
Alarm.cnf ()	FAL	SYNC_DIAG	see 7.3.1.6.5	—

7.3.3.10.6.2.2 Primitives exchanged between local machines

The local service primitives including their associated parameters issued or received by SYNC_DIAG are described in the service definition and shown in Table 295.

Table 295 – Local primitives issued or received by SYNC_DIAG

Primitive	Source	Destination	Associated parameters	Functions
Sync State Change.ind	local	SYNC_DIAG	see 6.3.15.3.7	—

7.3.3.10.6.3 State transition diagram

The state transition diagram of the SYNC_DIAG is shown in Figure 62

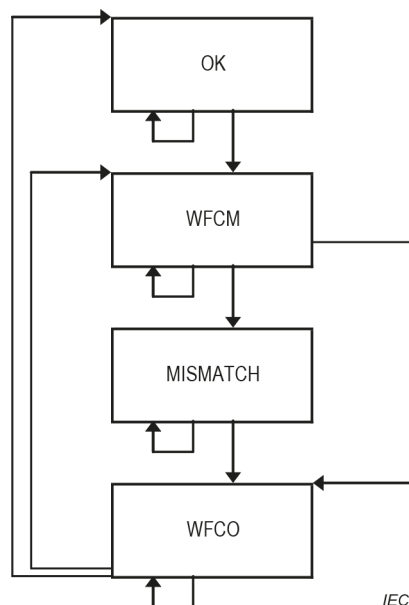


Figure 62 – State transition diagram SYNC_DIAG

States of the SYNC_DIAG

OK	Initial state and synchronization ok
WFCM	Wait for alarm confirm while going to mismatch
MISMATCH	synchronization diagnosis exists
WFCO	Wait for alarm confirm while going to ok

7.3.3.10.6.4 State machine description

This state machine cares about the diagnosis issues regarding synchronization. It is triggered by sync state changed indications and issues coming and going alarms.

7.3.3.10.6.5 State table

Table 296 defines the state table for SYNC_DIAG.

Table 296 – State table SYNC_DIAG

#	Current State	Event /Condition =>Action	Next State
1	OK	Sync State Change.ind () /SyncState == SYNCHRONIZED => ignore	OK
2	OK	Sync State Change.ind () /SyncState == NOT_SYNCHRONIZED => SYNC_MISMATCH (SyncID, ErrorType) NextState := MISMATCH Alarm.req ()	WFCM
3	OK	Alarm.cnf () => ignore	OK

#	Current State	Event /Condition =>Action	Next State
4	WFCM	Sync State Change.ind () /SyncState == SYNCHRONIZED => NextState := OK	WFCM
5	WFCM	Sync State Change.ind () /SyncState == NOT_SYNCHRONIZED => NextState := MISMATCH	WFCM
6	WFCM	Alarm.cnf () /NextState == OK => SYNC_OK (SyncID) Alarm.req ()	WFCO
7	WFCM	Alarm.cnf () /NextState == MISMATCH => ignore	MISMATCH
8	MISMATCH	Alarm.cnf () => ignore	MISMATCH
9	MISMATCH	Sync State Change.ind () /SyncState == SYNCHRONIZED => SYNC_OK (SyncID) NextState := OK Alarm.req ()	WFCO
10	MISMATCH	Sync State Change.ind () /SyncState == NOT_SYNCHRONIZED => ignore	MISMATCH
11	WFCO	Sync State Change.ind () /SyncState == SYNCHRONIZED => NextState := OK	WFCO
12	WFCO	Sync State Change.ind () /SyncState == NOT_SYNCHRONIZED => NextState := MISMATCH	WFCO
13	WFCO	Alarm.cnf () /NextState == MISMATCH => SYNC_MISMATCH (SyncID, ErrorType) Alarm.req ()	WFCM
14	WFCO	Alarm.cnf () /NextState == OK => ignore	OK

7.3.3.10.6.6 Functions, Macros, Timers and Variables

Table 297 contains the functions, macros, timers and variables used by the state table of SYNC_DIAG, their arguments and descriptions.

Table 297 – Functions, Macros, Timers and Variables used by SYNC_DIAG

Name	Type	Function/Meaning
SYNC_OK(SyncID)	Function	No Sync mismatch. Sync OK. Alarm Priority:= ALARM_LOW if (SyncID == 0) Alarm type:= Sync Data Change Notification else Alarm type:= Time Data Change Notification Local Remove Diagnosis Entry () if (SyncID == 0) Channel Error type := Sync mismatch else Channel Error type := Time mismatch Local Diagnosis Event_ind ()
SYNC_MISMATCH(SyncID,ErrorType)	Function	Sync mismatch. Issue an Alarm Notification and Diagnosis Event. Only changes of error states will cause an Alarm Notification and Diagnosis Event! Alarm Priority:= ALARM_LOW if (SyncID == 0) Alarm type:= Sync Data Change Notification else Alarm type:= Time Data Change Notification Local Add Diagnosis Entry () if (SyncID == 0) Channel Error type := Sync mismatch else Channel Error type := Time mismatch Ext Channel Error type := ErrorType Local Diagnosis Event_ind ()
NextState	Variable	This local variable contains the desired state

7.3.3.11 MIB class

7.3.3.11.1 Overview

Subclause 7.3.3.10.1 defines a list of supported MIBs for the devices. Table 298 shows the defined or referenced MIBs.

Table 298 – List of supported MIBs

Name	Meaning
MIB-II	MIB from IETF RFC 1213
IF-MIB	MIB from IETF RFC 2863
LLDP-MIB	MIB from IEEE Std 802.1AB
LLDP-EXT-DOT1-MIB	Extension of the LLDP-MIB by IEEE Std 802.1AB
LLDP-EXT-DOT3-MIB	Extension of the LLDP-MIB by IEEE Std 802.3
LLDP-EXT-PNO-MIB	Extension of the LLDP-MIB by this document
IEEE8021-AS-MIB	MIB from IEEE Std 802.1AS
MRP-MIB	MIB from IEC 62439-2

7.3.3.11.2 MIB-II

MIB objects shown in Table 299 shall be used from the MIB-II as defined in IETF RFC 1213. Corresponding Attributes and Services deliver the same information as the respective MIB object.

Table 299 – Cross-referencing of MIB-II objects

MIB Object	Corresponding Attribute / Service
sysDescr	IEEE Std 802.1AB ASE::System Description
	IEEE Std 802.1AB ASE::Chassis ID
	RPC ASE::Annotation ^a
sysObjectID	IEEE Std 802.1AB ASE::Object Identifier
sysName	IEEE Std 802.1AB ASE::System Name
ifInOctets	CIM ASE:CIM class:Read PD Port Statistic():ifInOctets
ifInDiscards	CIM ASE:CIM class:Read PD Port Statistic():ifInDiscards
ifInErrors	CIM ASE:CIM class:Read PD Port Statistic():ifInErrors
ifOutOctets	CIM ASE:CIM class:Read PD Port Statistic():ifOutOctets
ifOutDiscards	CIM ASE:CIM class:Read PD Port Statistic():ifOutDiscards
ifOutErrors	CIM ASE:CIM class:Read PD Port Statistic():ifOutErrors
^a In RPCAnnotation the field IM_Serial_Number is missing.	

7.3.3.11.3 IEEE802.1AB-MIB

7.3.3.11.3.1 General

See MIB Definition in IEEE Std 802.1AB

7.3.3.11.3.2 LLDP-MIB

MIB objects shown in Table 300 are used from the LLDP-MIB as defined in IEEE Std 802.1AB. Corresponding Attributes and Services deliver the same information as the respective MIB object.

Table 300 – Cross-referencing of LLDP-MIB objects

MIB Object	Corresponding Attribute
lldpLocChassisId	CIM ASE:CIM class:PD Interface Data Real.Chassis ID
	IEEE Std 802.1AB ASE::Chassis ID
lldpLocManAddr	CIM ASE:CIM class:PD Interface Data Real.IP Address
	IEEE Std 802.1AB ASE::Management Address

7.3.3.11.3.3 LLDP-EXT-MIBs

MIB objects shown in Table 301 and Table 302 are used from the LLDP-EXT-MIBs. Corresponding Attributes and Services deliver the same information as the respective MIB object.

Table 301 – Cross-referencing of LLDP-EXT-PNO MIB objects

MIB Object	Corresponding Attribute
IldpXPnoLocLPDValue	CIM ASE:CIM class:PD Port Data Real.Line Delay
IldpXPnoLocPortTxDValue	IEEE Std 802.1AB ASE::PTCP_PortTxDelayLocal
IldpXPnoLocPortRxDValue	IEEE Std 802.1AB ASE::PTCP_PortRxDelayLocal
IldpXPnoLocPortNoS	DCP ASE::Name Of Station

Table 302 – Cross-referencing of LLDP-EXT-DOT3 MIB objects

MIB Object	Corresponding Attribute
IldpXdot3LocPortAutoNegEnabled	IEEE Std 802.1AB ASE::Auto Negotiation Support and Status
IldpXdot3LocPortOperMauType	IEEE Std 802.1AB ASE::Operational MAU type
	CIM ASE:CIM class:PD Port Data Real.MAU Type

7.3.3.11.4 IEEE802.1AS-MIB

See MIB Definition in IEEE Std 802.1AS.

7.3.3.11.5 IEEE802.3-MIB

See MIB Definition in IEEE Std 802.3.

7.3.3.11.6 IEEE802.1Q-MIB

See MIB Definition in IEEE Std 802.1Q.

7.3.3.11.7 MRP-MIB

See MIB in IEC 62439-2 and usage in IEC 61158-6-10.

7.3.3.11.8 Relations

The access to the MIBs is offered by the simple network management ASE; see 6.3.4.4.

7.3.3.12 YANG class**7.3.3.12.1 Overview**

The concepts according to Yang should be applied to bridges, bridged end stations and end stations.

Yang is defined within the IETF RFC 6020 (<https://tools.ietf.org/html/rfc6020>).

NOTE All YANG modules, whether published, draft or experimental are hosted on the following server:
<https://github.com/YangModels/yang>.

7.3.3.12.2 IEEE Std 802.1Q ASE related YANG modules

The related modules should be used, see link above.

As an example, some modules related to the IEEE Std 802.1Q ASE, see Table 303.

Table 303 – IEEE Std 802.1Q ASE related YANG modules (type definitions)

Module	Reference	Notes	State
ietf-yang-types	IETF RFC 6691	Common YANG Data Types.	Published
ietf-inet-types	IETF RFC 6691	Collection of generally useful derived YANG data types for Internet addresses and related things	Published
iana-if-type	IANA	YANG identities for IANA-registered interface types (see www.iana.org/assignments/smi-numbers).	Published
ieee802-types	IEEE Std 802.1Q-2018, 48.4.2.1	General type definitions used within IEEE Std 802.	Published
ieee802-dot1q-types	IEEE Std 802.1Q-2018, 48.4.2.2	General type definitions used by IEEE Std 802.1Q.	Published

7.3.3.12.3 IEEE Std 802.1AB related YANG modules

The related modules should be used, see link above.

7.3.3.12.4 IEEE Std 802.1AS related YANG modules

The related modules should be used, see link above.

7.3.3.12.5 IEEE Std 802.3 related YANG modules

The related modules should be used, see link above.

7.3.3.12.6 NETCONF related YANG modules

The related modules should be used, see link above.

7.3.3.12.7 Relations

The access to the YANG modules is offered by the network configuration protocol ASE; see 6.3.6.

7.3.4 Diagnosis ASE**7.3.4.1 Overview****7.3.4.1.1 Diagnosis base model****7.3.4.1.1.1 General**

Figure 63 illustrates the diagnosis base model.

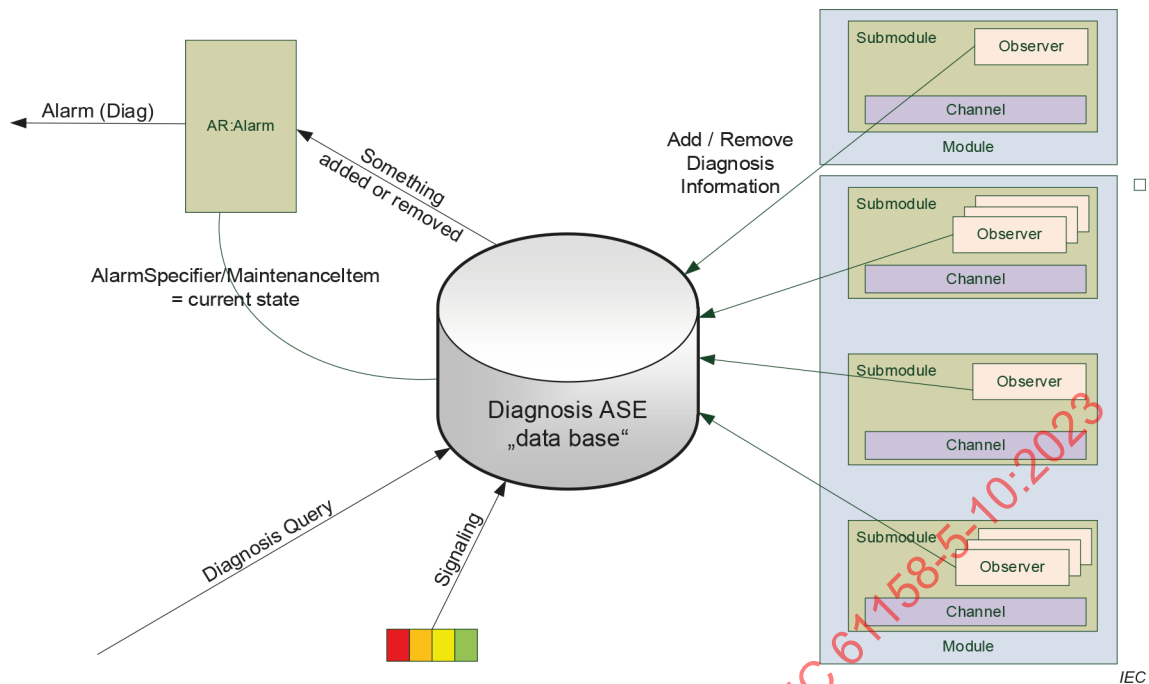


Figure 63 – Diagnosis Base Model

The diagnosis base model consists of the following parts (from right to left):

- The observers, related to a submodule, adds or removes diagnosis information to or from the Diagnosis ASE according to the status of its real periphery with its severity and the diagnosis source (API, slot, subslot, channel, direction),
- the Diagnosis ASE (a data base) holds the current diagnosis information for each present submodule,
- signaling for local visibility of existent diagnosis reflecting the diagnosis status,
- query to give external applications access to the diagnosis information with a filter capability,
- the Diagnosis ASE uses the AR:Alarm class to inform the IO controller about changes. The current submodule diagnosis state is additionally provided through AlarmSpecifier and Maintenanceltem to support fast signaling of the diagnosis state in the IO controller.

7.3.4.1.1.2 Filtering

The flow of the diagnosis data is shown in Figure 64. “Complete ASE” means all diagnosis data according to check records. “Visible ASE” means the filtered diagnosis that is visible when reading the diagnosis records.

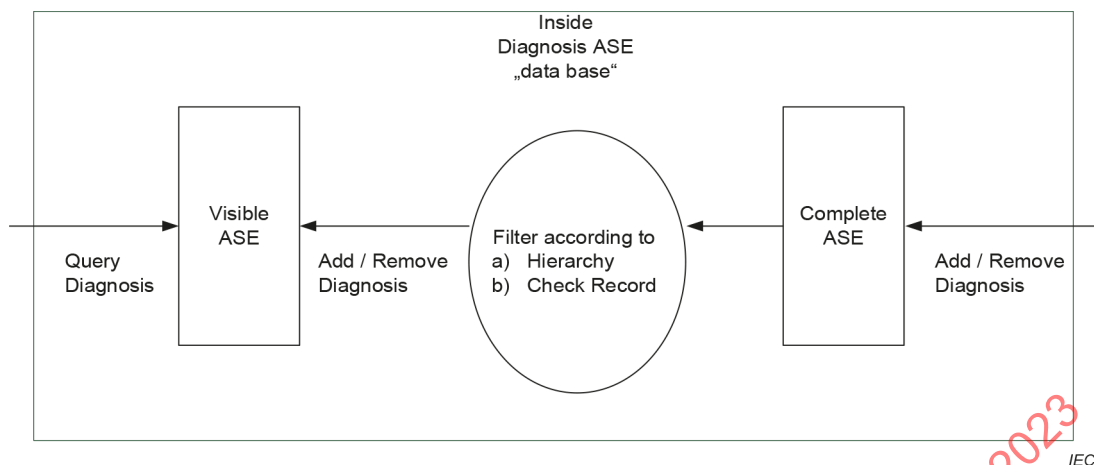


Figure 64 – Filtering of diagnosis

7.3.4.1.1.3 Filtering hierarchy

Figure 65 shows the filtering according to:

- the hierarchical position of the addressable elements, and
- the hierarchical logic according to the individual diagnosis data groups.

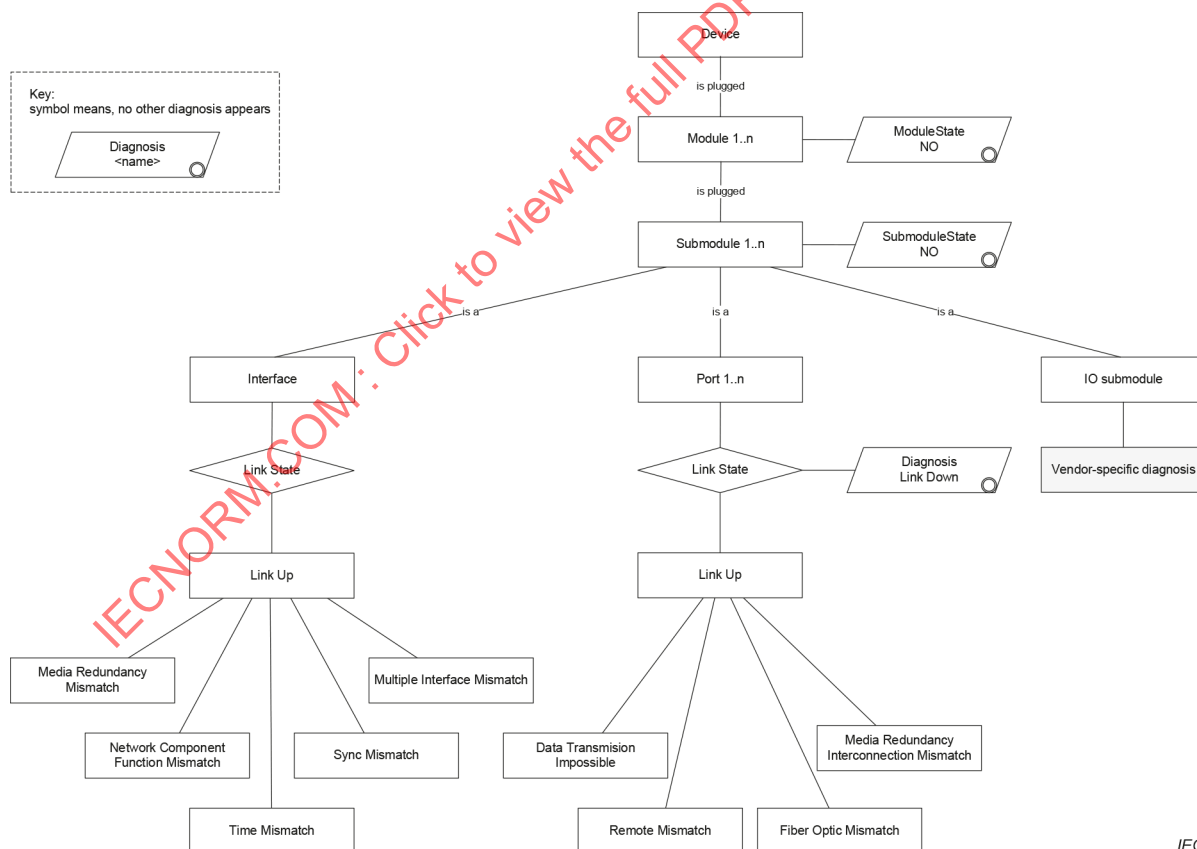


Figure 65 – Filtering hierarchy

7.3.4.1.2 Observer

The observers are described in 7.3.2.5.1.

7.3.4.1.3 Severity

The classification of the severity is shown in Figure 66.

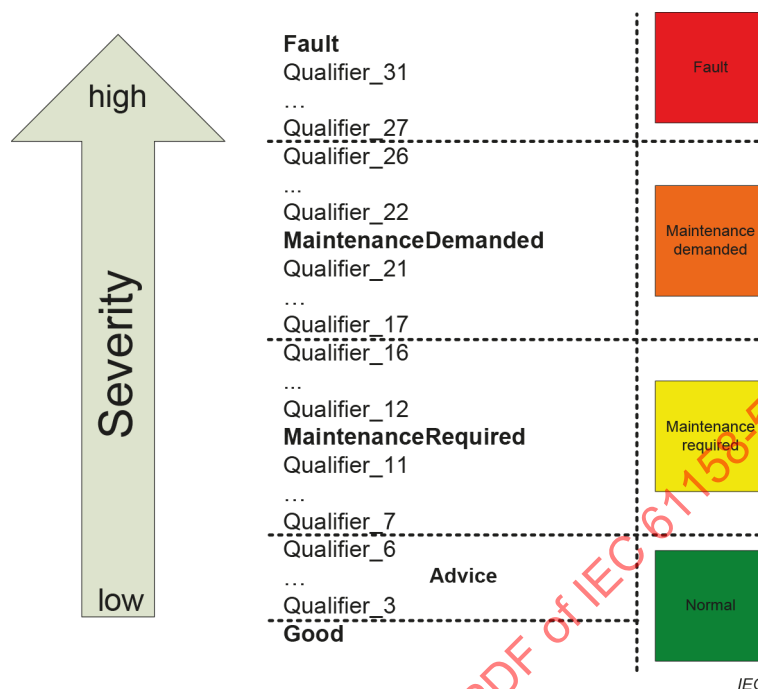


Figure 66 – Severity classification of fault, maintenance and qualified

The severity expresses how urgent maintenance is demanded to cure a specific diagnosis:

- **Fault** means immediate action; the channel is no longer working.
- **Maintenance demanded** demands maintenance as fast as possible.
- **Maintenance required** means that maintenance should be done in a near future.
- **Advice** means normal operation; however, the process delivers an advice for the user.
- **Good** means normal operation; this is indicated by absence of any of the above entries.
- Additionally, 29 **Qualifier_xx** severities are defined as sub severities between the main ones (Good, Advice, Maintenance required, Maintenance demanded, and Fault). The dashed lines in Figure 66 indicate how they are sorted in between.

Whether and which severities are used, which coloring scheme and which names are used for Qualified xx is defined by profiles.

7.3.4.1.4 Data base model

The Diagnosis ASE of an IO device contains its diagnosis information.

For diagnosis purposes a submodule is sub-structured into channels. A channel is equivalent to a monitored entity. The monitoring can be realized by the submodule itself (e.g. short circuit, wire breakage or over temperature) or else by the attached sensor or actor (e.g. sensor fault).

The manufacturer is responsible for modeling the channels of a submodule and assigning the identification. A particular channel is identified using channel number and direction (IN, OUT, IN/OUT or manufacturer specific). The channel identification is unique within a submodule. The channel numbering scheme for a particular direction may contain gaps to allow logical structuring.

Figure 67 shows the data base model for the Diagnosis ASE.

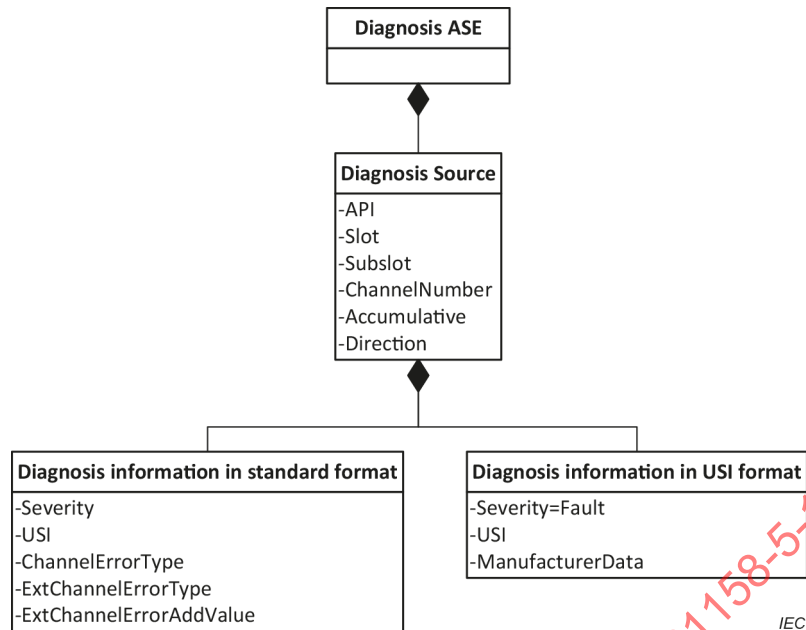


Figure 67 – Data Base Model

The diagnosis is arranged by the source of a diagnosis. A particular diagnosis source is specified by

- API – the application process identifier of the diagnosis source
- Slot – the slot number of the diagnosis source
- Subslot – the subslot number of the diagnosis source
- ChannelNumber – the channel number of the diagnosis source
 - if set to 0 – 0x7FFF the source is a channel as specified by the manufacturer,
 - if set to 0x8000 the source is the whole submodule.
- Accumulative
 - if set to false the source is a specific channel or the whole submodule,
 - if set to true the source is a channel group.

NOTE 1 The information whether a channel group exists and which channels belong to it is only visible in the product documentation.

- Direction (IN, OUT, IN/OUT or manufacturer specific)

NOTE 2 A manufacturer can use the same channel numbering in each direction.

The diagnosis source is the information where the diagnosis is located on the device.

Each diagnosis source exists only once in the Diagnosis ASE if diagnosis exists for this particular source. In other words, the tuple (API, Slot, Subslot, ChannelNumber, Direction, Accumulative) is the key attribute. Therefore, a channel and a channel group are two separated diagnosis sources.

If the diagnosis is detected

- at a **Channel**,

NOTE 3 Diagnosis related to actor, sensor, or its connection (e.g. wire break)

ChannelNumber shall be set to the channel number,

Direction to the channel direction,

and Accumulative to false,

Use the channel number imprinted directly on the IO device's enclosure.

- at a **Channel group**,

NOTE 4 Diagnosis related to the channel group (e.g. power supply failure of the channel group)

ChannelNumber shall be set to the lowest channel number of the channel group,

Direction to the channel direction,

and Accumulative to true,

Use the channel number imprinted directly on the IO device's enclosure.

- at a **Submodule**,

NOTE 5 Diagnosis related to the submodule (e.g. submodule is defective)

ChannelNumber shall be set to 0x8000 (special value indicating the “whole submodule”),

Direction to “manufacturer specific”,

and Accumulative to false.

A diagnosis source is always related to the real identification. Diagnosis exists independently of whether the submodule is part of an application relation or not.

A diagnosis source holds one to many diagnosis information. There are two different formats for diagnosis information:

- standard format,
- USI format.

Diagnosis information in standard format is specified by

- Severity (expresses how urgent maintenance to cure a specific diagnosis is demanded),
- USI (expresses the coding of diagnosis),
- ChannelErrorType (expresses the type of diagnosis),
- optionally ExtChannelErrorType (expresses the subtype of diagnosis),
- optionally ExtChannelErrorAddValue (additional information to the diagnosis acquired at the moment the diagnosis appeared).

Diagnosis information in standard format exists once per key attribute (ChannelErrorType, optionally ExtChannelErrorType) in the Diagnosis ASE. If severity or ExtChannelErrorAddValue changes the diagnosis information is updated regarding these values.

Within standard format USI expresses the coding of the diagnosis. Three codings are provided: Coding as ChannelDiagnosis (USI 0x8000), as ExtendedChannelDiagnosis (USI 0x8001) with the additional fields ExtChannelErrorType and ExtChannelErrorAddValue, and as QualifiedChannelDiagnosis (USI 0x8003) with the additional fields ExtChannelErrorType and ExtChannelErrorAddValue, and qualified sub severities.

When using the coding ExtendedChannelDiagnosis or QualifiedChannelDiagnosis and having set ExtChannelErrorType to 0x0000 (meaning “unspecified”), the diagnosis information is seen as ChannelError diagnosis, if set to a value different from 0x0000, the diagnosis information is seen as ExtChannelError diagnosis.

ChannelErrorType and ExtChannelErrorType allow specifying manufacturer specific error and extended error types.

Diagnosis information in **USI format** is specified by

- USI (expresses the type of diagnosis),

- optionally ManufacturerData (additional information to the diagnosis acquired at the moment the diagnosis appeared).

Diagnosis in USI format is restricted to a submodule. ChannelNumber is implicitly set to 0x8000 (a special value indicating the “whole submodule”), Direction to “manufacturer specific”, Accumulative to false and Severity to “Fault”.

Each diagnosis information in USI format exists only once for the key attribute (USI) in the Diagnosis ASE. If ManufacturerData changes the diagnosis information is updated regarding this value.

It is strongly recommended to use diagnosis in standard format (i.e. Channel Diagnosis, Ext Channel Diagnosis, or Qualified Channel Diagnosis) in all matching cases because detailed semantics are fully standardized. Only if the above not fits, diagnosis in USI format should be used.

Note that channel diagnosis, extended channel diagnosis and qualified channel diagnosis differ just in the amount of data provided for the specific diagnosis item. Channel diagnosis offers channel properties and channel error type. Extended channel diagnosis adds an extended channel error type and an additional value. Qualified channel diagnosis adds the qualified channel qualifier. What format is chosen for a particular diagnosis entry is decided by the manufacturer of the IO device. Thus always the same format could be chosen (e.g. using always the extended channel diagnosis format).

ChannelErrorTypes and ExtChannelErrorTypes as defined for common causes shall be used for all appropriate diagnosis (e.g. do not define an own ChannelErrorType for short circuit or under voltage). These errors are presentable by diagnosis tools without further knowledge. If for a specific diagnosis no predefined error exists, define a manufacturer specific ChannelErrorType or ExtChannelErrorType. Profile writers shall define for such a case a profile specific ChannelErrorType or ExtChannelErrorType.

7.3.4.1.5 Adding and Removing Diagnosis

The device application observer adds or removes diagnosis information according to the status of its real periphery. The real periphery is specified through the diagnosis source (API, Slot, Subslot, Channel, Direction, and Accumulative).

Be aware that parameterization can have an impact whether diagnosis is detected and in consequence added to the Diagnosis ASE. For further details, see Annex F.

NOTE As an example diagnosis in the context of synchronization arises only if the device has been configured as sync slave or sync master.

In consequence, a device manufacturer shall define for each particular diagnosis observer, whether

- it is always enabled (diagnosis observer always ON),
- it is enabled when the feature is activated (diagnosis observer ON, when feature active),
- it is activated by parameterization (diagnosis observer OFF by default),
- or it is deactivated by parameterization (diagnosis observer ON by default).

EXAMPLE Diagnosis in the context of synchronization arises only if the device has been configured as sync slave or sync master. In this case, the synchronization diagnosis observer is ON, when synchronization is activated. The same applies for profiles (the behavior is defined in the profile itself) and for the normative diagnosis (defined in IEC 61158-6-10).

Diagnosis information is **added** to the Diagnosis ASE if it is new diagnosis information at this source. Whether the diagnosis information is new is derived from the diagnosis information's key attribute, i.e. ChannelErrorType, ChannelErrorType/ExtChannelErrorType, or USI is new at this source.