

Electric Engine Preheaters and Battery Warmers for Diesel Engines – SAE J1310 APR81

SAE Information Report
Approved April 1981

**S. A. E.
LIBRARY**

THIS IS A PREPRINT WHICH IS
SUBJECT TO REVISIONS AND
CORRECTIONS. THE FINAL
VERSION WILL APPEAR IN THE
1982 EDITION OF THE SAE
HANDBOOK.

SAE *The Engineering
Resource For
Advancing Mobility*

PREPRINT

SAENORM.COM : Click to view the full PDF of J1310_198104

Report of the Off-Road Machinery Technical Committee, Subcommittee 15, approved April 1981. Rationale statement available.

1. Purpose and Scope—The purpose of this report is to acquaint and inform those concerned with cold weather operation of diesel powered machines and vehicles with the selection and application of electrically powered starting aids currently available.

It deals specifically with the design, function, and application of line voltage electrically powered engine preheaters and battery warmers.

2. General—Diesel engine starting becomes progressively more difficult as the ambient temperature drops below 40°F (4°C). To achieve successful engine starting, the engine combustion chamber temperatures must be sufficient to ensure that the air/fuel mix will ignite under full compression. However, low ambient temperatures affect combustion chamber temperatures for the following reasons:

- Cylinder wall temperatures are low due to low coolant and block temperatures.
- Air temperature entering combustion chamber is at ambient temperature.
- Cranking speed at low temperature is at lower rpm because of greater lube viscosity and decreased battery efficiency.
- Fuel temperature reduced by low ambient temperature will reduce combustion chamber temperatures.

Electric engine preheaters and battery warmers are one way of assisting in obtaining consistent successful starts under cold ambient starting conditions, assuming a source of electric power is readily available.

These cold weather aids are designed for permanent installation and are intended to be utilized during normal engine shut-down periods. Engine preheaters heat the engine block by way of raising coolant temperatures and by heating lube oil.

Ideally, engine preheaters should be sized so that they will produce engine temperatures allowing for consistent starting when energized for several hours from a cold soak condition. Under certain conditions of limited wattage and severe cold conditions, the use of ether in conjunction with preheaters and battery warmers may also be required to achieve starting. An important benefit from the correct application and use of preheaters is a reduction in strain and wear caused to electric starting systems and key engine components.

Engine coolant preheaters should provide successful engine starting at temperatures in the -25°F (-32°C) range. At lower ambient temperatures, other preheaters will be required in conjunction with coolant heaters.

Engine preheaters can take several forms depending upon the engine application. The heater design depends on engine size and configuration and will generally fall into one of the following categories:

- Coolant immersion type.
- Oil immersion type.
- External tank coolant type.

3. Heater Design and Construction—Electric engine preheaters have three basic components:

- Heating element.
- Heater casing or adaptor.
- Power supply conductor.

3.1 Heating Element Consists of:

3.1.1 Tubular metallic sheath of steel, copper, stainless steel, or nickel alloy.

3.1.2 Resistance wire helix and terminal pin assembly, a specific length and gauge or nickel chromium resistance wire, equipped with heavy gauge wire stainless steel or plated steel terminal pins welded to the helix.

3.1.3 Suspending medium, magnesium oxide powder, possessing high dielectric strength, high temperature stability and heat conductivity.

The heating element is generally assembled in the following manner:

The resistance wire helix and terminal pin assembly of a predetermined resistance value is suspended centrally inside a specific length of tube. A controlled flow of magnesium oxide powder is allowed to fill the remaining cavity to physically support and electrically insulate the helix. The assembly is then further compacted by reducing its tubular sheath diameter through a swaging or roll mill operation. Annealing is necessary to relieve work hardening stresses resulting from the previous operation. Bending and final forming are performed after annealing.

3.2 Heater Casing or Adaptor—The heater casing or adaptor may take the form of a tank assembly, flange plate, or threaded adaptor. The heating element is affixed to one of these forms accordingly.

3.3 Power Supply Conductor—The power supply conductor is usually a flexible grounding type electrical power supply cord. Length and gauge

of conductor, male cap configuration, and conductor jacketing can vary with the final application.

4. Heater Types and Applications

4.1 Coolant Immersion Type—These units (see Fig. 1) are designed to be inserted directly into the engine block coolant chamber. Ideally, the location of the heater insertion is at a point on the engine block which is low in the cooling system and where there is unrestricted coolant available and where external mounting is unobstructed. The coolant circulates in the system by convection.

These units incorporate a tubular heating element of the type previously described. The element may be brazed or soldered to a threaded adaptor or plate which, in turn, may be assembled to a jacket plate or core hole adaptor. In addition, some units have tubular elements brazed or soldered to specifically designed bushings incorporating standard pipe thread sizes.

Coolant immersion heaters' dimensions and specifications are described under Engine Preheaters—SAE J226, SAE Recommended Practice in the SAE Handbook.

Elements are kept to a minimum length with a recommended maximum watt density of 100 W/in² (15.5 W/cm²) of element sheath surface.

When elements exceed approximately 7 in (17.75 mm) in overall length, element failure may occur due to engine vibration induced metal fatigue at point of solder.

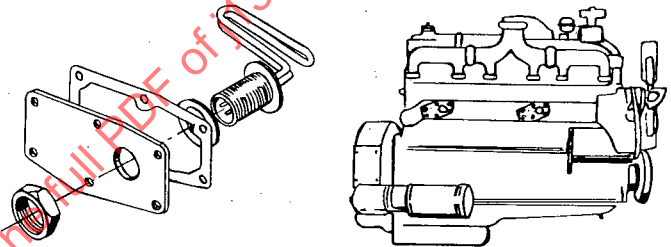


FIG. 1

When watt densities exceed the recommended maximum, aeration of the coolant and/or steam pockets may occur. This may result in engine hot spots and premature heater failure. In addition, heaters displaying high watt densities or heaters installed in restricted coolant areas may result in calcification of the element and in poor circulation of heated coolant or premature element failure.

Coolant immersion heaters are available with heavy-duty three-wire grounded detachable power supply cord sets, usually 5 ft (1.5 m) or 6 ft (1.8 m) in length. They are also available with permanently attached cord sets.

When installing immersion engine preheaters, care must be taken to follow the manufacturer's installation instructions.

Little, if any, maintenance is required other than periodic inspection for coolant leaks around gasketed area or threaded fittings. Power supply cords should be inspected periodically for damage. Protective caps are available to cover the recessed terminal area of the heater should the power supply cord be disconnected for seasonal storage.

Coolant immersion heaters are available in wattages ranging from 750–2000 W, 120 or 240 V.

Some manufacturers provide dual heater kits, complete with special "Y" configuration power supply cord sets. Weather-proof flush-mounted male receptacle enclosures are also available for mounting on engine enclosures.

4.2 Oil Immersion Type—These heaters (Fig. 2) are used as supplements to coolant immersion heaters. They are used to raise or maintain the temperature of oil in the sump in order to reduce crankshaft friction drag (churning loss), and to prevent possible damage to crankshaft and connecting rod bearings as well as to cylinder walls and/or pistons.

Point of installation is in the lower portion of the oil pan through a tapered pipe thread opening. This opening is either already provided or can be fabricated by welding or brazing on an adaptor provided by the heater manufacturer.

Oil is a relatively poor conductor of heat. The entire volume of oil in the sump is heated by convection. Recommended maximum watt densities range from 20–30 W/in² (3–5 W/cm²) of sheath surface, depending on sheath material. Sheath materials include steel, plated steel, stainless steel,

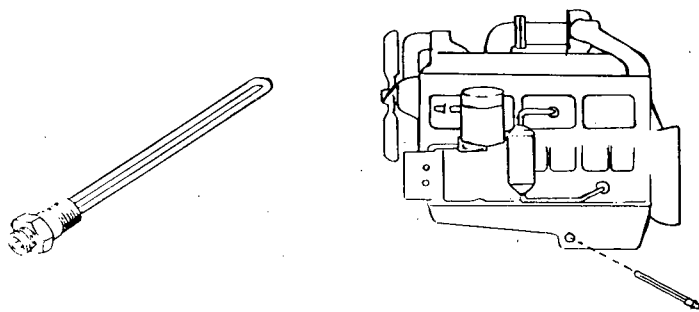


FIG. 2

and aluminum. Consult manufacturer for recommendations.

Control thermostats are available which are mounted in a manner similar to the heaters. These are placed in close proximity to the heater and are usually used with high wattage units.

These heaters may also be controlled by thermostats, used in conjunction with coolant preheaters.

To prevent possible coking of the heater element operated in an ambient below -20°F (-30°C), recommended practice is to energize the oil immersion heater immediately after engine shutdown while the lube oil is still warm.

Power supply cords are of three-wire grounded type and may be either detachable or permanently fixed to the heater. Cords should be routed to minimize possible damage.

These heaters are available in 1/2, 3/4, or 1 in NPT sizes and wattage range from 150–600 at 120 or 240 V. Metric size threads are also available.

4.3 External Tank Coolant Type—Also known as “side arm type,” these units (Fig. 3) consist of a tubular heating element fixed inside a tank complete with a coolant inlet and outlet, as well as a suitable power supply cord. These units are of rugged construction and are offered in a wattage range from 1000–4000 in appropriate voltage, either 120 or 240 VAC. Higher wattages and voltages are available; consult manufacturers.

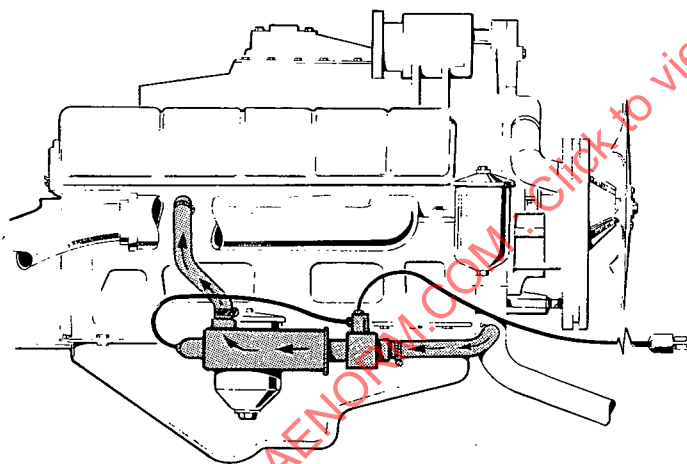


FIG. 3

Tank heaters are universal in application and have the advantage of high wattage availability; however, they are more costly to purchase and install than immersion heaters.

Some heat loss is encountered compared to equivalent wattage immersion heaters, and this should be taken into account when selecting required wattage. A good rule of thumb is to select the next larger wattage size to compensate for these extra heat losses.

These units are intended to be mounted in close proximity to the engine, usually as low in relation to the cooling system as is practical. This should be even with or below the lowest point in the cooling system in order to provide a head of pressure to the heater inlet.

Tank heaters are plumbed to the engine by hoses or coolant lines of suitable diameter and material. Care should be exercised in the clamping and routing of hoses to prevent abrasion damage from engine vibration, exhaust manifold contact, or contact with moving parts. These connections must be of high grade materials capable of withstanding severe physical and

thermal shock. High-low temperature silicone or equivalent hose is recommended.

In operation, coolant is drawn from a low point in the cooling system, for example, water in tube or block drains through the heater inlet, is heated and flows by convection through the heater outlet to a high return point of entry into the engine cooling system, usually the cylinder head, high point in block, or thermostat housing. In addition, tank heaters are equipped with a one-way valve in the inlet area of the tank. This prevents short circuiting of the coolant flow during engine operation and also assists in promoting a flow or percolating effect. Because of the valve, units must not be energized during engine operation or immediate heater failure will occur. On stand-by units, heaters should be electrically interlocked with the starting electric to prevent heater element or hose failure in the event of insufficient coolant flow due to air locks. These may be caused by restricted hoses or incorrect heater installation.

Recommended practice for tank heater installation is to utilize the largest diameter hose compatible with the heater inlet/outlet to achieve maximum flow. Avoid long runs of hose, kinks, or humps. At no point should the outlet hose be higher than the highest coolant level in the engine. Outlet hose should be a minimum of 6 in (15.25 cm) in length.

Auxiliary non-adjustable control thermostats are available for mounting in series with the heater inlet, thus sensing inlet coolant temperature. Temperature settings are available from 100–180° F in 20° F increments. Metric versions are also available.

These controls may also be used to control lube oil heaters as well. Because of heater design and construction, particularly in larger sizes, it is inadvisable to mount these heaters directly to the engine as vibration may cause failure. Secure mounting to a frame member is recommended. Ensure protection from severe shock, splashing, and other physical damage.

Although not generally required, pumps are available for use with tank heaters and provide more efficient overall coolant heating. They are generally used on larger wattage units. Manufacturers can be consulted for their recommendation.

Maintenance for tank heaters should include periodic inspection of power supply cord, hoses, and hose connections. The element should be removed from the tank once a year for removal of scale or sediment.

5. Sizing of Engine Preheaters—There are three modes of heat transfer to be considered when preheating engines. These modes are: conduction, convection and radiation.

Because of the complexity of specific engine designs and the many variables and unknowns, it is extremely difficult to determine by formula the wattage requirements for engines. Wattage requirements can best be determined by actual field experience and test, or by testing conducted under simulated cold weather conditions.

Some engine heater manufacturers have developed a rule of thumb for sizing wattages to diesel engines. This rule specifies that a 3 W/in³ of displacement should provide adequate preheating under most conditions. Of course, this provides only a rough estimate.

Wattage requirements based on engine weight or coolant capacity may also be considered; however, the most important consideration should be the basic engine block's ability to free flow its coolant during the heater cycle. As previously mentioned, this can best be determined through testing.

Other engine heater manufacturers, in co-operation with original equipment manufacturers, have developed some general guideline charts for selection of heater wattages. (See Table A1.)

An important consideration in determining the wattage requirements for specific applications is the effect of wind chill under cold ambient conditions. Where practical, precautions should be taken to shield engines and sump areas from the effects of wind during shutdown periods. The effect of wind chill can be estimated from the wind chill factor shown in the chart in the appendix (see Fig. A1). As an example, a 20 mph (32 km/h) wind at -10°F (-23°C) is equivalent to a temperature of -45°F (-43°C) with no wind. When specifying wattage requirements for engine preheaters, it is important to make certain that specified heater voltages match as closely as possible the nominal voltage of the intended electric service to be utilized. For example, a heater load designed for 240 V and utilized at 220 V will deliver approximately 85% of its rated output.

It is equally important to make certain that the total wattage load will not overload the rated capacity of the electric service to be utilized. External power supply circuits should be suitably protected by means of circuit breakers and/or ground fault interruption devices in accordance with local electrical codes.

6. Battery Warmers—Batteries deliver full cranking power when fully charged at 80°F (27°C); however, this is not the case when they are subjected to colder temperature.

As can be noted in Fig. 4, a battery at full charge can deliver only approximately 26% of its rated cranking at -20°F (-29°C), demonstrating that as temperatures decrease engine cranking power requirements increase.

It is essential that steps be taken to ensure that adequate battery capacity is available under severe cold conditions. Electric battery warmers can offer a solution if auxiliary electric power is available. This power may be on board or off; however, it is usually the off-board type, and therefore

these heating devices are generally used for standby use.

When utilizing electrically powered battery warmers, it is recommended that special attention be given to the design and construction of an insulated battery box (Fig. 5). This box can be fabricated from heavy gauge sheet metal with rigid foam insulation applied to the outer surfaces, or it may be of double-walled foamed-in-place urethane construction.

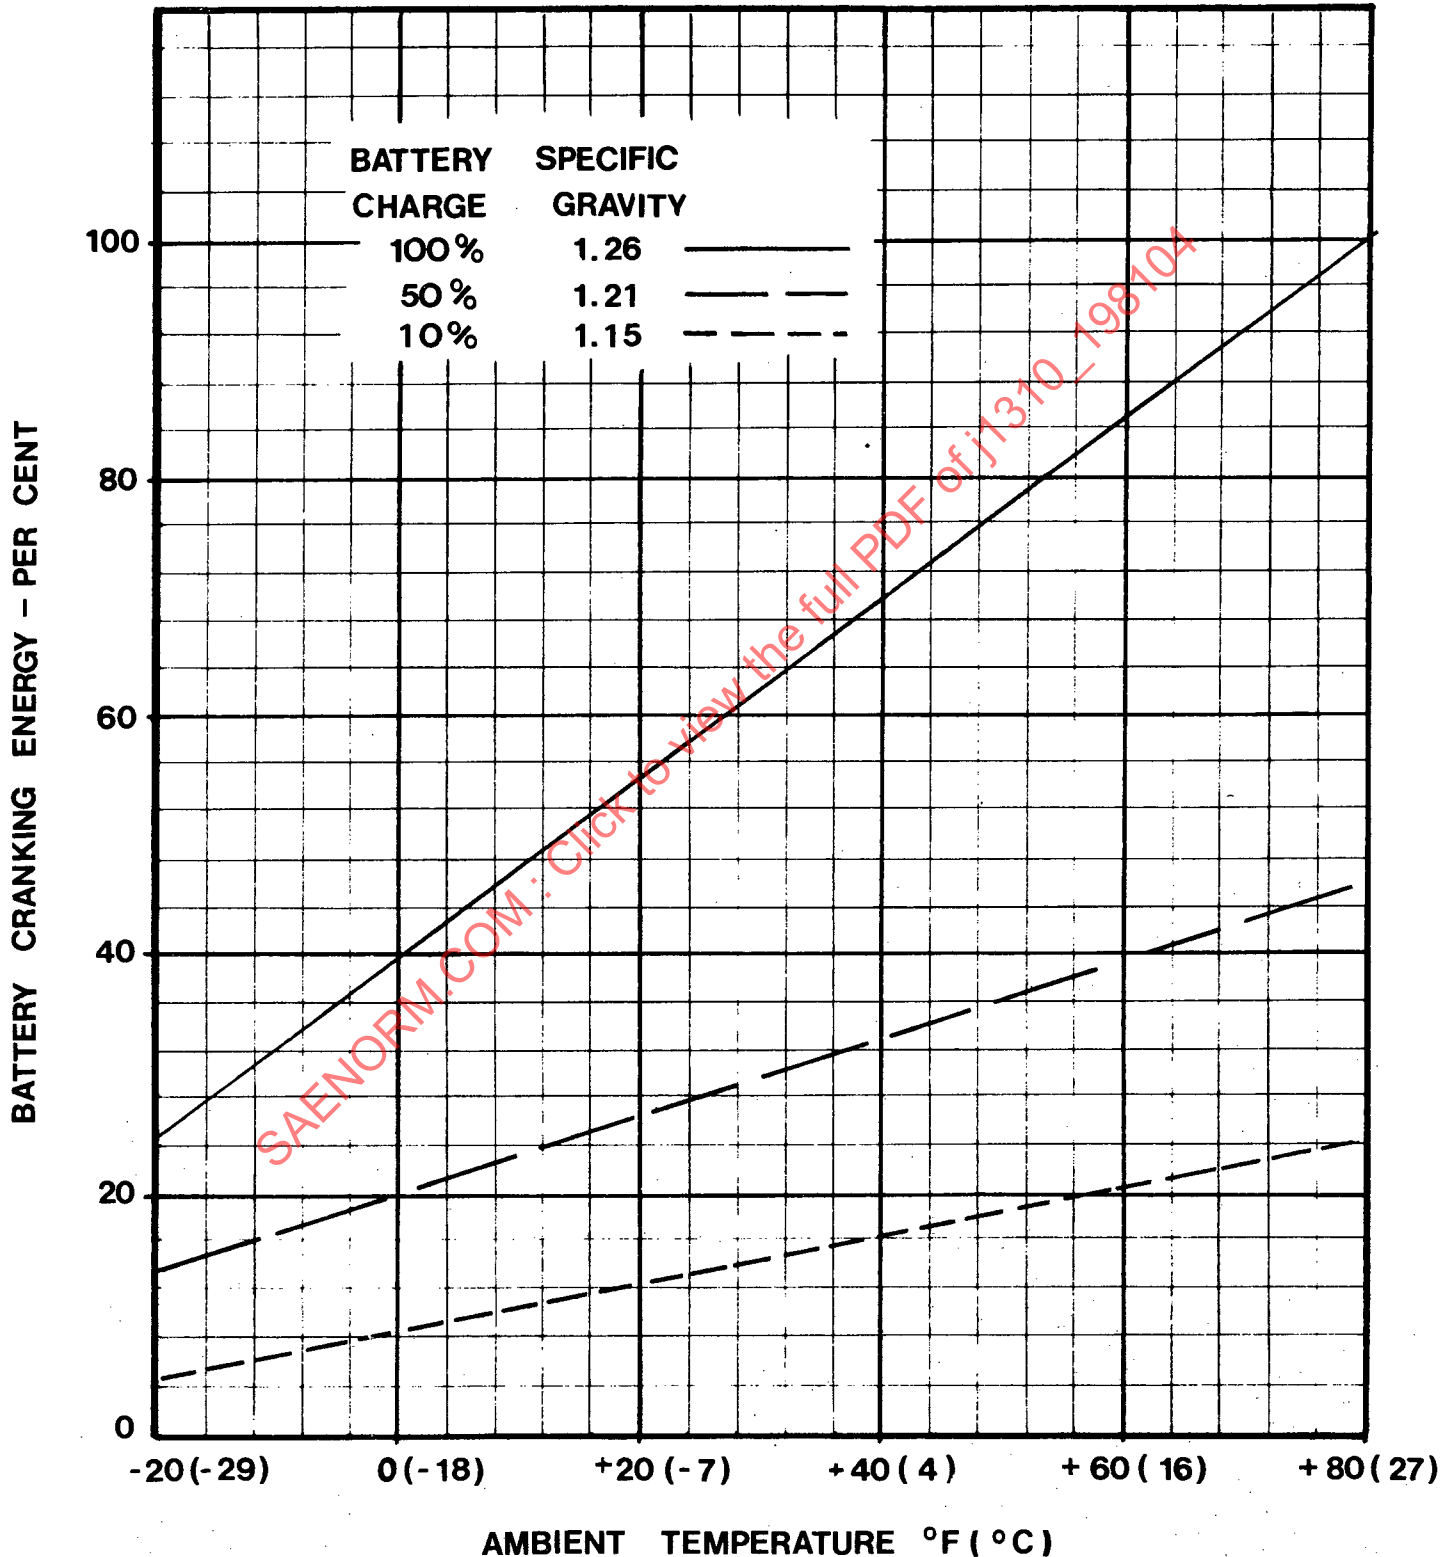


FIG. 4—EFFECT OF AMBIENT TEMPERATURE ON BATTERY CRANKING ENERGY

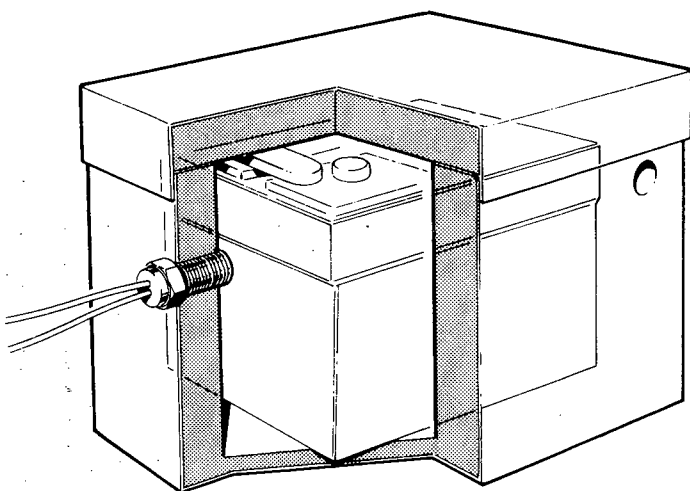


FIG. 5

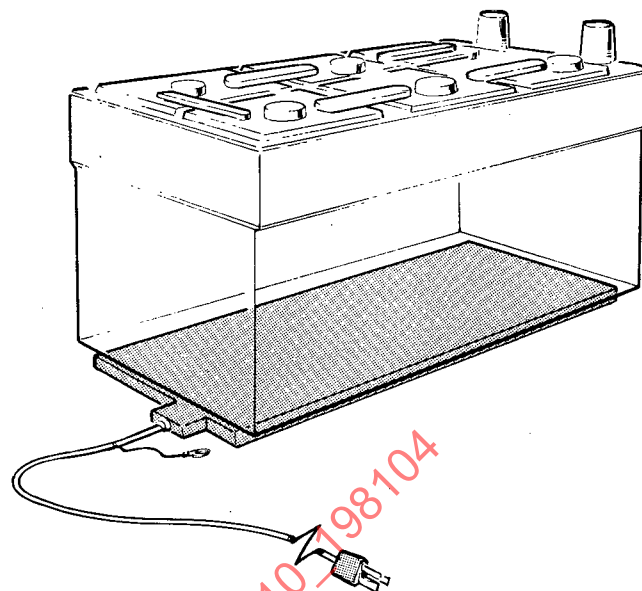


FIG. 7

6.1 Battery Warmer Types and Application—There are several types of electrically powered battery warmers currently in use. These are:

6.1.1 Plate Type—This unit (Fig. 6) employs a metal sheathed tubular element of "U" shape sandwiched between heavy gauge sheet metal plates and equipped with an integral control thermostat. This unit is mounted directly under the battery. The unit is available in 200 W—115 V or 230 V size 6 x 9 x 5/8 in (15.2 x 22.8 x 1.6 cm).

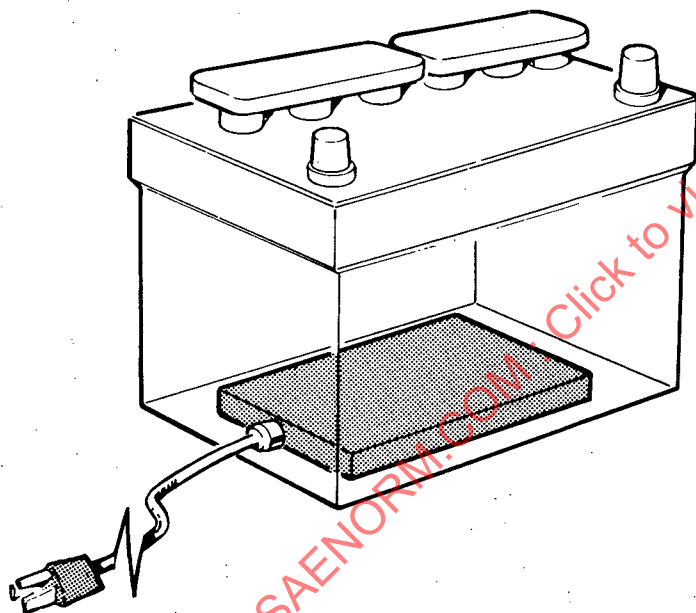


FIG. 6

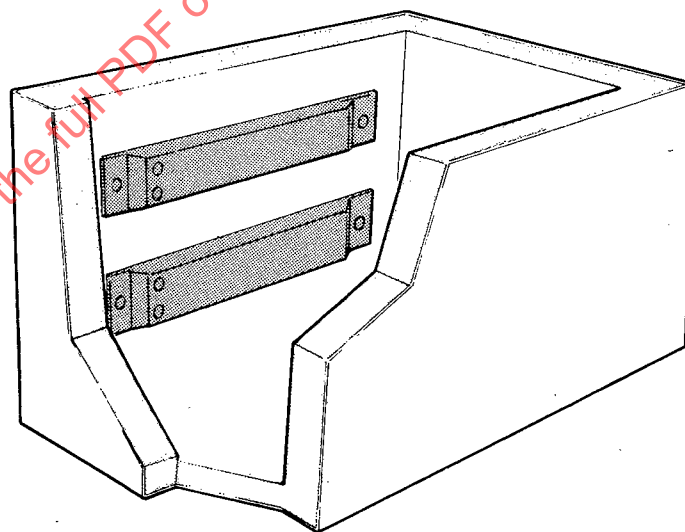


FIG. 8

6.1.2 Mat Type—This unit (Fig. 7) is comprised of a heavy gauge rubber material, incorporating a serpentine pattern resistance wire element imbedded in the center area of the material. The unit relies on low watt density radiant energy to heat the battery and is intended to be mounted directly under the battery. An auxiliary thermostat option with 80°F (27°C) open setting is available.

The unit is available in two sizes: 8 1/2 x 11 x 1/8 in — 50 W—115 V (21.6 x 27.9 x 0.3 cm) or 11 x 10 x 1/8 in — 75 W—115 V or 230 V (27.9 x 50.8 x 0.3 cm).

6.1.3 Strip Heaters—Commercially available strip heaters (Fig. 8) can be employed for heating batteries. These are generally of higher watt densities. Care must be exercised to ensure that they do not come into direct contact with the battery casing. It is advisable to mount these units on the inside wall of the battery box. These units are available in various sizes, wattages, and voltages.

6.1.4 Blanket Type—Flexible construction (Fig. 9) comprised of a heavy aluminum foil element assembly of low watt density, complete with fiber-

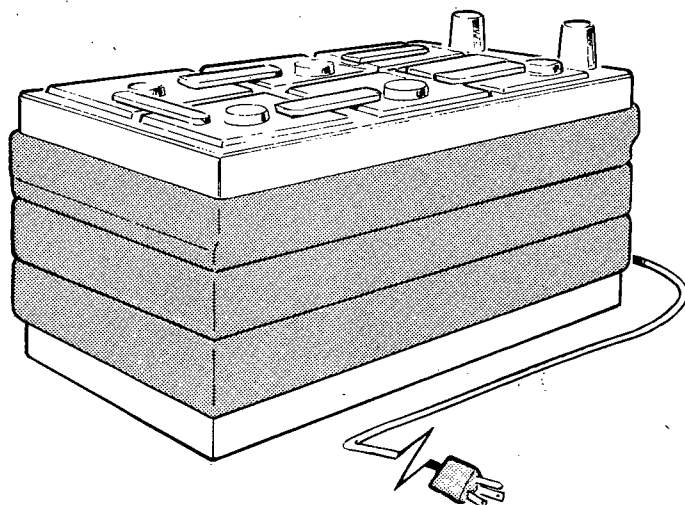


FIG. 9

glass insulation on one side, enclosed in a heavy gauge acid-resistant plastic sheath. The unit is provided with ties and is intended to be installed tightly around the sides of the battery or batteries. This unit has the advantage of integral insulation.

The unit is available in two models: 80 W-120 V - 5 1/2 x 36 x 3/4 in (13.9 x 91.4 x 1.9 cm) or 160 W-120 V - 5 1/2 x 72 x 3/4 in (13.9 x 182.9 x 1.9 cm).

APPENDIX

		TEMPERATURE DEGREES °F (°C)															
WIND VELOCITY MPH (KM/HR)	10 (16)	+20	+14	+ 8	+ 2	- 4	-10	-15	-21	-27	-33	-39	-45	-50	-56	-62	-68
		(- 7)	(10)	(-13)	(-17)	(-20)	(-23)	(-26)	(-29)	(-33)	(-36)	(-39)	(-43)	(-46)	(-49)	(-52)	(-56)
	15 (24)	+13	+ 7	0	-6	-12	-18	-25	-31	-38	-44	-50	-57	-63	-69	-75	-81
		(-11)	(1-14)	(-18)	(-21)	(-24)	(-28)	(-32)	(-35)	(-39)	(-42)	(-46)	(-49)	(-53)	(-56)	(-59)	(-63)
	20 (32)	+ 9	+ 2	-5	-12	-19	-25	-32	-39	-45	-52	-59	-66	-72	-79	-85	-92
		(-13)	(-17)	(-21)	(-24)	(-28)	(-32)	(-36)	(-39)	(-43)	(-47)	(-50)	(-54)	(-58)	(-62)	(-65)	(-70)
	25 (40)	+ 5	- 2	- 9	-17	-24	-30	-37	-44	-51	-58	-65	-72	-78	-86	-93	-99
		(-15)	(-19)	(-23)	(-27)	(-31)	(-34)	(-38)	(-42)	(-46)	(-50)	(-54)	(-58)	(-61)	(-66)	(-69)	(-73)
30 (48)	+ 3	- 5	-12	-20	-27	-33	-41	-48	-55	-63	-70	-77	-83	-91	-98	-104	
	(-16)	(-21)	(-24)	(-29)	(-33)	(-36)	(-41)	(-44)	(-48)	(-53)	(-57)	(-61)	(-64)	(-68)	(-72)	(-76)	
35 (56)	0	- 7	-14	-22	-29	-36	-44	-51	-58	-66	-73	-81	-87	-95	-102	-109	
	(-18)	(-22)	(-26)	(-30)	(-34)	(-38)	(-42)	(-46)	(-50)	(-54)	(-58)	(-63)	(-66)	(-71)	(-74)	(-78)	
40 (64)	- 1	- 9	-16	-24	-31	-38	-46	-53	-61	-69	-76	-84	-91	-98	-105	-112	
	(-18)	(-23)	(-27)	(-31)	(-35)	(-39)	(-43)	(-47)	(-52)	(-56)	(-60)	(-64)	(-68)	(-72)	(-76)	(-80)	

Note: Wind Chill as defined by the climatic research unit of the United States War Department, expresses the rate at which the body of an inactive human would lose heat if placed out of doors in the shade under given conditions of temperature and wind speed.

It should be noted that cooling cannot take the temperature of an object to a point lower than the recorded temperature. However, when there is a strong wind, exposed objects dissipate heat more rapidly.

FIG. A1-WIND CHILL FACTOR

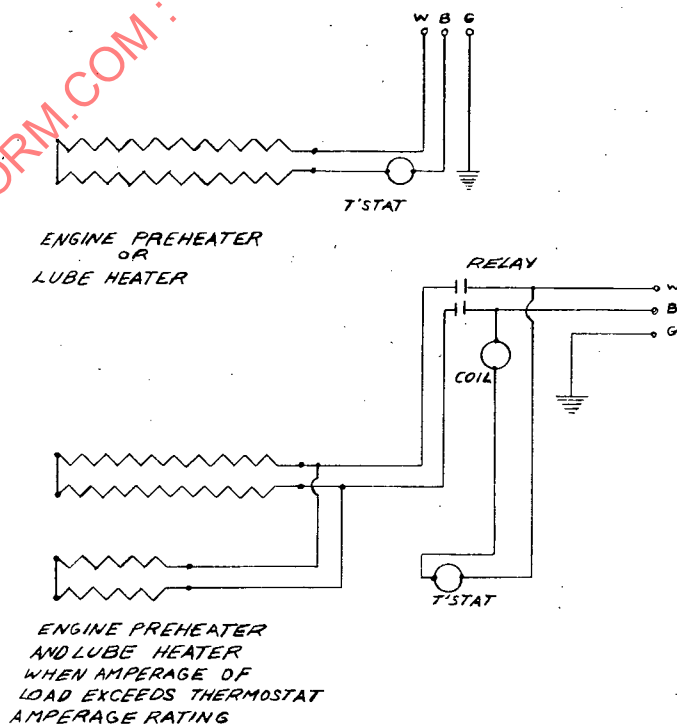


FIG. A2-TYPICAL WIRING DIAGRAMS

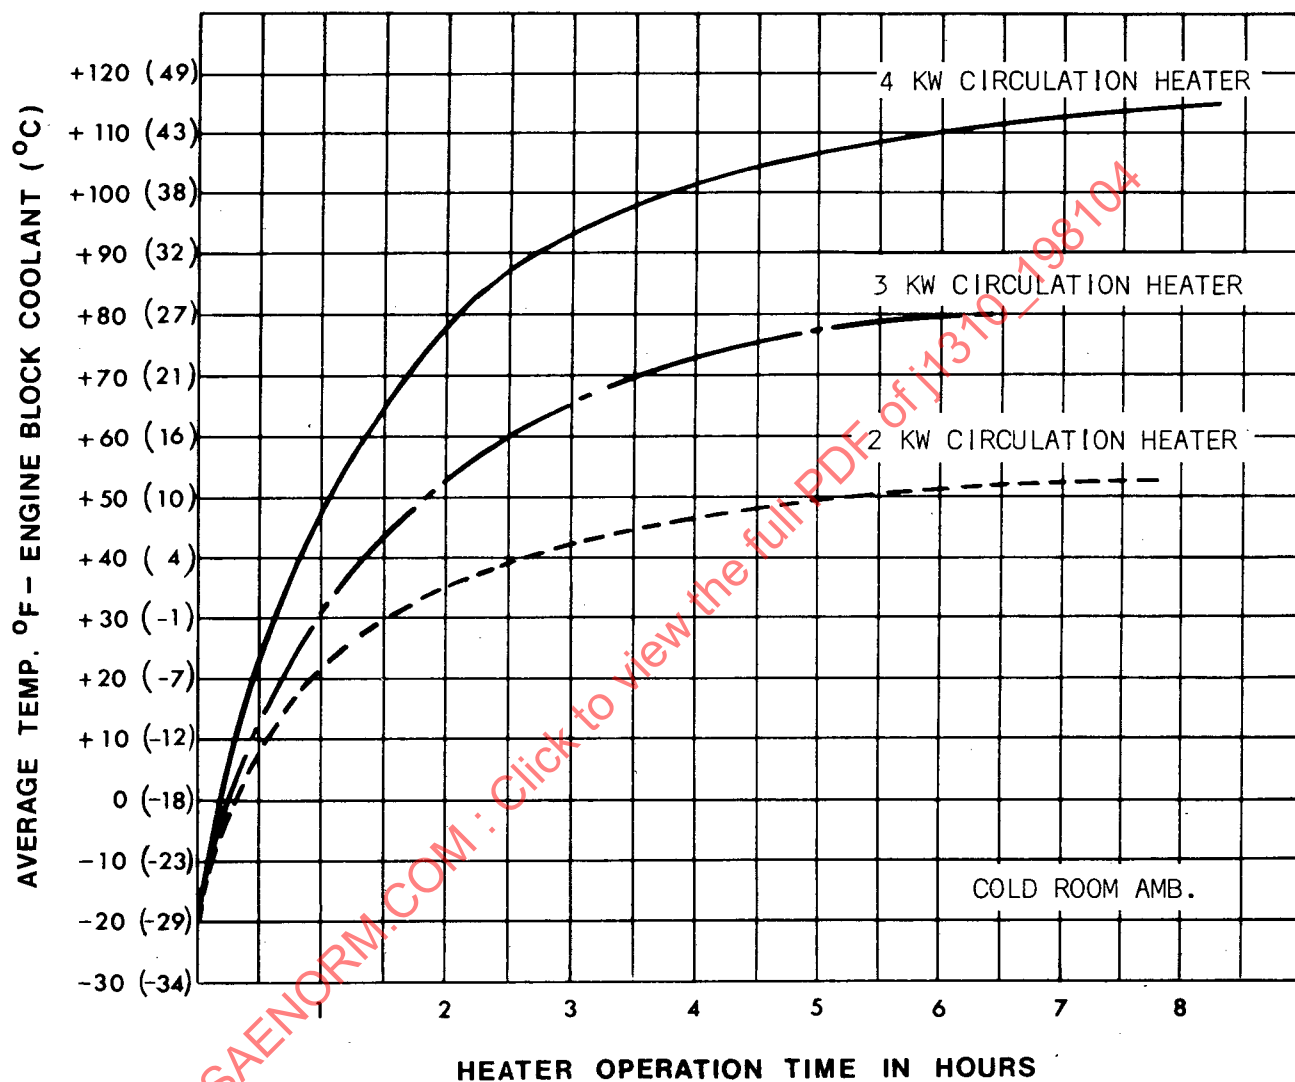


FIG. A3—TEMPERATURE RISE CURVE—CIRCULATION HEATER
INSTALLED ON ENGINE—TYPICAL IN-LINE 6-CYLINDER
DIESEL ENGINE, 855 CID (14 L)

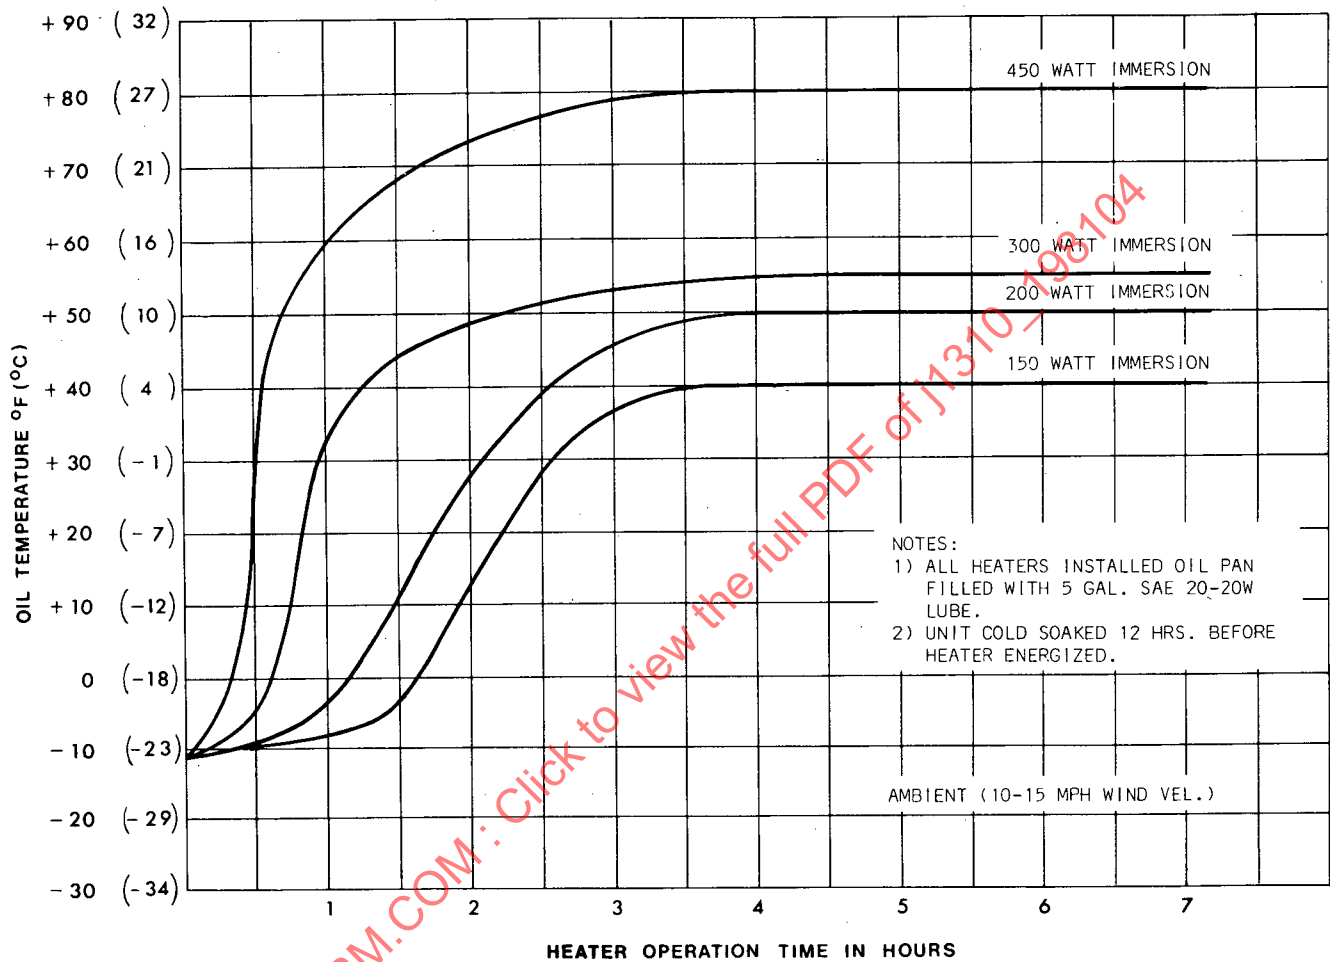


FIG. A4—TEMPERATURE RISE CURVE—OIL PAN HEATER
INSTALLED IN TYPICAL DIESEL ENGINE