

A Product of the
Cooperative Engineering Program

SAE J1497 DEC88

**Design Guide for
Formed-In-Place
Gaskets**

SAE Recommended Practice
Revised December 1988

**S. A. E.
LIBRARY**

Submitted for Recognition as
an American National Standard

SAENORM.COM : Click to view the full PDF of j1497_198812

No part of this publication may be reproduced in any form, in an electronic retrieval system or otherwise, without the prior written permission of the publisher.

Copyright 1989 Society of Automotive Engineers, Inc.

DESIGN GUIDE FOR FORMED-IN-PLACE GASKETS

1. SCOPE:

This manual presents information which is intended as a guide for proper designing, selection, application, and servicing of liquid, formed-in-place gasket (FIPG) materials.

2. DEFINITION AND DESCRIPTION:

Formed-in-place gasket materials are liquids of varying consistencies which can be applied to one of the mating joint surfaces before assembly. When parts are mated, the FIPG material is capable of flowing into voids, gaps, scratch marks, and so forth, and cures to form a durable seal. The concept offers a convenient way of manually or automatically dispensing a seal of varying patterns for assembly. Generally, two types of FIPG materials are used, RTV (Room Temperature Vulcanizing) silicones and anaerobic methacrylate esters. Other types of materials are available but restricted to limited applications and therefore, are not covered in this manual. The following description and properties for each type of material will help determine the recommended choice of material for a given application. One should thoroughly test any application, and independently conclude satisfactory performance before making final selection.

3. TYPES OF SEALANTS:

- 3.1 One Component RTV Silicone Sealant: The silicone formed-in-place gasket (FIPG) comprises the application of a paste-like silicone sealant bead to the area of a component which is then assembled, usually within 10 minutes. The silicone compound flows to form a gasket which then cures to a rubbery solid by absorbing the moisture vapor in the environment (Fig. 1).

The application can be done by hand from a collapsible tube, caulking cartridge or on an automated dispensing system.

SAE Technical Board Rules provide that: "This report is published by SAE to advance the state of technical and engineering sciences. The use of this report is entirely voluntary, and its applicability and suitability for any particular use, including any patent infringement arising therefrom, is the sole responsibility of the user."

SAE reviews each technical report at least every five years at which time it may be reaffirmed, revised, or cancelled. SAE invites your written comments and suggestions.


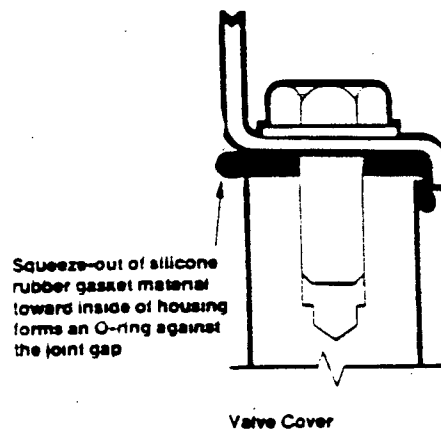


FIGURE 1 - Joint Gap Seal

3.1.1 The Basic Chemistry:

3.1.1.1 The FIRST of a three-ingredient silicone sealant is a hydroxy-terminated polysiloxane polymer.

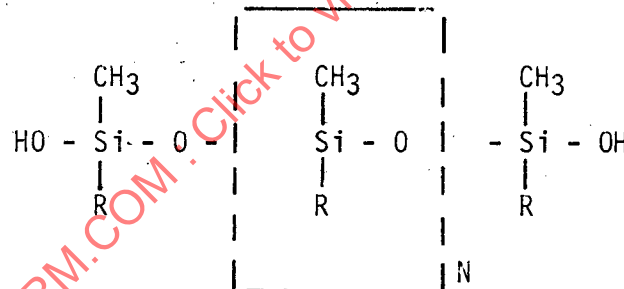

N = 300 to 1600 units

For most applications, a polydimethyl siloxane polymer is used (R = CH₃). However, for applications where fuel or solvent resistance is necessary, a polymethyl-trifluoropropyl siloxane polymer is used (R = CH₂ CH₂ CF₃). The average molecular weight of the polymers usually ranges from 2.0 x 10⁴ to 1.2 x 10⁵ grams/mole.



The SECOND is the presence of a filler or combination of different fillers like: high surface area silicas, ground quartz, zinc oxide, iron oxide, carbon black, various types of clays and diatomaceous earth.

3.1.1.1 (Continued)

The THIRD is the moisture vapor affected crosslinking system. It is generally a reactive polyfunctional silane, which is readily hydrolyzable and released during the curing reaction. Examples of the most common crosslinkers and the by-products are:


ACETOXY

- (1) Methyltriacetoxysilane - Acetic Acid





ALK OXY

- (2) Methyltrimethoxy Silane - Methyl Alcohol





AMINE

- (3) Methyltris (cyclohexylamino) Silane - Cyclohexyl Amine

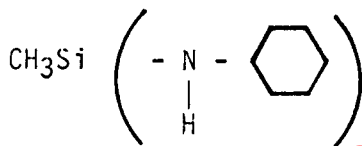



OCTOATE

- (4) Methyltrihexanoxy Silane - Hexanoic Acid



OXIME

- (5) Methyltris (methylethylketoxime) Silane - Methyl-ethylketoxime

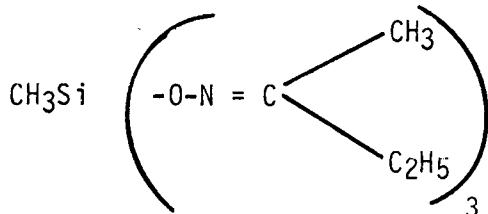

3.1.2 Specific Difference In Cure Systems:Cure System 77°F (25°C), 50% RH

	(1)	(2)	(3)	(4)	(5)
Tack Free Time (Hours)	0.25-0.5	0.5-4	0.25-0.5	0.25-0.75	0.25-0.5
Cure Time, Hours	12-16	18-24	12-24	16-24	12-24
3.18 mm diameter					
*Adhesion to Iron/Aluminum	Good/Exc.	Good	Fair/Good	Fair/Good	Good/Exc.
¹ Corrosion to Steel	Heavy	None	None	Slight	None
¹ Corrosion to Aluminum	None	None	Slight	None	None

Exc. - Excellent

¹As tested in a non-vented environment with high humidity per Mil-A-46146A.

*Adhesion to plastics is variable and must be individually tested.

3.1.3 Typical Uncured (As Received) Physical Property Ranges:

3.1.3.1 Viscosity/Application Rate: The rheological properties of the sealant can be measured in terms of blow-out resistance and extrusion rate as well as a traditional viscosity measurement. The viscosity of the sealing compound can be determined in accordance with ASTM D1084, Method B. The viscosimeter model, spindle number and speed shall be reported as part of the viscosity determination.

3.1.3.2 Application Rate Method (Grams/Minute):3.1.3.2.1 Apparatus:

- *Semco model 250-B sealant gun.
- *Semco plastic nozzle #440 (101.6 mm long x 3.18 mm orifice dia.)
- *Semco plastic cartridge #250-C6, #250-WP wiper, #250-TS Tri-Seal (standard drum sample)
- Stop Watch

*Semco, a Division of: Products Research & Chemical Corp.
5454 San Fernando Road
Glendale, CA 91203

Also, available from other sources

3.1.3.2.2 Procedure:

1. Load the cartridge containing the silicone compound into the sealant gun.
2. Remove the seal and clear out any cured RTV. Attach the nozzle to the cartridge.

3.1.3.2.2 Procedure: (Continued)

3. Connect the sealant gun to 620.6 ± 13.8 kPa air supply and extrude 5 - 10 grams of compound to prep the nozzle.
4. Extrude the RTV compound in a tared aluminum weigh dish for a period of 10 seconds, so the test specimen weighs at least 10 grams or more.
5. The number of test specimens depends on the quantity of compound. Recommendation is to use at least three and average.
6.
$$\text{Grams/minute} = \frac{\text{Weight in Grams}}{10 \text{ Seconds}} \times \frac{60 \text{ Seconds}}{\text{Minute}}$$
7. Typical application rates 200 - 450 grams/minute

3.1.3.3 Application Rate Method (Seconds/50 Grams):

3.1.3.3.1 Apparatus:

- *Semco model 250-6 sealant gun.
- Special nozzle (50.8 mm long x 3.18 mm orifice dia.) CR-1010 Steel 1 (Fig. 2).
- *Semco plastic cartridge #250-6, #250-WP wiper, #250-TS Tri-Seal (standard drum sample)
- Stop Watch
- Laboratory balance (0.01 grams)
- Weighing Dish
- Pipe Cleaners (For cleaning nozzles)

3.1.3.3.2 Procedure:

1. Load the cartridge containing the silicone compound into the sealant gun.
2. Remove the seal cap and clear out any cured RTV. Attach the nozzle to the cartridge.
3. Connect the sealant gun to 448.2 ± 13.8 KPa air supply and extrude a few grams of compound to prep the nozzle.
4. Extrude the RTV compound in a tared weighing dish for a period of 10 s, so the test specimen weighs at least 10 grams or more.

3.1.3.3.2 Procedure: (Continued)

5. The number of test specimens depends on the quantity of compound; recommendation is at least three and average.

$$\text{Seconds} = \frac{50 \text{ grams}}{\text{Weight in Grams}} \times \text{Time (Seconds)}$$

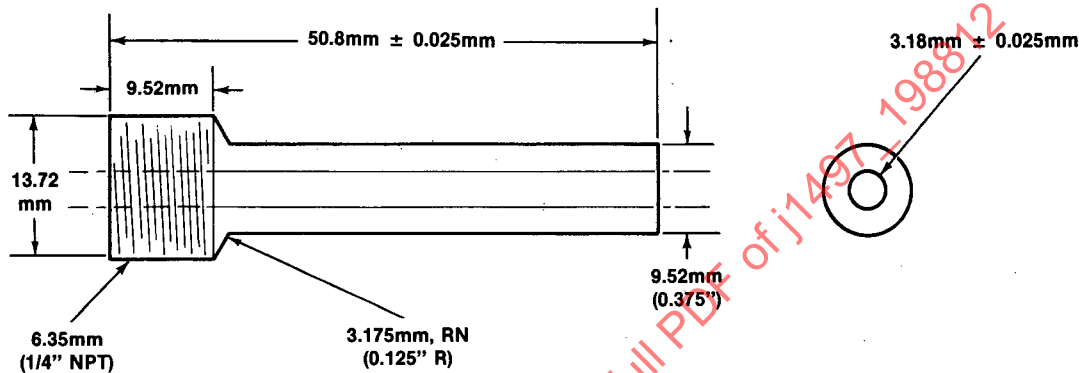


FIGURE 2 - Special Nozzle

- 3.1.3.4 **Flow Resistance:** The flow test shall be conducted with a flow test jig as shown in Fig. 3. Depth of plunger tolerance is critical and shall be controlled within the tolerance during all tests. The flow test jig shall be placed on a table with the front face upward and with the plunger depressed to the limit of its travel. Enough of the silicone compound to fill the recessed cavity of the jig shall be rapidly transferred from a representative sample container. The compound should not be worked with a spatula but shall be leveled off even with the block by scraping with a spatula in two passes, each starting in the center and moving toward the sides of the jig. Within 10 s after the leveling operation, the jig shall be placed on its base and the plunger immediately advanced to the limit of its forward travel. The cylindrical section formed in the flow-test jig shall be allowed to flow under its own weight on a vertical surface.

3.1.3.5 Tack Free Time/Cure Rate:

3.1.3.5.1 Apparatus:

- Strip of polyethylene film 50.8 x 152.4 x 0.076 mm
- Spatula or doctor blade
- Stop Watch

3.1.3.5.2 Procedure:

1. Apply the RTV compound from the container.
2. The quantity of compound varies. However, a typical 25.4 mm "Hershey Dot" is the recommendation.
3. With a spatula or doctor blade, spread the compound down the polyethylene film as soon as possible (within one minute). The shape of an elongated triangle with the initial start area about 3.18 mm thick to a feather ending about 0.127 mm.
4. Beginning at the time the compound is first applied, determine the tack free time by slightly touching the compound with a finger tip at 5 min intervals.
5. The test is completed when the surface is dry to the touch and no compound is transferred to the finger.
6. Typical values are 10 - 30 min at 21.1°C and 50% RH.

3.1.4 Typical Cured* Physical Property Ranges:

*Cured 7 days at 25°C and 50% RH.

<u>Specific Gravity:</u>	1.03 ----- 1.60
<u>Hardness, Shore "A":</u>	15 ----- 60
<u>Tensile Strength:</u>	1035 ----- 5520 kPa
<u>Elongation, %:</u>	100 ----- 600
<u>Low Temp. Flexibility:</u>	-45.5°C
<u>Thermal Stability:</u>	260°C, Special products: 343°C
<u>Fluids & Oil Sealability:</u>	(Usage Applications)

Engine Lube Oil
Engine Coolant
Automatic Transmission Fluid
Rear Axle Lubricant

3.1.5 Bond Strength Development: Most silicone sealants bond to clean surfaces without the aid of primers. A preliminary evaluation should be made to determine acceptable adhesive properties on the substrate used in the specific application. The adhesive bond strength will depend on the joint configuration, material thickness, and surface area. Normally, sufficient strength will develop in one day, with maximum strength after seven days.

3.1.6 Packaging and Storage: Most sealants are supplied in ready-to-use collapsible aluminum squeeze tubes, caulking cartridges and in bulk containers 18.9 - 208.2 liters.

When stored in the original unopened containers at temperatures less than 27°C, most sealants offer a shelf life of one year. To prevent curing of the unused portion of an opened container, reseal air tight.

Proper rotation of inventory is a recommended practice.

3.1.7 Advantages and Disadvantages:

3.1.7.1 Advantages:

- a) Lower cost than preformed gaskets.
- b) Eliminates need for large and costly gasket inventory.
- c) One component, therefore, no mixing required.
- d) Easily pumped on automatic or semi-automatic equipment.
- e) Ideally suited for robots and automated assembly lines.
- f) Has capability to fill large gaps.
- g) Does not flow under its own weight/can be applied to parts in horizontal, vertical, and overhead positions.
- h) Good adhesion (unprimed) to many metal surfaces.
- i) Temperature range: -46 to 260°C.
- j) Good resistance to outdoor weathering, vibration, moisture and ozone.
- k) Good fluid resistance to most oils, lubricants, and coolants.

3.1.7.2 Disadvantages:

- a) Some RTV silicones generate by-products while curing which can cause corrosion if not properly vented.
- b) Prolonged contact with uncured sealant can cause irritation to skin and eyes.
- c) Working time is dependent on temperature and humidity.
- d) Requires clean mating surfaces.
- e) Slower cure in low humidity environment.
- f) Removal of cured sealant difficult when applied to clean surfaces.
- g) Most sealants cannot be painted.
- h) Due to the low thickness as clamped, limited ability to follow movement between flanges.

- 3.2 Anaerobic Methacrylate Ester Sealant: The word "anaerobic" is derived from the Greek, meaning life in the absence of air. Hence, anaerobic compounds cure in the absence of air and in the presence of metal or other active surfaces.

Cure rates at room temperatures range anywhere from a few minutes to several hours. Since there are no solvents, the conversion from liquid to solid is virtually 100%, completely filling the voids, surface imperfections, tool marks, and so forth, eliminating all potential leak paths.

There are a variety of sealant types, selection of which depends on the following:

- Fluid/gas to be sealed.
- System pressure/temperature.
- Surface configuration and finish.
- Flange makeup (rigid/flexible).
- Number, grade and size of bolts.
- Disassembly requirements.

- 3.2.1 The Basic Chemistry: Anaerobic formed-in-place gaskets cure through a process called "polymerization". These long cross-linked polymer chains are typical of the cured anaerobic products and are indicated chemically below (see Fig. 4).

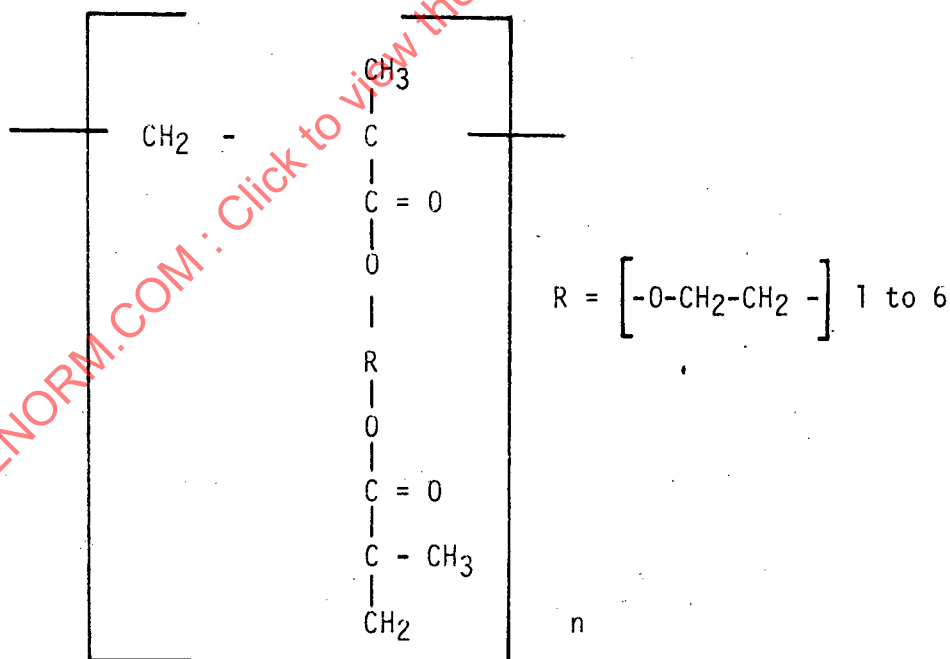


FIGURE 4 - Chemical Structure

3.2.2 Uncured Properties:

<u>Resin (Anaerobic)</u>	Methacrylate Ester
<u>Viscosity</u>	As specified by manufacturer
<u>Specific Gravity</u>	Approximately 1.1
<u>Flashpoint (TCC)</u>	Above 93°C
<u>Toxicity</u>	As specified by manufacturer
<u>Shelf Life</u>	One-year minimum

- 3.2.2.1 Use of Primer or Activators: The cure is affected by the type of metallic surface. Some parts are inactive and may require at least one surface to be activated to insure reliable performance.

<u>ACTIVE SURFACES</u>		<u>INACTIVE SURFACES</u>	
Steel	Manganese	Zinc	Bright Platings
Iron	Bronze	Pure Aluminum	Anodized Surfaces
Copper	Nickel	Stainless Steel	Passivated Surfaces
Brass	Commercial Aluminum	Cadmium	Titanium
		Magnesium	

- 3.2.2.2 Gaps Over 0.25 mm Up To 1.27 mm: For these gaps, primer must be used. Partial cure is obtained in 4 hours and full cure in 48 hours.

- 3.2.2.3 Heat Cure: Heat cures can be used to overcome gaps or inactive surfaces as follows:

<u>GAP</u>	<u>CURE TIME REQUIRED</u> <u>120°C</u>
0.51 to 0.76 mm	2 hours
1.27 mm	3 hours

3.2.3 Typical Cured Properties:

Resin: Flexible Methacrylate Polymer

Temperature Range: Continuous -53 to 149°C operation for sealability

Percent Elongation: Approximately 30%

Tensile Shear Strength: 3.4 - 6.9 MPa at 0.50 mm film thickness

3.2.3.1 Method for Preparation of Bubble Free Films of Gasketing Products:

3.2.3.1.1 Test Apparatus:

1. 152.4 x 152.4 mm plate glass panes.
2. 0.76 mm thick sheet polyethylene.
3. 2% solution of lecithin in 1,1,1,-trichloroethane.
4. Lab centrifuge.
5. 10 mL disposable syringes or equivalent.
6. Cotton swabs.
7. 8 x #1 Hargrave clamps or equivalent.

3.2.3.1.2 Preparation:

1. Using cotton swabs, coat one side of two glass panes with an even coating of lecithin solution. Allow all solvent to flash off.
2. Cut 0.76 mm thick polyethylene to produce a 152.4 x 152.4 x 12.7 mm square edging. This provides a 0.76 mm gap while also preventing excessive material run out.
3. Heat seal the bottom of a Luer lock tip so that the syringe becomes leak proof. This may be accomplished by heating the tip with a lighter or other convenient flame source and crimping with a pair of needle nose pliers.
4. Fill sealed syringe with gasketing material and place in lab centrifuge. Centrifuge at high speed for at least 10 min and check material for air content. Continue to centrifuge until all air is dissipated.

3.2.3.1.3 Assembly:

1. If primer curing, apply recommended primer to both lecithin-coated surfaces of the glass panes. Allow all solvent to flash off.
2. Place 152.4 x 152.4 x 12.7 mm polyethylene square edging along edges of one glass pane.
3. Cut off the centrifuged syringe with a razor blade as close to the bottom of the syringe as possible so that the largest diameter opening is obtained.
4. Using the syringe plunger, slowly push the gasketing material out onto the center of the polyethylene-edged glass pane to form a contour-free mound. The amount of material needed to produce the desired film can vary depending on the gasketing product used. In general, four centrifuged syringes of material is a good starting point.

3.2.3.1.3 Assembly: (Continued)

5. Place the remaining glass pane, coated side down, gently onto the mound of gasketing material taking care to ensure that air entrapment is avoided.
6. Press down slowly until the top glass pane contacts the polyethylene edging on the bottom pane while ensuring that the gasketing material has wetted the surface.
7. Clamp the glass panes with even spacing all around the material and allow to cure. If primer-cured, a minimum of 24 hours at room temperature is required. If a heat cure is desired, a minimum cure of 2 to 4 hours at 93.3°C is recommended.

3.2.3.1.4 Disassembly:

1. Place the edge of a razor blade or putty knife between the polyethylene edging and glass pane.
2. Slowly, run the edge of the sharp tool around the perimeter of the film and separate the glass from the cured film.

3.2.3.2 Typical Environmental Resistance: Hot Strength and Heat Aging tests were started after 24 h cure at room temperature.

Note 1: Test method ASTM D 1002 with sandblasted steel lap shears.

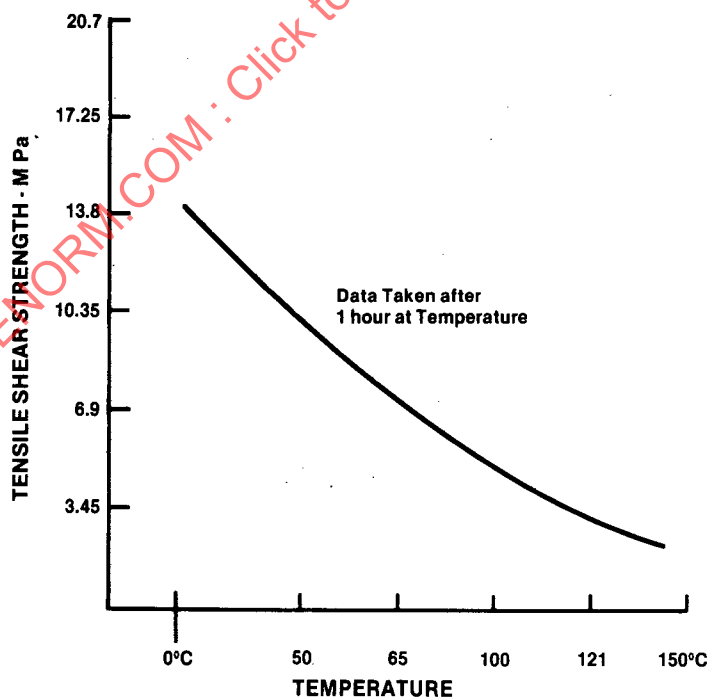


FIGURE 5 - Hot Strength

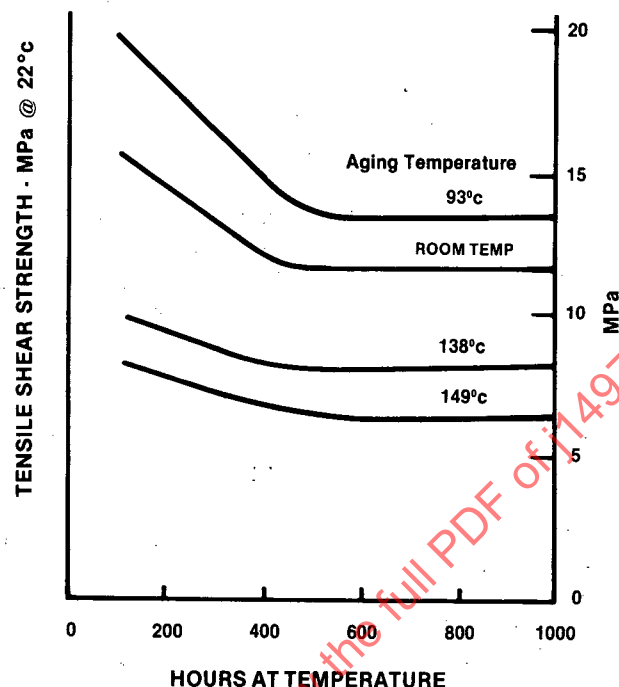


FIGURE 6 - Heat Aging

- 3.2.3.3 Solvent Resistance: Cured sections of material were weighed, measured for hardness, and then submerged in various solvents for 15 days at 86.7°C. Changes in weight and hardness are given below.

SOLVENT	%WEIGHT CHANGE	SHORE "A" HARDNESS	
		BEFORE	AFTER
Water	+ 6%	90	90
10W30 Motor Oil	0%	90	90
Isopropyl Alcohol	+ 25%	90	82
Unleaded Gasoline*	+ 31%	92	86
Toluene	+ 38%	90	86
1,1,1 Trichloroethane	+ 50%	91	72
Phosphate Ester Oil	+ 46%	90	87

*Test at room temperature

- 3.2.4 Use and Application: Material can be used to seal rough or non-machined surfaces and pre-cut gaskets. To obtain best results, contaminants such as grease, heavy oils, and dirt must be removed with adequate solvent. Material can eliminate some gaskets 0.76 mm or less thick and can be used to coat hard or soft cut gaskets to obtain good reliability. It remains flexible when not used over 121°C and will maintain static seals up to 149°C.

3.2.4.1 Application Techniques: Manual - Material is an easily workable tacky gel which can be extruded onto one side of a flange surface from a tube or caulking cartridge. Breaks in the bead are easily repaired by manipulation. Small parts can be covered adequately by pressing them into a saturated polyester urethane sponge or by roll coating them with a short nap roller.

3.2.4.1.1 Screen Printing: The material responds well to screen printing techniques. Complex shapes can be coated in seconds with precise control of material quantity and placement.

Excess material can be cleaned by wiping with recommended solvent. Material on hands can be cleaned with waterless mechanics' hand soap followed by soap and water.

3.2.4.2 Warning: EYE IRRITANT. MAY IRRITATE SENSITIVE SKIN.

Contains acrylic acid and methacrylic ester. In case of eye contact, flush with water for 15 minutes. Get medical attention. Wash after skin contact. KEEP AWAY FROM CHILDREN.

3.2.5 Storage Conditions: Store material in original containers. Maintain at $20 \pm 11^{\circ}\text{C}$ storage temperature. When kept under these conditions, a one-year shelf life can be expected. Material removed from containers may be contaminated during use. Do Not Return This Material To Original Containers.

3.2.6 Advantages and Disadvantages:

3.2.6.1 Advantages:

- a) Reduces cut gasket inventories
- b) Reduces machining operations
- c) Eliminates costly retorquing operations
- d) Single component system eliminates mixing
- e) No waste from cure in open containers
- f) No migration, can be applied to vertical surfaces
- g) Seals surface imperfections
- h) Eliminates gasket compression set and bolt loosening
- i) Seals most common industrial fluids
- j) No cracking or shrinkage during cure
- k) Easily applied on automatic or semi-automatic equipment
- l) Long open time after application
- m) Good adhesion to most metal surfaces
- n) Good vibration and shock resistance

3.2.6.2 Disadvantages:

- a) Requires use between closely fitted surfaces. Does not have large gap filling ability.
- b) Requires handling care to insure full flange coverage upon assembly.
- c) Prolonged contact may cause slight skin irritations.
- d) Not recommended for use on flexible joints.
- e) Requires at least one active surface.

4. ENGINEERING, DESIGN AND IN-PROCESS HANDLING:

- 4.1 Material Selection: A desirable feature in production is to use chemically compatible cure system sealants. This eliminates the need for purging the pumps and feed lines when switching from one supplier's material to another.

Consult with the sealant manufacturer to determine the effects of mixing materials.

4.2 Operating Temperature:

- 4.2.1 RTV: Generally, RTVs can be used from -46 to 260°C continuously and intermittently to 316°C. Special products are available for intermittent use to 343°C.

- 4.2.2 Anaerobics: Generally, anaerobics are available for use from 54 - 149°C continuously and intermittently to 177°C. Special products are available for intermittent use to 232°C. Refer to manufacturer's recommendations for individual applications.

- 4.3 Operating Pressures: Pressure tolerance is dependent upon several conditions; time, joint width, gap clamp load and other factors.

Figs. 7 and 8 show typical gap and pressure data.

Confirming tests should be conducted using actual parts for each particular application.

- 4.4 Fluids to be Sealed: The sealant must be resistant to the fluids to be sealed. Refer to manufacturer for recommendations.

4.5 Design:

- 4.5.1 Thermal Expansion: Differential expansion of mating flanges is very critical. The sealant must be capable of tolerating the relative movement while maintaining seal integrity. This can be accommodated through proper selection of sealant, gap thickness and flange material.

- 4.5.2 **Gap Thickness:** RTV can generally accommodate gaps up to 2.5 mm. Anaerobic sealants can accommodate gaps to 0.25 mm. The use of primer allows larger gaps. Gap thickness is affected by cure time and pressures encountered during assembly and operation.


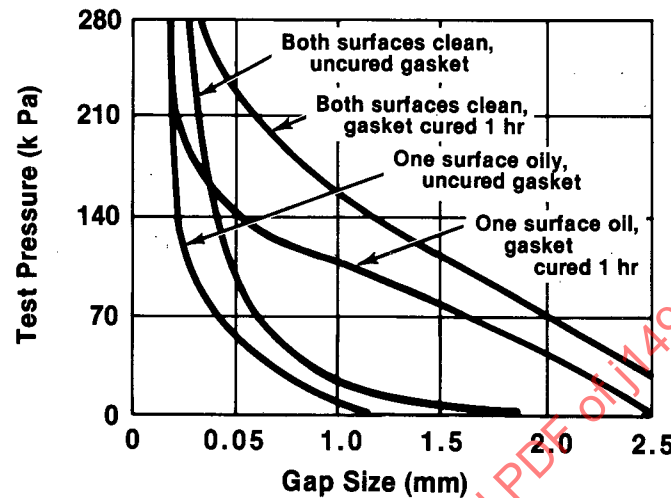


FIGURE 7 - Typical RTV Gap vs. Pressure

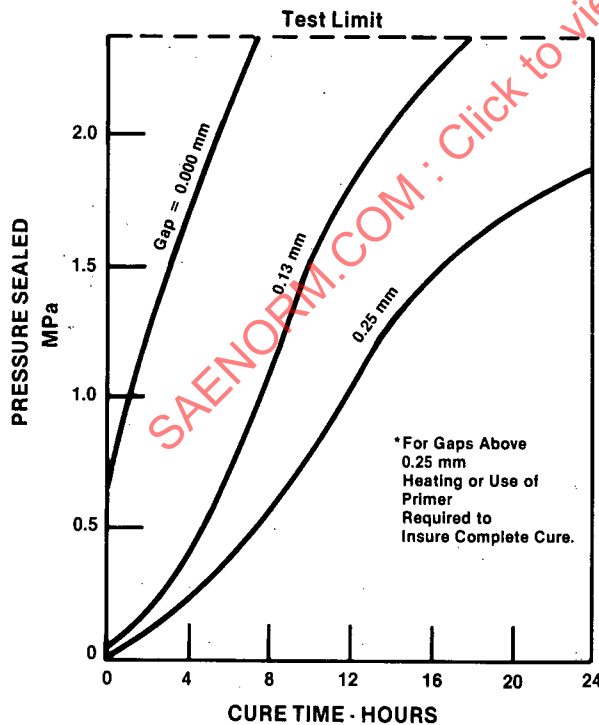

Data was obtained on 9.5 mm wide steel flanges with gaps between mating parts held at 0.00 mm, 0.13 mm and 0.25 mm. Test pressurization was limited to 2.07 MPa. See sketch.

The high pressure test fixtures could be sealed at 6.9 MPa with a 1.33 mm gap. Cure was assured by using Accelerator-Primer and waiting 48 hours.

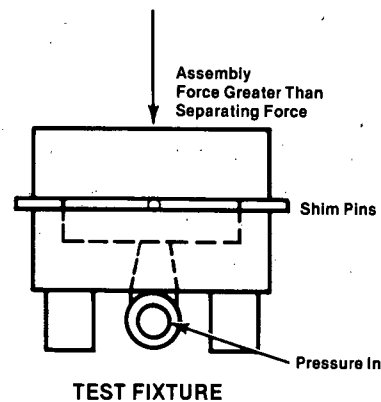


FIGURE 8 - Typical Anaerobic Gap vs. Pressure

4.5.3 Flange Surface: To assure efficient sealing, design parameters such as flatness and surface finish must be defined and specified to keep mating parts under control.

4.5.4 Fasteners: In joints where there is excessive relative movement due to pressure or expansion, bolt spacing and clamp load are important in maintaining proper gap.

The joint integrity should not allow gap increase during "in process" testing or during operation.

Do not allow sealant into blind holes as hydrostatic lock may occur, resulting in false torque readings (low clamp load).

4.5.5 Minimum Sealing Width: Generally, the minimum sealing width for (A) is 5 mm and for (B), 3 mm (see Fig. 9). Wider flanges are strongly recommended.

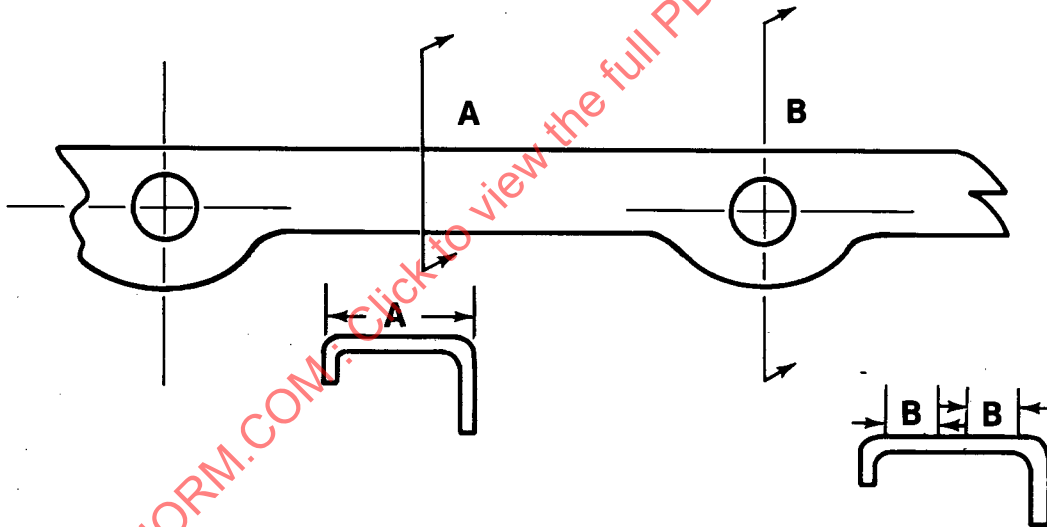


FIGURE 9 - Minimum Sealing Width

4.5.6 Flange Design: Since liquid gaskets depend on flange adhesion to seal, the joint must be designed so the sealant does not fail in shear or adhesion. The thickness of sealant must be sufficient to accommodate movement induced by vibration, impact and differential thermal expansion (see Figs. 10, 11 and 12 for examples).

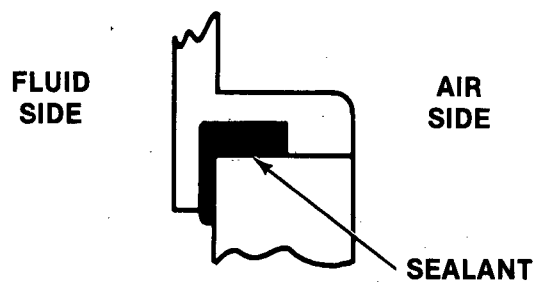


FIGURE 10 - Shielded Step Flange

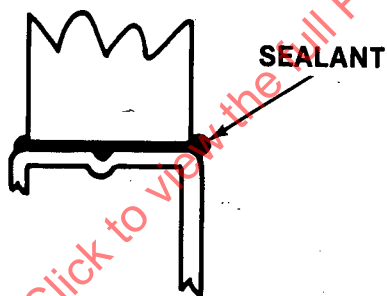


FIGURE 11 - Grooved Flange

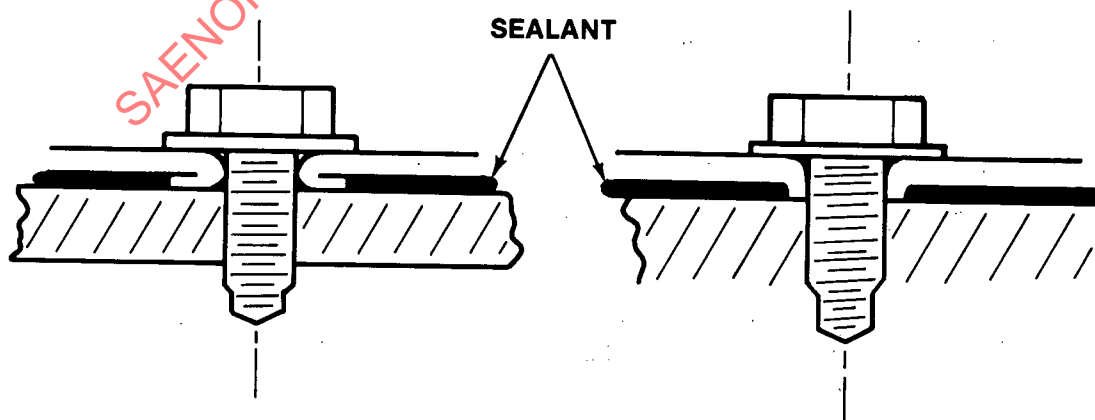


FIGURE 12 - Gapped Flange

- 4.5.7 Bead Size: Increasing the bead size may increase the pressure capability of a joint, but too large a bead may decrease pressure capability. This is due to the effect of cure time when using RTV.

Establishing minimum bead size requires experimentation during the initial development and during an assembly plant trial.

Fig. 13 can be used as a guide for selecting the proper bead diameter for various joint widths and gap sizes for RTV. Fig. 14 shows anaerobic recommendations. The gap in this instance is due to inherent out-of-flat of the mating flanges.

- 4.5.8 Functional Operation: The type of functional operation is an influencing factor in the design of the flange.

4.5.8.1 Types of Operation Include:

Vibration - such as 4-cylinder engines where high vibration forces are encountered.

Impact - such as an oil pan that may encounter a curb or parking lot bumper.

Structural - where the entire housing acts as a structural member. In this case, forces are transmitted through the inspection covers or oil pan.

Linear mm of Gasket Per 28.4 cc of Silicone Sealant

<u>Bead Size Diameter</u>	<u>Length</u>
0.79 mm	(57.58 x 10 ³ mm)
1.57 mm	(14.48 x 10 ³ mm)
2.36 mm	(6.38 x 10 ³ mm)
3.18 mm	(3.58 x 10 ³ mm)
4.76 mm	(1.60 x 10 ³ mm)

4.6 Manufacturing Process Requirements:

4.6.1 Application Equipment Systems:

- 4.6.1.1 Screen Printing: This method uses a mesh screen containing the sealant pattern. The screen is placed on top of the work piece and the sealant is extruded through the mesh onto the work piece. This system is best for anaerobics.

- 4.6.1.2 Roller Coating: The sealant (usually anaerobic) is applied to a roller. The work piece is then rolled, leaving a thin film of sealant across the work piece.

- 4.6.1.3 Caulking Gun/Cartridges: This method is commonly used in the field and where the work piece is too large to be moved.

- 4.6.1.4 Tubes/Syringes: This method is used where very small amounts of sealant are to be used.

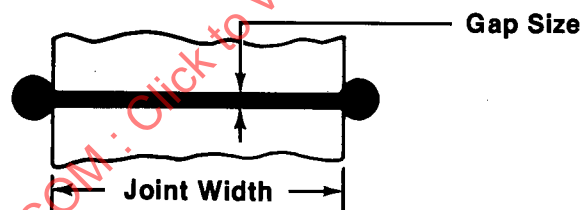
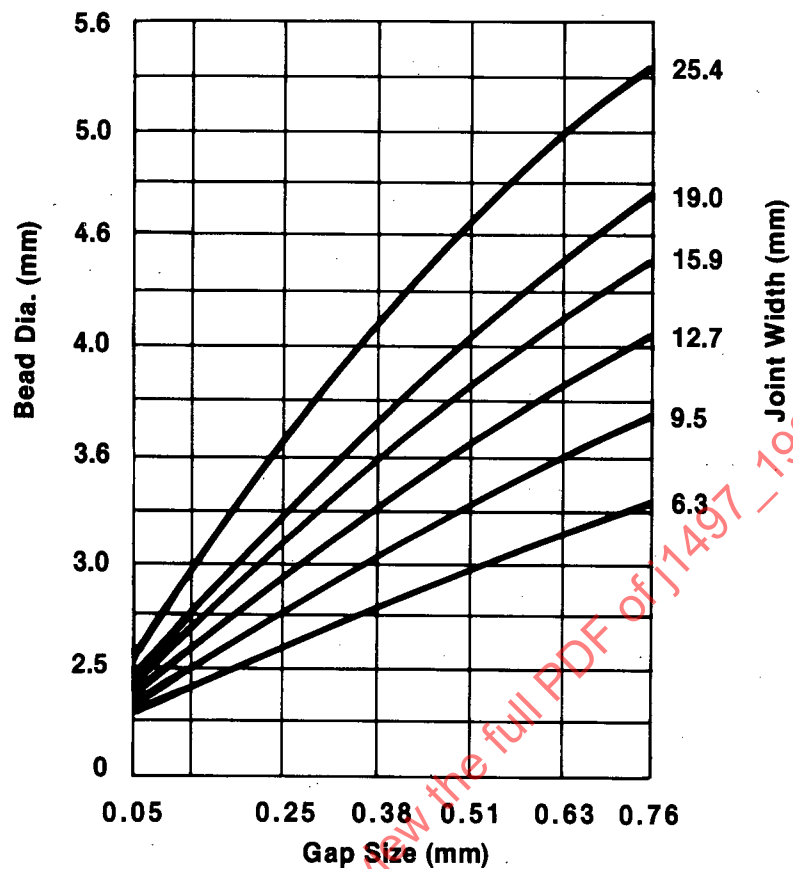


FIGURE 13 - RTV Bead Size

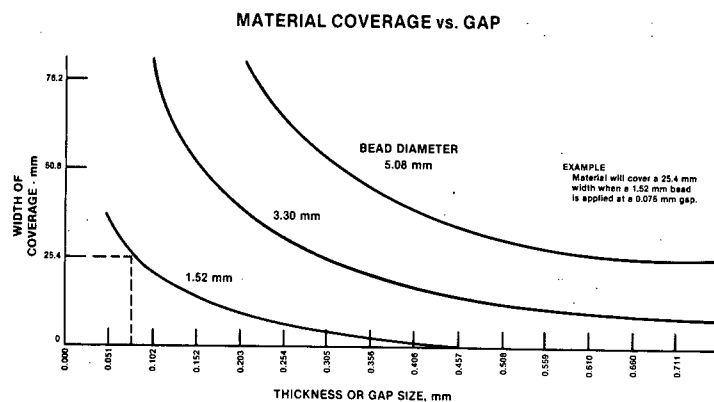


FIGURE 14 - Anaerobic Sealer Bead Size

4.6.2 Motion Methods of Dispensing:

- 4.6.2.1 Template Follower: This system uses a template contoured to match the bead pattern. The follower traces the template while the extrusion nozzle dispenses the sealant onto the work piece.
- 4.6.2.2 Pantograph: This equipment is similar to the template follower in that a template or pattern is tracked. The motion mechanism consists of four light rigid bars joined in parallelogram form. This method is generally used for manual, low volume applications.
- 4.6.2.3 Cam Follower: This system rotates a profiled cam to generate each desired axis of motion.
- 4.6.2.4 Phototrace: This system uses a master pattern that is followed by an electric eye mounted on the traverse mechanism.
- 4.6.2.5 Numerical Control: These machines are controlled by a computer type memory system in which the desired pattern is programmed.
- 4.6.2.6 Circle Generator: This equipment is similar to a turntable to generate circles.
- 4.6.2.7 Magnetic Follower: This system utilizes a magnet to follow a steel ribbon of the desired sealant pattern.

FIGURE 15 - Equipment Parameters

<u>Pattern Equipment Type</u>	<u>Planes</u>	<u>Minimum Travel Rate (M/Min)</u>	<u>Variable Speed</u>	<u>Changeability**</u>
Template	X-Y	5.08	No	2
Pantograph	X-Y	2.54	No	2
Cam	X-Y-Z*	10.2	No	3
Photo	X-Y-Z*	5.08	No	2
NC	X-Y-Z	10.2	Yes	1
Circle	X-Y	15.2	No	1
Magnetic	X-Y	5.08	No	2

*Can be adapted for Z plane

**1 - Easy
2 - Moderate
3 - Difficult

4.6.3 RTV System Recommendations:

- 4.6.3.1 Pump: The pump should be 23:1 minimum, constant pressure, divorced style using a chop check inlet. Positive displacement, double acting type features are also desirable.

The pump seals and packings should be fluorocarbon or polypropylene to reduce internal sticking or plugging.

4.6.3.2 Lines: Pump to dispensing head distance should be minimized to reduce pressure losses. The rigid lines should be 38 mm I.D. pipe minimum. The flexible lines at the dispensing area should be steel braided, non-moisture permeable lines, flexible hose. The hose I.D. should be 9.5 mm minimum.

4.6.3.3 Regulators: Mastic type regulators are recommended and should be located as close to the dispensing head as possible.

4.6.4 Anaerobics System Recommendations:

4.6.4.1 Pump: The pump should be a 1:1 constant pressure, positive displacement, double acting pump. The pump should be capable of 414 kPa minimum.

4.6.4.2 Lines: The pump to dispensing head distance should be minimized to reduce pressure losses. The delivery line should be wire wrapped, low density polypropylene tubing. The tubing should be 4.7 mm I.D. minimum. Metal tubing or pipes and fittings, especially copper, must be avoided.

4.6.5 General Systems Recommendations (RTV and Anaerobics):

4.6.5.1 Dispensing Head Requirements: A dispensing head incorporating a "snuff back" (no drip) feature is desirable. This prevents "stringing" of sealant onto the work piece. Easily replaceable plastic or metal nozzles should be considered. Stainless steel or plastic is preferred for use with anaerobic sealers.

It is recommended the flow control be located at the head to allow better bead size control and prevent run-on. This control should be tamperproof to prevent unauthorized adjustment.

The head should have multi-direction adjustment capability. This allows for adjustment as required to assure proper bead location. The sealant should be at 18°C minimum for proper dispensing and curing.

4.6.5.2 Cleanliness: Cleanliness is very important for proper adhesion and joint integrity. Parts can be washed with phosphate, hot water or non-residual solvents.

Recommended primers can be used to enhance adhesion.

4.6.5.3 Time to Assemble: Anaerobic sealer assemblies should be torqued as soon as the flanges are mated. This is necessary since the sealant starts to set up as soon as oxygen is excluded.

RTV joints should be assembled and torqued immediately after dispensing the bead. This is necessary since the material begins to cure upon exposure to moisture (humidity).